

# AXL F UTH4 1H

## Axioline F temperature module, 4 inputs for connection of thermocouple sensors

Data sheet  
8672\_en\_02

© PHOENIX CONTACT 2014-10-27



### 1 Description

The module is designed for use within an Axioline F station. It is used to acquire signals from standard thermocouples in industrial applications.

The module supports various types of thermocouple conforming to DIN EN 60584-1 and DIN 46710 as well as linear voltages from -100 mV to +100 mV.

It also offers a voltage input from -5 V to +5 V. Heating currents can be monitored here, for example, using a measuring transducer.

Both Pt 100 inputs (CJ1 and CJ2) can each be used as a sensor input or as an external cold junction.

#### Features

- 4 analog input channels to connect thermocouples or linear voltages from -100 mV to +100 mV
- 1 analog input channel to connect voltages from -5 V to +5 V
- Connection of sensors in 2-wire technology
- Internal detection and compensation of cold junction temperature (configurable)
- External connection of Pt 100 cold junction sensors possible
- Easy to use due to internal linearization of the sensor characteristic curves
- High level of accuracy (typically  $\pm 0.01\%$  sensor type K)
- High level of accuracy, even in various mounting positions, thanks to built-in space compensation of the internal cold junction
- High temperature stability (typically 8 ppm/K)
- High level of immunity to EMI (Class A)
- Low emitted interference
- "Channel scout" function
- Device type label stored
- Diagnostic and status indicators
- Installation monitoring with indication via diagnostic LED for each channel



This data sheet is only valid in association with the UM EN AXL F SYS INST user manual.



Make sure you always use the latest documentation.  
It can be downloaded from the product at [phoenixcontact.net/products](http://phoenixcontact.net/products).


|          |   |    |
|----------|---|----|
| <b>2</b> | <b>Table of contents</b>                            |    |
| 1        | Description .....                                   | 1  |
| 2        | Table of contents .....                             | 2  |
| 3        | Ordering data .....                                 | 3  |
| 4        | Technical data .....                                | 4  |
| 5        | Additional technical data.....                      | 7  |
| 6        | Internal circuit diagram .....                      | 15 |
| 7        | Terminal point assignment.....                      | 16 |
| 8        | Connection examples .....                           | 16 |
| 9        | Connection notes .....                              | 20 |
| 10       | Configuration notes .....                           | 20 |
| 11       | Local status and diagnostic indicators .....        | 21 |
| 12       | Process data.....                                   | 23 |
| 13       | Open circuit .....                                  | 23 |
| 14       | Significant values in various formats.....          | 24 |
| 15       | Parameter, diagnostics and information (PDI) .....  | 25 |
| 16       | Standard objects .....                              | 26 |
| 17       | Application objects .....                           | 31 |
| 18       | Writing the analog values over the PDI channel..... | 37 |
| 19       | Device descriptions .....                           | 37 |

### 3 Ordering data

| Description  | Type                     | Order No. | Pcs. / Pkt. |
|--|--------------------------|-----------|-------------|
| Axioline F temperature module, 4 inputs for connection of thermocouple sensors (including bus base module and connectors)  | AXL F UTH4 1H            | 2688598   | 1           |
| <b>Accessories</b>   |                          |           |             |
| Axioline F bus base module for housing type H (Replacement item)   | AXL F BS H               | 2700992   | 5           |
| Axioline shield connection set (contains 2 busbar holders and 2 SK 5 shield connection clamps)   | AXL SHIELD SET           | 2700518   | 1           |
| Zack marker strip for Axioline F (device labeling), in 2 x 20.3 mm pitch, unprinted, 25-section, for individual labeling with B-STIFT 0.8, X-PEN, or CMS-P1-PLOTTER (Marking)                | ZB 20,3 AXL UNPRINTED    | 0829579   | 25          |
| Zack marker strip, flat, in 10 mm pitch, unprinted, 10-section, for individual labeling with M-PEN 0,8, X-PEN, or CMS-P1-PLOTTER (Marking)   | ZBF 10/5,8 AXL UNPRINTED | 0829580   | 50          |
| Thermoelectric voltage terminal block, cross section: 0.2 - 2.5 mm <sup>2</sup> , width: 10.4 mm, color: gray  | MTKD-CU/CUNI             | 3100059   | 50          |
| Thermoelectric voltage terminal block, cross section: 0.2 - 2.5 mm <sup>2</sup> , width: 10.4 mm, color: gray  | MTKD-FE/CUNI             | 3100046   | 50          |
| Thermoelectric voltage terminal block, cross section: 0.2 - 2.5 mm <sup>2</sup> , width: 10.4 mm, color: gray  | MTKD-NICR/CUNI           | 3100075   | 50          |
| Thermoelectric voltage terminal block, cross section: 0.2 - 2.5 mm <sup>2</sup> , width: 10.4 mm, color: gray  | MTKD-NICR/NI             | 3100062   | 50          |
| Thermoelectric voltage terminal block, cross section: 0.2 - 2.5 mm <sup>2</sup> , width: 10.4 mm, color: gray  | MTKD-E-CU/A-CU           | 3100091   | 50          |
| Thermoelectric voltage terminal block, cross section: 0.2 - 2.5 mm <sup>2</sup> , width: 10.4 mm, color: gray  | MTKD-S-CU/E-CU           | 3100101   | 50          |
| Insert label, Roll, white, unlabeled, can be labeled with: THERMOMARK ROLL, THERMOMARK X, THERMOMARK S1.1, Mounting type: snapped into marker carrier, Lettering field: 35 x 46 mm (Marking) | EMT (35X46)R             | 0801604   | 1           |
| <b>Documentation</b>   |                          |           |             |
| User manual, English, Axioline F: System and installation  | UM EN AXL F SYS INST     | -         | -           |
| User manual, English, Axioline F: Diagnostic registers, and error messages   | UM EN AXL F SYS DIAG     | -         | -           |

## 4 Technical data

### Dimensions (nominal sizes in mm)

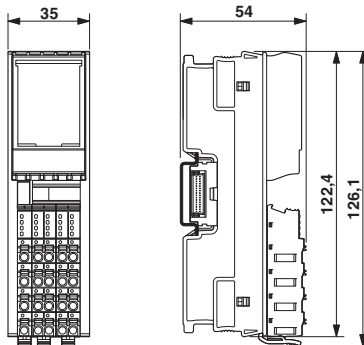

|                    |   |
|--------------------|---|
| Width              | 35 mm   |
| Height             | 126.1 mm  |
| Depth              | 54 mm   |
| Note on dimensions | The depth is valid when a TH 35-7.5 DIN rail is used (according to EN 60715). |

### General data

|  |   |
|--|---|
| Color                                    | traffic grey A RAL 7042                           |
| Weight                                   | 144 g (with connectors and bus base module)       |
| Ambient temperature (operation)          | -25 °C ... 60 °C                                  |
| Ambient temperature (storage/transport)  | -40 °C ... 85 °C                                  |
| Permissible humidity (operation)         | 5 % ... 95 % (non-condensing)                     |
| Permissible humidity (storage/transport) | 5 % ... 95 % (non-condensing)                     |
| Air pressure (operation)                 | 70 kPa ... 106 kPa (up to 3000 m above sea level) |
| Air pressure (storage/transport)         | 70 kPa ... 106 kPa (up to 3000 m above sea level) |
| Degree of protection                     | IP20  |
| Protection class                         | III, IEC 61140, EN 61140, VDE 0140-1              |
| Mounting position                        | Any (no temperature derating)                     |

### Connection data

|  |   |
|--|---|
| Designation                              | Axoline F connector   |
| Connection method                        | Push-in technology  |
| Conductor cross section solid / stranded | 0.2 mm <sup>2</sup> ... 1.5 mm <sup>2</sup> / 0.2 mm <sup>2</sup> ... 1.5 mm <sup>2</sup> |
| Conductor cross section [AWG]            | 24 ... 16   |
| Stripping length                         | 8 mm  |

### Interface Axoline F local bus

|                    |                 |
|--------------------|-----------------|
| Connection method  | Bus base module |
| Transmission speed | 100 MBit/s      |

### Communications power

|                                    |                              |
|------------------------------------|------------------------------|
| Communications power $U_{BUS}$     | 5 V DC (via bus base module) |
| Current consumption from $U_{BUS}$ | typ. 112 mA, max. 160 mA     |
| Power consumption at $U_{BUS}$     | typ. 0.54 W, max. 0.8 W      |

| I/O supply   |  |
|--|--|
| Supply of analog modules U <sub>A</sub>            | 24 V DC  |
| Maximum permissible voltage range                  | 19.2 V DC ... 30 V DC (including all tolerances, including ripple) |
| Current consumption from U <sub>A</sub>            | typ. 23 mA<br>max. 40 mA   |
| Power consumption at U <sub>A</sub>                | typ. 0.55 W, max. 0.96 W   |
| Surge protection of the supply voltage             | Electronic (35 V, 0.5 s)   |
| Polarity reversal protection of the supply voltage | Polarity protection diode  |
| Transient protection                               | Suppressor diode   |

| Total power consumption of the module |  |
|---------------------------------------|--|
| Power consumption                     | typ. 1.05 W (entire device), max. 1.76 W (entire device) |



The typical values for current and power consumption (logic/I/O/total) are measured values, the maximum values are theoretical worst-case values.

| Analog inputs   |   |
|---|---|
| Number of inputs  | 4 +1 (4 inputs for thermocouples or linear voltage, plus 1 input -5 V to +5 V)  |
| Connection method   | Spring-cage connection with direct connector-in method  |
| Connection method   | 2-wire (shielded, twisted pair)   |
| Sensor types that can be used (TC)                          | U, T, L, J, E, K, N, S, R, B, C, W, HK  |
| Sensor types (RTD) that can be used                         | Pt 100 (2 external cold junctions, can also be used as a sensor input)  |
| Resolution A/D  | 24 bit  |
| Measuring principle   | Sigma/Delta process   |
| Measured value representation                               | 16 bits (15 bits + sign bit)  |
| Input filter time   | 40 ms, 60 ms, 100 ms, 120 ms (adjustable)   |
| Relative accuracy   | typ. 0.01 % (Thermocouple type K, NiCr-Ni; see tables under tolerance values)   |
| Absolute accuracy   | typ. ± 0.19 K (Thermocouple type K, plus tolerance of cold junction)  |
| Short-circuit protection, overload protection of the inputs | yes   |
| Transient protection of inputs                              | yes   |
| Crosstalk attenuation                                       | typ. 113 dB (Channel/channel, sensor type K)<br>typ. 114 dB (Channel/channel, sensor type linear voltage ±100 mV)<br>typ. 107 dB (Channel/channel, external Pt100 connection) |
| Common mode rejection (CMR): TC inputs/linear voltage       | min. 100 dB (Channel/FE; for DC up to 100 kHz, V <sub>cm</sub> = -10 V ... +10 V)   |
| Common mode rejection (CMR): TC inputs/linear voltage       | typ. 140 dB (Channel/FE; for DC up to 100 kHz, V <sub>cm</sub> = -10 V ... +10 V)   |
| Common mode rejection (CMR): TC inputs/linear voltage       | min. 100 dB (Channel/AGND; for DC up to 100 kHz, V <sub>cm</sub> = -10 V ... +10 V)   |
| Common mode rejection (CMR): TC inputs/linear voltage       | typ. 131 dB (Channel/AGND; for DC up to 100 kHz, V <sub>cm</sub> = -10 V ... +10 V)   |
| Common mode rejection (CMR): Voltage input -5 V ... +5 V    | min. 95 dB (Channel/FE; for DC up to 100 kHz, V <sub>cm</sub> = -10 V ... +10 V)  |
| Common mode rejection (CMR): Voltage input -5 V ... +5 V    | typ. 105 dB (Channel/FE; for DC up to 100 kHz, V <sub>cm</sub> = -10 V ... +10 V)   |
| Input resistance: TC inputs/linear voltage                  | typ. 20 MΩ (With 24 V I/O supply voltage present)   |
| Input resistance: Voltage input -5 V ... +5 V               | typ. 5 MΩ (With 24 V I/O supply voltage present)  |
| Voltage at the TC input                                     | max. 40 V DC (1 min.)   |

| Fieldbus data telegram      |             |
|-----------------------------|-------------|
| Fieldbus system             | PROFIBUS DP |
| Required parameter data     | 12 Byte     |
| Need for configuration data | 7 Byte      |

**Electrical isolation/isolation of the voltage areas**

| Test section  | Test voltage           |
|---|------------------------|
| 5 V communications power (logic), 24 V supply (I/O) | 500 V AC, 50 Hz, 1 min |
| 5 V supply (logic)/functional earth ground          | 500 V AC, 50 Hz, 1 min |
| 24 V supply (I/O) / functional earth ground         | 500 V AC, 50 Hz, 1 min |

**Mechanical tests**

|  |     |
|--|-----|
| Vibration resistance in acc. with EN 60068-2-6/IEC 60068-2-6 | 5g  |
| Shock in acc. with EN 60068-2-27/IEC 60068-2-27              | 30g |
| Continuous shock according to EN 60068-2-27/IEC 60068-2-27   | 10g |

**Conformance with EMC Directive 2004/108/EC**

**Noise immunity test in accordance with EN 61000-6-2**

|  |  |
|--|--|
| Electrostatic discharge (ESD) EN 61000-4-2/IEC 61000-4-2   | Criterion B; 6 kV contact discharge, 8 kV air discharge  |
| Electromagnetic fields EN 61000-4-3/IEC 61000-4-3          | Criterion A; Field intensity: 10 V/m   |
| Fast transients (burst) EN 61000-4-4/IEC 61000-4-4         | Criterion A for shielded cables; 2 kV  |
| Transient surge voltage (surge) EN 61000-4-5/IEC 61000-4-5 | Criterion B; supply lines DC: $\pm 0.5$ kV/ $\pm 0.5$ kV (symmetrical/asymmetrical); $\pm 1$ kV to shielded I/O cables |
| Conducted interference EN 61000-4-6/IEC 61000-4-6          | Criterion A; Test voltage 10 V   |

**Noise emission test according to EN 61000-6-3**

|  |         |
|--|---------|
| Radio interference properties EN 55022   | Class B |
| Conducted noise emission test according to EN 55016-2-1 and EN 55016-1-2; 9 kHz ... 30 MHz | Class A |

**Approvals**

For the latest approvals, please visit [phoenixcontact.net/products](http://phoenixcontact.net/products).

## 5 Additional technical data

### 5.1 Maximum permissible cable lengths

| Connecting cable and maximum cable length specifications |   |                   |                     |   |
|--|---|-------------------|---------------------|---|
| Maximum permissible cable length                         | Sensor type                                 | Connection method | Sensor cable        | Cable type  |
| 10 m   | TC inputs channel 1 ... 4                   | 2-wire            | Unshielded, twisted | TC sensor cable or equalizing conductor (according to DIN EN 60584-3, IEC 60584-3, DIN 43722) |
| 250 m  | TC inputs channel 1 ... 4                   | 2-wire            | Shielded, twisted   | TC sensor cable or equalizing conductor (according to DIN EN 60584-3, IEC 60584-3, DIN 43722) |
| 10 m   | Inputs channel 1 ... 4, -100 mV ... +100 mV | 2-wire            | Unshielded, twisted | Reference cable type LiYY (TP) 2 x 2 x 0.5 mm <sup>2</sup>                                    |
| 250 m  | Inputs channel 1 ... 4, -100 mV ... +100 mV | 2-wire            | Shielded, twisted   | Reference cable type LiYCY (TP) 2 x 2 x 0.5 mm <sup>2</sup>                                   |
| 2 m  | Pt 100 external cold junction sensor        | 2-wire            | Unshielded, twisted | Reference cable type LiYY (TP) 2 x 2 x 0.5 mm <sup>2</sup>                                    |
| 10 m   | Pt 100 external cold junction sensor        | 2-wire            | Shielded, twisted   | Reference cable type LiYCY (TP) 2 x 2 x 0.5 mm <sup>2</sup>                                   |
| 5 m  | -5 V ... +5 V input                         | 2-wire            | Shielded, twisted   | Reference cable type LiYCY (TP) 2 x 2 x 0.5 mm <sup>2</sup>                                   |

TC inputs: select the appropriate TC equalizing conductors for TC sensors (according to DIN EN 60584-3, IEC 60584-3, and DIN 43722).

Other inputs: the values are valid when reference cable type LiYCY (TP) 2 x 2 x 0.5 mm<sup>2</sup> is used in accordance with the Axioline F installation instructions.

The maximum cable length specification is valid from the sensor to the connection terminal block and includes the maximum specified tolerances.

Observe the cable resistance values when operating the external Pt 100 cold junction. Long cables and/or small cable cross sections increase measuring tolerances.

The measuring tolerances of all channels will only be observed if the permissible cable types are used.

Using the Axioline shield connection set (AXL SHIELD SET), connect the braided shield of long sensor cables at one end to the functional earth ground potential upstream of the AXL F UTH4 1H module.

### 5.2 Measuring ranges of the TC inputs

| No. | Input         | Sensor type | Standard     | Measuring range |             | Average basic value for sensitivity | Voltage level at measuring range final value |
|-----|---------------|-------------|--------------|-----------------|-------------|-------------------------------------|--|
|     |               |             |              | Lower limit     | Upper limit |                                     |  |
| 1   | Thermocouples | B           | DIN EN 60584 | +50 °C          | +1820 °C    | 6 µV/K                              | 13.820 mV                                    |
| 2   |               | E           | DIN EN 60584 | -270 °C         | +1000 °C    | 65 µV/K                             | 76.373 mV                                    |
| 3   |               | J           | DIN EN 60584 | -210 °C         | +1200 °C    | 54 µV/K                             | 69.553 mV                                    |
| 4   |               | K           | DIN EN 60584 | -270 °C         | +1372 °C    | 42 µV/K                             | 54.886 mV                                    |
| 5   |               | N           | DIN EN 60584 | -270 °C         | +1300 °C    | 27 µV/K                             | 47.513 mV                                    |
| 6   |               | R           | DIN EN 60584 | -50 °C          | +1768 °C    | 10 µV/K                             | 21.101 mV                                    |
| 7   |               | S           | DIN EN 60584 | -50 °C          | +1768 °C    | 10 µV/K                             | 18.693 mV                                    |
| 8   |               | T           | DIN EN 60584 | -270 °C         | +400 °C     | 40 µV/K                             | 20.872 mV                                    |
| 9   |               | C           |              | -18 °C          | +2316 °C    | 15 µV/K                             | 37.07 mV                                     |
| 10  |               | W           |              | -18 °C          | +2316 °C    | 12 µV/K                             | 38.56 mV                                     |
| 11  |               | HK          |              | -200 °C         | +800 °C     | 69 µV/K                             | 66.42 mV                                     |
| 12  |               | L           | DIN 43710    | -200 °C         | +900 °C     | 54 µV/K                             | 53.14 mV                                     |
| 13  |               | U           | DIN 43710    | -200 °C         | +600 °C     | 40 µV/K                             | 34.31 mV                                     |

5.3 Tolerances of the measuring inputs at  $T_A = +25^\circ\text{C}$

| No. | Input                                  | Sensor type    | Measuring range |             | Absolute tolerance |         | Relative tolerance (with reference to MRFV) |         |
|-----|--|----------------|-----------------|-------------|--------------------|---------|---|---------|
|     |  |                | Lower limit     | Upper limit | Typical            | Maximum | Typical                                     | Maximum |
| 1   | Thermocouples                          | B              | +500 °C         | +1820 °C    | ±0.5 K             | ±4.17 K | ±0.03%                                      | ±0.23 % |
| 2   |  | E              | -226 °C         | +1000 °C    | ±0.15 K            | ±1.38 K | ±0.02%                                      | ±0.19%  |
| 3   |  | J              | -210 °C         | +1200 °C    | ±0.19 K            | ±1.67 K | ±0.02%                                      | ±0.14 % |
| 4   |  | K              | -200 °C         | +1372 °C    | ±0.19 K            | ±0.71 K | ±0.01%                                      | ±0.05 % |
| 5   |  | N              | -200 °C         | +1300 °C    | ±0.39 K            | ±3.15 K | ±0.03%                                      | ±0.23 % |
| 6   |  | R              | -50 °C          | +1768 °C    | ±0.8 K             | ±2.5 K  | ±0.05 %                                     | ±0.14 % |
| 7   |  | S              | -50 °C          | +1768 °C    | ±0.8 K             | ±2.5 K  | ±0.05 %                                     | ±0.14 % |
| 8   |  | T              | -270 °C         | +400 °C     | ±0.18 K            | ±0.63 K | ±0.04 %                                     | ±0.16 % |
| 9   |  | C              | -18 °C          | +2316 °C    | ±0.53 K            | ±0.81 K | ±0.02%                                      | ±0.03%  |
| 10  |  | W              | +250 °C         | +2316 °C    | ±1.33 K            | ±2.5 K  | ±0.06%                                      | ±0.11 % |
| 11  |  | HK             | -200 °C         | +800 °C     | ±0.16 K            | ±1.3 K  | ±0.02%                                      | ±0.16 % |
| 12  |  | L              | -200 °C         | +900 °C     | ±0.15 K            | ±1.67 K | ±0.02%                                      | ±0.19%  |
| 13  |  | U              | -200 °C         | +600 °C     | ±0.15 K            | ±0.75 K | ±0.03%                                      | ±0.13%  |
| 14  | Internal cold junction                 | Pt DIN         | -70 °C          | +150 °C     | ±0.25 K            | ±1.6 K  | ±0.17 %                                     | ±1.07 % |
| 15  | External external cold junction sensor | Pt DIN         | -100 °C         | +400 °C     | ±0.3 K             | ±0.8 K  | ±0.08%                                      | ±0.20 % |
|     |  |                | -100 °C         | +100 °C     | ±0.10 K            | ±0.60 K | ±0.03%                                      | ±0.15 % |
| 16  | Voltage input                          | Linear voltage | -100 mV         | +100 mV     | ±10 µV             | ±100 µV | ±0.01%                                      | ±0.10%  |
|     |  |                | -30 mV          | +30 mV      | ±7 µV              | ±30 µV  | ±0.007 %                                    | ±0.03%  |
|     |  |                | -10 mV          | +10 mV      | ±5 µV              | ±25 µV  | ±0.005 %                                    | ±0.03%  |
| 17  | 5 V DC voltage input channel           | Linear voltage | -5 V            | +5 V        | ±1.5 mV            | ±10 mV  | ±0.03%                                      | ±0.10%  |

MRFV= Measuring range final value

The tolerances of the thermocouple inputs (TC sensors) are based on differential temperature recording plus the tolerances due to cold junction compensation during nominal operation in the preferred mounting position.



Please observe the notes in the "Notes on the tolerance tables" section.



### 5.4 Temperature and drift response

|                    | Measuring range     | Drift     |           |
|--------------------|---------------------|-----------|-----------|
|                    |                     | Typ.      | Max.      |
| External Pt 100    | -100 °C ... +400 °C | ±15 ppm/K | ±30 ppm/K |
|                    | -100°C ... +100° C  | ±10 ppm/K | ±25 ppm/K |
| Linear voltage     | -10 mV ... +10 mV   | ±3 ppm/K  | ±12 ppm/K |
|                    | -30 mV ... +30 mV   | ±6 ppm/K  | ±15 ppm/K |
|                    | -100 mV ... +100 mV | ±11 ppm/K | ±20 ppm/K |
| ±5 V voltage input |                     | ±13 ppm/K | ±25 ppm/K |
| TC inputs          | Type K              | ±8 ppm/K  | ±20 ppm/K |

1. The data refers to nominal operation ( $U_A = 24\text{ V}$ ) in the preferred mounting position (horizontal).
2. The measurement is performed within an Axiline F station in which another AXL F UTH4 1H module is located to the right and left of the module in question.
3. The drift values refer to the full measuring range final value, i.e., 1372°C in the case of TC sensor type K, +400°C in the case of the external Pt 100, and +100 mV in the case of the linear voltage.

### 5.5 Tolerances for TC sensor type K with internal cold junction compensation

| No. | Temperature       | Absolute tolerance |        | Relative tolerance (with reference to MRFV) |         |
|-----|-------------------|--------------------|--------|---|---------|
|     |                   | Typ.               | Max.   | Typ.  | Max.    |
| 1   | +25°C             | ±0.20 K            | ±2.4 K | ±0.01%                                      | ±0.17 % |
| 2   | -25 °C ... +60 °C | ±0.71 K            | ±3.9 K | ±0.05 %                                     | ±0.28 % |

MRFV= Measuring range final value

The tolerances of the thermocouple inputs (TC sensors) are based on absolute temperature recording during nominal operation in the preferred mounting position.



Please observe the notes in the "Notes on the tolerance tables" section.

### 5.6 Notes on the tolerance tables

The following notes apply for the tables:

- Tolerances of the measuring inputs at  $T_A = +25^\circ\text{C}$
  - Tolerances for TC sensor type K with internal cold junction compensation
1. The measurement is performed within an Axiline F station in which another AXL F UTH4 1H module is located to the right and left of the module in question.
  2. In order to achieve optimum accuracy in the various mounting positions of the station, different installation positions can be configured.
  3. The tolerance values for the TC inputs are based on the average basic values for sensitivity (see table for measuring ranges of the TC inputs).
  4. The typical values were determined from the maximum tolerances of the measured practical values.
  5. The maximum tolerances represent the worst-case measurement inaccuracy. They contain the theoretical maximum possible tolerances in the measuring ranges as well as the theoretical maximum possible tolerances of the test and calibration equipment. The data is valid for at least 24 months from delivery of the module. Thereafter the modules can be recalibrated by the manufacturer at any time.
  6. An additional path calibration function for maximum accuracy is possible at any time in the application (see object 008F<sub>hex</sub> path calibration values). Using the temperature offset, you can finely tune the tolerances for each channel by means of the connecting cables and the sensors. The specified tolerances are then reduced accordingly.
  7. The tolerances increase slightly for a short time immediately after power up (see switch-on behavior section).
  8. In the -100 mV ... +100 mV linear voltage input range, smaller measuring windows with closer tolerances were also specified. The reference value of the relative tolerance value is always based on +100 mV.
  9. Please note when using linear voltage signals: for voltages above +32.7 mV and below -32.7 mV, parameterize the process data resolution as 10 µV/LSB (instead of 1 µV/LSB) in order to prevent overrange or under-range messages from occurring.
  10. Always position temperature modules at the end of the station. For modules that must be positioned next to a bus coupler, the typical measuring tolerance can be increased by up to 0.9 K.
  11. The maximum tolerances are observed even in the event of electromagnetic interference (see also Table "Tolerances influenced by electromagnetic interference"). They apply for both shielded and unshielded I/O cables.

**5.7 Switch-on behavior of TC inputs with internal cold junction compensation**

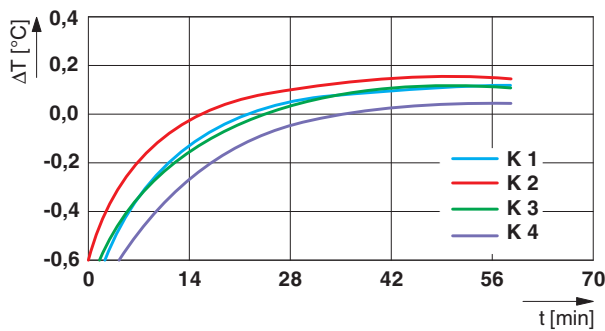


Figure 1 Typical switch-on behavior of type K TC sensors with internal cold junction compensation

K1 ... K4 Channel 1 ... channel 4

| Transient period | Typical tolerance |
|------------------|-------------------|
| 5 minutes        | -0.7 K            |
| 10 minutes       | -0.3 K            |
| 35 minutes       | ±0.2 K            |
| 45 minutes       | ±0.2 K            |

1. The switch-on behavior must only be taken into consideration for TC measurements with internal cold junction temperature, it does not apply for differential measurements or measurements with external compensation.
2. The typical characteristic curves of the TC inputs after power up were recorded in the preferred mounting position (horizontal), in nominal operation ( $U_A = 24 V$ ,  $T_A = 25^\circ C$ ), and with unobstructed ventilation ducts (free air flow).
3. The measurement is performed within an Axioline F station in which another AXL F UTH4 1H module is located to the right and left of the module in question.
4. Different installation positions or arrangements where the module is affected by external sources of heat can result in a different thermal switch-on behavior.
5. The measuring probes of the type K TC sensors were kept at a constant temperature.

In the event of sudden changes in the ambient temperature of the temperature module (e.g., from  $T_A = +25^\circ C$  to  $T_A = +60^\circ C$ ), the time curve for the transient response is comparable with that of the switch-on behavior.

**5.8 Switch-on behavior of TC inputs with external cold junction compensation**

The module supports the connection of up to two external Pt 100 cold junction sensors.

Connection example: Figure 8

If you use this function, use copper cables from the isothermal cold junction up to the module connector.

The advantage of this is the very fast warm-up behavior of just a few seconds.

Even in the event of extreme temperature fluctuations in the environment where the Axioline F station is located, the system operates very quickly and precisely. There is also the option of adjusting all sensor and cable tolerances in the application via an additional path calibration function.

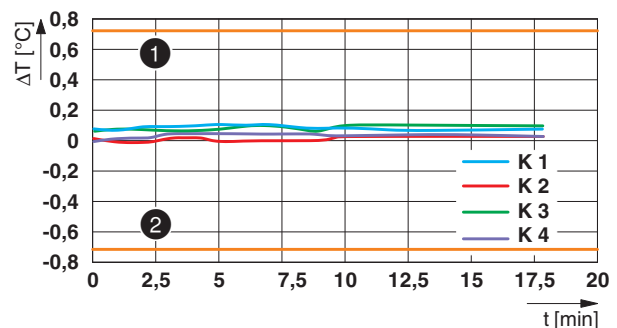


Figure 2 Typical switch-on behavior of type K TC sensors with external Pt 100 cold junction compensation and path calibration function for the cold junction at connector 1 at an ambient temperature of  $+25^\circ C$

- 1 Maximum tolerance limit
- 2 Minimum tolerance limit
- K1 ... K4 Channel 1 ... channel 4

## 5.9 Technical data for cold junctions

### Internal cold junctions

Simple cold junction compensation can be implemented for the thermocouple inputs using the internal cold junctions.

To read the temperature of each internal cold junction for TC channels, parameterize the sensor type as "Cold Junction".

For the accuracy, please refer to the tables of the tolerance values.

| Internal cold junction                                     |                   |
|--|-------------------|
| Connection method  | 2-wire connection |
| Sensor type  | Pt 100 DIN        |
| R <sub>0</sub> (sensor resistance at T <sub>A</sub> = 0°C) | 100 Ω             |
| Measuring range  | -55°C ... +125°C  |
| Resolution (process data)                                  | 0.1 K/LSB         |
| Resolution (floating point object)                         | < 0.001 K         |
| Filter time  | 120 ms            |

### Compensation of the mounting position of the internal cold junction

In order that maximum accuracy is also achieved when installed in various different mounting positions, it is possible to compensate the mounting position of the internal cold junction.

Parameterize this compensation using the ParaTable object, data format, mounting position.

### Tolerances of the internal cold junction

| No. | Tolerance structure                           | Temperature       | Tolerances |          |
|-----|---|-------------------|------------|----------|
|     |   |                   | Typ.       | Max.     |
| 1   | Cold junction temperature drift               | -25 °C ... +60 °C | 10 ppm/K   | 25 ppm/K |
| 2   | Total tolerance of the internal cold junction | +25°C             | ±0.15 K    | ±1.76 K  |
| 3   | Total tolerance of the internal cold junction | -25 °C ... +60 °C | ±0.85 K    | ±2.4 K   |

\* Thermally steady system without external heat influence

- The data refers to nominal operation (U<sub>A</sub> = 24 V) in the preferred mounting position (horizontal).
- The measurement is performed within an Axiline F station in which another AXL F UTH4 1H module is located to the right and left of the module in question.

### ExternalPt 100 cold junctions

When using external isothermal blocks or distributed terminal boxes, an external cold junction is recommended. The advantage of this is an improved switch-on behavior and the very fast thermal transient period in the event of sudden changes to the ambient temperature of the measuring station.

You can connect up to two Pt 100 sensors to the AXL F UTH4 1H module.

You can also use the inputs for the external cold junction sensors as sensor inputs for any applications with Pt 100 and connection with 2-wire technology. To do so, parameterize the sensor type as "Cold junction" and the cold junction type as "External Pt 100" on the corresponding connector.

| ExternalPt 100 cold junctions                              |                     |
|--|---------------------|
| Connection method  | 2-wire connection   |
| Sensor type  | Pt 100 DIN          |
| R <sub>0</sub> (sensor resistance at T <sub>A</sub> = 0°C) | 100 Ω               |
| Measuring range  | -100 °C ... +400 °C |
| Resolution (process data)                                  | 0.1 K/LSB           |
| Resolution (floating point object)                         | < 0.001 K           |
| Filter time  | 120 ms              |

### Tolerances of the external Pt100 cold junction inputs

| No. |            | Ambient temperature | Tolerances |           |
|-----|------------|---------------------|------------|-----------|
|     |            |                     | Typ.       | Max.      |
| 1   | Tolerances | +25°C               | ±0.3 K     | ±0.8 K    |
| 2   | Drift      | -25 °C ... +60 °C   | ±10 ppm/K  | ±25 ppm/K |

The data contains the offset error, gain error, and linearity error in its respective setting.

The data is valid for nominal operation (preferred mounting position, U<sub>A</sub> = 24 V).

The documented typical tolerances were determined for reference cable type LiYCY (TP) 2 x 2 x 0.5 mm<sup>2</sup> with a connection length < 1 m.

The drift data and the tolerances specified as a percentage refer to the measuring range final value of +400°C.

The typical data has been determined in an example Axiline F station.

**Typical tolerance values** are measured application values that are based on the maximum variance of all test objects.

The **maximum tolerance values** represent the worst-case measurement inaccuracy. They contain the theoretical maximum possible tolerances in the corresponding measuring ranges as well as the theoretical maximum possible tolerances of the calibration and test equipment. The data is valid for at least 24 months from delivery of the module. Thereaf-

ter the modules can be recalibrated by the manufacturer at any time.



To achieve maximum accuracy ( $< \pm 0.1$  K, it is possible to calibrate a measuring section. To do so, carry out fine adjustment of the tolerances of the connecting cables and the external Pt 100 sensor with object 008F<sub>hex</sub>: local adjust values.

### Drift response of the TC inputs with external cold junction compensation

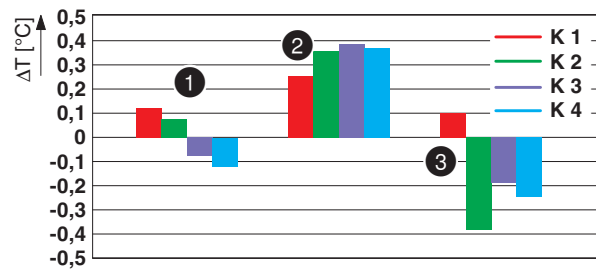


Figure 3 Typical tolerance distribution of type K TC detection with external cold junction compensation and path calibration function for the cold junction

- 1 Ambient temperature +25°C
- 2 Ambient temperature +60°C
- 3 Ambient temperature -25°C
- K1 ... K4 Channel 1 ... channel 4

The diagram shows the typical tolerance distribution in the entire ambient temperature range of the module with external Pt 100 compensation and path calibration of the cold junction in the entire ambient temperature range of  $T_U = -25^\circ\text{C} \dots +60^\circ\text{C}$ .

The advantages of external cold junction compensation are, on the one hand, immediate measuring accuracy without thermal switch-on behavior and, on the other hand, high temperature stability.

For maximum accuracy, path calibration is possible. This can be carried out channel-specific using object 008F<sub>hex</sub>. You can therefore calibrate the tolerances of the entire measuring section including the sensor and connecting cable.

### 5.10 Technical data for the ±5 V DC voltage input

This input is used to acquire additional voltage signals. Connect a signal converter to the input. This can be used to acquire any AC or DC currents which are converted by the converter into an electrically isolated ±5 V signal. This ±5 V signal is processed by the module.

Connection example: Figure 13

| ±5 V voltage input |                   |
|--------------------|-------------------|
| Connection method  | 2-wire connection |
| Measuring range    | -5 V ... +5 V     |
| Format             | IB IL             |
| Resolution         | 16-bit            |
| Quantization       | 166.7 µV/LSB      |
| Filter time        | 120 ms            |
| Input resistance   | typ. 5 MΩ         |

### Tolerances of the voltage input

| No. |           | Temperature       | Absolute |           | Relative |         |
|-----|-----------|-------------------|----------|-----------|----------|---------|
|     |           |                   | Typ.     | Max.      | Typ.     | Max.    |
| 1   | Tolerance | +25°C             | ±1 mV    | ±10 mV    | ±0.02%   | ±0.20 % |
| 2   | Tolerance | -25 °C ... +60 °C | ±2.3 mV  | ±15 mV    | ±0.05 %  | ±0.30%  |
| 3   | Drift     | -25 °C ... +60 °C | ±8 ppm/K | ±20 ppm/K |          |         |

**Typical tolerance values** are measured application values that are based on the maximum variance of all test objects.

The **maximum tolerance values** represent the worst-case measurement inaccuracy. They contain the theoretical maximum possible tolerances in the corresponding measuring ranges as well as the theoretical maximum possible tolerances of the calibration and test equipment. The data is valid for at least 24 months from delivery of the module. Thereafter the modules can be recalibrated by the manufacturer at any time.

Use an isolating amplifier to decouple from the field the sensor signals which go to the sensor input. The MCR range from Phoenix Contact offers various solutions (see also connection example "Universal AC and DC current acquisition by means of combination with a current transducer").

### 5.11 Cycle times

| Filter time | Channel conversion time for TC operation with internal compensation |
|-------------|---|
| 120 ms      | 120 ms  |
| 100 ms      | 100 ms  |
| 60 ms       | 60 ms   |
| 40 ms       | 40 ms   |

| Filter time | Typical scan repeat time for all four measuring channels |
|-------------|--|
|             | TC operation with internal cold junction compensation    |
| 120 ms      | 962 ms   |
| 100 ms      | 880 ms   |
| 60 ms       | 720 ms   |
| 40 ms       | 640 ms   |

| Filter time | Typical scan repeat time for a measuring channel                                    |
|-------------|---|
|             | TC operation with internal cold junction compensation; channels 2 ... 4 deactivated |
| 120 ms      | 600 ms  |
| 100 ms      | 580 ms  |
| 60 ms       | 540 ms  |
| 40 ms       | 520 ms  |

5.12 Tolerances influenced by electromagnetic interference

| Type of electromagnetic interference | Standard                   | Level                                 | Additional tolerances of measuring range final value | Criterion |
|--------------------------------------|----------------------------|---------------------------------------|--|-----------|
| Electromagnetic fields               | EN 61000-4-3/IEC 61000-4-3 | 10 V/m                                | None   | A         |
| Fast transients (burst)              | EN 61000-4-4/IEC 61000-4-4 | 1.1 kV                                | None   | A         |
| Conducted interference               | EN 61000-4-6/IEC 61000-4-6 | 150 kHz ... 80 MHz, 10 V, 80% (1 kHz) | None   | A         |

The values determined apply for both shielded and unshielded twisted sensor cables. The maximum cable lengths should be taken into consideration.

For all tested electromagnetic interferences (see table), the measured values were within the maximum tolerances.

The values were determined under nominal conditions with the following sensor settings and sensor circuits:

- Thermocouple type K (NiCr-Ni) with internal cold junction compensation, filter = 120 ms
- External RTD sensor type Pt 100 as sensor input, filter = 120 ms
- -100 mV ... +100 mV linear voltage signals, 1 µV/LSB resolution, filter = 120 ms



No additional tolerances occur due to the influence of high-frequency interference caused by wireless transmission systems in the near vicinity.

The specifications refer to nominal operation. The modules are directly exposed to interference without the use of additional shielding measures (e.g., steel cabinet).

## 6 Internal circuit diagram

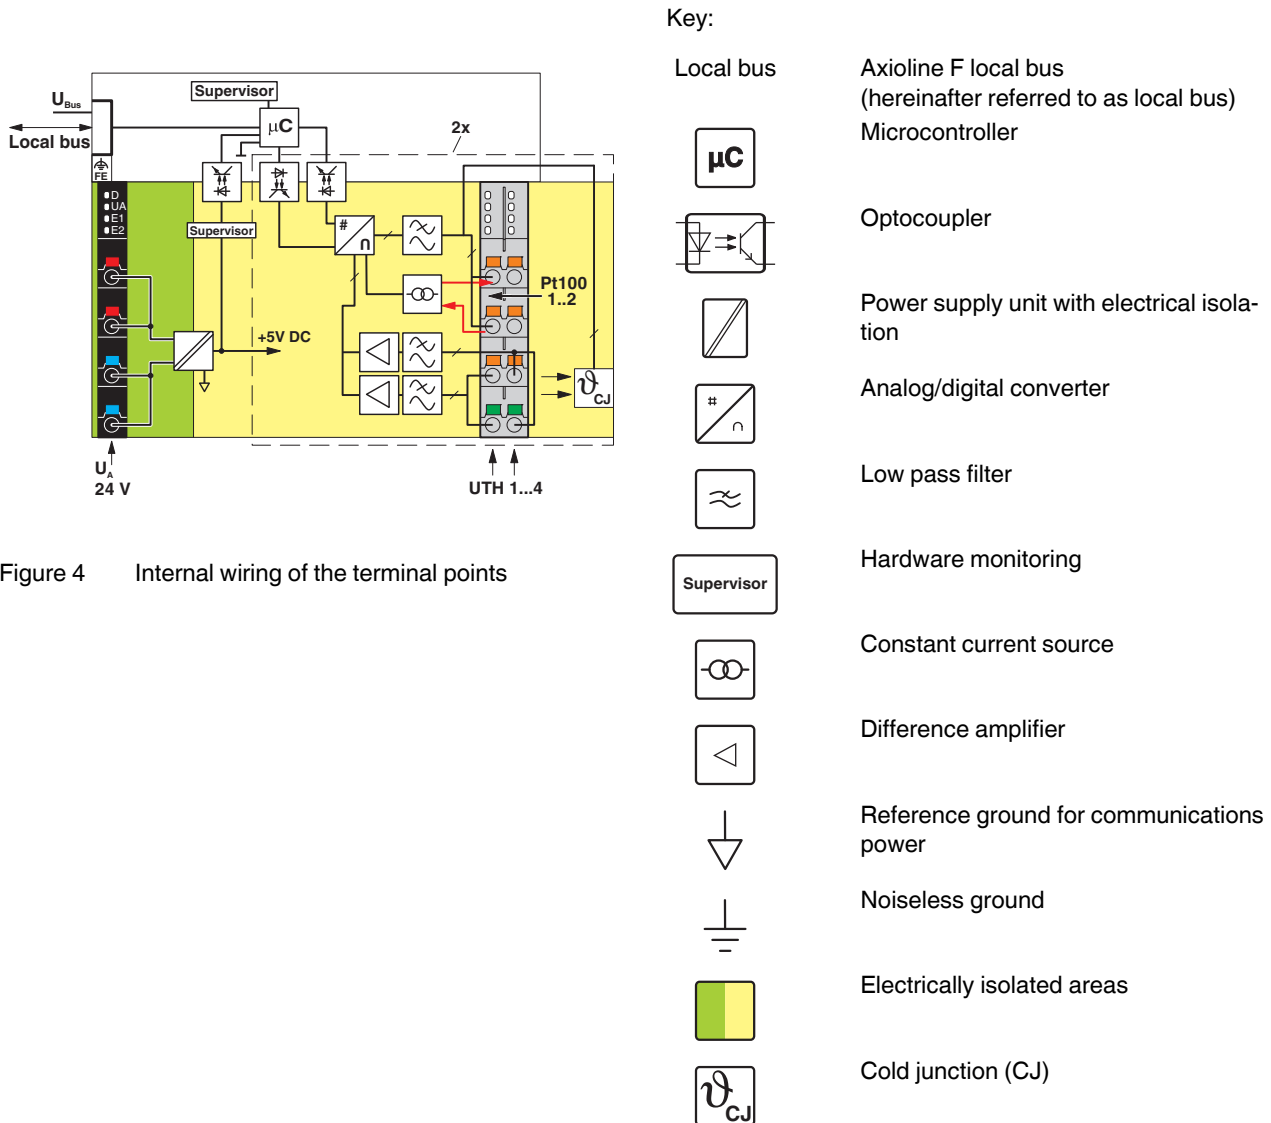


Figure 4 Internal wiring of the terminal points

## 7 Terminal point assignment

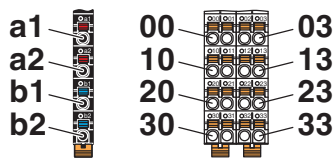


Figure 5 Terminal point assignment

| Terminal point              | Color  | Assignment                |   |
|-----------------------------|--------|---------------------------|---|
| <b>Supply voltage input</b> |        |                           |   |
| a1, a2                      | Red    | 24 V DC (U <sub>A</sub> ) | Analog module supply (internally jumpered)                      |
| b1, b2                      | Blue   | GND                       | Reference potential of the supply voltage (internally jumpered) |
| <b>Analog inputs</b>        |        |                           |   |
| 00, 02                      | Orange | CJ1+, CJ2+                | External external cold junction sensor (+)                      |
| 01                          | Orange | -                         | Not used  |
| 10, 12                      | Orange | CJ1-, CJ2-                | External external cold junction sensor (-)                      |
| 11                          | Orange | -                         | Not used  |
| 03                          | Orange | U+                        | Voltage input 5 V (+)   |
| 13                          | Orange | U-                        | Voltage input 5 V (-)   |
| 20 ... 23                   | Orange | TC1+ ... TC4+             | Thermocouple (+)  |
| 30 ... 33                   | Orange | TC1- ... TC4-             | Thermocouple (-)  |

## 8 Connection examples

### 8.1 Absolute temperature measurement with internal cold junction compensation

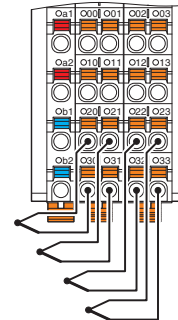


Figure 6 Connection example: absolute temperature measurement

A thermocouple sensor is connected to each of the four channels.

For example, sensor type J (TC1) and sensor type K (TC2) are used at channels 1 and 2.

The measuring temperature of TC1 and TC2 is automatically determined by the module by means of internal cold junction compensation.

Parameterize the cold junction type as "Internal" (preset by default).

This application is the simple standard application for temperature recording with thermocouples.



### 8.2 Differential temperature measurement

Precise differential temperature recording is a special application, e.g., in process engineering and process technology. You can determine the exact differential temperature, e.g., between an inlet and return temperature, by connecting two thermocouples in series to one channel of the module.

Parameterize the cold junction type as "Disabled".

The pure differential temperature between the measuring points will therefore be recorded.

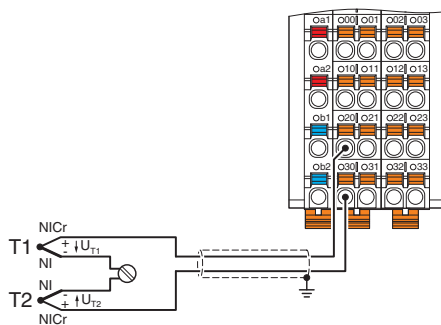


Figure 7 Differential temperature measurement

By linking the two thermocouples (here type K, NiCr-Ni), the temperature difference between both thermoelectric voltages is determined.

$$T_D = T1 - T2$$

$$U_M = U_{T1} - U_{T2}$$

Where:

- $T_D$  Temperature difference
- $T1/T2$  Temperature at sensor 1/2
- $U_M$  Differential thermoelectric voltage
- $U_{T1}/U_{T2}$  Thermoelectric voltage sensor 1/2

The advantage of this application is the high degree of precision without a waiting time to warm up.

### 8.3 Thermocouple detection with external cold junction compensation

For applications with a high degree of precision, the module offers the option of compensation using an external cold junction.

Each connector has a connection for an external Pt 100 cold junction sensor.

External cold junction compensation is implemented for each channel.

Proceed as follows:

- Route the sensor cables of the thermocouple to an isothermal block.
- For each channel, wire a copper (Cu) connecting cable from the isothermal block to the input terminals of the module.
- Connect the external Pt 100 cold junction sensor to the isothermal block using a Pt 100 input of connector 1 or 2 (connector 1 in the example).
- Parameterize the cold junction type of the desired input channel as "External, Pt 100, connector x" (x = 1 or 2; channel 1 in the example)

The advantage of this application is the improved warm-up behavior in the first few minutes after the module is switched on.

**i** As an input is available at each connector for an external Pt 100 cold junction sensor, you can operate up to two external cold junction sensors. If you have connected two cold junction sensors, you can then select any cold junction type, i.e., you can use the Pt 100 of connector 1 or 2.

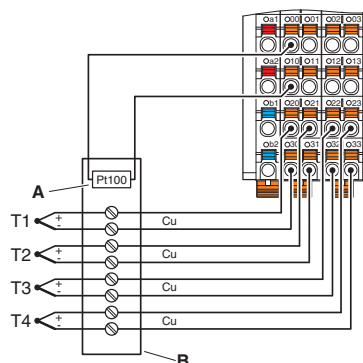


Figure 8 Thermocouple detection with external cold junction compensation at channel 1

- A Pt 100 external cold junction sensor
- B Isothermal block

### 8.4 Thermocouple detection with cold junction temperature specification via process data

Another option for compensating the cold junction temperature externally is to specify the cold junction temperature via process data.

In this way, the temperature of the external cold junction can be recorded at the isothermal block via any system and used for compensation.

Proceed as follows:

- Route the sensor cables of the thermocouple to an isothermal block.
- For each channel, wire a copper (Cu) connecting cable from the isothermal block to the input terminals of the module.
- Write the cold junction temperature recorded externally by the isothermal block to the first process data output word of the module in your application (IB IL format).
- Parameterize the cold junction type of the desired input channel as "Process data".



For each module, you can use a digital external process data value for cold junction compensation.

|                        |   |   |   |   |
|------------------------|---|---|---|---|
| OUT1 = T <sub>CJ</sub> | 0 | 0 | 0 | 0 |
|------------------------|---|---|---|---|

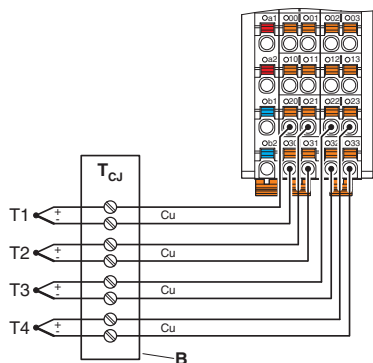


Figure 9 Thermocouple detection with cold junction temperature specification via process data

T<sub>CJ</sub> Cold junction temperature  
 B Isothermal block

### 8.5 Measurement of linear mV voltage signals

You can connect sensors to each channel which supply a linear voltage in the mV range, e.g., pressure or Hall sensors.

- Parameterize the corresponding channel as sensor type "Linear voltage ±100 mV".

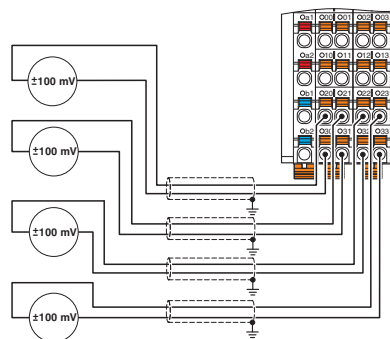


Figure 10 Measurement of linear voltages ±100 mV

A cable break on the sensor cables is monitored and detected.

The ±10 mV and ±30 mV ranges are more accurate than the entire ±100 mV range and have therefore also been specified.

For mV sensors, cable lengths of up to 250 m are possible. Please note the cable length specifications and suitable sensor cable types.

For voltages above +32.7 mV and below -32.7 mV, parameterize the process data resolution as 10 µV/LSB (instead of 1 µV/LSB) in order to prevent overrange or underrange messages from occurring.

### 8.6 Pt 100 detection

You can also use the inputs for external Pt 100 cold junction sensors as Pt 100 sensor inputs.

To do this, proceed as follows:

- Connect the Pt 100 sensor with 2-wire technology to connector 1 or 2.
- Parameterize a desired channel as sensor type “Cold junction (CJ)” and parameterize the cold junction type as “External, Pt 100, connector x” (x = 1 or 2).
- Record the temperature value of the external Pt 100 sensor at the parameterized channel with a resolution of 0.1 K/LSB.

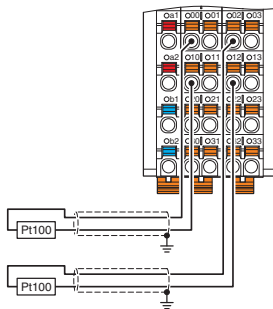


Figure 11 Pt 100 detection



Make sure that the sensor cable is no more than 10 m in length.



To achieve maximum accuracy ( $< \pm 0.1$  K, it is possible to calibrate a measuring section. To do so, carry out fine adjustment of the tolerances of the connecting cables and the external Pt 100 sensor with object 008F<sub>hex</sub>: local adjust values.

### 8.7 Measurement of a $\pm 5$ V signal

A -5 V ... +5 V input is available for acquisition from a wide range of signal sources.

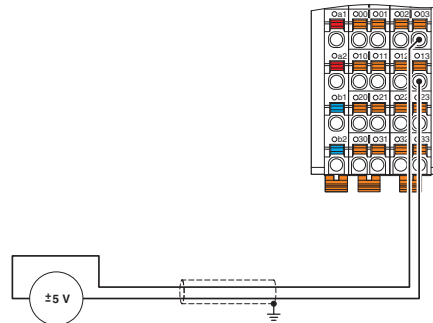


Figure 12 Measurement of a linear voltage  $\pm 5$  V DC



Make sure that the shielded twisted sensor cable is no more than 5 m in length at the  $\pm 5$  V input.  
If longer cable lengths are required, connect appropriate converters or signal conditioners upstream.  
The MCR range from Phoenix Contact offers a comprehensive range of products for this.

In this way, you can acquire isolated Pt 100 signals, for example, from very remote areas ( $> 100$  m) with a temperature transducer (e.g., MCR-T-UI-E) in 4-wire technology and read them in via the -5 V ... +5 V input. You can use this for external cold junction compensation of very remote control boxes, if copper TC sensor cables need to be used.

### 8.8 Universal AC and DC current acquisition in combination with a current transducer

Any AC or DC currents with 300 V AC safe isolation according to EN 50178, EN 61010, such as heating currents, can be acquired via the  $\pm 5$  V voltage input (terminal points 02 and 12) using a current transducer.

For signal conditioning, use the MCR-S-1-5-UI(-SW)-DCI current transducer from Phoenix Contact, for example.

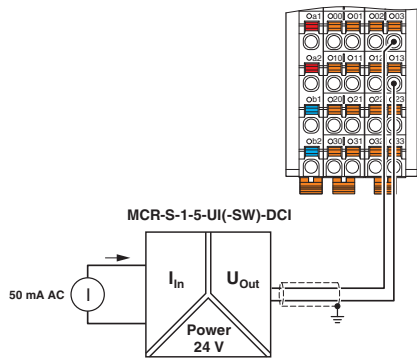


Figure 13 Measurement of an AC or DC current signal at the -5 V voltage input ... +5 V DC in combination with a current transducer (heating current acquisition)

$I_{in}$  AC/DC input current, 0 mA ... 200 mA up to 0 A ... 11 A, 15 Hz ... 400 Hz  
 $U_{out}$  -5 V DC ... +5 V DC output voltage  
 MCR-S-1-5-UI(-SW)-DCI Current transducer



Make sure that the shielded twisted sensor cable is no more than 5 m in length from the current transducer to the temperature module.  
 If longer cable lengths are required, connect appropriate converters or signal conditioners upstream.  
 The MCR range from Phoenix Contact offers a comprehensive range of products for this.

## 9 Connection notes

Use encapsulated thermocouples.

Always connect the thermocouples using twisted pair equalizing conductors.

Use shielded twisted pair equalizing conductors for a cable length from 10 m.

For mV sensors in environments prone to interference as well as for sensor cables which are longer than 10 m. use shielded twisted connecting cables (e.g., LiYCY (TP) 2 x 2 x 0.5 mm<sup>2</sup>).

For TC sensors, use the corresponding shielded TC connecting cable according to DIN EN 60584-3/ISO 60584-3.

For optimum shield connection directly before the module, use the AXL SHIELD SET Axioline shield connection set (see ordering data).


Please refer to the UM EN AXL SYS INST user manual for information on how to install the set and connect the shield.

For installation in a control cabinet: connect the cable shield to functional earth ground immediately after the cables enter the control cabinet. Route the shield as far as the Axioline F temperature module without interruption.

## 10 Configuration notes

Always position temperature modules at the end of the station. For modules that must be positioned next to a bus coupler, the typical measuring tolerance can be increased by up to 0.9 K.

## 11 Local status and diagnostic indicators

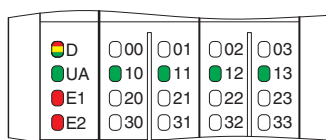

Channel errors are errors that can be associated with a channel.  
Periphery errors are errors that affect the entire module.

Figure 14 Local status and diagnostic indicators

| Designation | Color            | Meaning                                | State                    | Description   |  |
|-------------|------------------|--|--------------------------|---|--|
| D           | Red/yellow/green | Diagnostics of local bus communication |                          |   |  |
|             |                  | Power down                             | OFF                      | Device in (power) reset.  |  |
|             |                  | Not connected                          | Red flashing             | Device operating, but there is no connection to previous device.  |  |
|             |                  | Reset                                  | Red ON                   | Application reset<br>Device operating, but there is still a connection to the previous device, the application is reset.  |  |
|             |                  | Ready                                  | Yellow ON                | Device operating, there is still a connection to the previous device, but the device has not yet detected a valid cycle after power on.   |  |
|             |                  | Connected                              | Yellow flashing          | Valid data cycles have been detected, but the device is (not) yet part of the current configuration.  |  |
|             |                  | Device application not active          | Green/yellow alternating | Valid data cycles are being detected.<br>The master application set the output data to valid, however, the slave application has not set the input data to valid as yet.                                    |  |
|             |                  | Active                                 | Green flashing           | Device operating, communications within the station is OK.<br>The master application does not read the input data.<br>(The connection to the controller has not yet been established, for example.)         |  |
|             |                  | Run                                    | Green ON                 | Valid data cycles are being detected. All data is valid   |  |
| UA          | Green            | U <sub>Analog</sub>                    | ON                       | Supply of analog modules present  |  |
|             |                  |  | OFF                      | Supply of analog modules not present  |  |
| E1          | Red              | Supply voltage error                   | ON                       | Supply voltage is faulty.   |  |
|             |                  |  | OFF                      | Supply voltage is present.  |  |
| E2          | Red              | Error                                  | ON                       | I/O or channel error has occurred.  |  |
|             |                  |  | OFF                      | No error  |  |
| 10 ... 13   | Red/orange/green | Channel Scout/error message            |                          |   |  |
|             |                  | Channel Scout                          | Orange flashing          | Channel searched for  |  |
|             |                  | Error message                          | Red ON                   | Open circuit, overrange or underrange or voltage U <sub>A</sub> not present<br>Errors which affect the entire device (e.g., parameter table invalid);<br>Such errors are only displayed on active channels. |  |
|             |                  |  |                          | OK  |  |
|             |                  | Inactive                               | Green ON                 | Normal operation, installation OK   |  |
|             | OFF              | Channel is parameterized as inactive.  |                          |   |  |

---

Error code and status of the E1 and E2 LEDs

| <b>Error</b>            | <b>E1 LED</b> | <b>E2 LED</b> |
|-------------------------|---------------|---------------|
| No error                | OFF           | OFF           |
| Underrange              | OFF           | ON            |
| Overrange               | OFF           | ON            |
| Open circuit            | OFF           | ON            |
| Faulty supply voltage   | ON            | ON            |
| Parameter table invalid | OFF           | ON            |
| Device error            | OFF           | ON            |
| Flash format error      | OFF           | ON            |

## 12 Process data

The module uses five words of IN process data and five words of OUT process data.

### 12.1 Input words IN1 to IN5

The measured values of the TC channels are transmitted to the controller board or the computer via process data input words IN1 to IN5.

IN5 is used to transmit the measured value for the voltage input.

The measured values are depicted in IB IL or S7-compatible format. In both cases, the measured value is displayed in 16 bit format. The data type is Integer 16 from a technical programming point of view.

|                                   |
|-----------------------------------|
| IN1: measured value channel 1     |
| :                                 |
| IN4: measured value channel 4     |
| IN5: measured value voltage input |

|              |    |    |    |    |    |   |   |   |   |   |   |   |   |   |   |
|--------------|----|----|----|----|----|---|---|---|---|---|---|---|---|---|---|
| 15           | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Analog value |    |    |    |    |    |   |   |   |   |   |   |   |   |   |   |

In the IB IL format a diagnostic code is mapped to the input data in the event of an error.

| Code (hex) | Cause  |
|------------|--|
| 8001       | Measuring range exceeded (overrange)                     |
| 8002       | Open circuit   |
| 8004       | Measured value invalid/no valid measured value available |
| 8008       | Cold junction defective                                  |
| 8010       | Parameter table invalid                                  |
| 8020       | Faulty supply voltage                                    |
| 8040       | Device faulty  |
| 8080       | Below measuring range (underrange)                       |

Note regarding code 8008<sub>hex</sub>: in the event of a cold junction error, code 8008<sub>hex</sub> is indicated for the channel to which the affected cold junction is assigned.

In order to determine the exact cause of the error, select the "Cold junction" sensor type via the parameterization. The detailed error message is then output for this channel (8080<sub>hex</sub>, 8001<sub>hex</sub> or 8002<sub>hex</sub>).

### 12.2 Output words OUT1 to OUT5

|   |
|---|
| OUT1: cold junction temperature specification |
| OUT2: -                                       |
| :   |
| OUT5: -                                       |

## 13 Open circuit

### 13.1 Channels 1 to 4 (TC/linear voltage)

Channels 1 to 4 have open circuit detection.

As soon as an open circuit occurs, this is indicated in the process data and in PDI object 0018<sub>hex</sub>.

In addition, the corresponding diagnostic LED for the channel lights up red.

### 13.2 Voltage input ±5 V

In the event of an error, the voltage input value goes to 0.

A diagnostic message is not generated, this error is not indicated at the diagnostic LEDs either.

## 14 Significant values in various formats

### 14.1 Significant values in IB IL format

| Input data |            | Temperature sensors |                | Linear voltage $\pm 100$ mV |             |
|------------|------------|---------------------|----------------|-----------------------------|-------------|
| Resolution |            | 1°C or 1°F          | 0.1°C or 0.1°F | 1 $\mu$ V                   | 10 $\mu$ V  |
| hex        | dec        | °C or °F            | °C or °F       |                             |             |
| 8001       | Overrange  | > Limit value       | > Limit value  | > 32.512 mV                 | > 100 mV    |
| 03E8       | 1000       | +1000.0             | +100.0         | +1 mV                       | +10 mV      |
| 0001       | 1          | +1.0                | +0.1           | +1 $\mu$ V                  | +10 $\mu$ V |
| 0000       | 0          | 0                   | 0              | 0 $\mu$ V                   | 0 $\mu$ V   |
| FFFF       | -1         | -1                  | -0.1           | -1 $\mu$ V                  | -10 $\mu$ V |
| FC18       | -1000      | -1000.0             | -100.0         | -1 mV                       | -10 mV      |
| 8080       | Underrange | < Limit value       | < Limit value  | < -32.512 mV                | < -100 mV   |

### 14.2 Significant values in S7-compatible format

| Input data |            | Temperature sensors |                | Linear voltage $\pm 100$ mV |             |
|------------|------------|---------------------|----------------|-----------------------------|-------------|
| Resolution |            | 1°C or 1°F          | 0.1°C or 0.1°F | 1 $\mu$ V                   | 10 $\mu$ V  |
| hex        | dec        | °C or °F            | °C or °F       |                             |             |
| 8000       | Overrange  | > Limit value       | > Limit value  | > 32.512 mV                 | > 100 mV    |
| 03E8       | 1000       | +1000.0             | +100.0         | +1 mV                       | +10 mV      |
| 0001       | 1          | +1.0                | +0.1           | +1 $\mu$ V                  | +10 $\mu$ V |
| 0000       | 0          | 0                   | 0              | 0                           | 0           |
| FFFF       | -1         | -1                  | -0.1           | -1 $\mu$ V                  | -10 $\mu$ V |
| FC18       | -1000      | -1000.0             | -100.0         | -1 mV                       | -10 mV      |
| 7FFF       | Underrange | < Limit value       | < Limit value  | < -32.512 mV                | < -100 mV   |



## 15 Parameter, diagnostics and information (PDI)

Parameter and diagnostic data as well as other information is transmitted via the PDI channel of the Axioline F station.

The standard and application objects stored in the module are described in the following section.

The following applies to all tables below:

Please refer to the UM EN AXL F SYS INST for an explanation of the object codes and data types.

| Abbreviation | Meaning                         |
|--------------|---------------------------------|
| A            | Number of elements              |
| L            | Length of the elements in bytes |
| R            | Read                            |
| W            | Write                           |



Every visible string is terminated with a zero terminator (00<sub>hex</sub>). The length of a visible string element is therefore one byte larger than the amount of user data.



For detailed information on PDI and the objects, please refer to the UM EN AXL F SYS INST user manual.

## 16 Standard objects

### 16.1 Objects for identification (device rating plate)

| Index (hex)              | Object name     | Object type | Data type      | A | L      | Rights | Meaning                    | Contents   |
|--------------------------|-----------------|-------------|----------------|---|--------|--------|----------------------------|--|
| <b>Manufacturer</b>      |                 |             |                |   |        |        |                            |  |
| 0001                     | VendorName      | Var         | Visible String | 1 | 16     | R      | Vendor name                | Phoenix Contact                                  |
| 0002                     | VendorID        | Var         | Visible String | 1 | 7      | R      | Vendor ID                  | 00A045   |
| 0003                     | VendorText      | Var         | Visible String | 1 | 49     | R      | Vendor text                | Components and systems for industrial automation |
| 0012                     | VendorURL       | Var         | Visible String | 1 | 30     | R      | Vendor URL                 | http://www.phoenix-contact.com                   |
| <b>Module - general</b>  |                 |             |                |   |        |        |                            |  |
| 0004                     | DeviceFamily    | Var         | Visible String | 1 | 14     | R      | Device family              | I/O analog IN                                    |
| 0006                     | ProductFamily   | Var         | Visible String | 1 | 33     | R      | Product family             | Axiline - High speed I/O system                  |
| 000E                     | CommProfile     | Var         | Visible String | 1 | 4      | R      | Communication profile      | 633  |
| 000F                     | DeviceProfile   | Var         | Visible String | 1 | 5      | R      | Device profile             | 0010   |
| 0011                     | ProfileVersion  | Record      | Visible String | 2 | 11; 20 | R      | Profile version            | 2011-12-07; Basic Profile V2.0                   |
| 003A                     | VersionCount    | Array       | Unsigned 16    | 4 | 4 * 2  | R      | Version counter            | e. g., 0007 0001 0001 0001 <sub>hex</sub>        |
| <b>Module - special</b>  |                 |             |                |   |        |        |                            |  |
| 0005                     | Capabilities    | Array       | Visible String | 1 | 8      | R      | Capabilities               | Nothing  |
| 0007                     | ProductName     | Var         | Visible String | 1 | 17     | R      | Product name               | AXL F UTH4 1H                                    |
| 0008                     | SerialNo        | Var         | Visible String | 1 | 11     | R      | Serial number              | xxxxxxxx (e. g., 1234512345)                     |
| 0009                     | ProductText     | Var         | Visible String | 1 | 24     | R      | Product text               | 4 analog input channels                          |
| 000A                     | OrderNumber     | Var         | Visible String | 1 | 8      | R      | Order No.                  | 2688598  |
| 000B                     | HardwareVersion | Record      | Visible String | 2 | 11; 3  | R      | Hardware version           | e. g., 2010-06-21; 01                            |
| 000C                     | FirmwareVersion | Record      | Visible String | 2 | 11; 6  | R      | Firmware version           | e. g., 2010-06-21; V1.10                         |
| 000D                     | PChVersion      | Record      | Visible String | 2 | 11; 6  | R      | Parameter channel version  | 2010-01-08; V1.00                                |
| 0037                     | DeviceType      | Var         | Octet string   | 1 | 8      | R      | Module identification      | 00 20 00 08 00 00 00 A8 <sub>hex</sub>           |
| <b>Use of the device</b> |                 |             |                |   |        |        |                            |  |
| 0014                     | Location        | Var         | Visible String | 1 | 59     | R/W    | Location                   | Can be filled out by the user.                   |
| 0015                     | EquipmentIdent  | Var         | Visible String | 1 | 59     | R/W    | Equipment identifier       | Can be filled out by the user.                   |
| 0016                     | AppDeviceAddr   | Var         | Unsigned 16    | 1 | 2      | R/W    | Application device address | Can be filled out by the user.                   |

### 16.2 Object for multilingual capacity

| Index (hex) | Object name | Object type | Data type      | A | L    | Rights | Meaning  | Contents       |
|-------------|-------------|-------------|----------------|---|------|--------|----------|----------------|
| 0017        | Language    | Record      | Visible String | 2 | 6; 8 | R      | Language | en-us; English |

### 16.3 Object descriptions

| Index (hex) | Object name  | Object type | Data type | A  | L  | Rights      | Meaning                                |
|-------------|--------------|-------------|-----------|----|----|-------------|--|
| 0038        | ObjDescrReq  | Record      |           | 2  | 3  | Read, write | Object description request             |
| 0039        | ObjDescr     | Record      |           | 16 | 36 | Read        | Object description                     |
| 003B        | PDIN_Descr   | Record      |           | 3  | 12 | R           | Description of the IN process data     |
| 003C        | PDOOUT_Descr | Record      |           | 6  | 24 | R           | Description of the output process data |



These objects are only important for tools and are therefore not described in more detail here.  
Please refer to the basic profile for comprehensive information.

### 16.4 Diagnostics objects

| Index (hex) | Object name | Object type | Data type  | A | L                 | Rights | Assignment        |
|-------------|-------------|-------------|------------|---|-------------------|--------|-------------------|
| 0018        | DiagState   | Record      |            | 6 | 2; 1; 1; 2; 1; 14 | R      | Diagnostic state  |
| 0019        | ResetDiag   | Var         | Unsigned 8 | 1 | 1                 | W      | Reset diagnostics |

**Diagnostics state (0018<sub>hex</sub>: DiagState)**

This object is used for a structured message of an error.

| 0018 <sub>hex</sub> : DiagState (Read) |                |                 |                      |                                      |
|--|----------------|-----------------|----------------------|--------------------------------------|
| Subindex                               | Data type      | Length in bytes | Meaning              | Contents                             |
| 0                                      | Record         | 21              | Diagnostic state     | Complete diagnostics information     |
| 1                                      | Unsigned 16    | 2               | Error number         | 0 ... 65535 <sub>dez</sub>           |
| 2                                      | Unsigned 8     | 1               | Priority             | 00 <sub>hex</sub> No error           |
|  |                |                 |                      | 01 <sub>hex</sub> Error              |
|  |                |                 |                      | 02 <sub>hex</sub> Warning            |
|  |                |                 |                      | 81 <sub>hex</sub> Error removed      |
|  |                |                 |                      | 82 <sub>hex</sub> Warning eliminated |
| 3                                      | Unsigned 8     | 1               | Channel/group/module | 00 <sub>hex</sub> No error           |
|  |                |                 |                      | 01 <sub>hex</sub> Channel 1          |
|  |                |                 |                      | : :                                  |
|  |                |                 |                      | 04 <sub>hex</sub> Channel 4          |
|  |                |                 |                      | 05 <sub>hex</sub> ±5 V voltage input |
|  |                |                 |                      | FF <sub>hex</sub> entire device      |
| 4                                      | Unsigned 16    | 2               | Error code           | See table below                      |
| 5                                      | Unsigned 8     | 1               | More follows         | 00 <sub>hex</sub>                    |
| 6                                      | Visible String | 14              | Text (14 characters) | See table below                      |



The message with the priority 81<sub>hex</sub> or 82<sub>hex</sub> is a one-time internal message to the bus coupler that is implemented onto the error mechanisms of the higher-level system by the bus coupler.

Error and status of the local status and diagnostics indicators

| Subindex                | 2        | 3                            | 4          |       | 6                  | Process data | LED                   |     |     |     |           |
|-------------------------|----------|------------------------------|------------|-------|--------------------|--------------|-----------------------|-----|-----|-----|-----------|
|                         | Priority | Channel/<br>group/<br>module | Error code |       | Text               |              | D                     | UA  | E1  | E2  | 10 ... 13 |
|                         | hex      | hex                          | hex        | dec   |                    |              |                       |     |     |     |           |
| No error                | 00       | 00                           | 0000       | 0     | Status OK          | xxxx         | Green ON              | ON  | OFF | OFF | X         |
| Cold junction invalid   | 01       | 01 ... 04                    | 5120       | 20768 | Cold junction (CJ) | 8008         | Green ON              | ON  | OFF | ON  | Red ON    |
| Faulty supply voltage   | 01       | FF                           | 5160       | 20832 | Supply fail        | 8020         | Flashing green/yellow | OFF | ON  | ON  | Red ON    |
| Device error            | 01       | FF                           | 6301       | 25345 | CS FLASH           | 8040         | Green ON              | ON  | OFF | ON  | Red ON    |
| Flash format error      | 01       | FF                           | 6302       | 25346 | FO FLASH           | 8040         | Green ON              | ON  | OFF | ON  | Red ON    |
| Parameter table invalid | 01       | FF                           | 6320       | 25376 | Invalid para       | 8010         | Green ON              | ON  | OFF | ON  | Red ON    |
| Open circuit            | 01       | 01 ... 04                    | 7710       | 30480 | Open circuit       | 8002         | Green ON              | ON  | OFF | ON  | Red ON    |
| Overrange               | 02       | 01 ... 05                    | 8910       | 35088 | Overrange          | 8001         | Green ON              | ON  | OFF | ON  | Red ON    |
| Underrange              | 02       | 01 ... 05                    | 8920       | 35104 | Underrange         | 8080         | Green ON              | ON  | OFF | ON  | Red ON    |

X The LED is not affected by this error.  
 05<sub>hex</sub> Overrange or underrange at ±5 V voltage input  
 This state is not indicated by an LED.



An error at a channel (channel = 01 ... 04) is indicated via the corresponding LED (LED 10 ... 13).  
 An error which affects the entire device (channel = FF), is only indicated on active channels via LEDs 10 ... 13. The corresponding LED is off for inactive channels.



Once the malfunction has been eliminated, it is automatically reset.

**Reset diagnostic messages (0019<sub>hex</sub>: ResetDiag)**

You can delete the diagnostics memory and acknowledge the diagnostic messages with this object.

| 0019 <sub>hex</sub> : ResetDiag (Write) |            |                 |                   |                   |  |
|---|------------|-----------------|-------------------|-------------------|--|
| Subindex                                | Data type  | Length in bytes | Meaning           | Contents          |  |
| 0                                       | Unsigned 8 | 1               | Reset diagnostics | 00 <sub>hex</sub> | All diagnostic messages approved   |
|   |            |                 |                   | 02 <sub>hex</sub> | Deletes and acknowledges all pending diagnostic messages that have not been read out           |
|   |            |                 |                   | 06 <sub>hex</sub> | Deletes and acknowledges all the diagnostic messages and allows no further diagnostic messages |
|   |            |                 |                   | Other             | Reserved   |

### 16.5 Objects for process data management

| Index (hex) | Object name | Object type | Data type       | A | L  | Rights | Assignment                              |
|-------------|-------------|-------------|-----------------|---|----|--------|---|
| 0025        | PDIN        | Var         | Octet string    | 1 | 10 | R      | Input process data                      |
| 0026        | PDOUT       | Var         | Octet string    | 1 | 10 | R/W    | Output process data                     |
| 0027        | GetExRight  | Var         | Simple variable | 1 | 1  | R/W    | Get exclusive process data write rights |

#### IN process data (0025<sub>hex</sub>: PDIN)

You can read the IN process data of the module with this object.

The structure corresponds to the representation in the "Process data" section.

| 0025 <sub>hex</sub> : PDIN (Read) |              |                 |                    |
|-----------------------------------|--------------|-----------------|--------------------|
| Subindex                          | Data type    | Length in bytes | Meaning            |
| 0                                 | Octet string | 10              | Input process data |

There are 2 bytes available for each channel, starting with channel 1.

There are also 2 bytes available to transmit the heater voltage measured value.

#### OUT process data (0026<sub>hex</sub>: PDOUT)

You can read and write the OUT process data of the module with this object.

The structure corresponds to the representation in the "Process data" section.

Output data can be written in order to specify the temperature as an external cold junction, in you do not want to use the process data for this.

If you use the first word (specification of the cold junction temperature), reset the remaining words to 0.

| 0026 <sub>hex</sub> : PDOUT (read, write) |              |                 |                     |  |
|---|--------------|-----------------|---------------------|--|
| Subindex                                  | Data type    | Length in bytes | Meaning             | Contents   |
| 0   | Octet string | 10              | Output process data | The structure corresponds to the representation in the "Process data" section. |

Observe the notes in the section "Writing the analog values via the PDI channel".

#### Request exclusive write access (0027<sub>hex</sub>: GetExRight)

This object allows you to determine which channel (process data channel or PDI channel) gets the rights for writing the outputs.

| 0027 <sub>hex</sub> : GetExRight (read, write) |                 |                 |   |                   |   |
|--|-----------------|-----------------|---|-------------------|---|
| Subindex                                       | Data type       | Length in bytes | Meaning                                 | Contents          |   |
| 0  | Simple variable | 1               | Get exclusive process data write rights | 00 <sub>hex</sub> | Rights for writing output data over the PD channel (process data channel) |
|  |                 |                 |   | 01 <sub>hex</sub> | Rights for writing output data via the PDI channel                        |

## 16.6 Objects for device management

| Index (hex) | Object name | Object type     | Data type    | A | L | Rights | Meaning  |
|-------------|-------------|-----------------|--------------|---|---|--------|----------|
| 001D        | Password    | Simple variable | Octet string | 1 | 9 | W      | Password |

### "Password" object

By entering the "Superuser" password you permit writing to the "Exclusiv right received" object. These rights are required to transmit process data over the PDI channel.

| 001D <sub>hex</sub> : password (Write) |                 |                 |          |
|--|-----------------|-----------------|----------|
| Subindex                               | Data type       | Length in bytes | Meaning  |
| 0                                      | Simple variable | 9               | Password |

## 17 Application objects

| Index (hex) | Object name          | Object type | Data type    | A | L     | Rights | Assignment                                   |
|-------------|----------------------|-------------|--------------|---|-------|--------|--|
| 0080        | ParaTable            | Array       | Unsigned 16  | 6 | 6 * 2 | R/W    | Parameter table                              |
| 0082        | Measured Value Float | Array       | Octet string | 4 | 4 * 6 | R      | Measured values in the extended float format |
| 0083        | PD Min               | Array       | Integer 16   | 5 | 5 * 2 | R      | Minimum process data value                   |
| 0084        | PD Max               | Array       | Integer 16   | 5 | 5 * 2 | R      | Maximum process data value                   |
| 008F        | Local adjust value   | Var         | Octet string | 1 | 8     | R/W    | Local adjust values                          |
| 0090        | Channel Scout        | Var         | Unsigned 8   | 1 | 1     | R/W    | Channel Scout                                |

### 17.1 Parameter table (0080<sub>hex</sub>: ParaTable)

Parameterize the module using this object.

In the case of valid parameters, the parameterization is stored in the module permanently.

After resetting, the module works with the last permanently stored data. Upon delivery, the module works with the default data (default settings).

| 0080 <sub>hex</sub> : ParaTable (read, write) |                      |                 |                                |                     |
|---|----------------------|-----------------|--------------------------------|---------------------|
| Subindex                                      | Data type            | Length in bytes | Meaning                        | Default value       |
| 0   | Array of Unsigned 16 | 6 * 2           | Read/write all elements        | See subindices      |
| 1   | Unsigned 16          | 2               | Parameterization of channel 1  | 001F <sub>hex</sub> |
| :   | Unsigned 16          | 2               | :                              |                     |
| 4   | Unsigned 16          | 2               | Parameterization of channel 4  | 001F <sub>hex</sub> |
| 5   | Unsigned 16          | 2               | Data format, mounting position | 0000 <sub>hex</sub> |
| 6   | Unsigned 16          | 2               | Reserved                       | 0000 <sub>hex</sub> |

Subindex 1 ... 4: parameterization of channel 1 ... channel 4

Parameterization word

|    |    |        |    |                    |    |   |   |            |   |   |             |   |   |   |   |
|----|----|--------|----|--------------------|----|---|---|------------|---|---|-------------|---|---|---|---|
| 15 | 14 | 13     | 12 | 11                 | 10 | 9 | 8 | 7          | 6 | 5 | 4           | 3 | 2 | 1 | 0 |
| 0  | 0  | Filter |    | Cold junction type |    |   |   | Resolution |   | 0 | Sensor type |   |   |   |   |

The values displayed in bold are pre-settings.

| Code (bin) | Filter        |               |
|------------|---------------|---------------|
| <b>00</b>  | <b>120 ms</b> | <b>8.3 Hz</b> |
| 01         | 100 ms        | 10 Hz         |
| 10         | 60 ms         | 16.6 Hz       |
| 11         | 40 ms         | 25 Hz         |

| Code (bin)  | Code (hex) | Cold junction type |        |             |
|-------------|------------|--------------------|--------|-------------|
| <b>0000</b> | <b>0</b>   | <b>Internal</b>    |        |             |
| 0001        | 1          | Switched off       |        |             |
| 0010        | 2          | External           | Pt 100 | Connector 1 |
| 0011        | 3          | External           | Pt 100 | Connector 2 |
| 0100        | 4          | Reserved           |        |             |
| 0101        | 5          | Reserved           |        |             |
| 0110        | 6          | Process data       |        |             |
| Other       |            | Reserved           |        |             |

**Internal** There are several internal cold junction sensors in the module.

When you select the "Internal" cold junction type for a channel, the corresponding cold junction for this channel is automatically assigned to it.

**External** You can connect a Pt 100 sensor to every connector as an external cold junction sensor. Up to four external cold junctions are therefore available. One of these four external cold junctions can be assigned to each of the eight channels.

**Process data** This parameterization offers the following option:  
 Determine the temperature of the cold junction via an additional device.  
 Transfer this temperature to the temperature module via the first process data output word. Use IB IL format with a resolution of 0.1°C.

| Code (bin) | Resolution  |
|------------|---|
| <b>00</b>  | <b>0.1°C (or 1 µV for sensor type linear voltage ±100 mV)</b> |
| 01         | 1°C (or 10 µV for sensor type linear voltage ±100 mV)         |
| 10         | 0.1°F   |
| 11         | 1°F   |

| Code (bin)   | Code (hex) | Sensor type             |
|--------------|------------|-------------------------|
| 00000        | 0          | K                       |
| 00001        | 1          | J                       |
| 00010        | 2          | E                       |
| 00011        | 3          | R                       |
| 00100        | 4          | S                       |
| 00101        | 5          | T                       |
| 00110        | 6          | B                       |
| 00111        | 7          | N                       |
| 01000        | 8          | U                       |
| 01001        | 9          | L                       |
| 01010        | A          | C                       |
| 01011        | B          | W                       |
| 01100        | C          | HK                      |
| 01101        | D          | Reserved                |
| 01110        | E          | Reserved                |
| 01111        | F          | Cold junction (CJ)      |
| 10000        | 10         | Linear voltage ±100 mV  |
| <b>11111</b> | <b>1F</b>  | <b>Channel inactive</b> |
| Other        |            | Reserved                |



**Subindex 5: data format, mounting position**

|    |    |                   |    |    |             |   |   |   |   |   |   |   |   |   |   |
|----|----|-------------------|----|----|-------------|---|---|---|---|---|---|---|---|---|---|
| 15 | 14 | 13                | 12 | 11 | 10          | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| 0  | 0  | Mounting position | 0  | 0  | Data format | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

| Code (bin) | Data format   |
|------------|---------------|
| 00         | IB IL         |
| 01         | Reserved      |
| 10         | S7-compatible |
| 11         | Reserved      |

| Code (bin) | Mounting position                        |
|------------|--|
| 00         | Horizontal (preferred mounting position) |
| 01         | Vertical, bus coupler above              |
| 10         | Vertical, bus coupler below              |
| 11         | Lying                                    |

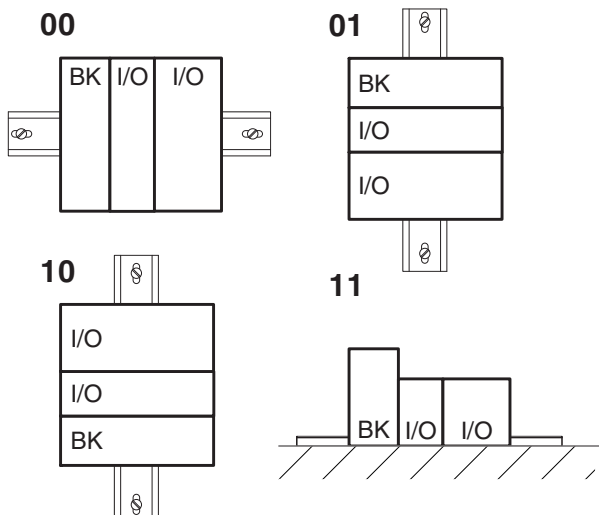


Figure 15 Mounting position

BK Bus coupler  
 I/O I/O module

**17.2 Measured value in extended float format (0082<sub>hex</sub>: Measured Value Float)**

You can read the IN process data in IB IL or S7-compatible format with the 0025<sub>hex</sub> object.

The 0082<sub>hex</sub> object is also available.

This object provides the measured value in the highest internal accuracy of the terminal in the float format.

| 0082 <sub>hex</sub> : Measured Value Float (Read) |                  |                 |                              |
|---|------------------|-----------------|------------------------------|
| Subindex  | Data type        | Length in bytes | Meaning                      |
| 0   | Array of Records | 4 * 6           | Read all elements            |
| 1   | Record           | 6               | Measured value for channel 1 |
| :   | :                | :               | :                            |
| 4   | Record           | 6               | Measured value channel 4     |

**Measured value channel 1 ... channel 4**

| Element | Data type  | Length in bytes | Meaning  |
|---------|------------|-----------------|--|
| 1       | Float 32   | 4               | Measured value in float format according to IEEE 754 |
| 2       | Unsigned 8 | 1               | Status   |
| 3       | Unsigned 8 | 1               | Unit   |

Structure of the float format according to IEEE 754 in the bit representation:

|           |              |              |              |
|-----------|--------------|--------------|--------------|
| VEEE EEEE | EMMM<br>MMMM | MMMM<br>MMMM | MMMM<br>MMMM |
|-----------|--------------|--------------|--------------|

- V 1 sign bit, 0: positive, 1: negative
- E 8 bits exponent with offset 7F<sub>hex</sub>
- M 23 bits mantissa

Some example values for conversion from floating point to hexadecimal representation:

| Floating point | Hexadecimal representation |
|----------------|----------------------------|
| 1.0            | 3F 80 00 00                |
| 10.0           | 41 20 00 00                |
| 1.03965528     | 3F 85 13 6D                |
| - 1.0          | BF 80 00 00                |

**Extended Float Format**

Extended Float Format is a specially defined format. It consists of the measured value in float format, a status, and a unit.

Status is necessary because the float format defines no patterns providing information on the status of the numerical value.

The status corresponds to the LSB of the diagnostic code in IB IL format (e.g., overrange: status = 01, diagnostic code = 8001<sub>hex</sub>). If status = 0, the measured value is valid.

| Unit            | Code                    |
|-----------------|-------------------------|
| °C              | 32 (20 <sub>hex</sub> ) |
| °F              | 33 (21 <sub>hex</sub> ) |
| Millivolts (mV) | 36 (24 <sub>hex</sub> ) |

| Status                    | Code              |
|---------------------------|-------------------|
| Measured value is valid   | 00 <sub>hex</sub> |
| Measured value is invalid | Other             |

**17.3 Minimum process data value  
(0083<sub>hex</sub>: PD Min)**

Object 0083<sub>hex</sub> can be used to read the minimum process data values.

The values are initialized after each parameterization. The highest value is assigned for the minimum process data value.

PD Min = 7FFF 7FFF 7FFF 7FFF 7FFF<sub>hex</sub>

On every analog conversion, the PD Min value is compared with the current measured values and overwritten if necessary.

| 0083 <sub>hex</sub> : PD Min (Read) |                     |                 |  |
|-------------------------------------|---------------------|-----------------|--|
| Subindex                            | Data type           | Length in bytes | Meaning                                  |
| 0                                   | Array of Integer 16 | 5 * 2           | Read all elements                        |
| 1                                   | Integer 16          | 2               | Minimum process data value channel 1     |
| :                                   | :                   | :               | :  |
| 4                                   | Integer 16          | 2               | Minimum process data value channel 4     |
| 5                                   | Integer 16          | 2               | Minimum process data value voltage input |

**17.4 Maximum process data value  
(0084<sub>hex</sub>: PD Max)**

Object 0084<sub>hex</sub> can be used to read the maximum process data values.

The values are initialized after each parameterization. The lowest value is assigned for the maximum process data value.

PD Max = 8000 8000 8000 8000 8000<sub>hex</sub>

On every analog conversion, the PD Max value is compared with the current measured values and overwritten if necessary.

| 0084 <sub>hex</sub> : PD Max (Read) |                     |                 |  |
|-------------------------------------|---------------------|-----------------|--|
| Subindex                            | Data type           | Length in bytes | Meaning                                  |
| 0                                   | Array of Integer 16 | 5 * 2           | Read all elements                        |
| 1                                   | Integer 16          | 2               | Maximum process data value channel 1     |
| :                                   | :                   | :               | :  |
| 4                                   | Integer 16          | 2               | Maximum process data value channel 4     |
| 5                                   | Integer 16          | 2               | Maximum process data value voltage input |

### 17.5 Local adjust values (008F<sub>hex</sub>)

This object supports a channel-specific path calibration function for maximum accuracy. This means, for example, that you can finely tune the tolerances by means of the TC connecting cables and the sensors.

The calibration data is permanently stored on the module.

The object contains the temperature offset of the cold junction with reference to each channel in IB IL format with a resolution of 0.1°C.

| 008F <sub>hex</sub> : local adjust values (read, write) |           |                 |                     |          |               |
|---|-----------|-----------------|---------------------|----------|---------------|
| Subindex  | Data type | Length in bytes | Meaning             | Contents | Default value |
| 0   | Var       | 4 * 2           | Local adjust values |          |               |

| Element | Data type | Length in bytes | Meaning                      | Contents  | Default value       |
|---------|-----------|-----------------|------------------------------|---|---------------------|
| 1       | Var       | 2               | Temperature offset channel 1 | -20.0 °C ... +20.0 °C<br>(-200 <sub>dec</sub> ... +200 <sub>dec</sub> ) | 0000 <sub>hex</sub> |
| :       | :         | :               | :                            | :   | :                   |
| 4       | Var       | 2               | Temperature offset channel 4 | -20.0 °C ... +20.0 °C<br>(-200 <sub>dec</sub> ... +200 <sub>dec</sub> ) | 0000 <sub>hex</sub> |

#### Example:

Channel 1 is measuring +2.0°C too high.

A negative offset of -2.0°C is required to correct this error.

In IB IL format, -2 °C corresponds to a value of -20<sub>dec</sub> = FFEC<sub>hex</sub>.

### 17.6 Channel Scout (0090<sub>hex</sub>)

This object is used to quickly find a channel.

| 0090 <sub>hex</sub> : channel scout (read, write) |           |                 |               |          |  |
|---|-----------|-----------------|---------------|----------|--|
| Subindex  | Data type | Length in bytes | Meaning       | Contents |  |
| 0   | Var       | 1               | Channel Scout | 0        | Disable all channel scout processes  |
|   |           |                 |               | 1 ... 4  | Green LED of the channel is flashing at 0.5 Hz (1 second ON, 1 second OFF) |

The function is terminated automatically after five minutes if you do not deactivate the Channel Scout processes. The flashing overrides all diagnostic messages of the selected channel. When a channel is parameterized, the Channel Scout function is aborted.

## 18 Writing the analog values over the PDI channel

PDI = Parameters, Diagnostics and Information

To set the temperature of the external cold junction via the PDI channel rather than in the process data, you must change the exclusive right first.

To do this, proceed as follows:

- Write the ASCII string "Superuser" to the "Password" (001D<sub>hex</sub>) object.
- Write the value 01<sub>hex</sub> to the "Request exclusive write access" object (0027<sub>hex</sub>).

You may now write to the "Output process data" (0026<sub>hex</sub>) object.

## 19 Device descriptions

The device is described in the device description files.

The device descriptions for controllers from Phoenix Contact are included in PC Worx and the corresponding service packs.

The device description files for other systems are available for download at [phoenixcontact.net/products](http://phoenixcontact.net/products) in the download area of the bus coupler used.

Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;
- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком);
- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



## JONHON

«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«FORSTAR» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели,  
кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный)

Факс: 8 (812) 320-03-32

Электронная почта: [ocean@oceanchips.ru](mailto:ocean@oceanchips.ru)

Web: <http://oceanchips.ru/>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А