

Z8051[™] Family of 8-Bit Microcontrollers

Z51F3220 Development Kit

User Manual

UM024307-1112



Copyright ©2012 Zilog[®], Inc. All rights reserved. <u>www.zilog.com</u>



Warning: DO NOT USE THIS PRODUCT IN LIFE SUPPORT SYSTEMS.

LIFE SUPPORT POLICY

ZILOG'S PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS PRIOR WRITTEN APPROVAL OF THE PRESIDENT AND GENERAL COUNSEL OF ZILOG CORPORATION.

As used herein

Life support devices or systems are devices which (a) are intended for surgical implant into the body, or (b) support or sustain life and whose failure to perform when properly used in accordance with instructions for use provided in the labeling can be reasonably expected to result in a significant injury to the user. A critical component is any component in a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system or to affect its safety or effectiveness.

Document Disclaimer

©2012 Zilog, Inc. All rights reserved. Information in this publication concerning the devices, applications, or technology described is intended to suggest possible uses and may be superseded. ZILOG, INC. DOES NOT ASSUME LIABILITY FOR OR PROVIDE A REPRESENTATION OF ACCURACY OF THE INFORMATION, DEVICES, OR TECHNOLOGY DESCRIBED IN THIS DOCUMENT. ZILOG ALSO DOES NOT ASSUME LIABILITY FOR INTELLECTUAL PROPERTY INFRINGEMENT RELATED IN ANY MANNER TO USE OF INFORMATION, DEVICES, OR TECHNOLOGY DESCRIBED HEREIN OR OTHERWISE. The information contained within this document has been verified according to the general principles of electrical and mechanical engineering.

Z8051 is a trademark or registered trademark of Zilog, Inc. All other product or service names are the property of their respective owners.



Revision History

Each instance in the Revision History table below reflects a change to this document from its previous version.

Date	Revision Level	Description	Page
Nov 2012	07	Corrected pin values in Default Jumper Settings table.	<u>6</u>
Sep 2012	06	Replaced incorrect screen in Figure 27.	<u>31</u>
Sep 2012	05	Updates for Z8051 Installation Software release 2.0.	<u>20, 26,</u> <u>33,</u> <u>45–46</u>
Apr 2012	04	Updated for improved usability.	All
Mar 2012	03	Added a G to end of part number to indicate RoHS compliance; added Figure 21.	<u>25</u>
Mar 2012	02	Corrected filepaths in the Build and Run the Z51F3220 Demo Project section.	<u>20</u>
Feb 2012	01	Original issue.	All

Z51F3220 Development Kit User Manual Zilog

Zilog Embedded & Life An DXYS Company iv

Table of Contents

Revision Historyiii
List of Figures v
List of Tables vii
Introduction1Kit Contents2Supported Operating Systems3Z51F3220 Development Board Block Diagram3Z51F3220 Development Board Description4
Install the Z8051 OCD Software and Documentation 7 Z8051 OCD Driver Installation 7 FTDI USB-to-UART Driver Installation 15
Configure the Z8051 OCD and Z51F3220 Development Board
Build and Run the Z51F3220 Demo Project20Using the Keil µVision IDE on a Demo Project26HyperTerminal Configuration33
Sample Projects and Documentation
Schematic Diagrams
OCD Driver Installation on Windows Vista Systems
OCD Driver Installation on Windows XP Systems
Stand-Alone Flash Programming Using the Keil μ Vision IDE
Customer Support

List of Figures

Figure 1.	The Z51F3220 Development Kit
Figure 2.	Z51F3220 Development Board 3
Figure 3.	Block Diagram of the Z51F3220 Development Board 4
Figure 4.	Z51F3220 Development Board: Highlighted Components 5
Figure 5.	Install Device Driver Dialog, Windows 7
Figure 6.	Browse For Driver Dialog, Windows Vista
Figure 7.	Can't Verify Publisher Dialog, Windows Vista
Figure 8.	Successfully Installed Dialog, Windows Vista 11
Figure 9.	Unsuccessful Installation, Scenario 1 12
Figure 10.	Unsuccessful Installation, Scenario 2 13
Figure 11.	Device Manager Dialog, Windows 7
Figure 12.	A Successful USB-to-UART Driver Installation
Figure 13.	Connecting the 10-Circuit Cable to the Board 17
Figure 14.	Connecting the USB Mini-B Cable to the Board
Figure 15.	An Example Setup
Figure 16.	Initial OCD Screen
Figure 17.	Object File Dialog
Figure 18.	Configuration Dialog
Figure 19.	Configuration Is Changed Dialog 24
Figure 20.	A Typical On-Chip Debugger Window
Figure 21.	A Typical On-Chip Debugger Window with Child Windows Open 25
Figure 22.	Reset & Go Toolbar Icon 25
Figure 23.	Selecting the Demo Project File
Figure 24.	Selecting the Target
Figure 25.	Selecting the Target Driver
Figure 26.	Configuring the Debug Options 30
Figure 27.	Configuring the Flash Options
Figure 28.	Load Application at Startup Settings

Z51F3220 Development Kit User Manual Zilog Embedded In Life An DXYS Company Vi

Figure 29.	Beginning a Debug Session 32
Figure 30.	A Default Debug Session 32
Figure 31.	Demo Program Menu in HyperTerminal 34
Figure 32.	Z51F3220 Development Board, #1 of 2
Figure 33.	Z51F3220 Development Board, #2 of 2
Figure 34.	Found New Hardware Dialog, Windows Vista
Figure 35.	Install Device Driver Dialog, Windows Vista 40
Figure 36.	Couldn't Find Driver Dialog, Windows Vista 41
Figure 37.	The Found New Hardware Wizard Welcome Screen
Figure 38.	The Found New Hardware Wizard's Browse Screen
Figure 39.	Selecting A Target Driver For Flash Programming 45
Figure 40.	Configuring Additional Flash Options
Figure 41.	The Keil IDE Flash Menu 46



List of Tables

Table 1.	Z51F3220000ZCOGG Contents	2
Table 2.	Default Jumper Settings	6
Table 3.	Z51F3220 Development Kit Sample Projects 3	6
Table 4.	Z51F3220 Development Kit Documentation	6

Introduction

This manual describes how to set up Zilog's Z51F3220 Development Kit (Zilog part number Z51F3220000ZCOG) and use it to evaluate your Z8051-based designs and applications.

The Kit features a development board consisting of five LEDs, five pushbuttons, a buzzer, four 7-segment LCD digits, port pin headers and a UART-to-USB port. The Board features the Z51F3220 MCU in a 44-pin MQFP package, plus a DBG connector to connect the Board to a host development PC using the Z8051 USB On-Chip Debugger (OCD) cable. For more details about the Z51F3220 MCU, please refer to the Z51F3220 Product Specification (PS0299).

This document guides you through the following tasks:

- <u>Install the Z8051 OCD Software and Documentation</u> see page 7
- <u>Configure the Z8051 OCD and Z51F3220 Development Board</u> see page 17
- <u>Build and Run the Z51F3220 Demo Project</u> see page 20

Figure 1 displays an image of the Z51F3220 Development Kit.

Z51F3220 Development Kit User Manual





Figure 1. The Z51F3220 Development Kit

Kit Contents

Table 1 lists the contents of the Z51F3220 Development Kit.

Table 1.	. Z51F3220	000ZCOGG	Contents
----------	------------	----------	----------

ltem	Description	Quantity
1	Z51F3220 Development Board	1
2	Z8051 USB On-Chip Debugger (OCD)	1
3	Z8051 OCD Target Cable (10ckt)	1
4	USB Cable: A (male) to Mini-B	2
5	Z8051 OCD Software and Documentation CDROM	1
6	Z51F3220 Development Kit Insert (FL0139)	1



<u>Appendix 2</u> on page 3 displays an image of the Z51F3220 Development Board.



Figure 2. Z51F3220 Development Board

Supported Operating Systems

The Z51F3220 Development Board and the Z8051 On-Chip Debugger support the following operating systems:

- Microsoft Windows XP
- Microsoft Windows Vista (32-bit/64-bit)
- Microsoft Windows 7 (32-bit/64-bit)

Z51F3220 Development Board Block Diagram

Figure 3 displays a block diagram of the Z51F3220 Development Board.

Z51F3220 Development Kit User Manual





Figure 3. Block Diagram of the Z51F3220 Development Board

Z51F3220 Development Board Description

The Z51F3220 Development Board consists of the following components:

- Z51F3220: U2, 44-pin MQFP chip
- 3 LEDs: Green (D2), Red (D3) and Yellow (D4) connected to the GPIO pins of the Z51F3220 MCU
- 1 green LED to indicate USB power: D5
- 1 red LED to indicate an overcurrent condition: D6
- 5 pushbuttons:
 - SW1: RESET
 - SW2–SW5: connected to the GPIO pins of the Z51F3220 MCU
- USB connector: P1
- OCD connector: J1
- USB-to-UART interface: U7

5

- USB interface providing power and communication to the Board through adjustable LD0: U5
- Power supply level that can be adjusted with potentiometer R22
- Overcurrent protection circuit on the Board: U6 and D6
- External source of reference voltage (2.5V) for the on-chip ADC: VR1
- MCU current consumption measurement resistor R7 with test points J4 and J5
- Buzzer: U1
- 4-digit, 7-segment LCD panel
- Test points, headers and prototype area with two footprints



USB Power LED D5

Figure 4. Z51F3220 Development Board: Highlighted Components

Introduction

Overcurrent LED D6

6

By default, the Z51F3220 Development Board is set up with preinstalled shunts on J16 jumper pins 1–2 and 3–4 to allow the interfacing of the Z51F3220 MCU's UART0 to the USB port. When the Board is connected to the USB port of the host PC, LED D5 will be ON. The default settings and functionalities of these shunts are listed in Table 2.

Headers	Pins	Functionality	Notes
J16	1–2, 3–4	UART0 to USB	Default
J16	5–6, 7–8	UART1 to USB	
J2	1–2	$V_{\mbox{\scriptsize CC}}$ is being measured by AN1	Default
J2	3–4	External V_{REF} , 2.5V is used for ADC	Default

Table 2. Default Jumper Settings

As indicated in the table, should you decide to use the the Z51F3220 MCU's UART1 block as the interface for your own project (currently not supported in this release), move the J16 shunts to positions 5–6 and 7–8.

By default, Input 1 of the ADC is used to measure the supply voltage. This measurement point is taken from a middle point in the voltage divider circuit that includes resistors R3 and R6; the scaling is performed by software so that the LCD always displays the actual voltage. For a visual representation, see the schematic diagram in Figure 32 on page 37.

If a short on the Board should occur, or if its attached component(s) require more than 500 mA, the overcurrent protection functionality will trigger the red LED D6 to illuminate. In this instance, power to the Board will be terminated, and the USB port of the PC will be protected from shorting.

Schematic diagrams of the Z51F3220 Development Board are presented <u>on pages 37 and</u> <u>38</u> of this document.

The physical dimensions of the Board are 4.01" x 2.50" (101.8mm x 63.5mm).



Install the Z8051 OCD Software and Documentation

The Z8051 On-Chip Debugger (OCD) interface is the interface by which your PC will communicate with the Z51F3220 MCU to download and execute code. In addition to the OCD, software such as development tools and sample applications will be installed.

Note: If you have already installed the Z8051 software and documentation from the CD-ROM following the procedure on the paper insert in your kit (FL0139), skip this section and proceed to the Z8051 OCD Driver Installation section, below.

Observe the following procedure to install the Z8051 On-Chip Debugger software and documentation on your computer.

- 1. Ensure that the OCD interface hardware is not connected to your PC.
- 2. Insert the Z8051 Software and Documentation CD into your computer's CD-ROM drive. The setup program launches automatically. If the setup program does not launch automatically, open Windows Explorer, browse to your CD-ROM drive, and double-click the file labeled Z8051_<version_number>.exe.

Note: In this filename, <version_number> refers to the version number of the OCD Software and Documentation release. For example, this version number may be 1.0.

3. Follow the on-screen instructions to complete the OCD software installation.

Z8051 OCD Driver Installation

The driver programs for the Z8051 On-Chip Debugger are copied during the software and documentation installation. In the following procedure for PCs running the Windows 7 32- and 64-bit operating systems, ensure that the target side of the OCD will remain unconnected while you install these drivers.

• Note: If you are running Windows Vista, see <u>Appendix A</u> on page 39 to install your device drivers. If you are running Windows XP, see <u>Appendix B</u> on page 42.

8

- 1. Connect the OCD hardware to the USB port of your PC by connecting the A (male) end of one of the two USB A (male)-to-Mini-B cables with the host PC's USB port. Connect the Mini-B end to the OCD device.
- 2. After the PC detects the new hardware, it will display the *Installing device driver software* dialog shown in Figure 5.



Figure 5. Install Device Driver Dialog, Windows 7

IMPORTANT NOTE: If you should encounter the scenarios presented in Figures 9 or 10, right-click your mouse on **ZILOG OCD I/F** (highlighted in Figure 9) or **Unknown device** (highlighted in Figure 10) and select **Update Driver Software...**

- 3. Select **Browse my computer for driver software (advanced)** to display the dialog shown in Figure 6, which prompts you to key in or browse for the location of the .inf file. Depending on the type of computer you use (32- bit or 64-bit), use the **Browse** button to navigate to one of the following paths, then click the **Next** button.
 - On 32-bit machines, use the following path:

<Z8051 Installation>\Z8051_<version_number>\device drivers\OCD USB\x32

- On 64-bit machines, use the following path:

<Z8051 Installation>\Z8051_<version_number>\device drivers\OCD USB\x64

Z51F3220 Development Kit User Manual Zilog Endeddad in Life An DIXYS Company 9

0	Found New Hardware - ZILOG OCD I/F
	Browse for driver software on your computer
	Search for driver software in this location:
	C:\Program Files\Zilog\Z8051_1.0\device drivers\OCD USB\x32 Browse
	Include subfolders
	Next Cancel

Figure 6. Browse For Driver Dialog, Windows Vista



4. When Windows prompts you whether to install or not install, as shown in Figure 7, click **Install this driver software anyway** and wait until the installation is completed (Windows may prompt you more than once).



Figure 7. Can't Verify Publisher Dialog, Windows Vista



5. When the installation is complete, the screen shown in Figure 8 will appear. Click **Close** to exit the OCD driver installation.

Close

Figure 8. Successfully Installed Dialog, Windows Vista

Note: On some installations, the Found New Hardware screen shown in Figure 8 may also display the text string, Zilog Z8051 USB OCD - No Firmware. This occurrence is normal and can be disregarded.

Z51F3220 Development Kit User Manual



File Action View Help	🚽 Device Manager	
Border boycent Botteries Botteries Botteries Botteries Botteries Computer Dick drives Dic	File Action View Help	
 Batteries Batteries Butecoth Radios Computer Disk drives Display adapters Monitors Monitors Network adapters Monitors Network adapters Monitors Portable Devices Processors System devices System devices System devices Generic USB Hub Generic USB Hub<		
 Butteries Butteries Butteries Butteries Butteries Butteries Disk drives Disk drives<	hnak-h7vc8n1	
 Bluetooth Radios Computer Display adapters DVD/CD-ROM drives DVD/CD-ROM drives	Batteries	
Computer Disk drives Display adapters Display	Bluetooth Radios	
Disk drives Display adapters DVD/CD-ROM drives DVD/CD-ROM drives DVDM drives DVD/CD-ROM drives DVD/CD-	Computer	
 Display adapters DVD/CD-ROM drives DVD/CD-ROM drives DE ATA/ATAPI controllers DE ATA/ATAPI controllers DE ETE 1284.4 compatible printer DE ETE 1284.4 compatible printer DE ETE 1284.4 devices Draging devices Keyboards Mice and other pointing devices Monitors Monitors Network adapters Monitors Ports (COM & LPT) Processors Sound, video and game controllers System devices Generic USB Hub UsB Composite Device 	Disk drives	
 DVD/CD-ROM drives Human Interface Devices DUE ATA/ATAPI controllers DE ATA/ATAPI controllers DE EEE 1284 4 devices EEE 1284 4 devices Keyboards Monitors Monitors Network adapters Other devices Processors Sound, video and game controllers System devices System devices Sound, video and game controllers System devices Generic USB Hub USB Composite Device 	🖥 🔜 Display adapters	
 Human Interface Devices IDE ATA/ATAPI controllers IEEE 1284.4 compatible printer IEEE 1284.4 voices IEEE 1284.4 voices IEEE 1284.4 voices Inaging devices Keyboards Mice and other pointing devices Monitors Monitors Monitors Monitors Monitors Portable Devices Processors System devices System devices Generic USB Hub USB Composite Device 	DVD/CD-ROM drives	
IDE ATA/ATAPI controllers IEEE 1284.4 compatible printer IEEE 1284.4 devices IEEE 1284.4 devices Imaging devices Keyboards Monitors Network adapters Other devices HEEE 1284.4 devices Imaging devices Monitors Network adapters Other devices HEMULTI-DACKARD DESKIET 990C Imaging devices Portable Devices Portable Devices Portable Devices Portable Devices System devices System devices Generic USB Hub Het(R) 5 Series/2400 Series Chipset Family USB Enhanced Host Controller - 3834 Intel(R) 5 Series/2400 Series Chipset Family USB Enhanced Host Controller - 3834 USB Composite Device USB Composite Device USB Composite Device USB Composite Device <	Human Interface Devices	
 IEEE 1284.4 compatible printer IEEE 1284.4 devices IEEE 1394 Bus host controllers IEEE 1394 Bus host controllers Keyboards Mitce and other pointing devices Monitors Monitors Other devices Other devices Other devices IEEE 1284.4 composite Device USB Composite Device 	D Can IDE ATA/ATAPI controllers	
 IEEE 1284.4 devices IEEE 1294 Bus host controllers Imaging devices Keyboards Monitors Monitors Metwork adapters Other devices IEEE 1294 DESKJET 990C IEEE 1294 DESKJET 990C IEEE 120G OCD /F Portable Devices Portable Devices Sound, video and game controllers System devices Generic USB Hub Unite(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B34 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B34 USB Composite Device 	🔋 拱 IEEE 1284.4 compatible printer	
 IEEE 1394 Bus host controllers Imaging devices Keyboards Monitors Network adapters Other devices Itel (N 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 USB Composite Device 	IEEE 1284.4 devices	
 Imaging devices Keyboards Monitors Monitors Motiveral states Other devices HEWLETT-PACKARD DESKJET 990C ZILOG OCD VF Other devices Portable Devices Portable Devices Portable Devices System devices System devices Generic USB Hub <li< td=""><td>🔉 🐺 IEEE 1394 Bus host controllers</td><td></td></li<>	🔉 🐺 IEEE 1394 Bus host controllers	
 Keyboards Mice and other pointing devices Monitors Network adapters Other devices HEWLETT-PACKARD DESKJET 990C ZLIOG OCD I/F Ports (COM & LPT) Ports (COM & LPT) Ports (COM & LPT) System devices System devices Generic USB Hub Universal Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 USB Composite Device 	🔊 \overline a Imaging devices	
 Mice and other pointing devices Monitors Network adapters Other devices HEWLETT-PACKARD DESKJET 990C ZLOG OCD I/F Portable Devices Processors Sound, video and game controllers System devices Universal Serial Bus controllers Generic USB Hub Universal Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 USB Composite Device 	🔊 🛲 Keyboards	
 Monitors Network adapters Other devices HEWLETT-PACKARD DESKJET 990C HEWLETT-PACKARD DESKJET 990C Portable Devices Portable Devices Sound, video and game controllers System devices System devices Generic USB Hub Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 USB Composite Device 	Mice and other pointing devices	
 Network adapters Other devices HEWLETT-PACKARD DESKJET 990C TalloG OCD I/F Portable Devices Portable Devices Sound, video and game controllers System devices Universal Serial Bus controllers Generic USB Hub Generic USB Hub	Monitors	
 Other devices HEWLETT-PACKARD DESKJET 990C ZLOG OCD 1/F Portable Devices Portable Devices Sound, video and game controllers System devices Universal Serial Bus controllers Generic USB Hub Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 USB Composite Device 	Network adapters	
 HEWLETT-PACKARD DESKJET 990C ZILOG OCD I/F Portable Devices Ports (COM & LPT) Processors System devices Universal Serial Bus controllers Generic USB Hub Generic	 Other devices 	
 ZILOG OCD I/F Portable Devices Portable Devices Ports (COM & LPT) Processors Sound, video and game controllers Sound, video and game controllers System devices Universal Serial Bus controllers Generic USB Hub Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 USB Composite Device 	HEWLETT-PACKARD DESKJET 990C	
 Portable Devices Ports (COM & LPT) Processors Sound, video and game controllers System devices Universal Serial Bus controllers Generic USB Hub Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B34 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B34 USB Composite Device 	ZILOG OCD I/F	
 Ports (COM & LPT) Processors Sound, video and game controllers System devices Universal Serial Bus controllers Generic USB Hub HP Color LaserJet 2840 EWS Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 383C USB Composite Device 	Portable Devices	
 Processors Sound, video and game controllers System devices Universal Serial Bus controllers Generic USB Hub Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B34 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B34 USB Composite Device 	Ports (COM & LPT)	
 Sound, video and game controllers System devices Universal Serial Bus controllers Generic USB Hub HP Color LaserJet 2840 EWS Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B34 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B34 USB Composite Device 	Processors	
System devices Universal Serial Bus controllers Generic USB Hub HP Color LaserJet 2840 EWS Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 383C USB Composite Device	Sound, video and game controllers	
 Universal Serial Bus controllers Generic USB Hub HP Color LaserJet 2840 EWS Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 USB Composite Device 	System devices	
Generic USB Hub Generic USB Hub Generic USB Hub Generic USB Hub Generic USB Hub Generic USB Hub HP Color LaserJet 2840 EWS Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 383C Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 383C USB Composite Device USB Composite Device	Universal Serial Bus controllers	
 Generic USB Hub HP Color LaserJet 2840 EWS Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B34 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B3C Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B3C USB Composite Device 	Generic USB Hub	
 Generic USB Hub Generic USB Hub Generic USB Hub Generic USB Hub HP Color LaserJet 2840 EWS Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B34 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B3C Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B3C USB Composite Device 	Generic USB Hub	
 Generic USB Hub Generic USB Hub HP Color LaserJet 2840 EWS Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B34 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B3C USB Composite Device 	Generic USB Hub	
 Generic USB Hub HP Color LaserJet 2840 EWS Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B34 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3B3C USB Composite Device 	Generic USB Hub	
 HP Color LasePiet 2840 EWS Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 3834 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 383C USB Composite Device 	UD Colorad associate 2040 FM/S	
 Intel(R) 5 Series/3400 Series Chipset Family OSB Enhanced Host Controller - 3634 Intel(R) 5 Series/3400 Series Chipset Family USB Enhanced Host Controller - 383C USB Composite Device 	HP Color LaserJet 2840 EWS	SP Enhanced Hant Controller 2024
USB Composite Device USB Composite Device	Intel(R) 5 Series/3400 Series Chipset Family C Just I/(R) 5 Series (2400 Series Chipset Family C	SD Enhanced Host Controller - 3634
USB Composite Device USB Composite Device USB Composite Device USB Composite Device USB Composite Device USB Composite Device	Intel(n) 5 Series/5400 Series Chipset Family C ISB Composite Device	So Ennanced Host Controller - SoSC
USB Composite Device USB Composite Device USB Composite Device USB Composite Device	USB Composite Device	
USB Composite Device USB Composite Device USB Composite Device Device USB Composite Device USB Composite Device Device USB Click here for details.	USB Composite Device	
	USB Composite Device	Device driver software was not successfully installed * *

Figure 9. Unsuccessful Installation, Scenario 1

Z51F3220 Development Kit User Manual





Figure 10. Unsuccessful Installation, Scenario 2



6. If *Zilog Z8051 USB OCD* appears in the Device Manager (as highlighted in Figure 11), the OCD driver software has been successfully installed.



Figure 11. Device Manager Dialog, Windows 7

FTDI USB-to-UART Driver Installation

An FTDI USB-to-UART driver is required to allow your PC to communicate through its USB port to the on-chip UART of the Z51F3220 MCU. Observe the following procedure to perform these connections.

- 1. Ensure that the USB cable is not plugged in to the Z51F3220 Development Board's P1 connector.
- 2. Navigate to the following filepath and double-click the CDM20802_setup.exe file to begin the driver installation.

<Z8051 Installation>\Z8051_<version_number>\device drivers\FTDI Uart

3. The installation process will begin and you should observe output similar to the following messages on the screen of your PC:

```
32-bit OS detected
<installation path>\dpinstx86.exe
Installation driver
FTDI CDM driver installation process completed.
```

Note: The above message may appear for a short time, but will then disappear from your window. This occurrence is normal.

- 4. When the installation is complete, plug in the Mini-B connector of the second USB cable into the Board, and the larger A connector into the USB port of your PC. Refer to Figure 15 on page 19 for guidance.
- 5. If the driver installation was successful, the *Ports (COM & LPT)* section of the Device Manager will display *USB Serial Port (COMx)* or similar message, as highlighted in Figure 12.

Z51F3220 Development Kit User Manual





Figure 12. A Successful USB-to-UART Driver Installation

• Note: To launch the Device Manager on Windows 7 systems, launch the Start menu, enter *device manager* in the Search programs and files field, and press the Enter key.

To open the Device manager on earlier Windows systems, navigate via the following path:

Start \rightarrow Control Panel \rightarrow System \rightarrow Hardware \rightarrow Device Manager \rightarrow Ports (COM& LPT)



Configure the Z8051 OCD and Z51F3220 Development Board

Observe the following procedure to set up and configure the Z8051 On-Chip Debugger and the Z51F3220 Board.

Caution: Steps number 1 to 4 present the power-up sequence. Carefully follow these steps to avoid encountering an improper connection or disconnection.

- 1. Connect the Z8051 On-Chip Debugger (OCD) to the host PC's USB port.
- 2. Connect one end of the 10-circuit cable to the Z8051 OCD.
- 3. Connect the other end of the 10-circuit cable connector to the Z51F3220 Board's J1 connector. Pin 1 of the cable connector is indicated by a red stripe, as shown in Figure 13.



Figure 13. Connecting the 10-Circuit Cable to the Board



- 4. Using the second USB-to-Mini-B cable, connect the standard USB end to the host PC's USB port.
- 5. Connect the other end of this second Mini-B cable to the Z51F3220 Board's P1 connector to apply power to the Board. Note that the green LED D5 is ON; see Figure 14.



Figure 14. Connecting the USB Mini-B Cable to the Board

Note: In the event that you later remove the LCD panel from the Board, observe its orientation in Figure 14. The panel's small plastic notch should be located in the position indicated by the red square.

Figure 15 shows an example of a completed hardware and software setup.

Z51F3220 Development Kit User Manual





Figure 15. An Example Setup

20

Build and Run the Z51F3220 Demo Project

Observe the following procedure to build and run the Z51F3220 demo project.

Note: If you plan to use the Keil µVision IDE, please skip to the the Using the Keil µVision IDE on a Demo Project section on page 26.

1. Browse to the following location and double-click the build_sdcc.bat batch file to build the project:

<Z8051 Installation>\Z8051_<version_number>\samples\Z51F3220\Demo\build_sdcc.bat

Note: Refer to the <u>Z8051 Tools Product User Guide (PUG0033)</u> for additional information about these project files and Small Device C Compiler (SDCC) development tools.

2. When the build is complete, the command window will prompt the user to press any key to continue. Proceed by pressing any key on your keyboard; as a result, a hex file for the demo will be created in the following path:

<Z8051 Installation>\Z8051_<version_number>\samples\Z51F3220\Demo\demo.hex

- 3. Set up the OCD and Development Board. If you have not already configured these items, please return to the <u>Configure the Z8051 OCD and Z51F3220 Development</u> <u>Board</u> section on page 17.
- Run the Z8051 OCD software. From the Start menu, navigate to All Programs → Zilog Z8051 Software and Documentation <version_number> → Zilog Z8051 OCD <version_number>. Once launched, the program will display *Connected*, as shown in Figure 16.

Note: If you encounter a message that says Disconnected, return to the <u>Configure the Z8051</u> <u>OCD and Z51F3220 Development Board</u> section on page 17 to configure the proper power-up sequence. If the problem persists, Zilog recommends that you review the <u>Z8051</u> <u>OCD Driver Installation</u> and <u>FTDI USB-to-UART Driver Installation</u> sections.

>





Figure 16. Initial OCD Screen

Note: For a free download of the latest version of the OCD software, visit <u>the Zilog website</u> and navigate via the **Tools and Software** menu to **Software Downloads**.

5. In the Debugger window, select **Load Hex** from the **File** menu to display the Object File dialog, which is shown in Figure 17.





Hexa file name		Common area size
Bank0 C:\Program Files\ZiLOG\Z8051_1.0	Browse	No common area 🔽 0 ~ 0x7FFF (32KB)
Bank1	Browse	0 ~ 0x3FFF (16KB) 0 ~ 0x8FFF (48KB)
Bank2	Browse	Symbol file
Bank3	Browse	Symportine To a registric a restriction for the
Bank4	Browse	Do VERIFICATION after download Zilog
Bank5	Browse	dot
Bank6	Browse	[
Bank7	Browse	
Bank8	Browse	
Bank9	Browse	
Bank10	Browse	
Bank11	Browse	
Bank12	Browse	
Bank13	Browse	
Bank14	Browse	
Bank15	Browse	Developed Place

Figure 17. Object File Dialog

- 6. In the Object File dialog, browse to the hex file that you created in <u>Step 2</u> and click **Open**.
- 7. Click the **Download** button to open the Configuration dialog box, shown in Figure 18.

Z51F3220 Development Kit User Manual



anngarc	ition d	ialo	g					×
Enable	ode are ock user 9 user IS 9 /Reset	a ISP 8P ar inpu	rea ut		1	Writ Clos	e	
	- User 1 3,8KB (1,7KB (768B (256B ((SP ((0x1) (0x1) (0x1) 0x10 0x10	:ode 00 ~ 00 ~ 10 ~	· Dxl · Dxl · Dx Dx3 Dx1	9a FFF) 7FF) FF))		
	Config	jura	tion	dun	qn			



8. Select **Enable/Reset input** and click the **Write** button to open the Configuration Is Changed dialog. A typical OCD display, if child windows are open, is shown in Figure 19.

Note: Please disregard the instructions stated in the Configuration Is Changed dialog, and proceed to <u>Step 9</u>.

>





Figure 19. Configuration Is Changed Dialog

9. Click **OK** to open the On-Chip Debugger's main window. A typical OCD display is shown in Figure 20; Figure 21 shows an OCD window with child windows open.



Figure 20. A Typical On-Chip Debugger Window

Z51F3220 Development Kit User Manual





Figure 21. A Typical On-Chip Debugger Window with Child Windows Open

Note: Use the View menu to open the child windows. For this demonstration, the example windows shown in Figure 21 do not need to be opened.

10. Click the **Reset & Go** toolbar icon, shown in Figure 22. As a result, LEDs D2, D3 and D4 on the Z51F3220 Board will blink in sequence and the LCD panel will display the current voltage applied to the Board.



Figure 22. Reset & Go Toolbar Icon



Note: Similar projects that you can use as references are listed in <u>Table 3</u> on page 36.

Using the Keil µVision IDE on a Demo Project

Zilog's On-Chip Debugger hardware now fully supports the Keil μ Vision IDE. Our target driver is seamlessly integrated with the Keil debugger, allowing Keil C51 users to work within the μ Vision4 environment without switching between the Keil compiler and Zilog's external OCD software. In the demo project example that follows, the Z51F3220 MCU-related project is referenced as Demo.

Notes: This document refers to the Keil µVision IDE V4.53.0.6 (PK51 Prof. Developers Kit) or later.

Refer to the <u>Z8051 Tools Product User Guide (PUG0033)</u> for additional information about these project files and debugging with the Keil μ Vision IDE and Zilog On-Chip Debugger.

Debugger Configuration

Observe the following procedure to build and run a Z51F3220 demonstration project using the Keil μ Vision IDE.

- 1. Start the Keil μ Vsion4 IDE.
- 2. From the **Project** menu, select **Open Project** and navigate to the following filepath: </br><Installation directory>\Z8051_<version>\samples\Z51F3220\Demo
- 3. Select the Demo.uvproj file and click **Open**; see Figure 23.

>





0				
organize 🔻 New folder)	
JZ8051_2.0 *	Name		Date modified	Туре
bin	🖉 Demo		8/28/2012 12:40 PM	µVision4 P
documentation				
include				
📕 samples				
📕 Z51F0811				
J Z51F3220				
🤳 common				
J Demo				
Led_Blink				
🕌 Led_Blink 🔏 Led_Blink_Ası				
Led_Blink	•	m		
Led_Blink Led_Blink_Ası 7ΛURA RE Wireler.* Demo Date moo μVision4 Project	Iified: 8/28/2012 12:40 PM Size: 14.6 KB	III Date created:	8/31/2012 6:57 AM	
للله Led_Blink Led_Blink_Ası تک 2018A RE Wireler * Demo Date mod µVision4 Project File <u>n</u> ame: Dem	iffied: 8/28/2012 12:40 PM Size: 14.6 KB 00	III Date created:	8/31/2012 6:57 AM Project Files (*.uvproj; *	.uvmpv 🔻

Figure 23. Selecting the Demo Project File

- 4. Return to the **Project** menu and select **Options for Target 'Demo'**.
- 5. In the Options for Target 'Demo' dialog that appears, click the **Device** tab and ensure that your target is properly selected for your project, as illustrated in Figure 24.

Z51F3220 Development Kit User Manual Zilog



😨 Options for Target 'Demo'		×
Device Target Output Listing Database: Zilog	User C51 A51 BL51 Locate BL51 Misc Debug 1	Jtilities
Vendor: Zilog		
Device: Z51F3220	Use Extended Linker (LX51) instead	of BL51
Toolset: C51	🏳 Use Extended Assembler (AX51) ins	tead of A51
 Zilog Z51F0410 Z51F0811 Z51F3220 Z51F3221 Z51F6412 	High-Performance 8-Bit CISC Core (2 clocks per cycle) 32KB On-Chip Flash Memory 256 Bytes IRAM 768 Bytes XRAM Operating Frequency: 0.4-16 MHz Operating Voltage: 1.8V-5.5V Internal 16 MHz RC Oscillator Configurable Basic Interval Timer Timer/Counter (8 bits x 1 channel. 16 bits by 2 channels, LCD Driver (21 segments./8 common) 8-bit Capture, Compare, PWM Timer Two 16-Bit Capture and Compare PWM Timers Two 8-Bit or one 16-bit Counter/Capture Timers or 10-Bit I Programmable Delay Watchdog Timer Watch Timer	8 bits x 2 channels
	OK Cancel Defaults	Help

Figure 24. Selecting the Target

6. After selecting the target, click the **Debug** tab and select the **Zilog Z8051 Target Driver** from the **Use:** drop-down menu, as highlighted in Figure 25.

Z51F3220 Development Kit User Manual Zilog



evice Target	Output Listing User C51 A51	BL51 Locate	BL51 Misc Debug Utilities	
Limit Speed	to Real-Time	Use: Ziog	28051 Target Driver	
Load Applic Initialization File:	ation at Startup 🔽 Run to main()	Load Applie	cation at Startup 🔽 Run to main() a:	
	Edit		Edik	
Restore Debu	g Session Settings	Restore Deb	ug Session Settings	
🔽 Breakpo	ints 🔽 Toolbox	I Breakpoints I Toolbox		
Watch V	Vindows & Performance Analyzer	☐ Watch Windows		
Memory	Display	I♥ Memory	Display	
CPU DLL:	Parameter:	Driver DLL:	Parameter:	
S8051.DLL -m8051EW		S8051.DLL	-m8051EW	
Dialog DLL:	Parameter:	Dialog DLL:	Parameter:	
DCore51.DLL	-pM8051EW			

Figure 25. Selecting the Target Driver

7. Click the **Settings** button, located to the right of this drop-down menu, to configure your Debug and Flash options. The Settings dialog is displayed with the Debug Options tab appearing by default, as shown in Figure 26.



×

Figure 26. Configuring the Debug Options

Notes: When configuring the appropriate Debug option, be aware of the following stipulations:

- Checking the **Peripheral continues running** option means that the timers used in your project will run while the processor is stopped by the debugger.
- The **Reset at Main** option will only work if you have a main file in your project; otherwise you should deselect this option.
- Click the Flash Options tab. The Flash Options Settings dialog will appear, as shown in Figure 27. To select the proper options for Flash programming, refer to the Z51F3220 Product Specification (PS0299).



Dperations Mass Erase Page Erase Verify After Programming	Configuration Options Lock code area Hard lock user ISP Enable user ISP area Enable /Reset input	User ISP code area ✓ 3.8KB (0x100 ~ 0xFFF) ✓ 1.7KB (0x100 ~ 0x7FF) ✓ 768B (0x100 ~ 0x3FF) ✓ 256B (0x100 ~ 0x1FF)
	Conf 0000 : 00 00 0008 : 00 00 0010 : 00 00 0018 : 00 00 0020 : 00 00 0028 : 00 00 0030 : 00 00 0038 : 00 00	figuration dump 0 00 22 00 37 00 00 0 00 00 00 00 00 00 0 00 00 00 00 00 00 0 00 00 00 00 00 00 0 00 00 00 00 00 00 0 00 00 00 00 00 00 0 00 00 00 00 00 00 0 00 00 00 00 00 00 0 00 00 00 00 00 00 0 00 00 00 00 00 00

Figure 27. Configuring the Flash Options

- 9. Click **OK** to exit the Settings dialog.
- 10. From the **Options for Target 'Demo'** dialog, select the **Load Application at Startup** checkbox, as shown in Figure 28, the so that the IDE will download the code upon connection. There is no need to select or enter an initialization file.

Load Application at Startup	🔽 Run to r	main()
Initialization File:		
		E dit

Figure 28. Load Application at Startup Settings

- 11. Click **OK** to exit the **Options for Target 'Demo'** dialog.
- 12. From the **Project** menu, select **Rebuild All** to rebuild all target files.

13. Start your debugging session by clicking the **Start/Stop Debug Session** icon, as indicated in Figure 29. A default Windows configuration of the debug session is shown in Figure 30.



Figure 29. Beginning a Debug Session

C:\Program Files\ZiLOG\Z8051_1.1\samples\Z51F0811\Demo\demo.uvproj - µVision4				
File Edit View Project Flash Debug Peripherals Tools SVCS Window Help)			
	R 2011			
🕌 🗉 📀 🔁 🗗 🖓 🔶 🔽 🖉 🗐 🖉 🖉 📲 •	• 🔜 • 🔜 • 🔆 •			
Registers 🕈 🖬 Disassembly				P 🔀
Register Value 103: void init_wt(void)				A
E-Standard 104: {			/	
PC = 0x1DA1 = 0;	//default: disabled	, no interrupt, iwck	/2~11, clock source = Isub	
SP 0x09 C:0x1DB0 E4 CLK A	MR (0x9D) A			
106: WTR = 0x7F;	//default: free run			
EO 0x00 C:0x1DB3 759E7F MOV WT	R(0x9E),#0x7F			
ACC 00C0 107: }				
FF PSW 0x00 108:				
R0 0x0D 109:				
R1 0x6F 110: /***				
R2 0x0D 111: * Function: WT_Isr				
R3 OxFF 112: * Description: watch in	imer service interrup	t		
R4 0x00 C:0x10B6 22 RFT				
R5 0x00 105: Wold server weit for com	nlation()			*
R6 0x00 ↓ ↓ ↓ R7 0x20				+
ADC 🗎 uarts.c 🖹 main.c 🖹 wt.c	ds.c EEPROM.C			▼ ×
Basic Interval T 97 }				
Buzzer 98				
99 🖓 /***				
Hash + EEPROM 100 * Function: init_wt()				
101 * Description: Initialize	Watch Timer Resource			
102 / */				
Port 0 103 void init_wt (vold)				
104 = 1 $ = Pot 2 \qquad \qquad $	ischlad no interrupt	freek/2011 clock	owned a faub	
\pm Pot 3 106 WTR = 0,77; //default:	free run	, IWCK/2 11, CIOCK 2	Source - ISub	
Power 107 }	IICC IM			
108 108				
109 109				
110 □ /***				
Timer 2 111 * Function: WT_Isr				
112 * Description: Watch Time	er service interrupt			
the liner 4 ↓ 113 └ */				-
E Project Registers	+ 7 MT MECT			Þ
Command	🗜 🔝 🛛 Call Stack +	Locals		P 📧
Load "C:\\Program Files\\ZiLOG\\Z8051_1.1\\samples\\Z51F0811\\	\Demo\\Kei ^ Name	Location/Value	Туре	
Flash Verify Done: 7402 bytes verified.	🖃 🔶 UG	TCH C:0v1DA1		
		0/20 !!	-har	
•	· · · · · · · · · · · · · · · · · · ·	Cn 0x20	char	
>		IN C:0x125D		
ASM ASSIGN BreakDisable BreakEnable BreakKill BreakList BreakS	Set 🛛 🗍 🖓 Call Sta	k + Locals Memory 1		
		Zilog 78051 Target Driver	t1: 0.0000000 sec	

Figure 30. A Default Debug Session





HyperTerminal Configuration

A communications program such as HyperTerminal can be used on Windows XP systems to view the messages from the Z51F3220 Development Board. The following procedure examines how to configure HyperTerminal for the Z51F3220 demo project.

Note: The HyperTerminal application is not available in Windows Vista and Windows 7 systems. If you are using either of these operating systems, consider using/installing different communication software, such as Tera Term. Please refer to the documentation for the particular emulation software you use to configure it for communication with the Z51F3220 Development Board.

1. In HyperTerminal, select the COM port assigned to the USB-to-UART interface cable that is connected to the P1 connector on the Development Board.



Note: This COM port can be determined from the Device Manager, as described in the the <u>FTDI</u> <u>USB-to-UART Driver Installation</u> section on page 15.

- 2. Configure this port to reflect the following settings:
 - 9600bps

- 8 data bits
- No parity
- 1 stop bit
- No flow control
- 3. Click the **Call** button to connect to the Z51F3220 Board. Upon connection, you should be able to see the Demo program menu shown in Figure 31.

Monitor 9600 Com2 - HyperTerminal	_ 🗆 ×
File Edit View Call Transfer Help	
	×
	+
* Z51F3220 Development Kit Demo	
<pre>* * * SW1 : Reset. Programmed by OCD or ISP S/W. * SW2 : Change LEDs Direction * SW3 : Reserved. Display 'SW3 is pressed' * SW4 : Toggle LCD display patterns * SW5 : Toggle Buzzer * Default Frequency: Internal 8MHZ</pre>	
1) Change LEDs direction by hitting '1' or pressing SW2 2) LCD display 3) Buzzer Controls 4) Clock Switching Select >> _	
onnected 0:01:14 ANSIW 8600 8-N-1 209 CLL DEPS MUM Deptore Pro	mecho j

Figure 31. Demo Program Menu in HyperTerminal



At this point, you have successfully run the Z51F3220 demo project, but you are welcome to continue evaluating the demo in HyperTerminal. For additional information about how to create, edit, run and debug this project, please see the <u>Z8051 Tools Product User Guide</u> (PUG0033) and/or the <u>Z8051 On-Chip Debugger and In-System Programmer User Manual (UM0240)</u>.

Note: Turn off the power by removing the USB cable from the P1 connector on the Development Board.

36

Sample Projects and Documentation

A number of sample projects are included on the CD that ships with the Z51F3220 Development Kit, and their locations, listed in Table 3, will be accessible upon installation.

Description	Location
Demo	samples\Z51F3220\Demo
Led Blink	samples\Z51F3220\Led_Blink
	samples\Z51F3220\Led_Blink_Asm

Table 3. Z51F3220 Development Kit Sample Projects

A number of Z8051-related documents are included in the Z51F3220 Development Kit, and their locations, listed in Table 4, will be accessible upon installation. You can also find current versions of each of these documents on the <u>Zilog website</u>.

Description	Document	Location
Z51F0410 Product Specification	PS0295	Documentation\Chip_Documentation
Z51F0811 Product Specification	PS0296	Documentation\Chip_Documentation
Z51F3220 Product Specification	PS0299	Documentation\Chip_Documentation
Z51F3221 Product Specification	PS0300	Documentation\Chip_Documentation
Z51F6412 Product Specification	PS0303	Documentation\Chip_Documentation
Z51F0410 Product Brief	PB0237	Documentation\Chip_Documentation
Z51F3220 Product Brief	PB0238	Documentation\Chip_Documentation
Z51F3220 Product Brief	PB0239	Documentation\Chip_Documentation
Z51F3221 Product Brief	PB0240	Documentation\Chip_Documentation
Z51F6412 Product Brief	PB0241	Documentation\Chip_Documentation
Z8051 OCD and ISP User Manual	UM0240	Documentation\Tools_Documentation
Z51F0811 Evaluation Kit User Manual	UM0242	Documentation\Tools_Documentation
Z51F3220 Development Kit User Manual	UM0243	Documentation\Tools_Documentation
Z8051 Tools Product User Guide	PUG0033	Documentation\Tools_Documentation



Schematic Diagrams

Figures 32 and 33 display schematic diagrams of the Z51F3220 Development Board.



Figure 32. Z51F3220 Development Board, #1 of 2

Z51F3220 Development Kit User Manual Zilog





Figure 33. Z51F3220 Development Board, #2 of 2

39

Appendix A. OCD Driver Installation on Windows Vista Systems

The driver programs for the Z8051 On-Chip Debugger are copied to the development PC during the software and documentation installation. In the following procedure for PCs running Windows Vista 32- and 64-bit operating systems, ensure that the target side of the OCD will remain unconnected while you install these drivers.

- 1. Connect the OCD hardware to the USB port of your PC by connecting the A (male) end of one of the two USB A (male)-to-Mini-B cables with the development PC's USB port. Connect the Mini-B end to the OCD device.
- 2. After the PC detects the new hardware, it will display the Found New Hardware Wizard dialog box, shown in Figure 34. Click Locate and install driver software (recommended).



Figure 34. Found New Hardware Dialog, Windows Vista

3. Depending on your development PC's User Account Control settings, Windows may ask for permission to continue the installation. Click **Continue**.



4. When the **Insert the Disc** dialog appears, as shown in Figure 35, select **I don't have the disc. Show me other options.** Click the **Next** button to display the dialog that follows, which is shown in Figure 36.

nsert th	e disc that came	e with your ZI	LOG OCD I/F		
f you have earch the	the disc that came disc for driver softw	with your device, are.	insert it now. Wind	ows will automatic	ally
			1		
			ather entions		

Figure 35. Install Device Driver Dialog, Windows Vista

Z51F3220 Development Kit User Manual Zilog



G I Found New Hardware - Unknown Device	
Windows couldn't find driver software for your device	
Check for a solution Windows will check to see if there are steps you can take to get your devi working.	ce
Browse my computer for driver software (advanced) Locate and install driver software manually.	
	Cancel

Figure 36. Couldn't Find Driver Dialog, Windows Vista

5. Return to page 8 and follow <u>Steps 3 through 6</u>.



Appendix B. OCD Driver Installation on Windows XP Systems

The driver programs for the Z8051 On-Chip Debugger are copied during the software and documentation installation. In the following procedure for Windows XP systems, ensure that the target side of the OCD will remain unconnected while you install these drivers.

- 1. Connect the OCD hardware to the USB port of your PC by connecting the A-Male end of one of the two USB A (male)-to-Mini-B cables with the host PC's USB port, and connect the Mini-B end to the OCD device.
- 2. After the PC detects the new hardware, it will display the Found New Hardware Wizard dialog box, shown in Figure 37. Select Install from a list or specific location (Advanced); then click Next.



Figure 37. The Found New Hardware Wizard Welcome Screen

- 3. The next dialog box, shown in Figure 38, prompts you to enter a path or navigate to the directory in which the .inf file was installed. Depending on the type of computer you use (32- bit or 64-bit), use the **Browse** button to navigate to one of the following paths and click the **Next** button, leaving all other selections at their default settings.
 - On 32-bit machines, use the following path:

<Z8051 Installation>\Z8051_<version_number>\device drivers\OCD USB\x32

– On 64-bit machines, use the following path:

<Z8051 Installation>\Z8051_<version_number>\device drivers\OCD USB\x64

Note: On some installations, the Found New Hardware screen shown in Figure 37 may also display the text string, Zilog Z8051 USB OCD - No Firmware. This occurrence is normal and can be disregarded.

Found New Hardware Wizard
Please choose your search and installation options.
Search for the best driver in these locations. Use the check boxes below to limit or expand the default search which includes local paths and
removable media. The best driver found will be installed.
✓ Include this location in the search:
C:\Program Files\ZiLOG\Z8051_1.0\device drivers\OCD L
Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< <u>B</u> ack <u>N</u> ext > Cancel

Figure 38. The Found New Hardware Wizard's Browse Screen



4. When Windows prompts you whether to continue the installation or stop, click the **Continue Anyway** button and wait until the installation is completed (Windows may prompt you more than once). When the installation is complete, click **Finish**.

Z51F3220 Development Kit User Manual Zilog

45

DXYS Company

Appendix C. Stand-Alone Flash Programming Using the Keil µVision IDE

Observe the following procedure to program Flash memory without debugging.

1. From the **Project** menu, open the **Options for Target 'your project'**, and click the **Utilities** tab. In the **Use Target Driver for Flash Programming** drop-down menu within the Configure Flash Menu Command pane, ensure that **Zilog Z8051 Target Driver** is selected, as indicated in Figure 39.

ose raige	t Driver for Flash Programming		
	Zilog Z8051 Target Driver	✓ Settings	Update Target before Debugging
Init File:			Edit
Command			-
Command Arguments:			

Figure 39. Selecting A Target Driver For Flash Programming

2. Click the **Settings** button to change any additional Flash options. The Settings dialog will appear, as shown in Figure 40.



Debug Options Flash Options			
Operations	Configuration Options	Boot area	
 Mass Erase 	Lock code area	✓ 256B : 0100 ~ 01FF	
C Page Erase	Lock EEPROM area	☐ 768B : 0100 ~ 03FF	
Verify After Programming	Disable /RESET input	1.7KB : 0100 ~ 07FF	
y venity Atter Hogramming	Enable Xin, Xout	3.8KB : 0100 ~ 0FFF	
	🔲 Enable Sub-Xin, Xout	Enable HARD lock	
	Configuration dump		
	0000 : 00 E8 14 03 08 00 00 00 0008 : 00 00 00 00 00 00 00 00 0010 : 00 00 00 00 00 00 00 00 0018 : 00 00 00 00 00 00 00 00		

Figure 40. Configuring Additional Flash Options

- 3. After you have selected your Flash options, click **OK** to exit the **Flash Options** dialog.
- 4. Click **OK** to exit the **Options For Target 'Demo'** dialog.
- 5. From the **Flash** menu of the Keil IDE (see Figure 41), select either of the following options:
 - Select **Download** to program Flash memory with the current project
 - Select **Erase** to perform a mass erase of internal Flash memory



Figure 41. The Keil IDE Flash Menu

Customer Support

To share comments, get your technical questions answered, or report issues you may be experiencing with our products, please visit Zilog's Technical Support page at <u>http://sup-port.zilog.com</u>.

To learn more about this product, find additional documentation, or to discover other facets about Zilog product offerings, please visit the <u>Zilog Knowledge Base</u> or consider participating in the <u>Zilog Forum</u>.

This publication is subject to replacement by a later edition. To determine whether a later edition exists, please visit the Zilog website at <u>http://www.zilog.com</u>.



Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;

- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);

- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;

- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком):

- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«FORSTAR» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели, кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный) Факс: 8 (812) 320-03-32 Электронная почта: ocean@oceanchips.ru Web: http://oceanchips.ru/ Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А