



**Atmel SAM4E-EK Board**

## Introduction

This user guide introduces the SAM4E-EK Evaluation Kit (SAM4E-EK) and describes its development and debugging capabilities.

## Table of Contents

|          |                                                                         |           |
|----------|-------------------------------------------------------------------------|-----------|
| <b>1</b> | <b>Introduction.....</b>                                                | <b>3</b>  |
| 1.1      | User Guide .....                                                        | 3         |
| 1.2      | References and Applicable Documents.....                                | 3         |
| <b>2</b> | <b>Kit Contents .....</b>                                               | <b>3</b>  |
| 2.1      | Deliverables.....                                                       | 3         |
| 2.2      | Electrostatic Warning .....                                             | 4         |
| <b>3</b> | <b>Power Up .....</b>                                                   | <b>5</b>  |
| 3.1      | Power Up the Board .....                                                | 5         |
| 3.2      | Source Code and Technical Support.....                                  | 5         |
| <b>4</b> | <b>Board Description.....</b>                                           | <b>6</b>  |
| 4.1      | Board Overview.....                                                     | 6         |
| 4.2      | Features List.....                                                      | 7         |
| 4.3      | Function Blocks .....                                                   | 7         |
| 4.3.1    | Processor .....                                                         | 7         |
| 4.3.2    | Memory.....                                                             | 7         |
| 4.3.3    | Clock Circuitry.....                                                    | 8         |
| 4.3.4    | Reset Circuitry .....                                                   | 9         |
| 4.3.5    | Power Supply and Management.....                                        | 9         |
| 4.3.6    | UART .....                                                              | 11        |
| 4.3.7    | USART .....                                                             | 11        |
| 4.3.8    | RS485.....                                                              | 12        |
| 4.3.9    | Ethernet MAC 10/100 (EMAC).....                                         | 13        |
| 4.3.10   | CAN .....                                                               | 13        |
| 4.3.11   | Display Interface .....                                                 | 14        |
| 4.3.12   | Touch Screen Interface .....                                            | 16        |
| 4.3.13   | JTAG/ICE .....                                                          | 16        |
| 4.3.14   | Audio Interface.....                                                    | 17        |
| 4.3.15   | USB Device .....                                                        | 18        |
| 4.3.16   | Analog Interface.....                                                   | 18        |
| 4.3.16.1 | Analog Reference .....                                                  | 18        |
| 4.3.16.2 | Analog Input.....                                                       | 19        |
| 4.3.16.3 | Analog Output.....                                                      | 20        |
| 4.3.17   | QTouch Elements .....                                                   | 20        |
| 4.3.18   | LEDs.....                                                               | 21        |
| 4.3.19   | SD/MMC Card .....                                                       | 21        |
| 4.3.20   | ZigBee .....                                                            | 22        |
| 4.3.21   | PIO Expansion.....                                                      | 22        |
| <b>5</b> | <b>Configuration .....</b>                                              | <b>24</b> |
| 5.1      | PIO Usage.....                                                          | 24        |
| 5.2      | Jumpers .....                                                           | 27        |
| <b>6</b> | <b>Schematics.....</b>                                                  | <b>29</b> |
| <b>7</b> | <b>ATMEL EVALUATION BOARD/KIT IMPORTANT NOTICE AND DISCLAIMER .....</b> | <b>38</b> |
| <b>8</b> | <b>Revision History .....</b>                                           | <b>39</b> |

# 1 Introduction

## 1.1 User Guide

This user guide gives details on how the Atmel® SAM4E-EK has been designed. It is made up of six chapters:

- Chapter 1 includes references, applicable documents
- Chapter 2 describes the kit contents, ESD warnings
- Chapter 3 provides instructions to power up the SAM4E-EK and technical support
- Chapter 4 describes overview, feature list, the hardware resources including the schematics
- Chapter 5 provides configurations and jumper settings
- Chapter 6 provides the entire board schematics

## 1.2 References and Applicable Documents

Table 1-1. References and Applicable Documents

| Reference                       | Title           | Comment                                          |
|---------------------------------|-----------------|--------------------------------------------------|
| <a href="#">Lit. no.: 11157</a> | SAM4E datasheet | <a href="http://www.atmel.com">www.atmel.com</a> |

# 2 Kit Contents

## 2.1 Deliverables

The Atmel SAM4E-EK toolkit contains the following items:

- An Atmel SAM4E-EK board
- Power supply
- Universal input AC/DC power supply with US, Europe, and UK plug adapters
- One USB cable
- One serial RS232 cable
- One Ethernet cross cable
- A welcome letter

**Figure 2-1. Unpacked SAM4E-EK**



Unpack and inspect the kit carefully. Contact your local [Atmel distributor](#) if you have issues concerning the contents of the kit.

## 2.2 Electrostatic Warning

The Atmel SAM4E-EK board is shipped in a protective anti-static bag. The board must not be subjected to high electrostatic potentials. A grounding strap or similar protective device should be worn when handling the board. Avoid touching the components or any other metallic element of the board.

## **3 Power Up**

### **3.1 Power Up the Board**

Unpack the board taking care to avoid electrostatic discharge. Unpack the power supply, select the right power plug adapter corresponding to that of your country, and insert it into the power supply.

Connect the power supply DC connector to the board and plug the power supply to an AC power socket.

The board LCD should light up and display a welcome page. Then click or touch the icons displayed on the screen and enjoy the demo.

### **3.2 Source Code and Technical Support**

After boot up, you can run some sample code or your own application on the development kit. You can download sample code and get technical support from the Atmel web site: <http://www.atmel.com>.


## 4 Board Description

### 4.1 Board Overview

This chapter introduces the Atmel SAM4E-EK Evaluation Kit design. It introduces system-level concepts, such as power distribution, memory, and interface assignments.

The SAM4E-EK board is based on the integration of an ARM® Cortex™-M4 processor with on-board NAND Flash and a set of popular peripherals. It is designed to provide a high performance processor evaluation solution with high flexibility for various kinds of applications.

Figure 4-1. SAM4E-EK Block Diagram

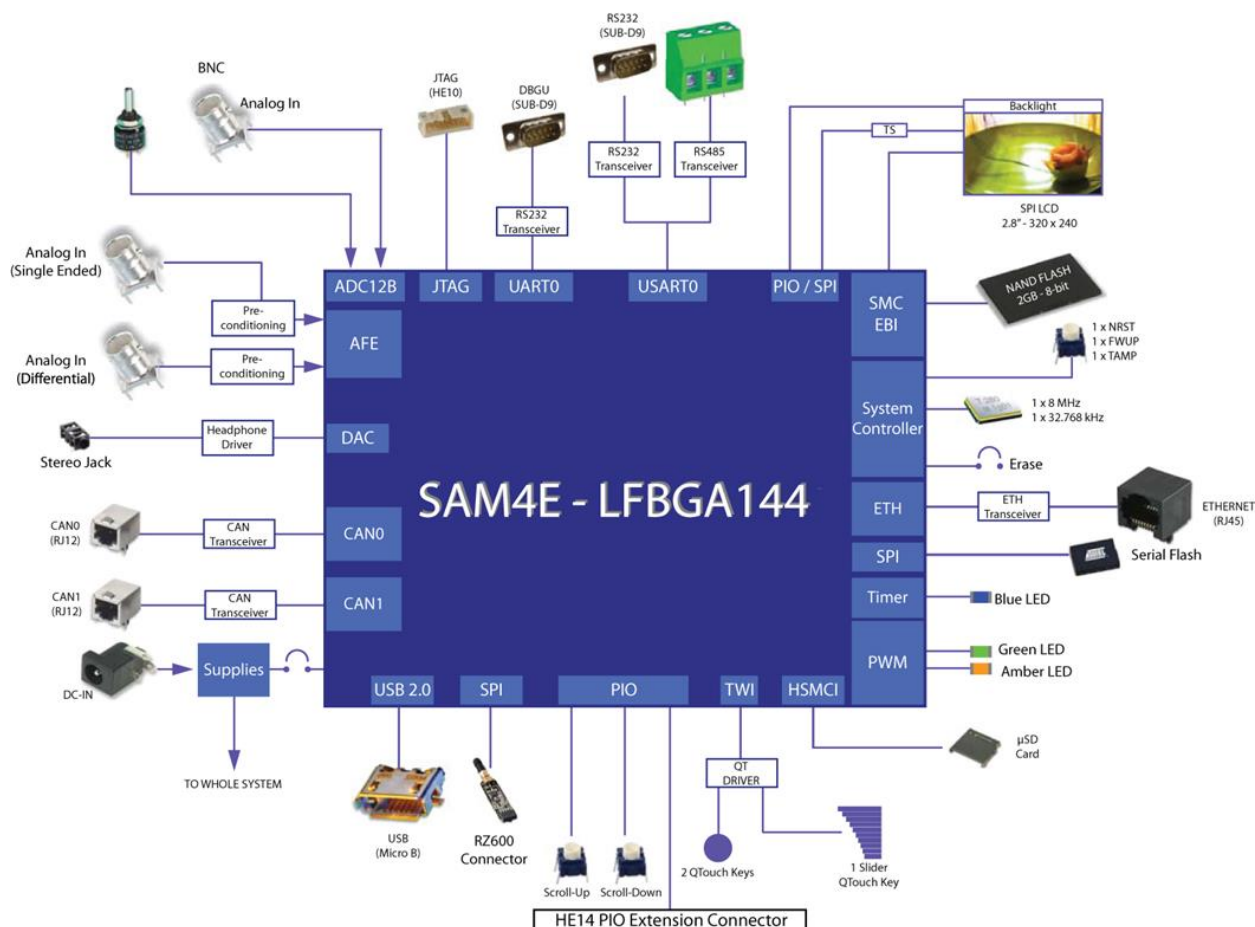

## 4.2 Features List

The main board components and interfaces:

- SAM4E16 chip BGA144 package with optional socket footprint
- 12MHz crystal
- 32.768kHz crystal
- Optional SMB connector for external system clock input
- NAND Flash
- 2.8 inch TFT color LCD display with touch panel and backlight
- UART port with RS232 driver
- USART port with RS232 driver multiplexed with RS485 function with driver
- CAN port with driver
- Mono/stereo headphone jack output
- One Ethernet physical transceiver layer with RJ45 connector
- SD/MMC interface
- Reset button: NRST
- User buttons: WAKU, TAMP, Scroll-up, and Scroll-down
- QTouch® buttons: Left, Right, and Slider
- Full Speed USB device port
- JTAG/ICE port
- On-board power regulation
- Three user LEDs
- Power LED
- BNC connector for ADC input
- BNC connector for DAC output
- User potentiometer connected to the ADC input
- ZigBee® connector
- PIO connection interfaces (PIOA, PIOC and PIOD with 32-bit, PIOB with 16-bit, and PIOE with 6-bit)

## 4.3 Function Blocks

### 4.3.1 Processor

The Atmel SAM4E-EK is equipped with a SAM4E16 device in BGA144 package.

### 4.3.2 Memory

The SAM4E16 chip embeds:

- 1024kB of embedded Flash
- 128kB of embedded SRAM
- 16kB of ROM with embedded boot loader routines (UART, USB) and In-Application Programming functions (IAP) routines

The SAM4E16 features an External Bus Interface (EBI) that permits interfacing to a broad range of external memories and virtually to any parallel peripheral.


The SAM4E-EK board is equipped with one NAND Flash MT29F2G08ABAEA on the EBI. This can change to other type of flash by setting the Static Memory Controller.

### 4.3.3 Clock Circuitry

- A low-power 32.768Hz Slow Clock Oscillator with bypass mode
- A 3 to 20MHz Crystal Oscillator, which can be bypassed (12MHz needed in case of USB)
- A factory programmed fast internal RC Oscillator. Three output frequencies can be selected: 4 (default value), 8, or 12MHz.
- A 80 to 240MHz PLL (PLL<sub>B</sub>) providing a clock for the USB Full Speed Controller
- An 80 to 240MHz programmable PLL (PLL<sub>A</sub>), capable to provide the clock MCK to the processor and to the peripherals. The input frequency of PLL<sub>A</sub> is from 3 to 32MHz.

8

Figure 4-3. External Clock Source

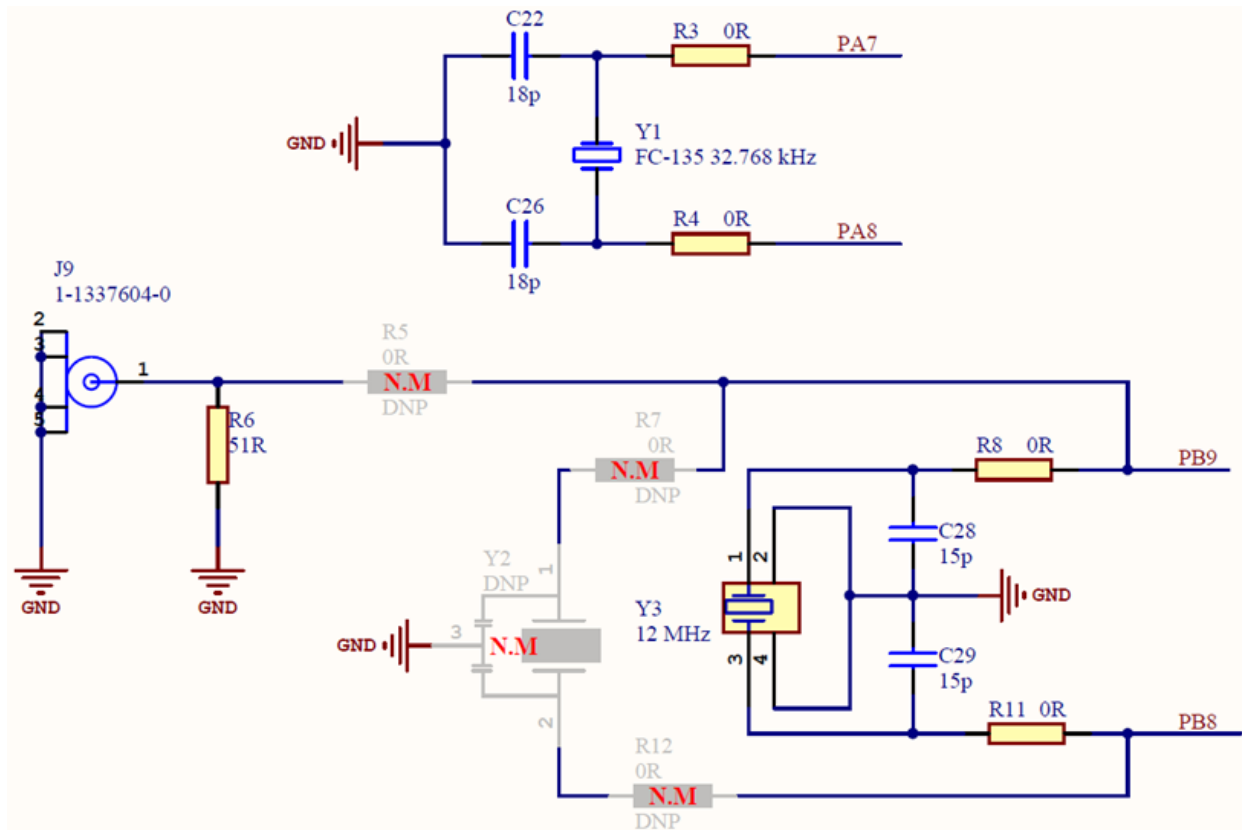

#### 4.3.4 Reset Circuitry

On-board NRST button SW1 provides an external reset control of the SAM4E16.

The NRST pin is bidirectional. It is handled by the on-chip reset controller. It can be driven low to provide a reset signal out to the external components. Conversely, it can be asserted low from the outside to reset the microcontroller core and the peripherals. The NRST pin integrates a permanent pull-up resistor of 100kΩ to VDDIO.

On the SAM4E-EK board, the NRST signal is connected to the LCD module and JTAG port.


**Note:** At power-on, the NRST signal is asserted with default duration of two clock cycles. This duration may not be sufficient to correctly reset any other system or board devices connected to the signal. First, in your custom application, you need to check for these devices' datasheets about reset duration requirements. Then, you need to set an appropriate configuration in the NRST Manager. This is done through the ERSTL field in the RSTC\_MR register. The NRST duration is thereby configurable between 60μs and 2s, whether it is subsequently activated by a software reset or a user reset. Refer to the SAM4E16 datasheet for in-depth information.

#### 4.3.5 Power Supply and Management

The Atmel SAM4E-EK board is supplied with an external 5V DC block through input J8. It is protected by a PolyZen diode (U3) and an LC combinatory filter (U4). The PolyZen is used in the event of an incorrect power supply connection.

The adjustable LDO regulator U5 is used for the 3.3V rail main supply. It powers all the 3.3V components on the board.

**Figure 4-4. Power Block**

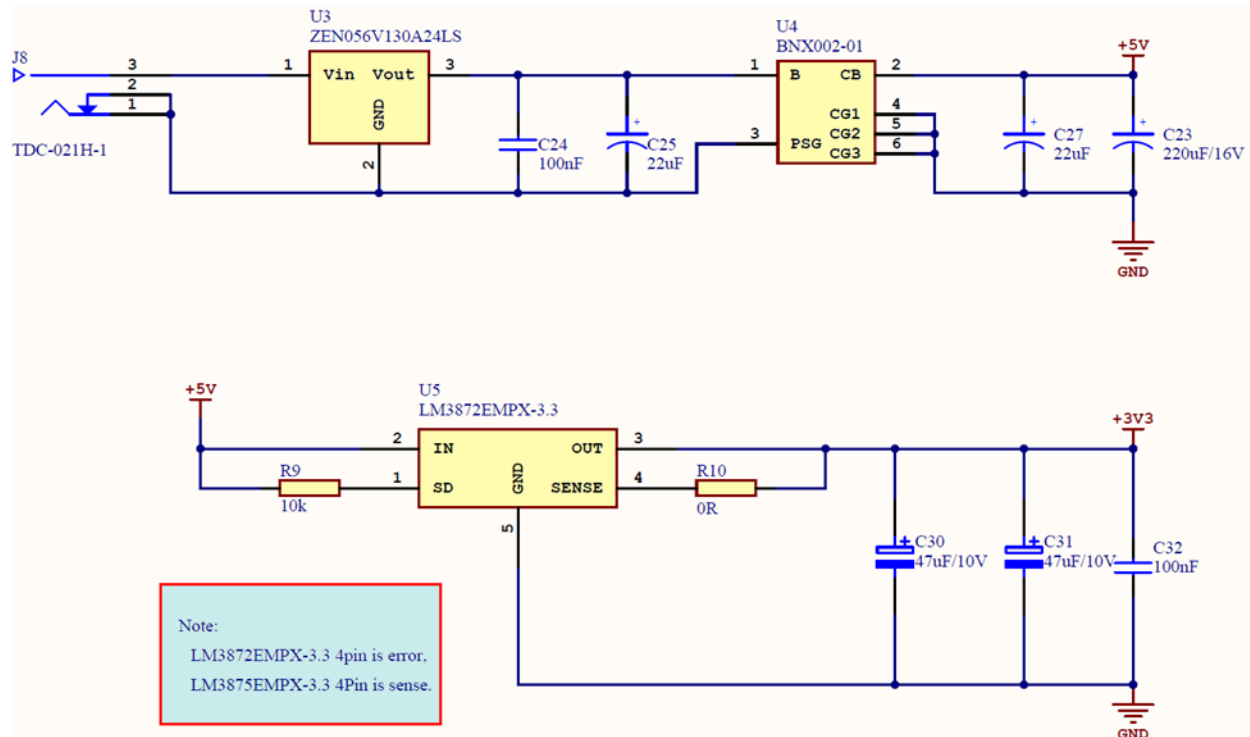

The SAM4E16 product has different types of power supply pins:

- **VDDIN pin:**  
Power for the internal voltage regulator, ADC, DAC, and analog comparator power supplies.  
The voltage ranges from 1.6 to 3.6V.
- **VDDIO pins:**  
Power for the Peripherals I/O lines.  
The voltage ranges from 1.62 to 3.6V.
- **VDDOUT pin:**  
Output of the internal voltage regulator.
- **VDDCORE pins:**  
Power for the core, including the processor, embedded memories, and peripherals.  
The voltage ranges from 1.08 to 1.32V.
- **VDDPLL pin:**  
Power for the PLL A, PLL B and 12MHz oscillator.  
The voltage ranges from 1.08 to 1.32V.


Note: VDDPLL should be decoupled and filtered from VDDCORE.

### 4.3.6 UART

The Universal Asynchronous Receiver Transmitter (UART) features a two-pin UART that can be used for communication and trace purposes. It offers an ideal channel for in-situ programming solutions. This UART is associated with two PDC channels to reduce the processor time on packet handling.

This two-pin UART (TXD and RXD only) is buffered through an RS232 Transceiver U10 and brought to the DB9 male connector J20.

Figure 4-5. UART

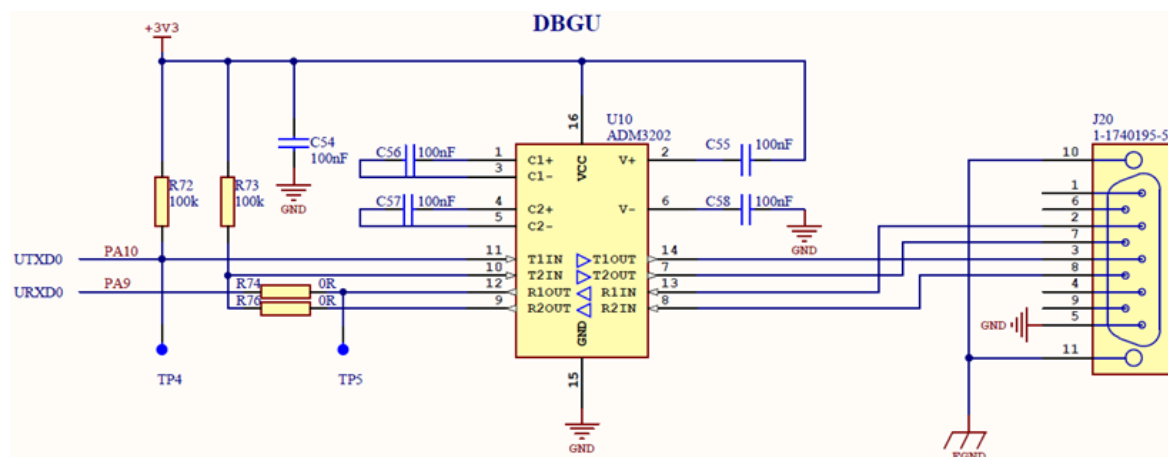


### 4.3.7 USART

The Universal Synchronous/Asynchronous Receiver Transmitter (USART) provides one full duplex universal synchronous/asynchronous serial link. The data frame format is extensively configurable (data length, parity, and number of stop bits) to support a broad range of serial communication standards. The USART is also associated with PDC channels for TX/RX data access.

To avoid any electrical conflict, the RS232 and RS485 transceiver are isolated from the receiving line PA21.

- Chose RS485 channel: Close 1-2 pins on J18 and set PA23 to high level
- Chose RS232 channel: Close 2-3 pins on J18 and set PA23 to low level


Figure 4-6. USART

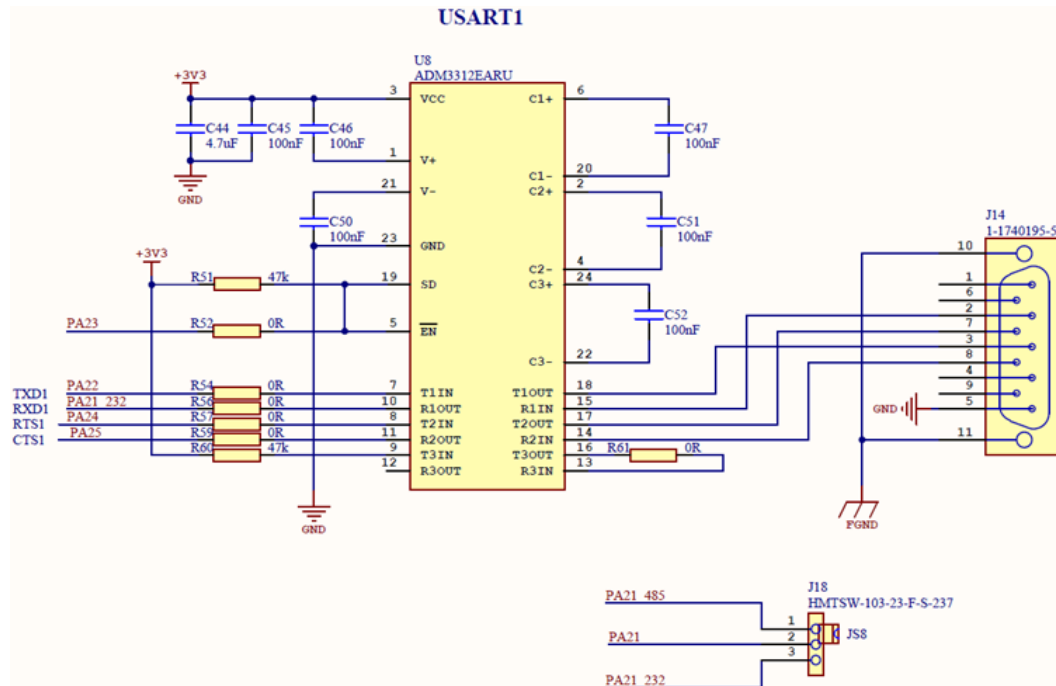

#### 4.3.8 RS485

As noticed above the USART1 is shared with the RS485 port, connected to the transceiver U9 and output to the 3-point connector J16. The design includes selectable jumpers for RS485 bus termination resistors selection (J15, J17, and J19).

Figure 4-7. RS485

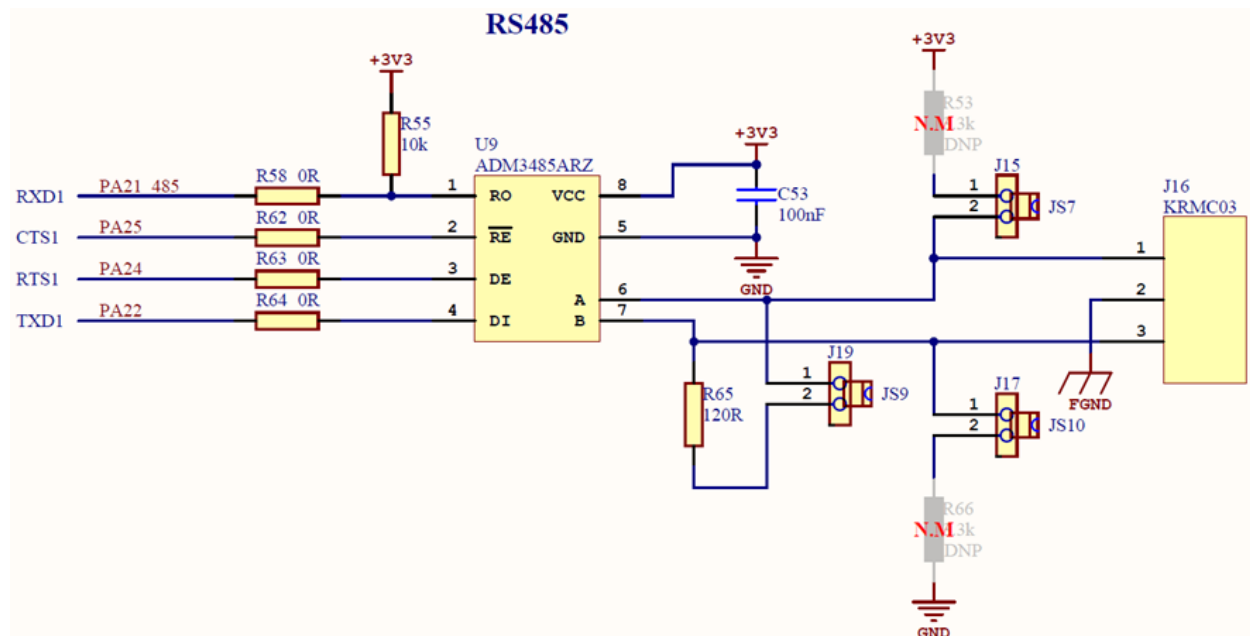


### 4.3.9 Ethernet MAC 10/100 (EMAC)

The EMAC module implements a 10/100 Ethernet MAC compatible with the IEEE® 802.3 standard using an address checker, statistics and control registers, receive and transmit blocks, and a DMA interface.

The Atmel SAM4E-EK is equipped with a MICREL KSZ8081MNX 10/100 Mbps Fast Ethernet Physical Layer transceiver. It contains the entire physical layer functions of 100BASE-TX as defined by IEEE 802.3u.

The Ethernet interface provides MII for 100Base-TX or 10Base-TX. The MII interfaces are capable of both 10Mb/s and 100Mb/s data rates as described in the IEEE 802.3u standard. The Ethernet interface integrates an RJ45 connector with an embedded transformer, and two status LEDs.

Figure 4-8. Ethernet Block

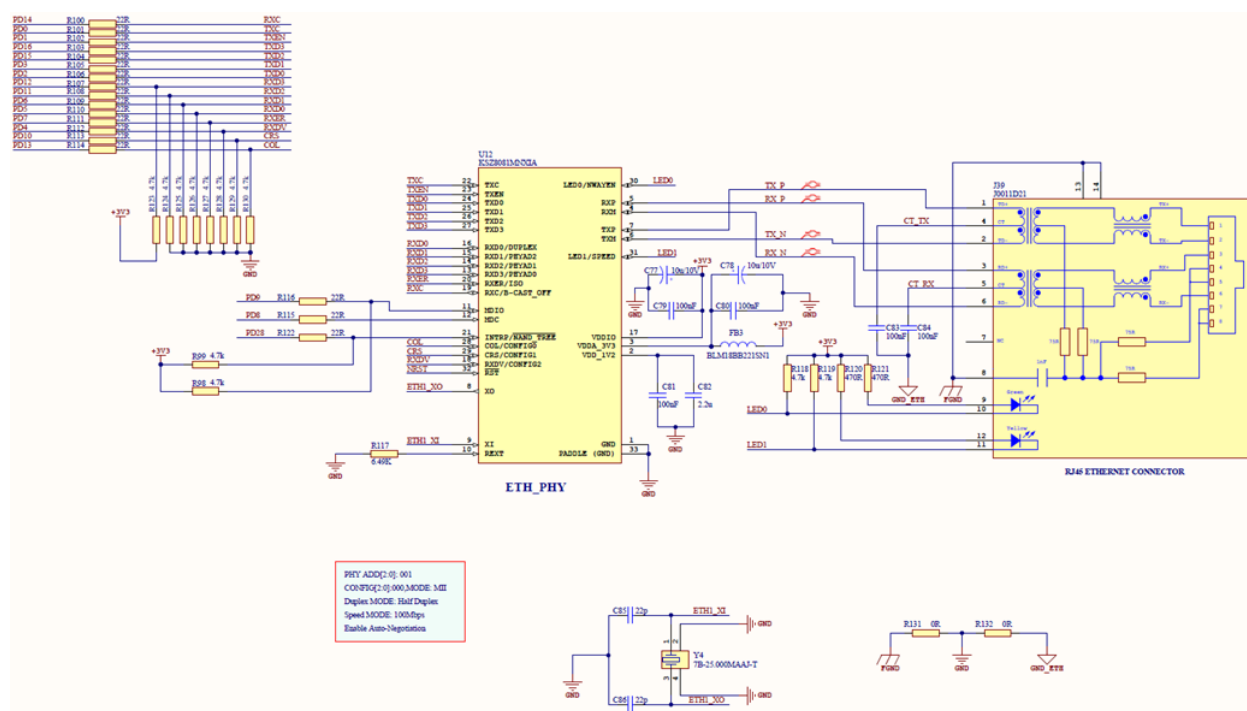

### 4.3.10 CAN


The CAN controller provides all the features required to implement the serial communication protocol CAN defined by Robert Bosch GmbH, the CAN specification as referred to by ISO/11898A (2.0 Part A and 2.0 Part B) for high speeds and ISO/11519-2 for low speeds. The CAN Controller is able to handle all types of frames (Data, Remote, Error and Overload) and achieves a bit rate of 1Mbit/sec.

The Atmel SAM4E has two CAN Controller with eight Mailboxes.

SAM4E-EK connects the CAN0 and CAN1 bus to the CAN transceiver SN65HVD234 (U15 and U17).

The extension connector (J41 and J44) type is RJ12 female socket.

Figure 4-9. CAN Block

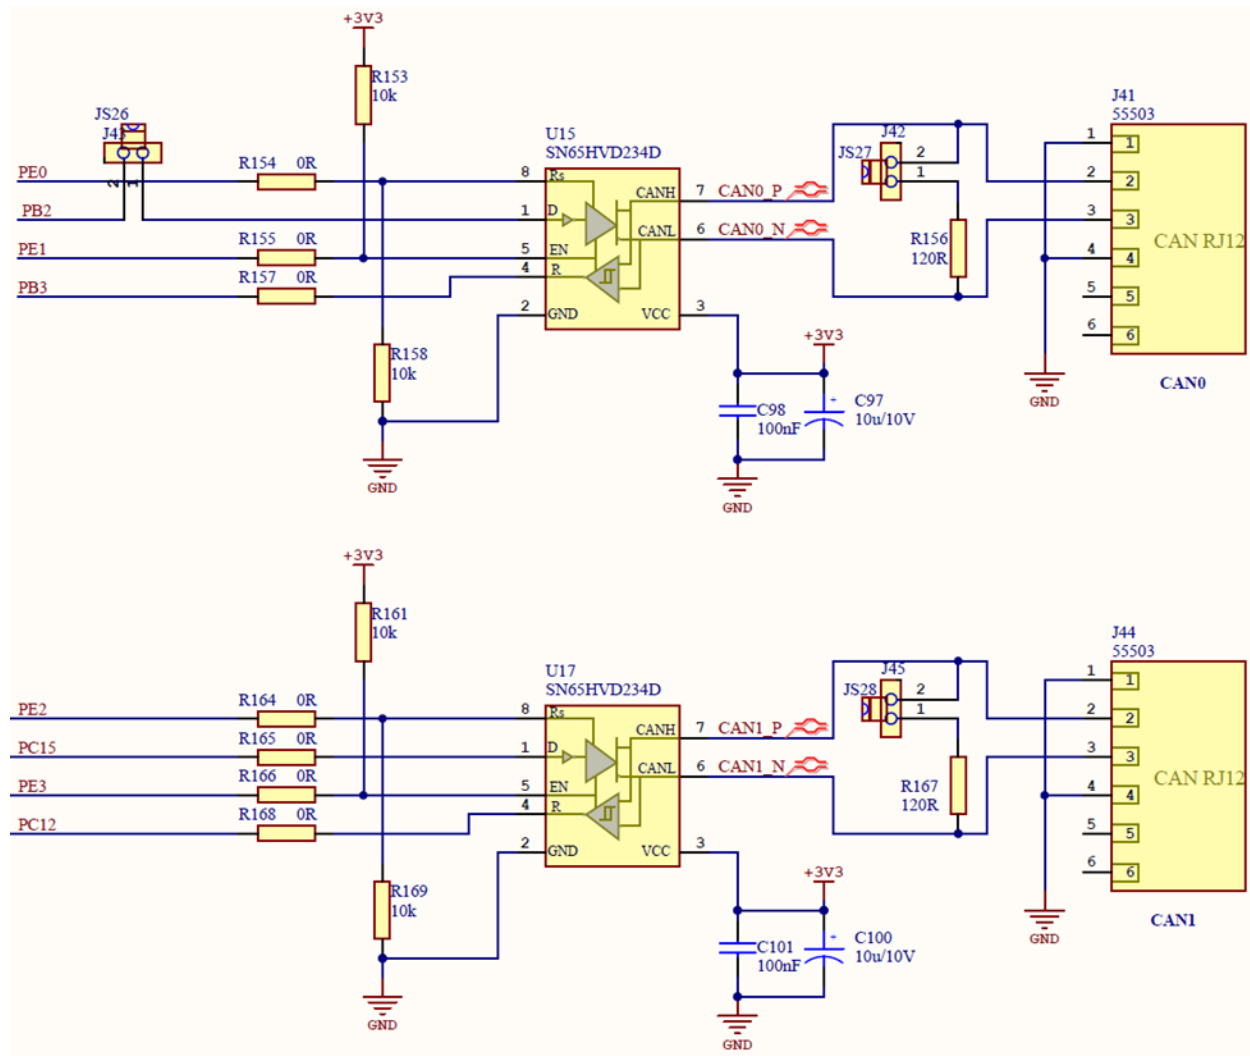

#### 4.3.11 Display Interface


The SAM4E-EK carries a TFT transmissive LCD module with touch panel, FTM280C34D. Its integrated driver IC is ILI9325. The LCD display area is 2.8 inches diagonally measured, with a native resolution of 240 x 320 dots.

##### 4.3.11.1 LCD Module

The LCD module gets reset from the NRST signal. As explained, this NRST is shared with the JTAG port and the push-button SW1. The LCD chip select signal is connected to NCS1; the jumper J11 can disconnect it so that this PIO line is available for other custom usage.

The SAM4E16 communicates with the LCD through PIOC where an 8-bit parallel “8080-like” protocol data bus has to be implemented in software.

Figure 4-10. LCD Block

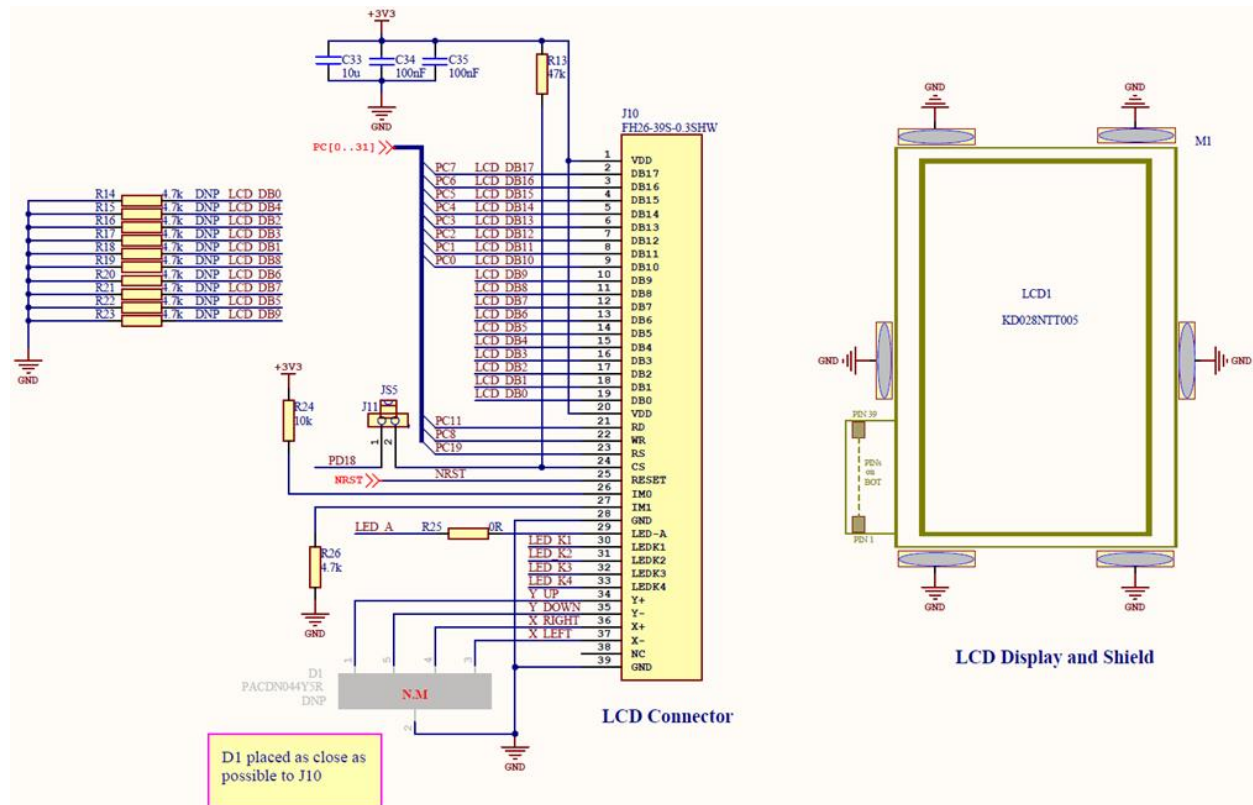


#### 4.3.11.2 Backlight Control

The LCD backlight is made of four integrated white chip-LEDs arranged in parallel. These are driven by an AAT3155 charge pump, U7. The AAT3155 is controlled by PC13; the 0Ω resistor R37 is mounted in series on this line, which permits to use it for other custom purposes. In that case, the pull-up resistor R35 maintains the charge pump permanently enabled by default.

On the anode drive line, a 0Ω resistor R25 is implemented in series for an optional current limitation.

Figure 4-11. Backlight Control

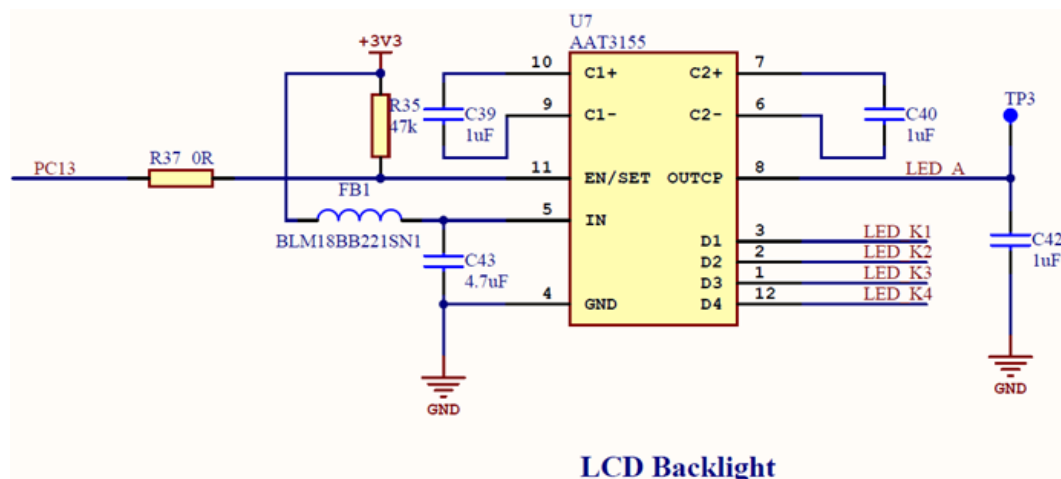

#### 4.3.12 Touch Screen Interface

The LCD module integrates a 4-wire touch panel controlled by U6 (ADS7843), which is a slave device on the SAM4E16 SPI bus. The controller sends back the measurement information about the X and Y positions as a pressure is applied to the touch panel. The touch panel can be used with either a stylus or a finger.


The ADS7843 touch panel controller connects to the SPI interface via the NPCS0 control signal. Two interrupt signals are connected and provide events information back to the microcontroller: PenIrq and Busy.

Note: PenIrq (PA16) is shared with ZigBee signal ZIGB\_MISC.

Busy (PA17) is shared with ZigBee signal ZIGB\_IRQ.

Therefore, if using a ZigBee interface in concurrence with the Touch Screen controller, take care not to have both drivers enabled at the same time on either PA16 or PA17.

Figure 4-12. Touch Panel Control

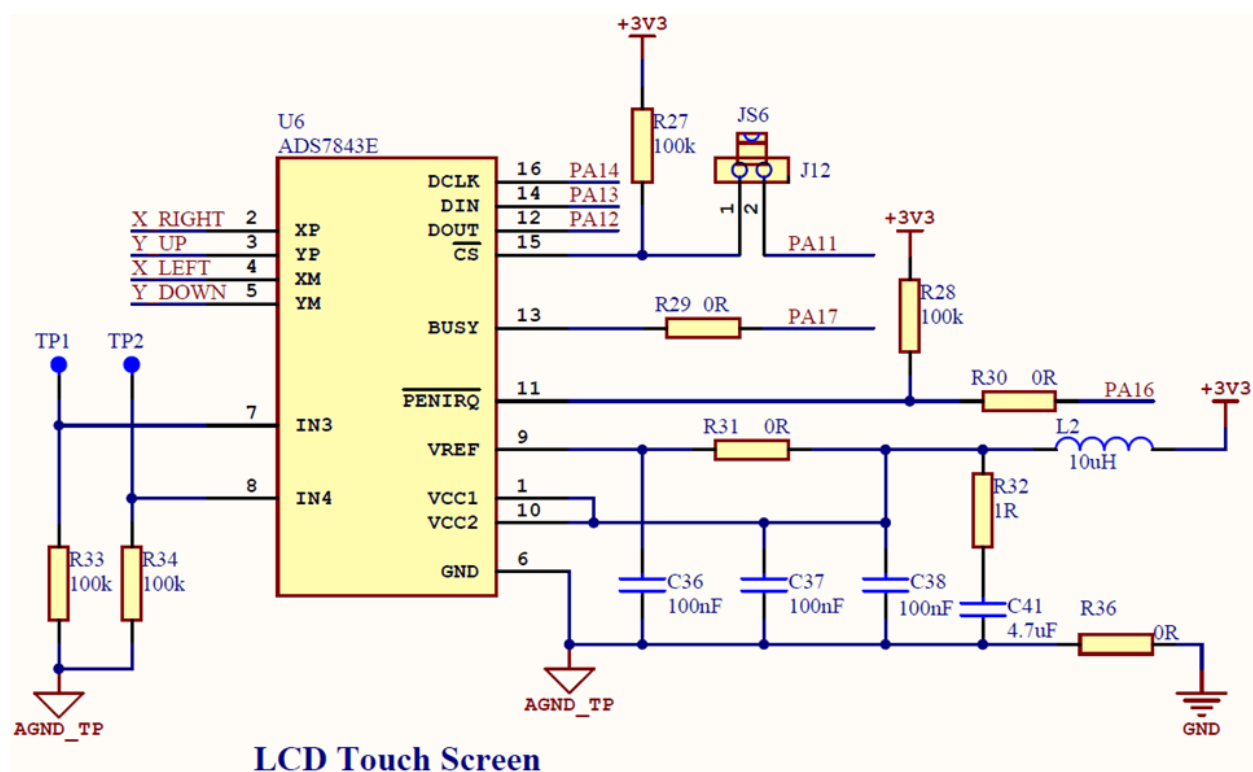


#### 4.3.13 JTAG/ICE

A standard 20-pin JTAG/ICE connector is implemented on the Atmel SAM4E-EK for the connection of a compatible ARM JTAG emulator interface, such as the SAM-ICE™ from Segger.

Note that the NRST signal is connected to SW1 system button and is also used to reset the LCD module. The 0Ω resistor R75 may be removed in order to isolate the JTAG port from this system reset signal.

Figure 4-13. JTAG Interface

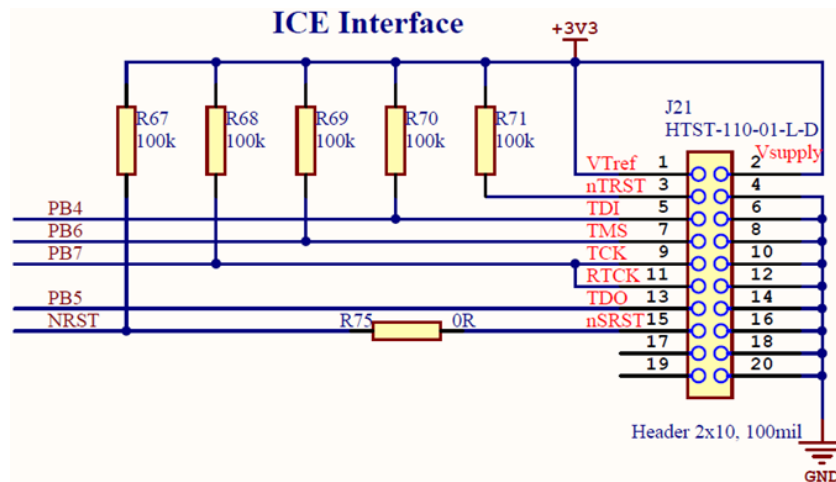


#### 4.3.14 Audio Interface

The Atmel SAM4E-EK evaluation kit supports mono/stereo audio driven by a TPA0223 audio amplifier connected to two DAC channels of the microcontroller.

The TPA0223 is a 2W mono Bridge-Tied-Load (BTL) amplifier designed to drive speakers with as low as 4Ω impedance. The amplifier can be reconfigured on the fly to drive two stereo Single-Ended (SE) signals into head phones.

Figure 4-14. Headphone Output

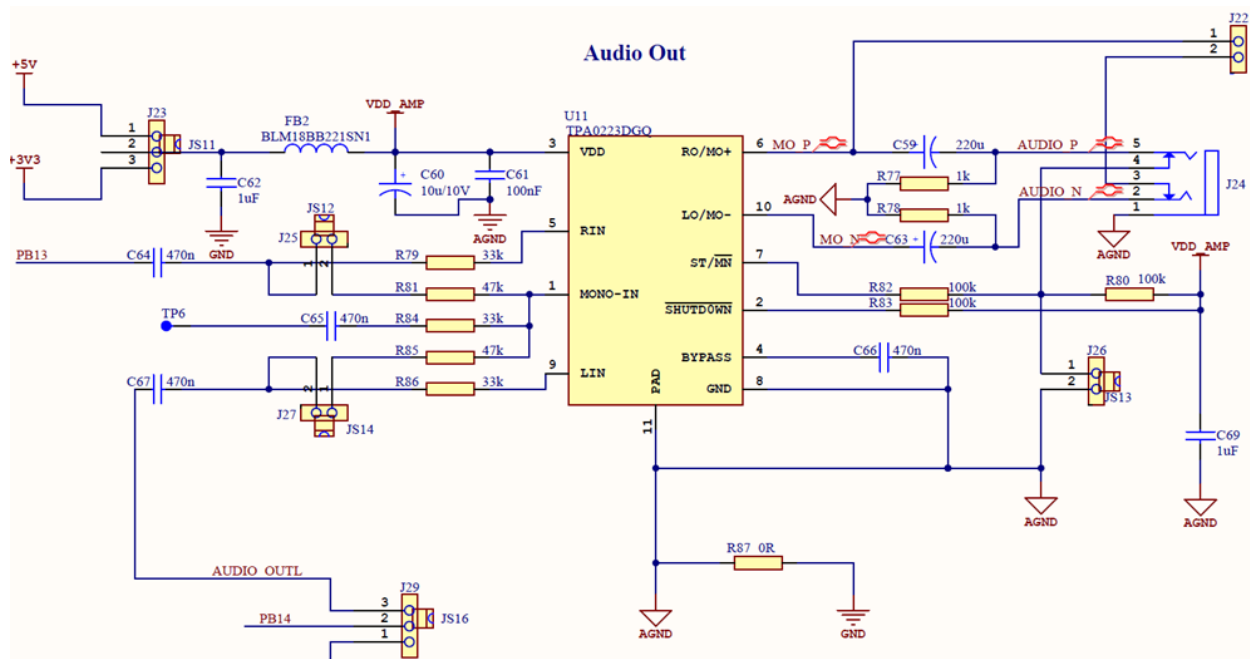

Using a readily available 1/8-in. (3.5mm) stereo headphone jack, the control switch (pin4 and pin5 in J24) is closed when no plug is inserted. When closed, a 100kΩ/1kΩ divider pulls the ST/MN input low. When a jack plug is inserted, the 1kΩ resistor is disconnected and the ST/MN input is pulled high. The mono speaker (J22 connector) is also physically disconnected from the RO/MO+ output so that no sound is heard from the speaker while the headphones are inserted.

When works as stereo mode make sure J25, J27, and J26 are disconnected.


### 4.3.15 USB Device

The SAM4E16 UDP port is compliant with the Universal Serial Bus (USB) rev 2.0 Full Speed device specification. J34 is a micro B-type receptacle for USB device.

Both 27 $\Omega$  resistors R96 and R97 build up 90 $\Omega$  differential impedance together with the (embedded) 6 $\Omega$  output impedance of the SAM4E16 full speed channel drivers.

R93 and R94 build up a divider bridge from VBUS +5V to implement plug-in detection (5V level gets lowered to a PIO compatible 3.3V level) through PC21.

Figure 4-15. USB

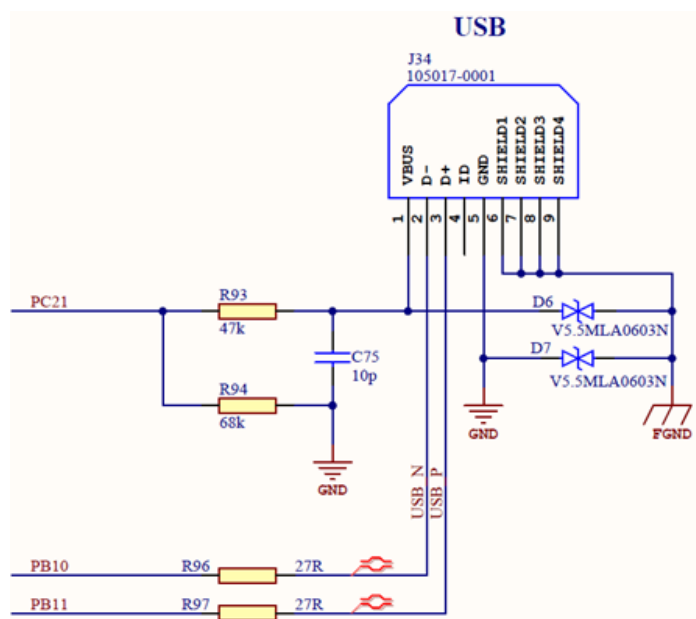


### 4.3.16 Analog Interface

#### 4.3.16.1 Analog Reference

The 3.0V voltage reference is based on a LM4040 (Precision Micropower Shunt Voltage Reference). This ADVREF level can be set as 3.0V or 3.3V via the jumper J2.


Figure 4-16. Analog V<sub>REF</sub>

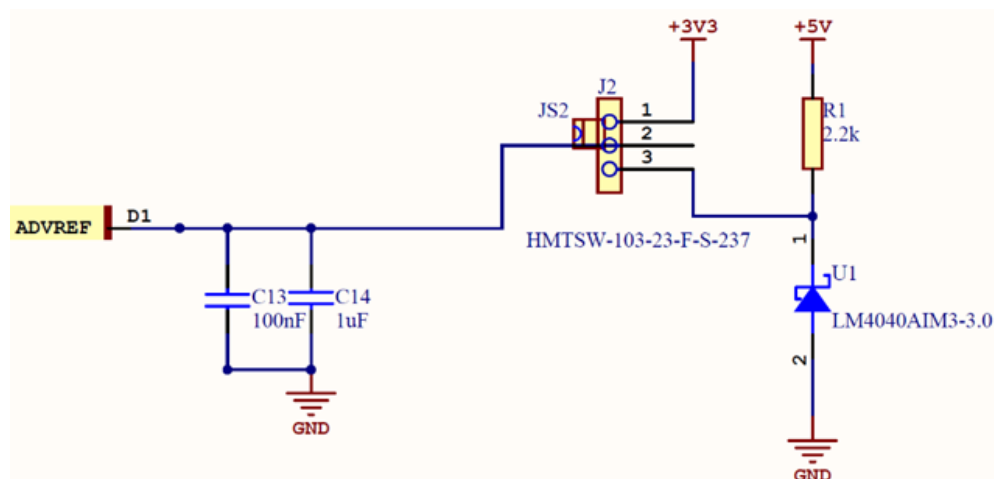

#### 4.3.16.2 Analog Input

- The BNC connector CM1 is connected to the AFE0\_AD4 or AFE1\_AD0 (selected by JP40) as a single external analog input
- The BNC connectors CM3, CM4 are connected to AFE0\_AD10 and AFE0\_AD11 as a differential external analog input. A low pass filter is optional by close 1-2 pins of J32, J33, J36, and J37.
- Each BNC input has an on-board 50Ω resistor termination that can be applied by closing jumper J30, J35 or J38
- A 10kΩ potentiometer (VR1) is also connected to the AFE0\_AD5 implement an easy access to ADC programming and debugging (or implement an analog user control like display brightness, volume, etc.)


Figure 4-17. ADC/AFE Input

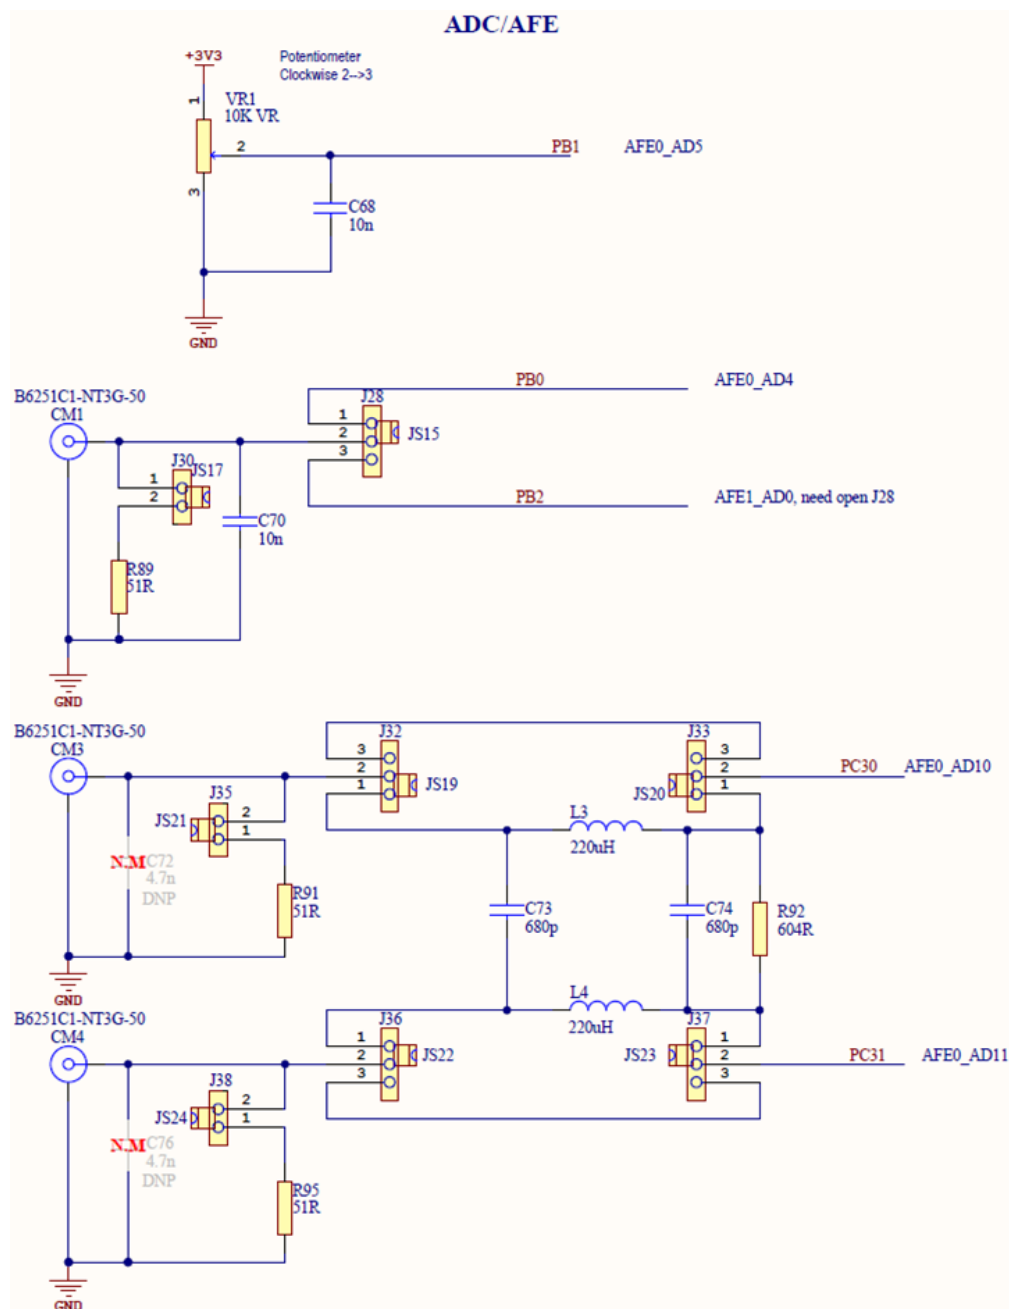

### 4.3.16.3 Analog Output

The BNC connector CM2 is connected to the DAC port PB14 and provides an external analog output. An on-board 50Ω resistor termination can be enabled by closing jumper J31. A filter can be implemented on this output channel by replacing R88 and C71 with appropriate resistor and capacitor values, depending on the application requirements.

**Figure 4-18. DAC Output**

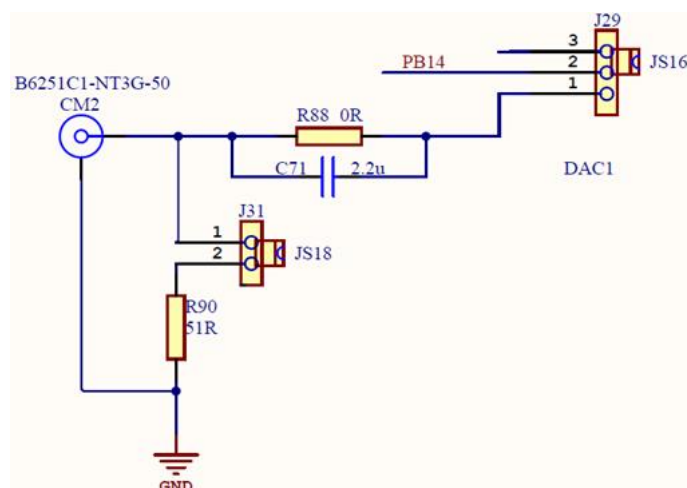

### 4.3.17 QTouch Elements

QTouch keys consist in a series of sensors formed by the association of a copper area and the capacitive effect of human fingers approaching it.


#### Keys

The Atmel SAM4E-EK implements two individual capacitive touch keys (RIGHT, LEFT).

#### Slider

A group of channels forms a Slider. A Slider is composed of eight channels for a QTouch acquisition method. Such a sensor is used to detect a linear finger displacement on a sensitive area. A typical implementation is volume control.

**Figure 4-19. QT\_Slider**

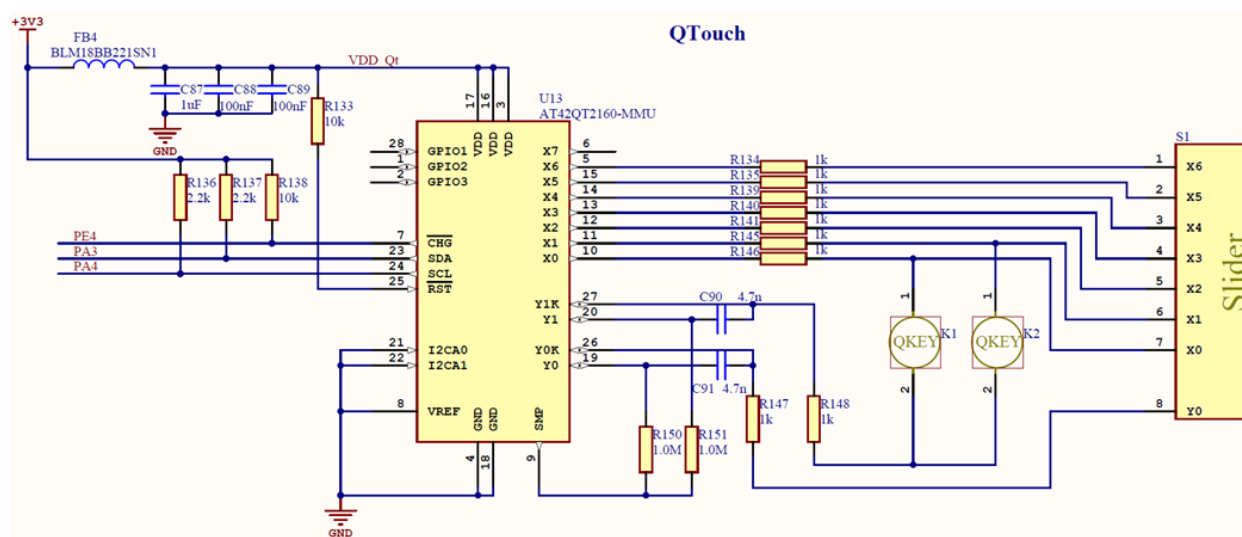


### 4.3.18 LEDs

There are three LEDs on the SAM4E-EK board:

- A blue LED (D2), amber/orange LED (D3) and a green LED (D4), which are user defined and controlled by the GPIO
- A red LED (D5), which is a power LED indicating that the 3.3V power rail is active. It is also controlled by the GPIO and can be treated as a user LED as well. The only difference with the two others is that it is controlled through a MOS transistor. By default, the PIO line is disabled; a pull-up resistor controls the MOS to light the LED when the power is ON.


Figure 4-20. LEDs

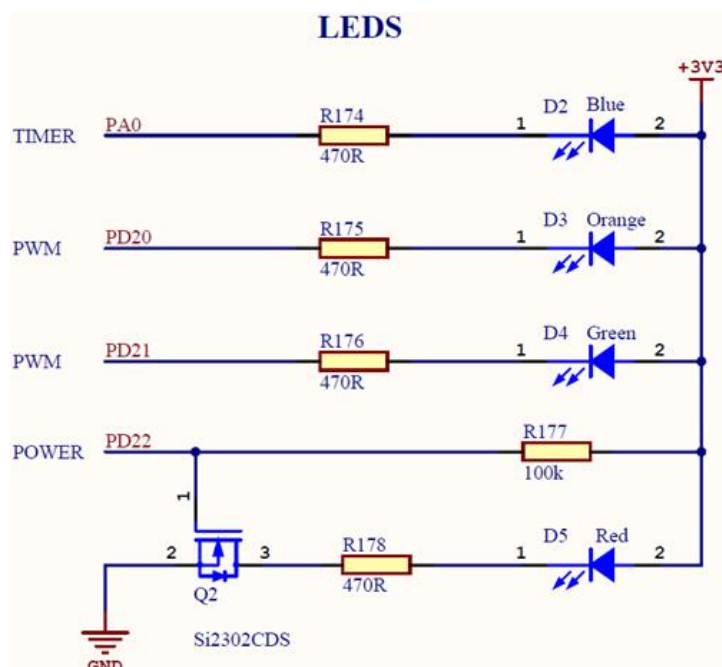

### 4.3.19 SD/MMC Card

The Atmel SAM4E-EK has a high-speed 4-bit multimedia MMC interface, which is connected to a 4-bit SD/MMC micro card slot featuring a card detection switch.

Figure 4-21. SD Card

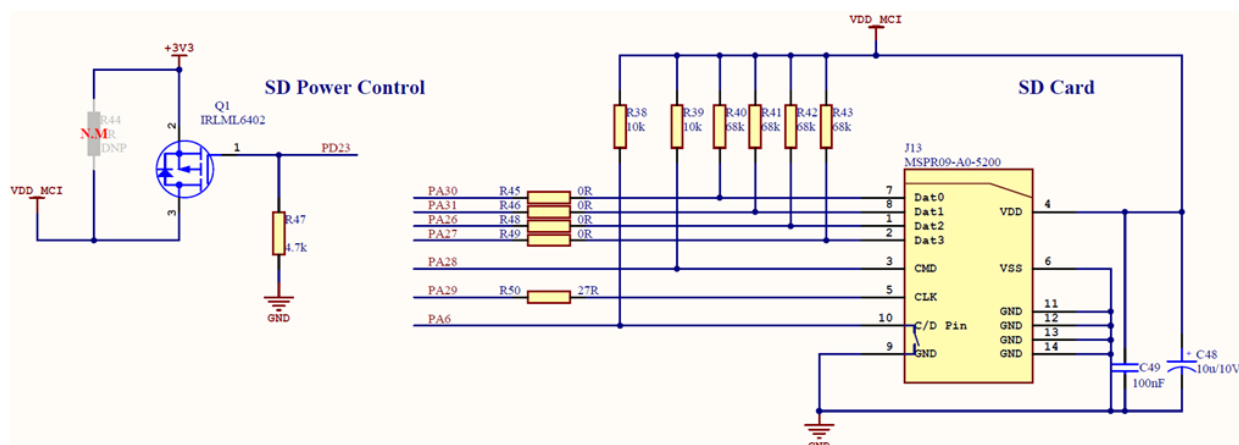


### 4.3.20 ZigBee

The SAM4E-EK has a 10-pin male connector for the RZ600 ZigBee module.

Note:  $0\Omega$  resistors have been implemented in series with the PIO lines that are used elsewhere in the design, thereby enabling their individual disconnection, should a conflict occur in your application.

Figure 4-22. ZigBee Interface

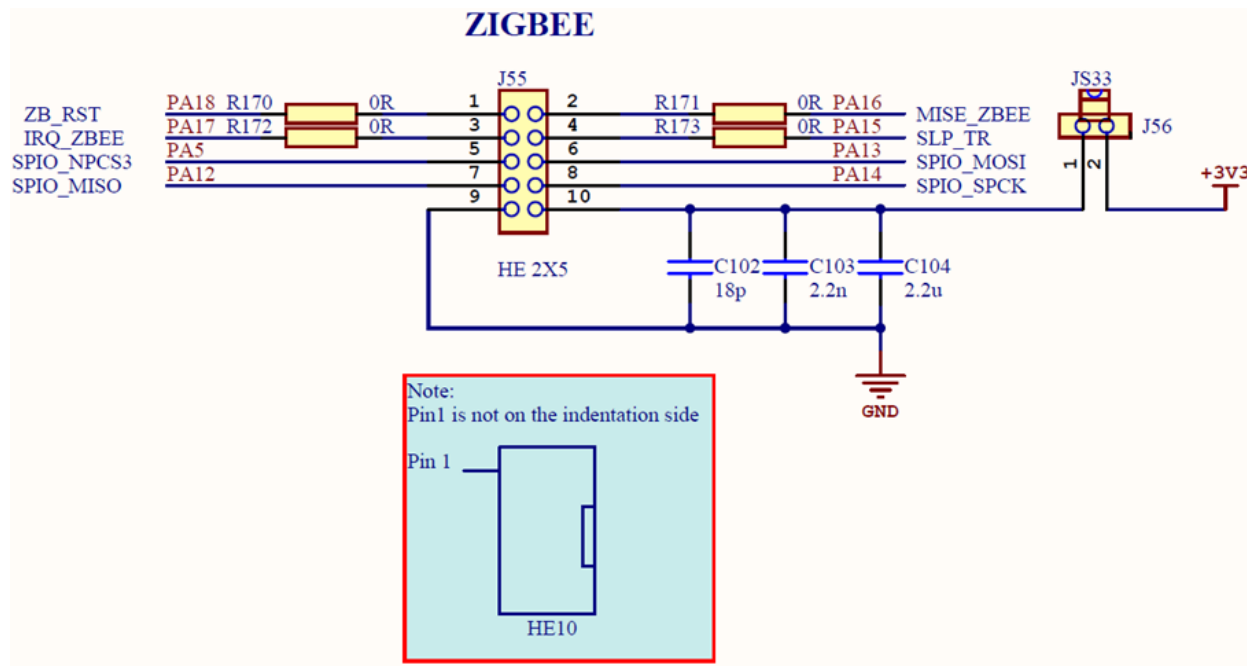


### 4.3.21 PIO Expansion

The SAM4E-EK product features three PIO controllers, PIOA, PIOB, PIOC, and PIOD, which are multiplexed with the I/O lines of the embedded peripherals. Each PIO Controller controls up to 32 lines (15 for PIOB and 6 for PIOE).

Expansion ports J51, J52, J53, and J54 provide PIO lines access for customer usage.

Figure 4-23. PIO Expansion

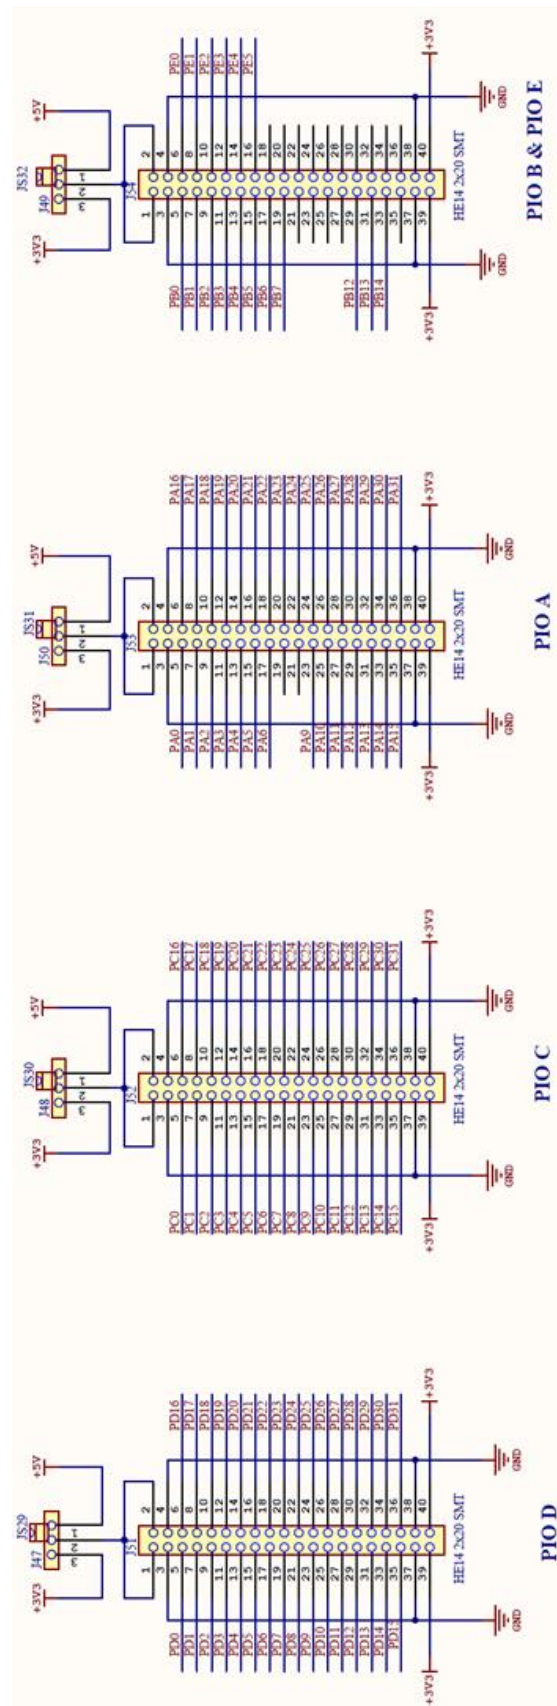

## 5 Configuration

This chapter describes the PIO usage, the jumpers, the test points and the solder drops of an Atmel SAM4E-EK board.

### 5.1 PIO Usage

**Table 5-1. PIO Port A Pin Assignments and Signal Descriptions**

| I/O line | Peripheral A | Peripheral B | Peripheral C | Extra function  | SYSIO and GPIO | Comments                             |
|----------|--------------|--------------|--------------|-----------------|----------------|--------------------------------------|
| PA0      | PWMH0        | TIOA0        | A17          | WKUP0           |                | LED_TIMER (Blue)                     |
| PA1      | PWMH1        | TIOB0        | A18          | WKUP1           |                | BUTTON_SCROLL-UP                     |
| PA2      | PWMH2        |              | DATRG        | WKUP2           |                | BUTTON_SCROLL-DOWN                   |
| PA3      | TWD0         | NPCS3        |              |                 |                | QTouch_SDA                           |
| PA4      | TWCK0        | TCLK0        |              | WKUP3           |                | QTouch_SCL                           |
| PA5      |              | NPCS3        | URXD1        | WKUP4           |                | ZIGB_SEL#, SPI FLASH_CS#             |
| PA6      |              | PCK0         | UTXD1        |                 |                | SD_CD                                |
| PA7      |              | PWMH3        |              |                 | XIN32          | XIN32                                |
| PA8      |              | AFE0_ADTRG   |              | WKUP5           | XOUT32         | XOUT32                               |
| PA9      | URXD0        | NPCS1        | PWMFI0       | WKUP6           |                | DBGU_ROUT                            |
| PA10     | UTXD0        | NPCS2        |              |                 |                | DBGU_TIN                             |
| PA11     | NPCS0        | PWMH0        |              | WKUP7           |                | TOUCH_CS#                            |
| PA12     | MISO         | PWMH1        |              |                 |                | TOUCH_DOUT, ZIGB_MISO, SPI FLASH_SO  |
| PA13     | MOSI         | PWMH2        |              |                 |                | TOUCH_DIN, ZIGB_MOSI, SPI FLASH_SI   |
| PA14     | SPCK         | PWMH3        |              | WKUP8           |                | TOUCH_DCLK, ZIGB_SCLK, SPI FLASH_SCK |
| PA15     |              | TIOA1        | PWML3        | WKUP14/PIODCEN1 |                | ZIGB_SLP_TR                          |
| PA16     |              | TIOB1        | PWML2        | WKUP15/PIODCEN2 |                | TOUCH_PENIRQ#, ZIGB_MISC             |
| PA17     |              | PCK1         | PWMH3        | AFE0_AD0        |                | TOUCH_BUZY, ZIGB_IRQ                 |
| PA18     |              | PCK2         | A14          | AFE0_AD1        |                | ZIGB_RST#                            |
| PA19     |              | PWML0        | A15          | AFE0_AD2/WKUP9  |                | BUTTON_WAKU                          |
| PA20     |              | PWML1        | A16          | AFE0_AD3/WKUP10 |                | BUTTON_TAMP                          |
| PA21     | RXD1         | PCK1         |              | AFE1_AD2        |                | RS232_RXD, RS485_RXD                 |
| PA22     | TXD1         | NPCS3        | NCS2         | AFE1_AD3        |                | RS232_TXD, RS485_TXD                 |
| PA23     | SCK1         | PWMH0        | A19          | PIODCCLK        |                | RS232_EN#                            |
| PA24     | RTS1         | PWMH1        | A20          | PIODC0          |                | RS232_RTS, RS485_DE                  |
| PA25     | CTS1         | PWMH2        | A23          | PIODC1          |                | RS232_CTS, RS485_RE#                 |
| PA26     | DCD1         | TIOA2        | MCDA2        | PIODC2          |                | SD_DAT2                              |
| PA27     | DTR1         | TIOB2        | MCDA3        | PIODC3          |                | SD_DAT3                              |
| PA28     | DSR1         | TCLK1        | MCCDA        | PIODC4          |                | SD_CMD                               |
| PA29     | RI1          | TCLK2        | MCCK         | PIODC5          |                | SD_CLK                               |
| PA30     | PWML2        | NPCS2        | MCDA0        | WKUP11/PIODC6   |                | SD_DAT0                              |
| PA31     | NPCS1        | PCK2         | MCDA1        | PIODC7          |                | SD_DAT1                              |

**Table 5-2. PIO Port B Pin Assignments and Signal Descriptions**

| I/O line | Peripheral A | Peripheral B | Peripheral C | Extra function   | SYSIO and GPIO | Comments            |
|----------|--------------|--------------|--------------|------------------|----------------|---------------------|
| PB0      | PWMH0        |              | RXD0         | AFE0_AD4/RTCOUT0 |                | AFE0_BNC            |
| PB1      | PWMH1        |              | TXD0         | AFE0_AD5/RTCOUT1 |                | ADC_Potentiometer   |
| PB2      | CANTX0       | NCPS2        | CTS0         | AFE1_AD0/WKUP12  |                | CAN0_D, AFE1_BNC    |
| PB3      | CANRX0       | PCK2         | RTS0         | AFE1_AD1         |                | CAN0_R              |
| PB4      | TWD1         | PWMH2        |              |                  | TDI            | JTAG_TDI            |
| PB5      | TWCK1        | PWML0        |              | WKUP13           | TDO/TRACESWO   | JTAG_TDO            |
| PB6      |              |              |              |                  | TMS/SWDIO      | JTAG_TMS            |
| PB7      |              |              |              |                  | TCK/SWCLK      | JTAG_TCK            |
| PB8      |              |              |              |                  | XOUT           | XOUT                |
| PB9      |              |              |              |                  | XIN            | XIN                 |
| PB10     |              |              |              |                  | DDP            | USB_D+              |
| PB11     |              |              |              |                  | DDM            | USB_D-              |
| PB12     | PWML1        |              |              |                  | ERASE          | ERASE               |
| PB13     | PWML2        | PCK0         | SCK0         | DAC0             |                | AUDIO_RIN           |
| PB14     | NPSC1        | PWMH3        |              | DAC1             |                | AUDIO_LIN, DAC1_BNC |

**Table 5-3. PIO Port C Pin Assignments and Signal Descriptions**

| I/O line | Peripheral A | Peripheral B | Peripheral C | Peripheral D | Extra function | SYSIO and GPIO | Comments         |
|----------|--------------|--------------|--------------|--------------|----------------|----------------|------------------|
| PC0      | D0           | PWML0        |              |              | AFE0_AD14      |                | NAND_D0/LCD_DB10 |
| PC1      | D1           | PWML1        |              |              | AFE1_AD4       |                | NAND_D1/LCD_DB11 |
| PC2      | D2           | PWML2        |              |              | AFE1_AD5       |                | NAND_D2/LCD_DB12 |
| PC3      | D3           | PWML3        |              |              | AFE1_AD6       |                | NAND_D3/LCD_DB13 |
| PC4      | D4           | NPSC1        |              |              | AFE1_AD7       |                | NAND_D4/LCD_DB14 |
| PC5      | D5           | TIOA6        |              |              |                |                | NAND_D5/LCD_DB15 |
| PC6      | D6           | TIOB6        |              |              |                |                | NAND_D6/LCD_DB16 |
| PC7      | D7           | TCLK6        |              |              |                |                | NAND_D7/LCD_DB17 |
| PC8      | NWE          | TIOA7        |              |              |                |                | LCD_WR           |
| PC9      | NANDOE       | TIOB7        |              |              |                |                | NAND_OE#         |
| PC10     | NANDWE       | TCLK7        |              |              |                |                | NAND_WE#         |
| PC11     | NRD          | TIOA8        |              |              |                |                | LCD_RD           |
| PC12     | NCS3         | TIOB8        | CANRX1       |              | AFE0_AD8       |                | CAN1_R           |
| PC13     | NWAIT        | PWML0        |              |              | AFE0_AD6       |                | LCDBL_EN/SET     |
| PC14     | NCS0         | TCLK8        |              |              |                |                | NAND_CE#         |
| PC15     | NCS1         | PWML1        | CANTX1       |              | AFE0_AD7       |                | CAN1_D           |
| PC16     | A21/NANDALE  |              |              |              |                |                | NAND_ALE         |
| PC17     | A22/NANDCLE  |              |              |              |                |                | NAND_CLE         |
| PC18     | A0           | PWMH0        |              |              |                |                | NAND_R/B#        |
| PC19     | A1           | PWMH1        |              |              |                |                | LCD_RS           |

|      |     |       |  |  |           |  |          |
|------|-----|-------|--|--|-----------|--|----------|
| PC20 | A2  | PWMH2 |  |  |           |  |          |
| PC21 | A3  | PWMH3 |  |  |           |  | USB_VBUS |
| PC22 | A4  | PWML3 |  |  |           |  |          |
| PC23 | A5  | TIOA3 |  |  |           |  |          |
| PC24 | A6  | TIOB3 |  |  |           |  |          |
| PC25 | A7  | TCLK3 |  |  |           |  |          |
| PC26 | A8  | TIOA4 |  |  | AFE0_AD12 |  |          |
| PC27 | A9  | TIOB4 |  |  | AFE0_AD13 |  |          |
| PC28 | A10 | TCLK4 |  |  |           |  |          |
| PC29 | A11 | TIOA5 |  |  | AFE0_AD9  |  |          |
| PC30 | A12 | TIOB5 |  |  | AFE0_AD10 |  | AFE0_BNC |
| PC31 | A13 | TCLK5 |  |  | AFE0_AD11 |  | AFE0_BNC |

**Table 5-4. PIO Port D Pin Assignments and Signal Descriptions**

| I/O line | Peripheral A | Peripheral B | Peripheral C | Peripheral D | Extra function | SYSIO and GPIO | Comments        |
|----------|--------------|--------------|--------------|--------------|----------------|----------------|-----------------|
| PD0      | GTCK/GREFCK  |              |              |              |                |                | MII_TXCK        |
| PD1      | GTEN         |              |              |              |                |                | MII_TXEN        |
| PD2      | GTX0         |              |              |              |                |                | MII_TX0         |
| PD3      | GTX1         |              |              |              |                |                | MII_TX1         |
| PD4      | GCRSDV/GRXD  |              |              |              |                |                | MII_RXDV        |
| PD5      | GRX0         |              |              |              |                |                | MII_RX0         |
| PD6      | GRX1         |              |              |              |                |                | MII_RX1         |
| PD7      | GRXER        |              |              |              |                |                | MII_RXER        |
| PD8      | GMDC         |              |              |              |                |                | ETH_MDC         |
| PD9      | GMDIO        |              |              |              |                |                | ETH_MDIO        |
| PD10     | GCRS         |              |              |              |                |                | MII_CRS         |
| PD11     | GRX2         |              |              |              |                |                | MII_RX2         |
| PD12     | GRX3         |              |              |              |                |                | MII_RX3         |
| PD13     | GCOL         |              |              |              |                |                | MII_COL         |
| PD14     | GRXCK        |              |              |              |                |                | MII_RXCK        |
| PD15     | GTX2         |              |              |              |                |                | MII_TX2         |
| PD16     | GTX3         |              |              |              |                |                | MII_TX3         |
| PD17     | GTXER        |              |              |              |                |                |                 |
| PD18     | NCS1         |              |              |              |                |                | LCD_CS          |
| PD19     | NCS3         |              |              |              |                |                |                 |
| PD20     | PWMH0        |              |              |              |                |                | LED_PWM (Amber) |
| PD21     | PWMH1        |              |              |              |                |                | LED_PWM (Green) |
| PD22     | PWMH2        |              |              |              |                |                | LED_PWR (RED)   |
| PD23     | PWMH3        |              |              |              |                |                | SD_PWR_CTL      |

|      |       |  |  |  |  |  |          |
|------|-------|--|--|--|--|--|----------|
| PD24 | PWML0 |  |  |  |  |  |          |
| PD25 | PWML1 |  |  |  |  |  |          |
| PD26 | PWML2 |  |  |  |  |  |          |
| PD27 | PWML3 |  |  |  |  |  |          |
| PD28 |       |  |  |  |  |  | ETH_INTR |
| PD29 |       |  |  |  |  |  |          |
| PD30 |       |  |  |  |  |  |          |
| PD31 |       |  |  |  |  |  |          |

**Table 5-5. PIO Port E Pin Assignments and Signal Descriptions**

| I/O line | Peripheral A | Peripheral B | Peripheral C | Peripheral D | Extra function | SYSIO and GPIO | Comments       |
|----------|--------------|--------------|--------------|--------------|----------------|----------------|----------------|
| PE0      |              |              |              |              |                |                | CAN0_Rs        |
| PE1      |              |              |              |              |                |                | CAN0_EN        |
| PE2      |              |              |              |              |                |                | CAN1_Rs        |
| PE3      |              |              |              |              |                |                | CAN1_EN        |
| PE4      |              |              |              |              |                |                | QTouch_CHANGE# |

## 5.2 Jumpers

The Atmel SAM4E-EK board jumpers are essentially used for two main purposes: functional selection or current measurement. Details are given below.

**Table 5-6. 2-pin Jumpers Setting**

| Name | Signal                       | Close                | Open                 |
|------|------------------------------|----------------------|----------------------|
| J46  | SPI FLASH_CS (NPCS3)         | Connect (default)    | Disconnect           |
| J40  | NAND_CE# (NCS0)              | Connect (default)    | Disconnect           |
| J4   | VDDCORE                      | Connect (default)    | Disconnect           |
| J1   | VDDIO                        | Connect (default)    | Disconnect           |
| J3   | VDDIN                        | Connect (default)    | Disconnect           |
| J43  | CANTX0                       | CANTX0 can use       | AFE1_AD0 can use     |
| J7   | ERASE                        | Erase internal flash | Default              |
| J12  | TOUCH_CS# (NPCS0)            | Connect (default)    | Disconnect           |
| J11  | LCD_CS (NCS1)                | Connect (default)    | Disconnect           |
| J59  | BUTTON_SCROLL-UP             | Connect (default)    | Disconnect           |
| J60  | BUTTON_SCROLL-DOWN           | Connect (default)    | Disconnect           |
| J58  | BUTTON_TAMP                  | Connect (default)    | Disconnect           |
| J57  | BUTTON_WAKU                  | Connect (default)    | Disconnect           |
| J25  | PB13(DAC) to MONO-IN (Audio) | Connect (default)    | Disconnect (default) |
| J27  | PB14(DAC) to MONO-IN (Audio) | Connect (default)    | Disconnect (default) |

|               |                              |                 |                    |
|---------------|------------------------------|-----------------|--------------------|
| J26           | Audio_ST/MN#                 | Force mono mode | No force (default) |
| J30, J31, J35 | BNC input 50Ω match resistor | Use             | No use (default)   |


| Name               | Signal                | 1-2 close           | 2-3 close              |
|--------------------|-----------------------|---------------------|------------------------|
| J18                | PA21                  | RS485-RX            | RS232-RX               |
| J2                 | ADVREF                | 3.3V (default)      | 3.0V                   |
| J23                | Audio power           | 5V (default)        | 3.3V                   |
| J29                | DAC_PB14              | To CN1 (BNC)        | To Audio_LIN (default) |
| J47, J48, J49, J50 | PIOA/B/C/D-CONN-power | 5V                  | 3.3V                   |
| J32, J33, J36, J37 | AFE0_AD10/AD11        | Use filter(default) | Bypass filter          |
| J28                | ADC BNC input         | To AFE0_AD4         | To AFE1_AD0            |

## 6 Schematics

This chapter contains the following schematics:

- Block diagram
- Microcontroller
- TFT-LCD and touch
- COM and SD card and JTAG
- Audio and USB
- Ethernet
- QTouch, CAN, and Flash memories
- I/O Peripheral

Figure 6-1. Block Diagram

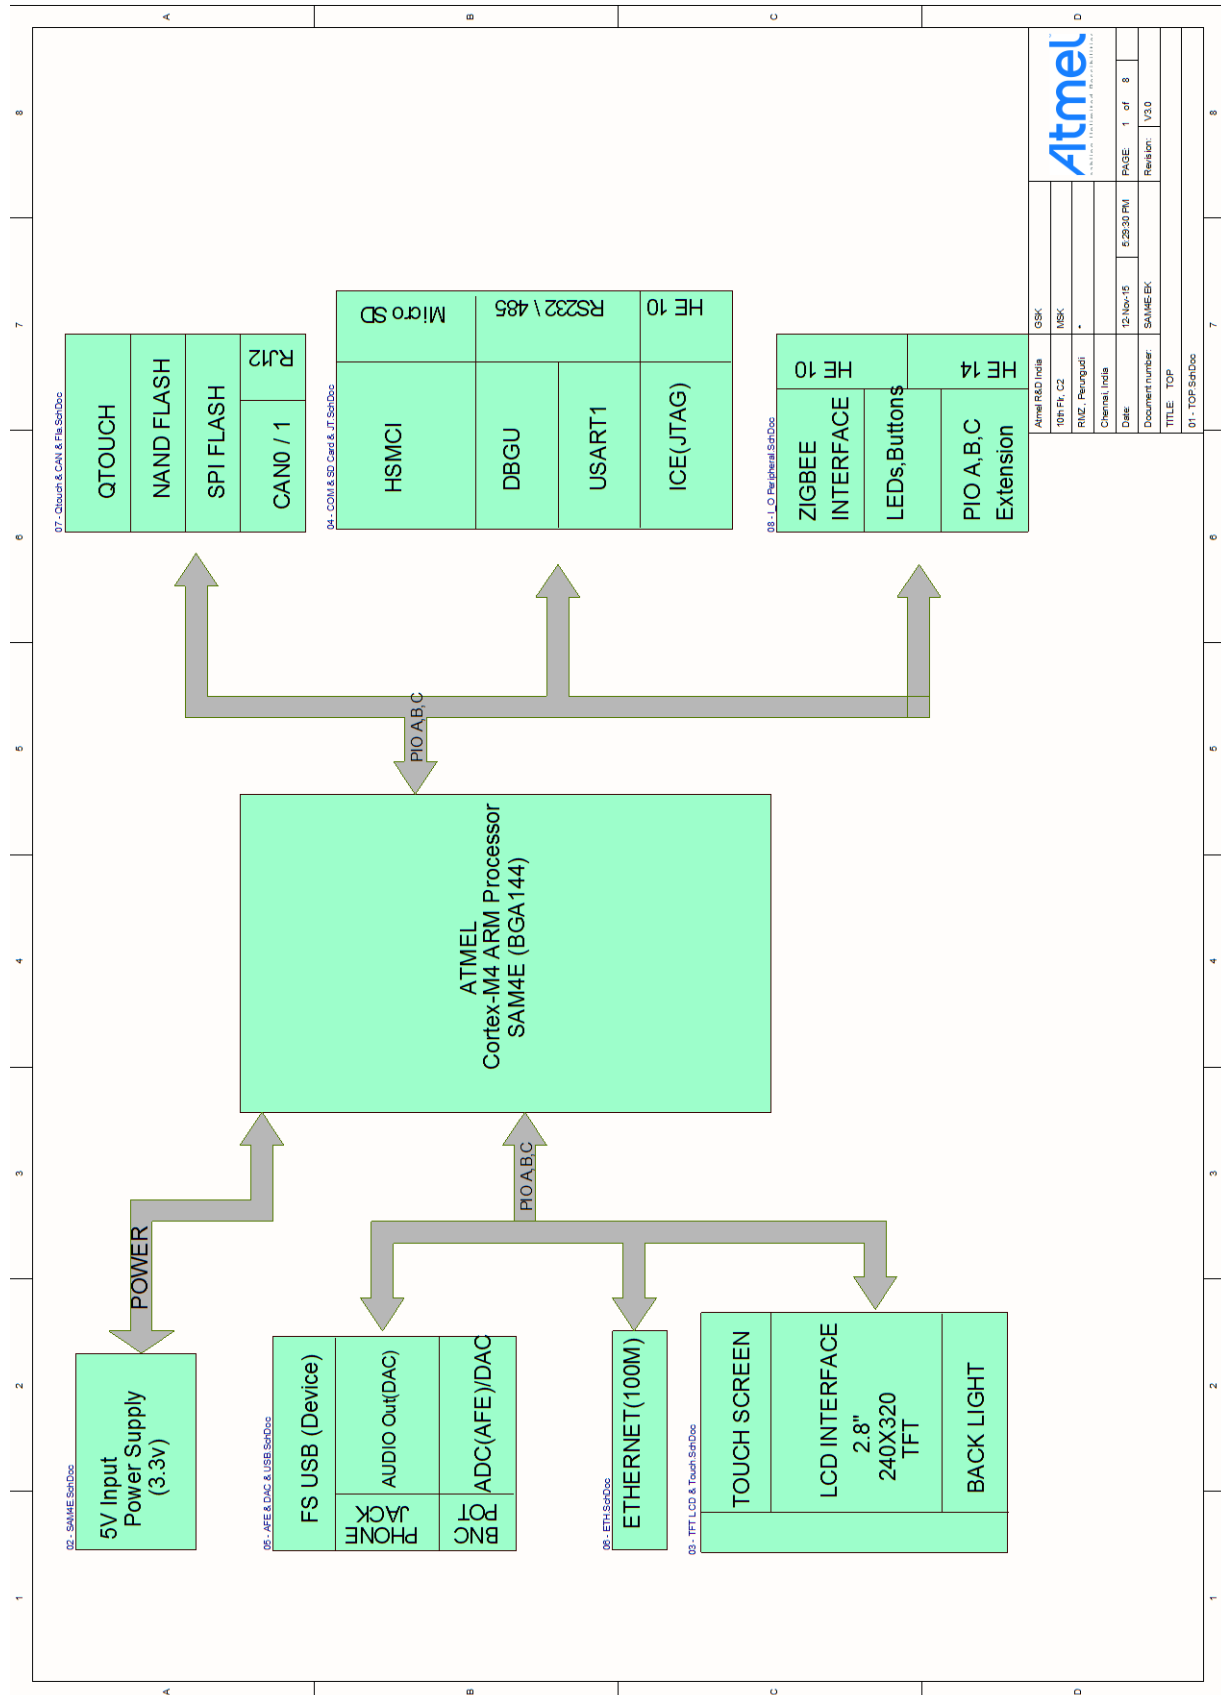

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387

388

389

390

391

392

393

394

395

396

397

398

399

400

401

402

403

404

405

406

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

439

440

441

442

443

444

445

446

447

448

449

450

451

452

453

454

455

456

457

458

459

460

461

462

463

464

465

466

467

468

469

470

471

472

473

474

475

476

477

478

479

480

481

482

483

484

485

486

487

488

489

490

491

492

493

494

495

496

497

498

499

500

501

502

503

504

505

506

507

508

509

510

511

512

513

514

515

516

517

518

519

520

521

522


523

524

525

52

Figure 6-3. TFT-LCD and Touch

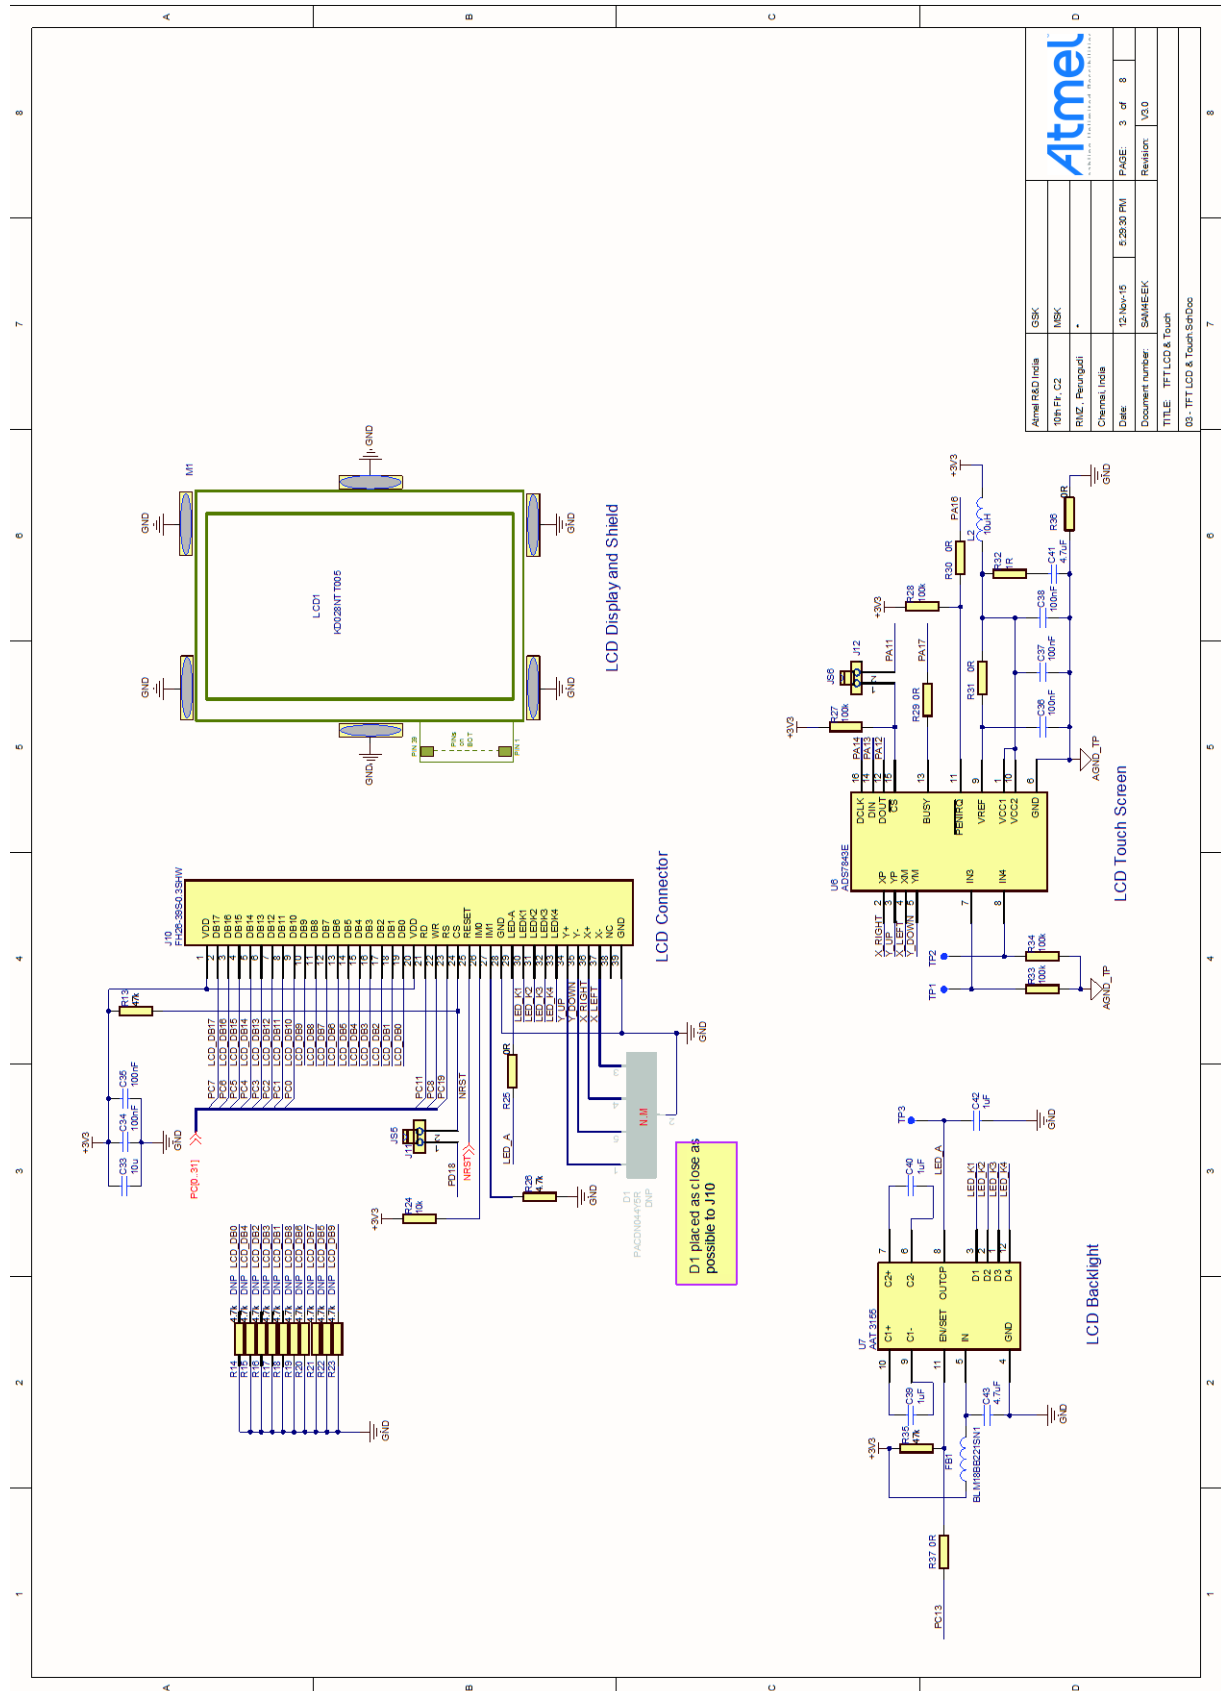



**Audio Out**

**ADC/AFE**

**USB**

**Project Information:**

|                            |           |
|----------------------------|-----------|
| Altmet R&D India           | GSK       |
| 10th Fl, C2                | MSK       |
| Rm2 - Paurgudi             | -         |
| Chennai, India             |           |
| Date:                      | 12 Nov 15 |
| Document number:           | SAAMEEK   |
| Revision:                  | V3.0      |
| TITLE: AFE & DAC & USB     |           |
| 05- AFE & DAC & USB SrdDoc |           |

PAGE 5 of 8

[illegible]

Figure 6-7. QTouch, CAN, and Flash Memories


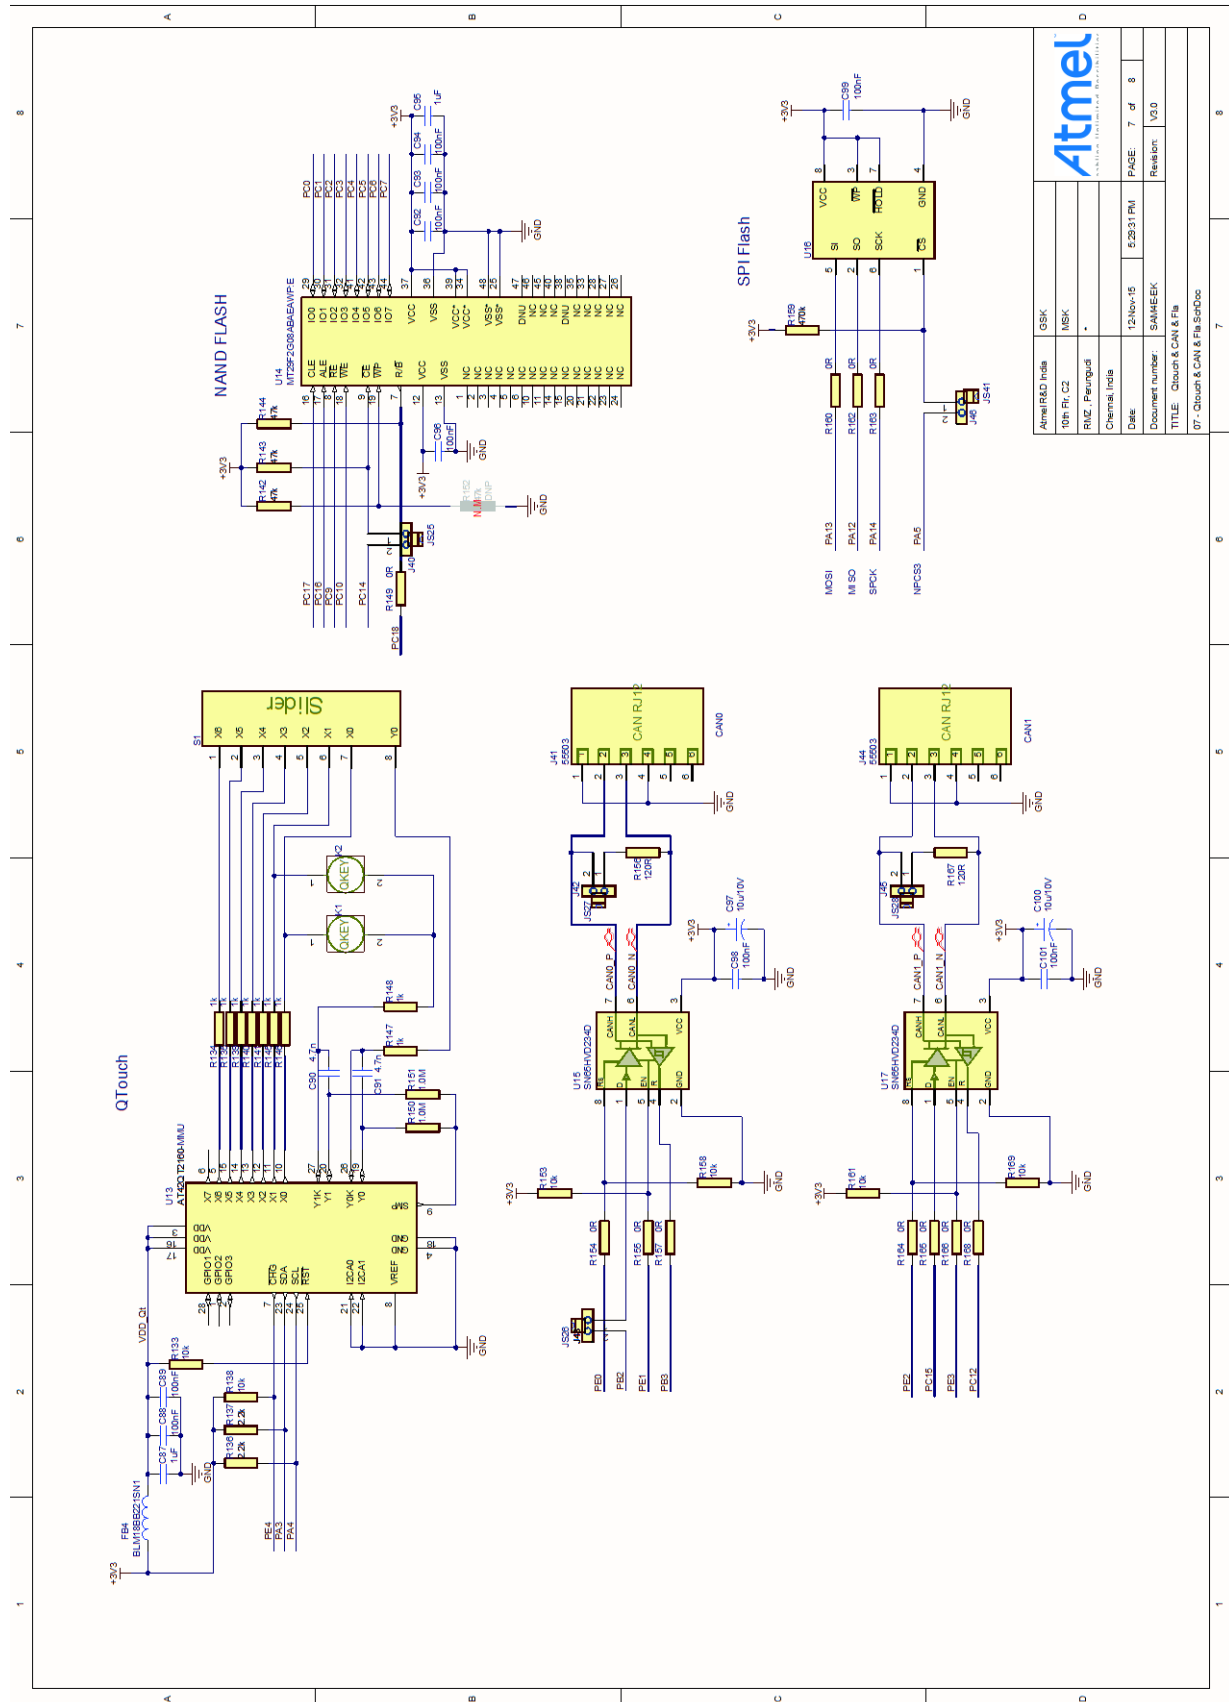


Figure 6-8. I/O Peripheral

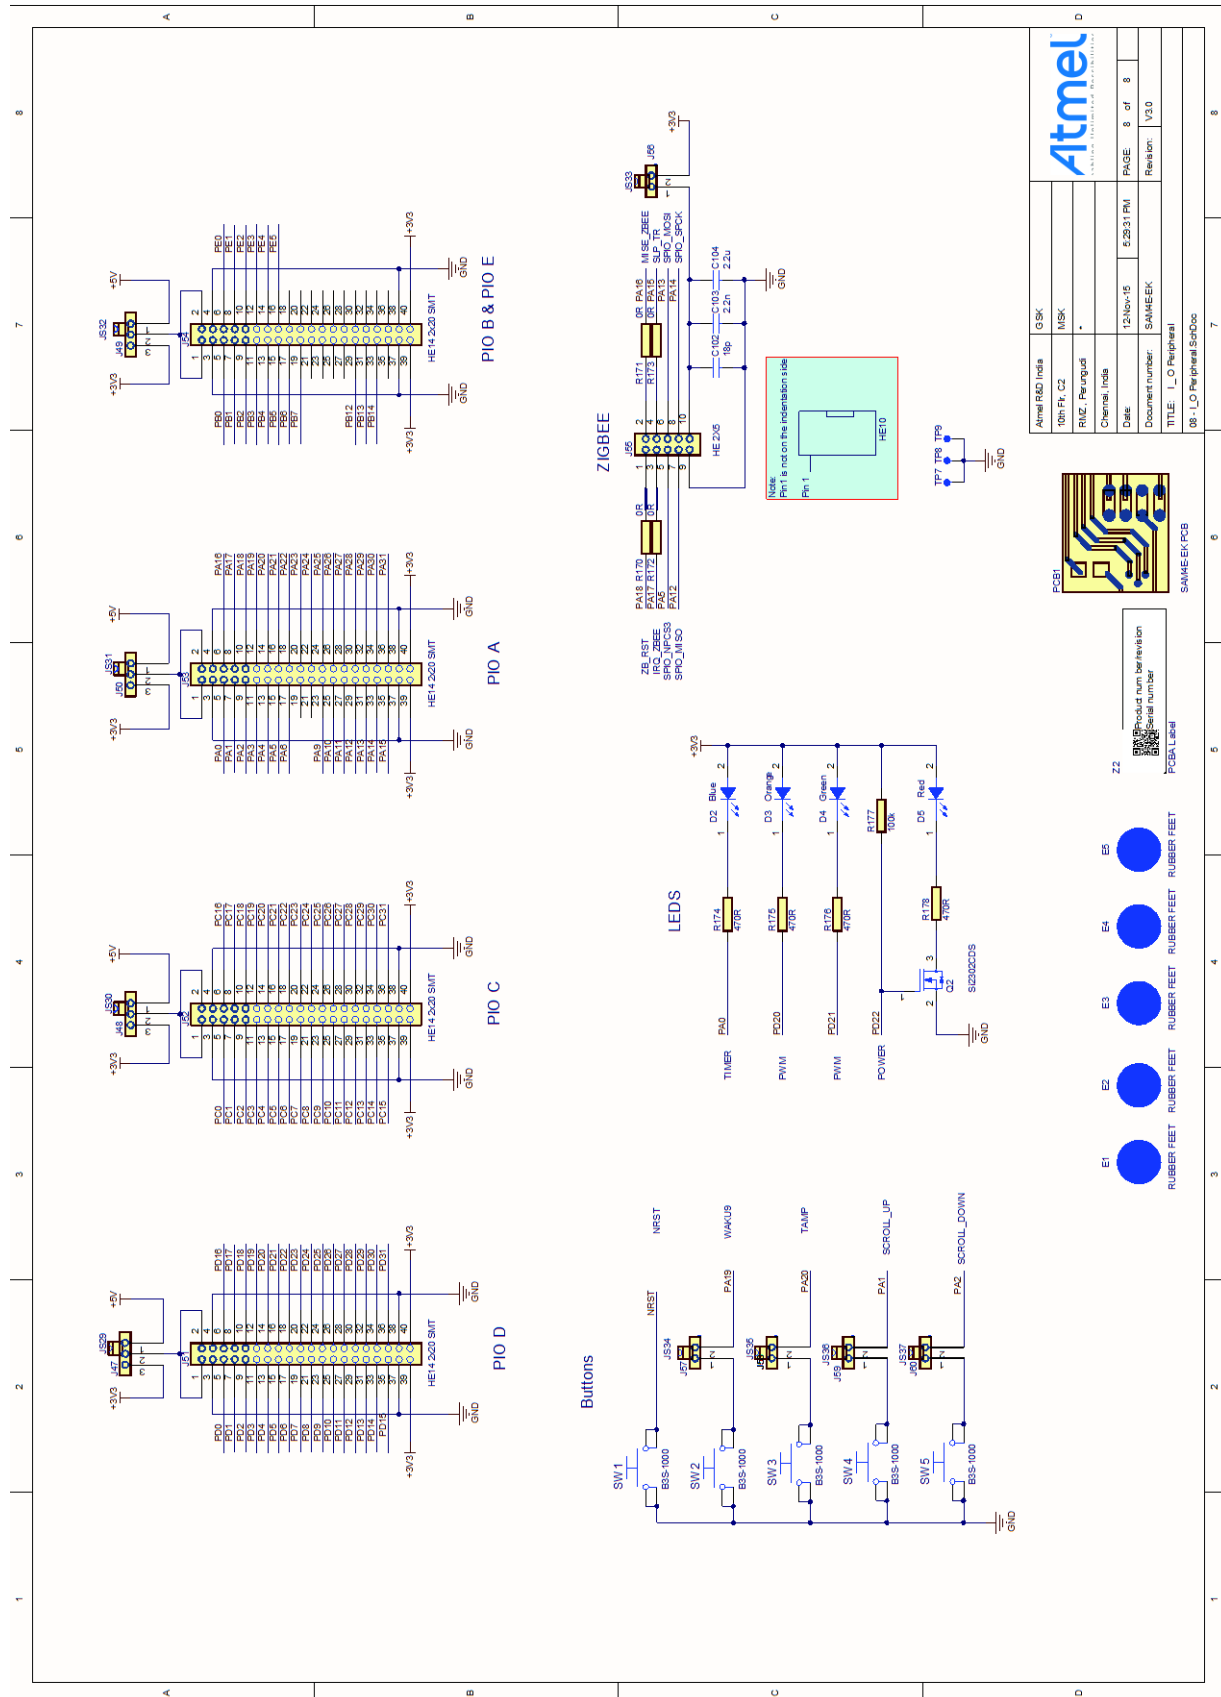

## 7 ATMEL EVALUATION BOARD/KIT IMPORTANT NOTICE AND DISCLAIMER

This evaluation board/kit is intended for user's internal development and evaluation purposes only. It is not a finished product and may not comply with technical or legal requirements that are applicable to finished products, including, without limitation, directives or regulations relating to electromagnetic compatibility, recycling (WEEE), FCC, CE or UL. Atmel is providing this evaluation board/kit "AS IS" without any warranties or indemnities. The user assumes all responsibility and liability for handling and use of the evaluation board/kit including, without limitation, the responsibility to take any and all appropriate precautions with regard to electrostatic discharge and other technical issues. User indemnifies Atmel from any claim arising from user's handling or use of this evaluation board/kit. Except for the limited purpose of internal development and evaluation as specified above, no license, express or implied, by estoppel or otherwise, to any Atmel intellectual property right is granted hereunder. ATMEL SHALL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RELATING TO USE OF THIS EVALUATION BOARD/KIT.

ATMEL CORPORATION  
1600 Technology Drive  
San Jose, CA 95110  
USA

## 8 Revision History

| Doc Rev. | Date    | Comments                                                                                                        |
|----------|---------|-----------------------------------------------------------------------------------------------------------------|
| 42067C   | 02/2016 | Updated to incorporate the changes latest revision of the kit.<br>Some minor changes according to the template. |
| 42067B   | 04/2013 | A feature is added to the feature list in Chapter 0.<br>Some typos are fixed.                                   |
| 42067A   | 01/2013 | Initial document release.                                                                                       |



**Atmel Corporation**      1600 Technology Drive, San Jose, CA 95110 USA      **T:** (+1)(408) 441.0311      **F:** (+1)(408) 436.4200      |      **www.atmel.com**

© 2016 Atmel Corporation. / Rev.: Atmel-42067C-SAM4E-EK\_UserGuide\_022016.

Atmel®, Atmel logo and combinations thereof, Enabling Unlimited Possibilities®, QTouch®, and others are registered trademarks or trademarks of Atmel Corporation in U.S. and other countries. ARM®, ARM Connected® logo, and others are the registered trademarks or trademarks of ARM Ltd. Other terms and product names may be trademarks of others.

**DISCLAIMER:** The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. EXCEPT AS SET FORTH IN THE ATMEL TERMS AND CONDITIONS OF SALES LOCATED ON THE ATMEL WEBSITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS AND PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and products descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.

**SAFETY-CRITICAL, MILITARY, AND AUTOMOTIVE APPLICATIONS DISCLAIMER:** Atmel products are not designed for and will not be used in connection with any applications where the failure of such products would reasonably be expected to result in significant personal injury or death ("Safety-Critical Applications") without an Atmel officer's specific written consent. Safety-Critical Applications include, without limitation, life support devices and systems, equipment or systems for the operation of nuclear facilities and weapons systems. Atmel products are not designed nor intended for use in military or aerospace applications or environments unless specifically designated by Atmel as military-grade. Atmel products are not designed nor intended for use in automotive applications unless specifically designated by Atmel as automotive-grade.

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Microchip:](#)

[ATSAM4E-EK](#)

Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;
- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком);
- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



## JONHON

«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«FORSTAR» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели,  
кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный)

Факс: 8 (812) 320-03-32

Электронная почта: [ocean@oceanchips.ru](mailto:ocean@oceanchips.ru)

Web: <http://oceanchips.ru/>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А