

### 2.4 GHz IEEE 802.11b/g/n Wireless Module

#### Features

- IEEE 802.11b/g/n Compliant Transceiver
- 2.4 GHz IEEE 802.11n Single Stream 1x1
- UART Interface to Host Controller (4-wire including RTS/CTS)
- Integrates Easily into Final Product Minimizes Product Development, Provides Quicker Time to Market
- · Configured using Simple ASCII Commands
- Fully Integrated Wireless Module with Voltage Regulation, Crystal, RF Matching Circuitry, Power Amplifier (PA), Low Noise Amplifier (LNA), and PCB Trace Antenna
- Ultra-Small W.FL Connector for External Antennas (RN1810E)
- Compact Surface Mount Module: 0.700" x 1.050" x 0.085" (17.8 mm x 26.7 mm x 2.2 mm)
- Castellated Surface Mount Pads for easy and reliable PCB mounting
- Environmentally Friendly, RoHS Compliant

#### Operational


- Single Operating Voltage: 3.15V to 3.45V (3.3V typical)
- Temperature Range: -40°C to +85°C Industrial
- Low-Current Consumption:
- RX mode: 64 mA (typical)
- TX mode: 246 mA at 18 dBm (typical)
- Power Saving Mode:
  - Sleep: 12 µA (typical)

#### **RF/Analog**

- Frequency: 2.412 to 2.472 GHz
- · Channels: 1-13
- Modulation: DSSS, CCK, BPSK, QPSK, 16QAM, and 64QAM
- · Sensitivity: -94 dBm

#### Antenna

- Integral PCB Trace Antenna (RN1810)
- External Antenna (RN1810E)

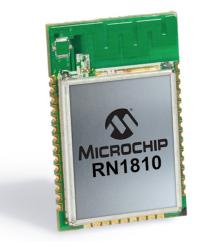

#### Compliance

- Modular Certified for the United States (FCC) and Canada (IC)
- European R&TTE Directive Assessed Radio Module
- Australia, New Zealand, Korea, Taiwan, and Japan

#### Applications

- · Utility and Smart Energy
- Consumer Electronics
- Industrial Controls
- Remote Device Management
- Retail
- · Medical, Fitness, and Health Care

#### Networking

- Supports Infrastructure and SoftAp Networking Modes
- Built-In Networking Applications: IPv4/IPv6, TCP, UDP, DHCP, DNS, ICMP, ARP, HTTP, FTP, SNTP, and SSL/TLS
- Complete On-Board TCP/IP Networking
- · Upgrade Firmware Over the Air using TFTP
- Supports Wi-Fi<sup>®</sup> Protected Setup (WPS)

#### **Table of Contents**

1.0	Device Overview	3
2.0	Circuit Description	. 13
	Application Information	
4.0	Regulatory Approval	. 21
5.0	Electrical Characteristics	. 27
Apper	ndix A: Revision History	. 29
	licrochip Web Site	
Custo	mer Change Notification Service	. 31
	mer Support	
Produ	ct Identification System	. 33

#### TO OUR VALUED CUSTOMERS

It is our intention to provide our valued customers with the best documentation possible to ensure successful use of your Microchip products. To this end, we will continue to improve our publications to better suit your needs. Our publications will be refined and enhanced as new volumes and updates are introduced.

If you have any questions or comments regarding this publication, please contact the Marketing Communications Department via E-mail at docerrors@microchip.com. We welcome your feedback.

#### Most Current Data Sheet

To obtain the most up-to-date version of this data sheet, please register at our Worldwide Web site at:

#### http://www.microchip.com

You can determine the version of a data sheet by examining its literature number found on the bottom outside corner of any page. The last character of the literature number is the version number, (e.g., DS30000000A is version A of document DS30000000).

#### Errata

An errata sheet, describing minor operational differences from the data sheet and recommended workarounds, may exist for current devices. As device/documentation issues become known to us, we will publish an errata sheet. The errata will specify the revision of silicon and revision of document to which it applies.

To determine if an errata sheet exists for a particular device, please check with one of the following:

Microchip's Worldwide Web site; http://www.microchip.com

Your local Microchip sales office (see last page)

When contacting a sales office, please specify which device, revision of silicon and data sheet (include literature number) you are using.

#### **Customer Notification System**

Register on our web site at www.microchip.com to receive the most current information on all of our products.

#### 1.0 DEVICE OVERVIEW

The RN1810 and RN1810E are low-power, 2.4 GHz, IEEE 802.11n compliant, surface mount modules containing all associated RF components: crystal oscillator, bypass and bias passives with integrated MAC, baseband, RF and power amplifier, and built-in hardware support for encryption. Refer to Figure 1-1.

The integrated module design frees the designer from RF and antenna design tasks and regulatory compliance testing, ultimately providing faster time to market.

RN1810 incorporates an on-board TCP/IP networking stack, cryptographic accelerator, power management subsystem, real-time clock, 2.4 GHz transceiver, and RF power amplifier. With the module, designers can embed Wi-Fi and networking functionality rapidly into virtually any device.

The RN1810 provides cost and time-to-market savings as a self-contained Internet-enabling solution. The module has been designed to provide designers with a simple Wi-Fi solution that features:

- Ease of integration and programming
- · Vastly reduced development time
- Minimum system cost
- Long battery life
- · Maximum value in a range of applications

The RN1810 is configured with a simple ASCII command language.

In the simplest configuration, the module requires only power, ground and UART TX and RX connections. The RN1810 module can interface to low-cost microcontrollers using only two wires, UART TX and RX. The RN1810 can independently maintain a low-power wireless network connection. Ultra-low power usage and flexible power management maximize the module's lifetime in battery-operated devices. A wide operating temperature range allows use in indoor and outdoor environments (industrial temperature range).

When operating in Sleep mode, the module minimizes battery usage while still being able to respond to certain events, including internal timers and WAKEUP signal. Applications that make efficient use of the Sleep state can extend battery life to multiple years.

The RN1810 module is approved for use with the integrated PCB trace antenna. The RN1810E module is approved for use with specific external antenna types that are certified with the module. An ultra-small coaxial connector (W.FL) is provided on the module for connection to the external antenna. Refer to **Section 3.3**, **"External Antenna Types"** for a listing of approved antenna types.


The RN1810/RN1810E modules received the regulatory approvals for modular devices in the United States (FCC) and Canada (IC). Modular approval removes the need for expensive RF and antenna design, and enables the end user to place the RN1810/RN1810E modules inside a finished product without requiring a regulatory testing for an intentional radiator (RF transmitter).

The RN1810/RN1810E module is an R&TTE Directive assessed radio module for operation in Europe. The module tests can be applied toward final product certification and Declaration of Conformity (DoC).

Table 1-1 lists the RN1810 module's family types.


Device	Antenna
RN1810	Integral
RN1810E	External



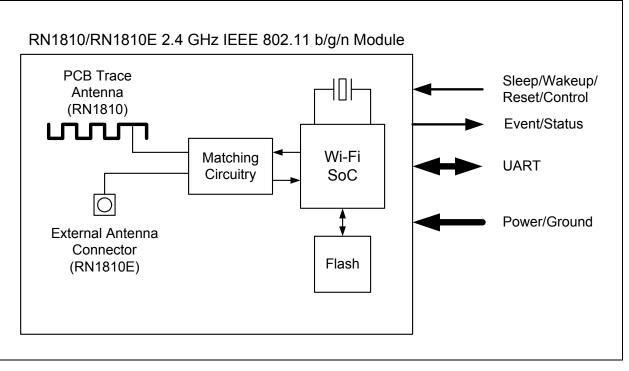

#### 1.1 Interface Description

Figure 1-2 shows the RN1810/RN1810E pin diagram. Table 1-2 describes the RN1810/RN1810E pins.

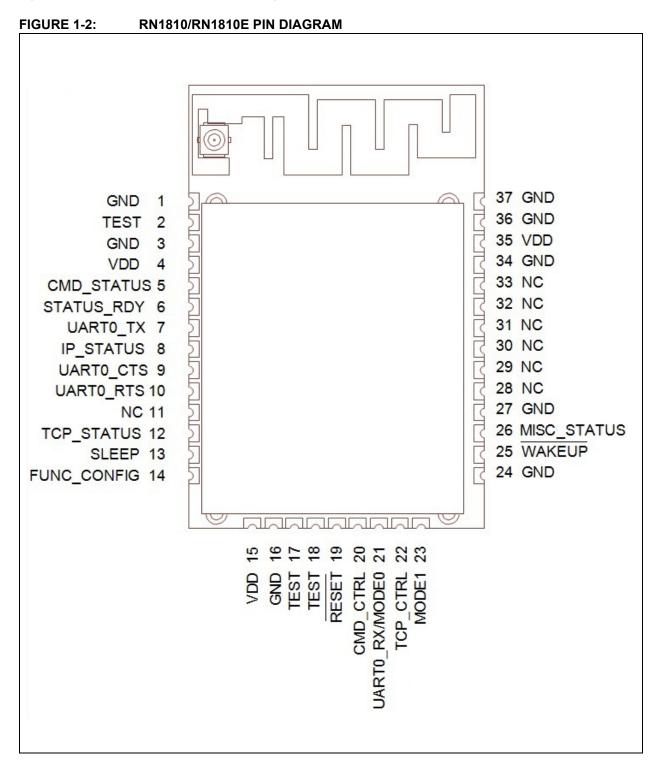

PinNameTypeDescription <sup>(1)</sup> 1GNDPower-2TESTTestDo not connect3GNDPower-4VoDPower-5CMD_STATUSDOThis is an optional IO that signals operational status.6STATUS,RDYDOThis is an optional IO that signals WiFly is ready to accept commands.7UARTO_TXDOHost interface UARTO TX8IP_STATUSDOThis is an optional IO that signals WiFly has connected to an AP and received an IP address.9UARTO_TSDIUARTO TS10UARTO_TSDOThis is an optional IO that signals a successful TCP connection or FTP transfer.11NCReservedDo not connect12TCP_STATUSDOThis is an optional IO that signals a successful TCP connection or FTP transfer.13SLEEPDIThis is an optional IO that signals a successful TCP connection or FTP transfer.14FUN_CONFIGDIThis is an optional IO that signals a successful TCP connection or FTP transfer.15VoDPower-16GNDPower-17TESTTestDo not connect18TESTTestDo not connect19RESETDIThis is an optional IO that switches RN1810 modes.21UARTO_RX/DIHost interface UARTO RX/Mode select 0; connect to VDo via 100 kD pull via shake FTP transfer.22MODE1DIThis an	TABLI	TABLE 1-2: PIN DESCRIPTIONS				
2       TEST       Test       Do not connect         3       GND       Power          4       Vob       Power          5       CMD_STATUS       DO       This is an optional IO that signals operational status.         6       STATUS_RDY       DO       This is an optional IO that signals WiFly is ready to accept commands.         7       UART0_TX       DO       Host interface UART0 TX         8       IP_STATUS       DO       This is an optional IO that signals WiFly has connected to an AP and received an IP address.         9       UART0_CTS       DI       UART0 TS         10       UART0_RTS       DO       This an optional IO that signals a successful TCP connection or FTP transfer.         12       TCP_STATUS       DO       This is an optional IO that signals a successful TCP connection or FTP transfer.         14       FUNC_CONFIG       DI       This is an optional IO that signals a successful TCP connection or FTP transfer.         15       Vob       Power        -         16       GND       Power       -         17       TEST       Test       Do not connect         18       TEST       ID       Reserved No not connect         19       RESET       DI	Pin	Pin         Name         Type         Description <sup>(1)</sup>				
3       GND       Power          4       Vod       Power          5       CMD_STATUS       DO       This is an optional IO that signals operational status.         6       STATUS_RDY       DO       This is an optional IO that signals WiFly is ready to accept commands.         7       UART0_TX       DO       Host interface UART0 TX         8       IP_STATUS       DO       This is an optional IO that signals WiFly has connected to an AP and received an IP address.         9       UART0_CTS       DI       UART0 TS         10       UART0_RTS       DO       UART0 RTS         11       NC       Reserved       Do not connect         12       TCP_STATUS       DO       This an optional IO that signals a successful TCP connection or FTP transfer.         13       SLEEP       DI       This is an optional IO that starts various applications and resets configurations to factory defaults.         14       FUNC_CONFIG       DI       This is an optional IO that switches RN1810 into Sleep state.         15       Vob       Power          16       GND       Power       -         17       TEST       Test       Do not connect         18       RESET       DI       Resert R	1	GND	Power	—		
4         Vbb         Power            5         CMD_STATUS         DO         This is an optional IO that signals operational status.           6         STATUS_RDY         DO         This is an optional IO that signals WiFly is ready to accept commands.           7         UART0_TX         DO         Host interface UART0 TX           8         IP_STATUS         DO         Host interface UART0 TX           9         UART0_CTS         DI         UART0 CTS           10         UART0_TS         DO         UART0 TS           11         NC         Reserved         Do not connect           12         TCP_STATUS         DO         This is an optional IO that signals a successful TCP connection or FTP transfer.           13         SLEEP         DI         This is an optional IO that starts various applications and resets configurations to factory defaults.           14         FUNC_CONFIG         DI         This is an optional IO that switches RN1810 into Sleep state.           15         Vop         Power            16         GND         Power            17         TEST         Test         Do not connect           18         TEST         Test         Do not connect           19 <td>2</td> <td>TEST</td> <td>Test</td> <td>Do not connect</td>	2	TEST	Test	Do not connect		
5       CMD_STATUS       DO       This is an optional IO that signals operational status.         6       STATUS_RDY       DO       This is an optional IO that signals WiFly is ready to accept commands.         7       UARTO_TX       DO       Host interface UARTO TX         8       IP_STATUS       DO       This is an optional IO that signals WiFly has connected to an AP and received an IP address.         9       UARTO_CTS       DI       UARTO RTS         10       UARTO_RTS       DO       UARTO RTS         11       NC       Reserved       Do not connect         12       TCP_STATUS       DO       This is an optional IO that signals a successful TCP connection or FTP transfer.         13       SLEEP       DI       This is an optional IO that starts various applications and resets configurations to factory defaults.         14       FUNC_CONFIG       DI       This is an optional IO that switches RN1810 into Sleep state.         14       FUNC_CONFIG       DI       This is an optional IO that switches RN1810 into Sleep state.         14       FUNC_CONFIG       DI       This is an optional IO that switches RN1810 into Sleep state.         17       TEST       Test       Do not connect         18       TEST       Test       Do not connect         19	3	GND	Power	—		
6         STATUS_RDY         DO         This is an optional IO that signals WiFly is ready to accept commands.           7         UART0_TX         DO         Host interface UART0 TX           8         IP_STATUS         DO         This is an optional IO that signals WiFly has connected to an AP and received an IP address.           9         UART0_CTS         DI         UART0 CTS           10         UART0_RTS         DO         UART0 CTS           11         NC         Reserved         Do not connect           12         TCP_STATUS         DO         This is an optional IO that signals a successful TCP connection or FTP transfer.           13         SLEEP         DI         This is an optional IO that starts various applications and resets configurations to factory defaults.           14         FUNC_CONFIG         DI         This is an optional IO that switches RN1810 into Sleep state.           15         Vob         Power            16         GND         Power            17         TEST         Test         Do not connect           18         TEST         Test         Do not connect           19         RESET         DI         Resets RN1810           20         CMD_CTRL         DI         This is an option	4	Vdd	Power	—		
7       UART0_TX       DO       Host interface UART0 TX         8       IP_STATUS       DO       This is an optional IO that signals WiFly has connected to an AP and received an IP address.         9       UART0_CTS       DI       UART0 CTS         10       UART0_RTS       DO       UART0 CTS         11       NC       Reserved       Do not connect         12       TCP_STATUS       DO       This an optional IO that signals a successful TCP connection or FTP transfer.         13       SLEEP       DI       This is an optional IO that signals a successful TCP connection or FTP transfer.         14       FUNC_CONFIG       DI       This is an optional IO that signals a successful TCP connection or FTP transfer.         15       Voo       Power       -       -         16       GND       Power       -         17       TEST       Test       Do not connect         18       TEST       Test       Do not connect         19       RESET       DI       This is an optional IO that signals as TCP connection, or hand-shakes FTP transfers.         21       UART0_RX/ MODE0       DI       This is an optional IO that opens or closes a TCP connection, or hand-shakes FTP transfers.         23       MODE1       DI       Mode select 1; connect	5	CMD_STATUS	DO	This is an optional IO that signals operational status.		
8         IP_STATUS         DO         This is an optional IO that signals WiFly has connected to an AP and received an IP address.           9         UART0_CTS         DI         UART0 RTS         DO         UART0 RTS           10         UART0_RTS         DO         UART0 RTS         DO         UART0 RTS           11         NC         Reserved         Do not connect         DO         This is an optional IO that signals a successful TCP connection or FTP transfer.           13         SLEEP         DI         This is an optional IO that puts the RN1810 into Sleep state.           14         FUNC_CONFIG         DI         This is an optional IO that starts various applications and resets configurations to factory defaults.           15         Vop         Power         -           16         GND         Power         -           17         TEST         Test         Do not connect           19         RESET         DI         Resets RN1810           20         CMD_CTRL         DI         This is an optional IO that switches RN1810 modes.           21         UART0_RX/ MODE0         DI         Host interface UART0 RX/Mode select 0; connect to Vop via 100 KΩ pull-up resistor <sup>27</sup> 22         TCP_CTRL         DI         Mode select 1; connect to GND <sup>(2)</sup>	6	STATUS_RDY	DO	This is an optional IO that signals WiFly is ready to accept commands.		
9       UART0_CTS       DI       UART0 CTS         9       UART0_RTS       DO       UART0 CTS         10       UART0_RTS       DO       UART0 RTS         11       NC       Reserved       Do not connect         12       TCP_STATUS       DO       This an optional IO that signals a successful TCP connection or FTP transfer.         13       SLEEP       DI       This is an optional IO that starts various applications and resets configurations to factory defaults.         14       FUNC_CONFIG       DI       This is an optional IO that starts various applications and resets configurations to factory defaults.         15       Vob       Power       -         16       GND       Power       -         17       TEST       Test       Do not connect         18       TEST       Test       Do not connect         19       RESET       DI       This is an optional IO that switches RN1810 modes.         21       UART0_RX/ MODE0       DI       This is an optional IO that switches RN1810 modes.         22       TCP_CTRL       DI       This is an optional IO that switches RN1810 modes.         23       MODE1       DI       Mode select 1; connect to GND <sup>(2)</sup> 24       GND       Power <td< td=""><td>7</td><td>UART0_TX</td><td>DO</td><td>Host interface UART0 TX</td></td<>	7	UART0_TX	DO	Host interface UART0 TX		
10       UART0_RTS       DO       UART0 RTS         11       NC       Reserved       Do not connect         12       TCP_STATUS       DO       This an optional IO that signals a successful TCP connection or FTP transfer.         13       SLEEP       DI       This is an optional IO that starts various applications and resets configurations to factory defaults.         14       FUNC_CONFIG       DI       This is an optional IO that starts various applications and resets configurations to factory defaults.         15       VDD       Power       -         16       GND       Power       -         17       TEST       Test       Do not connect         18       TEST       Test       Do not connect         19       RESET       DI       Resets RN1810         20       CMD_CTRL       DI       This is an optional IO that switches RN1810 modes.         21       UART0_RX/       DI       Host interface UART0 RX/Mode select 0; connect to VDD via 100 kΩ pull-up resistor <sup>(2)</sup> 22       TCP_CTRL       DI       This is an optional IO that awakens the RN1810 from Sleep mode.         23       MODE1       DI       Mode select 1; connect to GND <sup>(2)</sup> 24       GND       Power       -         25       WA	8	IP_STATUS	DO			
11       NC       Reserved       Do not connect         12       TCP_STATUS       DO       This an optional IO that signals a successful TCP connection or FTP transfer.         13       SLEEP       DI       This is an optional IO that starts various applications and resets configurations to factory defaults.         14       FUNC_CONFIG       DI       This is an optional IO that starts various applications and resets configurations to factory defaults.         15       Vop       Power          16       GND       Power          17       TEST       Test       Do not connect         18       TEST       Test       Do not connect         19       RESET       DI       Resets RN1810         20       CMD_CTRL       DI       This is an optional IO that switches RN1810 modes.         21       UART0_RX/ MODE0       DI       This is an optional IO that opens or closes a TCP connection, or hand-shakes FTP transfers.         23       MODE1       DI       Mode select 1; connect to GND <sup>(2)</sup> 24       GND       Power          25       WAKEUP       DI       This is an optional IO that awakens the RN1810 from Sleep mode.         26       MISC_STATUS       DO       This is an optional IO that signals miscellaneous	9	UART0_CTS	DI	UARTO CTS		
12       TCP_STATUS       DO       This an optional IO that signals a successful TCP connection or FTP transfer.         13       SLEEP       DI       This is an optional IO that puts the RN1810 into Sleep state.         14       FUNC_CONFIG       DI       This is an optional IO that starts various applications and resets configurations to factory defaults.         15       Vob       Power          16       GND       Power          17       TEST       Test       Do not connect         18       TEST       Test       Do not connect         19       RESET       DI       Resets RN1810         20       CMD_CTRL       DI       This is an optional IO that switches RN1810 modes.         21       UART0_RX/ MODE0       DI       Host interface UART0 RX/Mode select 0; connect to VDD via 100 kΩ pull-up resistor <sup>(2)</sup> 22       TCP_CTRL       DI       This is an optional IO that awakens the RN1810 from Sleep mode.         23       MODE1       DI       Mode select 1; connect to GND <sup>(2)</sup> 24       GND       Power          25       WAKEUP       DI       This is an optional IO that awakens the RN1810 from Sleep mode.         26       MISC_STATUS       DO       This is an optional IO that signals miscellaneo	10	UART0_RTS	DO	UARTO RTS		
Image:         transfer.           13         SLEEP         DI         This is an optional IO that puts the RN1810 into Sleep state.           14         FUNC_CONFIG         DI         This is an optional IO that starts various applications and resets configurations to factory defaults.           15         VoD         Power            16         GND         Power            17         TEST         Test         Do not connect           18         TEST         Test         Do not connect           19         RESET         DI         Resets RN1810           20         CMD_CTRL         DI         This is an optional IO that switches RN1810 modes.           21         UART0_RX/ MODE0         DI         This is an optional IO that switches RN1810 modes.           22         TCP_CTRL         DI         This is an optional IO that opens or closes a TCP connection, or hand-shakes FTP transfers.           23         MODE1         DI         Mode select 1; connect to GND <sup>(2)</sup> 24         GND         Power            25         WAKEUP         DI         This is an optional IO that awakens the RN1810 from Sleep mode.           26         MISC_STATUS         DO         This is an optional IO that awakens the RN1810 from Sleep	11	NC	Reserved	Do not connect		
14       FUNC_CONFIG       DI       This is an optional IO that starts various applications and resets configurations to factory defaults.         15       Vob       Power          16       GND       Power          17       TEST       Test       Do not connect         18       TEST       Test       Do not connect         19       RESET       DI       Resets RN1810         20       CMD_CTRL       DI       This is an optional IO that switches RN1810 modes.         21       UART0_RX/ MODE0       DI       Host interface UART0 RX/Mode select 0; connect to VDD via 100 kΩ pull-up resistor <sup>(2)</sup> 22       TCP_CTRL       DI       This is an optional IO that opens or closes a TCP connection, or hand-shakes FTP transfers.         23       MODE1       DI       Mode select 1; connect to GND <sup>(2)</sup> 24       GND       Power       -         25       WAKEUP       DI       This is an optional IO that awakens the RN1810 from Sleep mode.         26       MISC_STATUS       DO       This is an optional IO that signals miscellaneous application status.         27       GND       Power       -         28       NC       Reserved       Do not connect         30       NC       Rese	12	TCP_STATUS	DO			
Image: Configurations to factory defaults.15VDDPower16GNDPower17TESTTestDo not connect18TESTTestDo not connect19RESETDIResets RN181020CMD_CTRLDIThis is an optional IO that switches RN1810 modes.21UART0_RX/ MODE0DIHost interface UART0 RX/Mode select 0; connect to VDD via 100 kΩ pull-up resistor <sup>(2)</sup> 22TCP_CTRLDIThis is an optional IO that opens or closes a TCP connection, or hand- shakes FTP transfers.23MODE1DIMode select 1; connect to GND <sup>(2)</sup> 24GNDPower-25WAKEUPDIThis is an optional IO that awakens the RN1810 from Sleep mode.26MISC_STATUSDOThis is an optional IO that signals miscellaneous application status.27GNDPower-28NCReservedDo not connect30NCReservedDo not connect31NCReservedDo not connect33NCReservedDo not connect34GNDPower-35VDDPower-36GNDPower-	13	SLEEP	DI	This is an optional IO that puts the RN1810 into Sleep state.		
16       GND       Power          17       TEST       Test       Do not connect         18       TEST       Test       Do not connect         19       RESET       DI       Resets RN1810         20       CMD_CTRL       DI       This is an optional IO that switches RN1810 modes.         21       UART0_RX/ MODE0       DI       Host interface UART0 RX/Mode select 0; connect to VDD via 100 kΩ pull-up resistor <sup>(2)</sup> 22       TCP_CTRL       DI       This is an optional IO that opens or closes a TCP connection, or hand- shakes FTP transfers.         23       MODE1       DI       Mode select 1; connect to GND <sup>(2)</sup> 24       GND       Power          25       WAKEUP       DI       This is an optional IO that awakens the RN1810 from Sleep mode.         26       MISC_STATUS       DO       This is an optional IO that signals miscellaneous application status.         27       GND       Power       -         28       NC       Reserved       Do not connect         29       NC       Reserved       Do not connect         30       NC       Reserved       Do not connect         31       NC       Reserved       Do not connect         33 <td>14</td> <td>FUNC_CONFIG</td> <td>DI</td> <td></td>	14	FUNC_CONFIG	DI			
17TESTTestDo not connect18TESTTestDo not connect19RESETDIResets RN181020CMD_CTRLDIThis is an optional IO that switches RN1810 modes.21UART0_RX/ MODE0DIHost interface UART0 RX/Mode select 0; connect to VDD via 100 kΩ pull-up resistor <sup>(2)</sup> 22TCP_CTRLDIThis is an optional IO that opens or closes a TCP connection, or hand- shakes FTP transfers.23MODE1DIMode select 1; connect to GND <sup>(2)</sup> 24GNDPower25WAKEUPDIThis is an optional IO that awakens the RN1810 from Sleep mode.26MISC_STATUSDOThis is an optional IO that signals miscellaneous application status.27GNDPower28NCReservedDo not connect30NCReservedDo not connect31NCReservedDo not connect32NCReservedDo not connect33NCReservedDo not connect34GNDPower35VDDPower36GNDPower	15	Vdd	Power	_		
18TESTTestDo not connect19RESETDIResets RN181020CMD_CTRLDIThis is an optional IO that switches RN1810 modes.21UART0_RX/ MODE0DIHost interface UART0 RX/Mode select 0; connect to VDD via 100 kΩ pull-up resistor <sup>(2)</sup> 22TCP_CTRLDIThis is an optional IO that opens or closes a TCP connection, or hand- shakes FTP transfers.23MODE1DIMode select 1; connect to GND <sup>(2)</sup> 24GNDPower25WAKEUPDIThis is an optional IO that awakens the RN1810 from Sleep mode.26MISC_STATUSDOThis is an optional IO that signals miscellaneous application status.27GNDPower28NCReservedDo not connect29NCReservedDo not connect30NCReservedDo not connect31NCReservedDo not connect33NCReservedDo not connect34GNDPower35VDDPower36GNDPower	16	GND	Power	—		
19RESETDIResets RN181020CMD_CTRLDIThis is an optional IO that switches RN1810 modes.21UART0_RX/ MODE0DIHost interface UART0 RX/Mode select 0; connect to VDD via 100 kΩ pull-up resistor <sup>(2)</sup> 22TCP_CTRLDIThis is an optional IO that opens or closes a TCP connection, or hand- shakes FTP transfers.23MODE1DIMode select 1; connect to GND <sup>(2)</sup> 24GNDPower-25WAKEUPDIThis is an optional IO that awakens the RN1810 from Sleep mode.26MISC_STATUSDOThis is an optional IO that signals miscellaneous application status.27GNDPower-28NCReservedDo not connect30NCReservedDo not connect31NCReservedDo not connect33NCReservedDo not connect34GNDPower-35VDDPower-36GNDPower-	17	TEST	Test	Do not connect		
20CMD_CTRLDIThis is an optional IO that switches RN1810 modes.21UART0_RX/ MODE0DIHost interface UART0 RX/Mode select 0; connect to VDD via 100 kΩ pull-up resistor <sup>(2)</sup> 22TCP_CTRLDIThis is an optional IO that opens or closes a TCP connection, or hand- shakes FTP transfers.23MODE1DIMode select 1; connect to GND <sup>(2)</sup> 24GNDPower25WAKEUPDIThis is an optional IO that awakens the RN1810 from Sleep mode.26MISC_STATUSDOThis is an optional IO that signals miscellaneous application status.27GNDPower28NCReservedDo not connect29NCReservedDo not connect30NCReservedDo not connect31NCReservedDo not connect33NCReservedDo not connect34GNDPower35VDDPower36GNDPower-	18	TEST	Test	Do not connect		
21UARTO_RX/ MODE0DIHost interface UARTO RX/Mode select 0; connect to VDD via 100 kΩ pull-up resistor <sup>(2)</sup> 22TCP_CTRLDIThis is an optional IO that opens or closes a TCP connection, or hand- shakes FTP transfers.23MODE1DIMode select 1; connect to GND <sup>(2)</sup> 24GNDPower25WAKEUPDIThis is an optional IO that awakens the RN1810 from Sleep mode.26MISC_STATUSDOThis is an optional IO that signals miscellaneous application status.27GNDPower28NCReservedDo not connect30NCReservedDo not connect31NCReservedDo not connect33NCReservedDo not connect34GNDPower35VDDPower36GNDPower36GNDPower	19	RESET	DI	Resets RN1810		
MODE0resistor <sup>(2)</sup> 22TCP_CTRLDIThis is an optional IO that opens or closes a TCP connection, or hand-shakes FTP transfers.23MODE1DIMode select 1; connect to GND <sup>(2)</sup> 24GNDPower-25WAKEUPDIThis is an optional IO that awakens the RN1810 from Sleep mode.26MISC_STATUSDOThis is an optional IO that signals miscellaneous application status.27GNDPower-28NCReservedDo not connect29NCReservedDo not connect30NCReservedDo not connect31NCReservedDo not connect32NCReservedDo not connect33NCReservedDo not connect34GNDPower-35VDDPower-36GNDPower-36GNDPower-	20	CMD_CTRL	DI	This is an optional IO that switches RN1810 modes.		
Image: set of the	21		DI	Host interface UART0 RX/Mode select 0; connect to VDD via 100 k $\Omega$ pull-up resistor $^{(2)}$		
24GNDPower—25WAKEUPDIThis is an optional IO that awakens the RN1810 from Sleep mode.26MISC_STATUSDOThis is an optional IO that signals miscellaneous application status.27GNDPower—28NCReservedDo not connect29NCReservedDo not connect30NCReservedDo not connect31NCReservedDo not connect32NCReservedDo not connect33NCReservedDo not connect34GNDPower—35VDDPower—36GNDPower—	22	TCP_CTRL	DI			
25WAKEUPDIThis is an optional IO that awakens the RN1810 from Sleep mode.26MISC_STATUSDOThis is an optional IO that signals miscellaneous application status.27GNDPower—28NCReservedDo not connect29NCReservedDo not connect30NCReservedDo not connect31NCReservedDo not connect32NCReservedDo not connect33NCReservedDo not connect34GNDPower—35VDDPower—36GNDPower—	23	MODE1	DI	Mode select 1; connect to GND <sup>(2)</sup>		
26MISC_STATUSDOThis is an optional IO that signals miscellaneous application status.27GNDPower28NCReservedDo not connect29NCReservedDo not connect30NCReservedDo not connect31NCReservedDo not connect32NCReservedDo not connect33NCReservedDo not connect34GNDPower35VDDPower36GNDPower	24	GND	Power	—		
27GNDPower—28NCReservedDo not connect29NCReservedDo not connect30NCReservedDo not connect31NCReservedDo not connect32NCReservedDo not connect33NCReservedDo not connect34GNDPower—35VDDPower—36GNDPower—	25	WAKEUP	DI	This is an optional IO that awakens the RN1810 from Sleep mode.		
27GNDPower—28NCReservedDo not connect29NCReservedDo not connect30NCReservedDo not connect31NCReservedDo not connect32NCReservedDo not connect33NCReservedDo not connect34GNDPower—35VDDPower—36GNDPower—	26	MISC_STATUS	DO	This is an optional IO that signals miscellaneous application status.		
29NCReservedDo not connect30NCReservedDo not connect31NCReservedDo not connect32NCReservedDo not connect33NCReservedDo not connect34GNDPower—35VDDPower—36GNDPower—	27		Power	—		
30NCReservedDo not connect31NCReservedDo not connect32NCReservedDo not connect33NCReservedDo not connect34GNDPower—35VDDPower—36GNDPower—	28	NC	Reserved	Do not connect		
31NCReservedDo not connect32NCReservedDo not connect33NCReservedDo not connect34GNDPower—35VDDPower—36GNDPower—	29	NC	Reserved	Do not connect		
32NCReservedDo not connect33NCReservedDo not connect34GNDPower—35VDDPower—36GNDPower—	30	NC	Reserved	Do not connect		
33NCReservedDo not connect34GNDPower—35VDDPower—36GNDPower—	31	NC	Reserved	Do not connect		
34GNDPower35VDDPower36GNDPower	32	NC	Reserved	Do not connect		
35         VDD         Power         —           36         GND         Power         —	33	NC	Reserved	Do not connect		
36 GND Power —	34	GND	Power	—		
	35	Vdd	Power	—		
37 GND Power —	36	GND	Power	—		
	37	GND	Power	—		

Legend: A = Analog, D = Digital, I = Input, O = Output


Note 1: For NC = No Connect pins, do not make any connection. The module is configured with internal pull-up and pull-down resistors.


2: Refer to Section 2.2, "MODE0 and MODE1 Pins".


#### 1.2 Mounting Details


Figure 1-3, Figure 1-4 and Figure 1-5 show the physical dimensions and the mounting details of the module. Figure 1-6 and Figure 1-7 show the recommended host PCB footprint and layout.



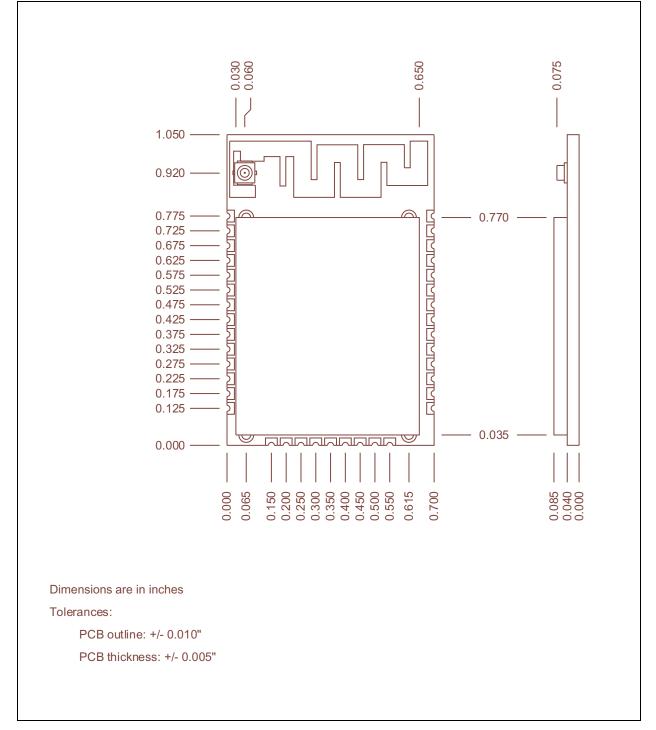


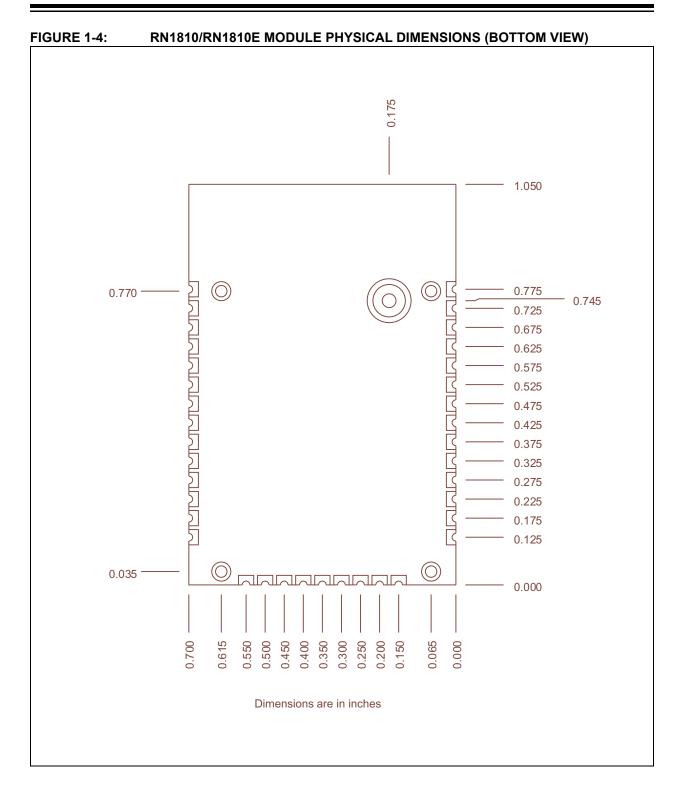

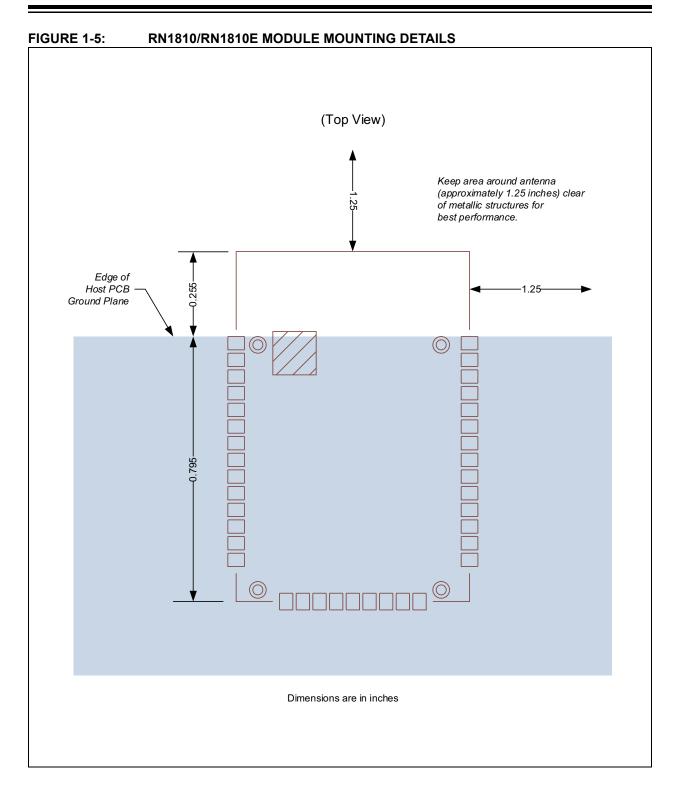

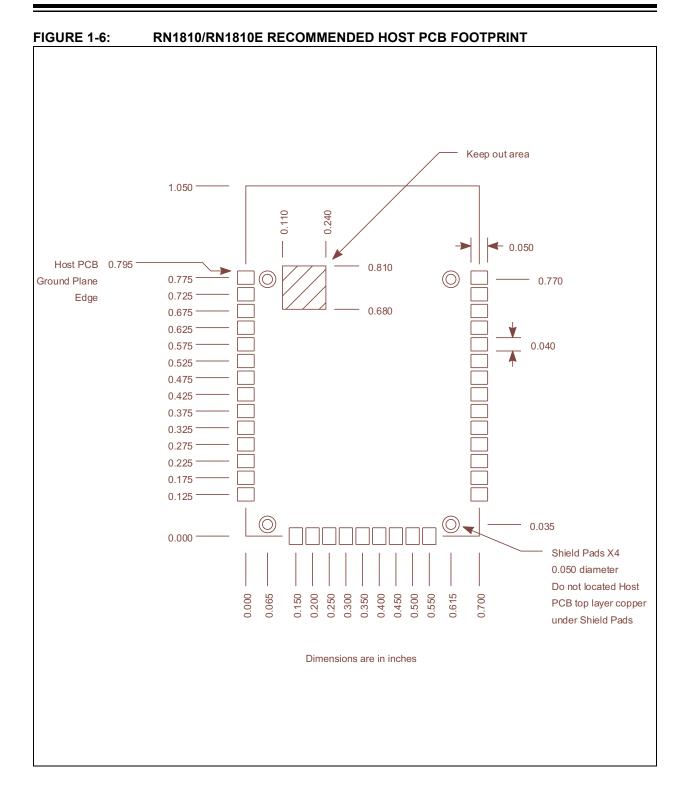



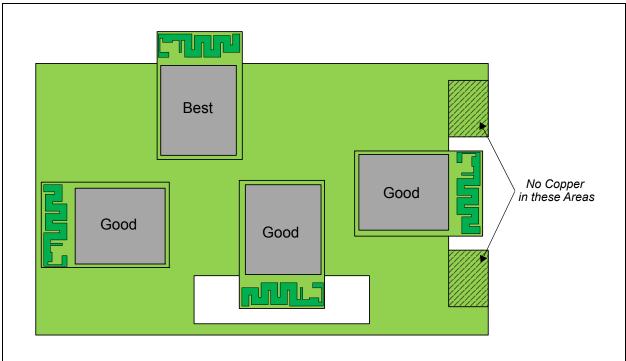

#### 1.3 Soldering Recommendations

The RN1810/RN1810E wireless module is assembled using the IPC/JEDEC J-STD-020 Standard lead-free reflow profile. The RN1810/RN1810E module can be soldered to the host PCB using standard leaded and lead-free solder reflow profiles.

To avoid damaging the module, adhere to the following recommendations:

- Solder reflow recommendations are provided in the Microchip Application Note, *AN233* "Solder Reflow Recommendation" (DS00233)
- Do not exceed a peak temperature (TP) of 250°C
- Refer to the solder paste data sheet for specific reflow profile recommendations from the vendor
- · Use no-clean flux solder paste
- Do not wash as moisture can be trapped under the shield
- Use only one flow. If the PCB requires multiple flows, apply the module on the final flow.

NOTES:


levels are CMOS voltage levels (not RS-232 voltage levels). The UART interface supports baud rates of 9,600, 19,200, 38,400, 57,600 and 115,200 bits per

#### 2.0 CIRCUIT DESCRIPTION

#### 2.1 UART Interface


The UART interface supports 2-wire (RX, TX) and 4wire configurations with hardware flow control (RX, TX, CTS, and RTS) as illustrated in Figure 2-1. The logic

FIGURE 2-1: HOST MCU TO RN1810/RN1810E BLOCK DIAGRAM

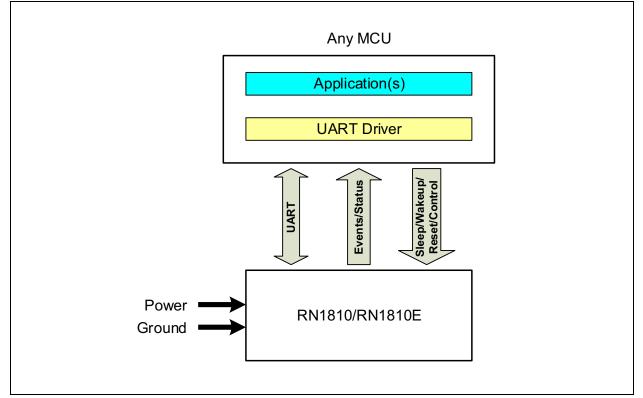

second.

#### FIGURE 2-2: MCU TO RN1810 INTERFACE

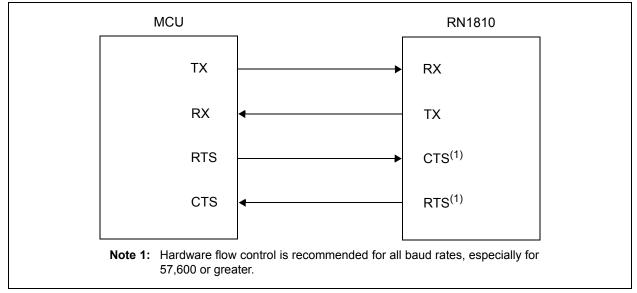

#### 2.2 MODE0 and MODE1 Pins

The MODE pins must be tied to the voltage levels for normal operation of the module. Refer to Table 2-1.

#### TABLE 2-1: MODE PIN OPERATION

Pin	Condition
MODE1	Connect to GND
UART0_RX/MODE0	Connect to VDD via 100 k $\Omega$ pull-up resistor

The MODE pins are sampled at power on and wakeup. Refer to **Section 2.4**, **"Sleep and Wakeup"**. In the case of UARTO\_RX/MODE0 pin, a 100 k $\Omega$  pull-up resistor is required, and the host MCU allows an activehigh signal during power on and wake-up to ensure that the module start-up in normal operation. Once the module is operational, the pin becomes the UARTO\_RX pin.

#### 2.3 VDD and GND Pin

The RN1810/RN1810E wireless module contains an integrated power management unit that generates all necessary voltages required by the internal circuitry. The module is powered from a single voltage source.

 Table 2-2 lists the recommended bypass capacitors.

 The capacitors must be closely placed to the module.

#### TABLE 2-2: RECOMMENDED BYPASS CAPACITORS

Pin	Symbol	Bypass Capacitors
4	4 VDD 0.1 μF ar	
15	Vdd	0.1 µF and 2.2 µF
35	Vdd	0.1 μF and 2.2 μF

#### 2.4 Sleep and Wakeup

The module enters the lowest power mode when the SLEEP pin is asserted high. WLAN and network connection information is preserved.

The module can wake-up when WAKEUP pin is asserted low. The module restores the saved information after wakeup.

#### 2.5 Module Reset

There are several ways to Reset the module:

- A Power-On Reset is automatically generated when power is applied. This Reset is intended to initialize the module when a new battery is connected.
- Perform an external Power-On Reset by asserting the RESET pin low.
- Perform a soft Power-On Reset using software commands

The  $\overline{\text{RESET}}$  pulse duration must be a minimum of 650 ns.

#### 2.6 Factory Reset

The Factory Reset is intended to initialize provisioning information stored in flash memory by asserting FUNC\_CONFIG Low to High five times with 300 ms between transitions.


#### 3.0 APPLICATION INFORMATION

This section provides information on the Application Schematic, Integral PCB Trace Antenna, and Antenna Types.

#### 3.1 Application Schematic

Figure 3-1 shows the schematic for the RN1810/RN1810E module.

#### FIGURE 3-1: APPLICATION SCHEMATIC

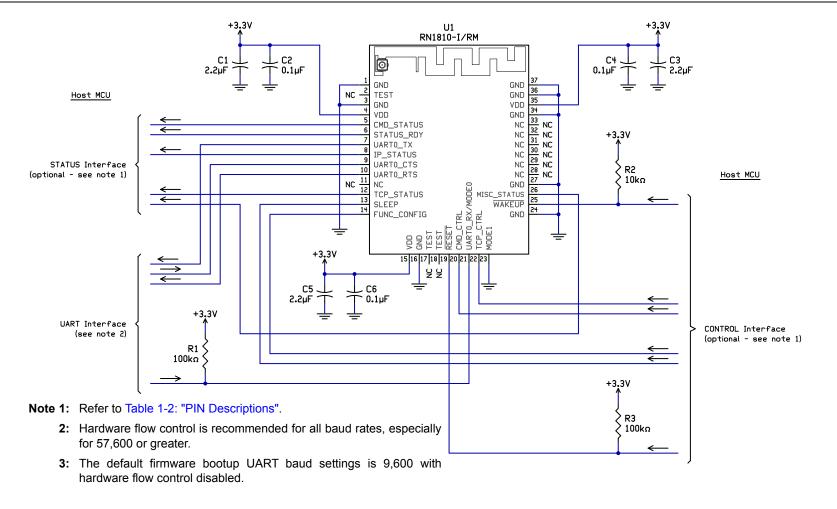

#### 3.2 Integral PCB Trace Antenna

For the RN1810, the PCB antenna is fabricated on the top copper layer and covered in solder mask. The layers below the antenna do not have copper trace.

It is recommended that the module is mounted on the edge of the host PCB. It is permitted for PCB material to be below the antenna structure of the module as long as no copper traces or planes are on the host PCB in that area. For best performance, place the module on the host PCB according to the details shown in Figure 1-7.


The antenna patterns plotted in Figure 3-2 through Figure 3-5 are the simulated results of the PCB antenna.

Figure 3-2 illustrates the simulation drawing. The twodimensional (2D) radiation pattern is illustrated in Figure 3-3, whereas Figure 3-4 and Figure 3-5 show the three-dimensional (3D) radiation patterns.

The calculated average of the radiated field is shown in Figure 3-3. The radiation pattern for the XZ plane is shown in red, whereas the YZ plane is shown in violet. The most powerful radiation occurs in the XZ plane as represented by the red pattern.

Figure 3-4 shows the relative position of the 3D radiation "donut" with reference to the module orientation. This is a very useful guide for placement of the module to obtain the maximum range.

Figure 3-5 shows the 3D radiation pattern with the colored distribution of the radiation magnitude. The values range from -9 dB to +0.3 dB. This is very useful in interpreting the 2D radiation pattern.

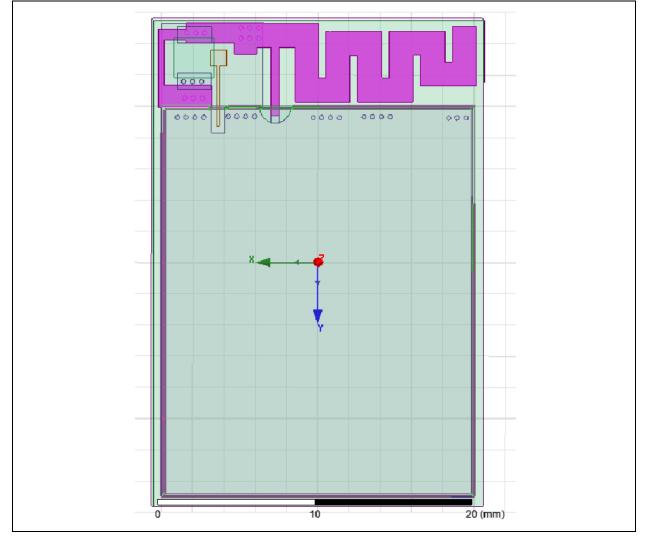


#### FIGURE 3-2: PCB ANTENNA SIMULATION DRAWING


#### FIGURE 3-3: SIMULATED TWO-DIMENSIONAL RADIATION PATTERN


Name	Theta	Angle	Mag.
m1	-60.0000	-60.0000	0.6323
m2	-20.0000	-20.0000	0.3962
m3	30.0000	30.0000	-0.1038
m4	100.0000	100.0000	-0.9490
m5	170.0000	170.0000	-0.1414

Curve Information	Average
dB (Gain Total) Setup 1: Last Adaptive Freq. = "2.44 GHz" Phi = "0 deg"	0.0097
dB (Gain Total) Setup 2: Last Adaptive Freq. = "2.44 GHz" Phi = "0 deg"	-3.2020

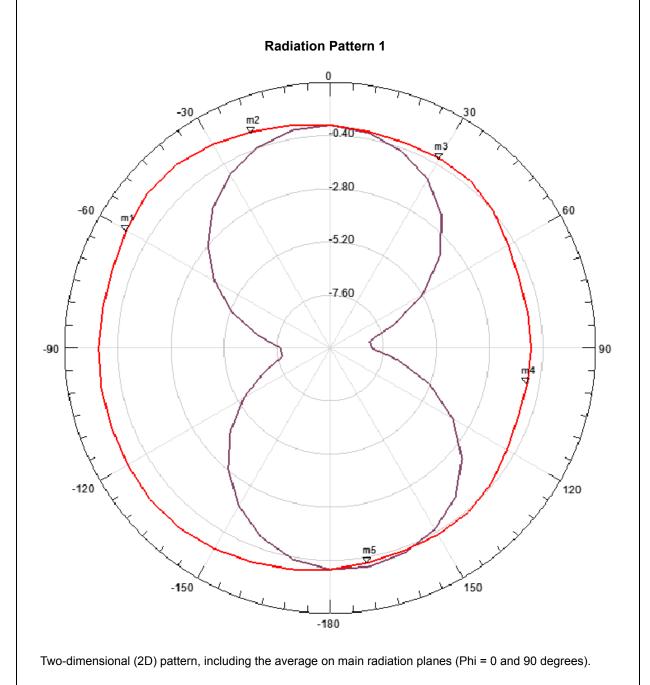

#### FIGURE 3-4: SIMULATED THREE-DIMENSIONAL RADIATION PATTERN

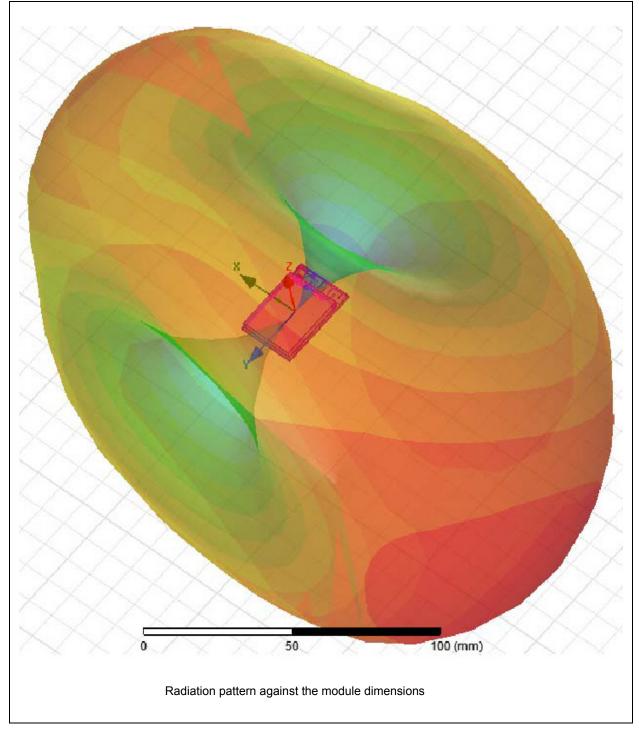

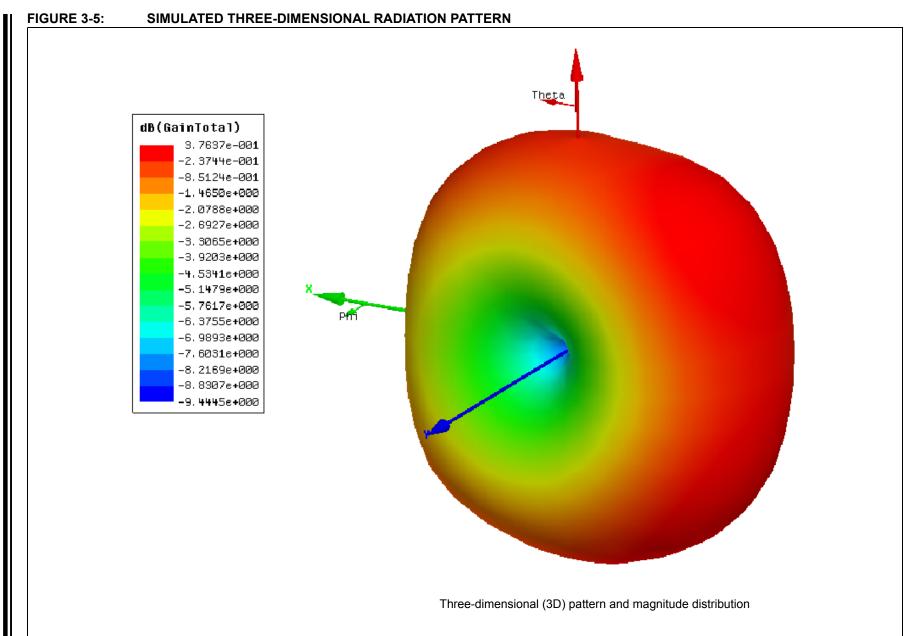

#### 3.3 External Antenna Types

The RN1810E module has an ultra-small coaxial connector (W.FL) for connection to the external antenna.

The choice of antenna is limited to the antenna types in which the module is tested and approved. For a list of tested and approved antenna types that may be used with the module, refer to the respective country in **Section 4.0, "Regulatory Approval"**.

 Table 3-1 lists the approved antennas types.

### TABLE 3-1:TESTED EXTERNAL<br/>ANTENNA TYPES

Туре	Gain
PCB Trace	1 dBi
Dipole	2 dBi
PIFA	-3 dBi

#### 4.0 REGULATORY APPROVAL

This section outlines the regulatory information for the RN1810/RN1810E module for the following countries:

- United States
- Canada
- Europe
- Australia
- New Zealand
- Japan
- Korea
- Taiwan
- · Other Regulatory Jurisdictions

#### 4.1 United States

The RN1810/RN1810E module has received Federal Communications Commission (FCC) CFR47 Telecommunications, Part 15 Subpart C "Intentional Radiators" single-modular approval in accordance with Part 15.212 Modular Transmitter approval. Single-modular transmitter approval is defined as a complete RF transmission sub-assembly, designed to be incorporated into another device, that must demonstrate compliance with FCC rules and policies independent of any host. A transmitter with a modular grant can be installed in different end-use products (referred to as a host, host product, or host device) by the grantee or other equipment manufacturer, then the host product may not require additional testing or equipment authorization for the transmitter function provided by that specific module or limited module device.

A host product itself is required to comply with all other applicable FCC equipment authorization regulations, requirements, and equipment functions that are not associated with the transmitter module portion. For example, compliance must be demonstrated: to regulations for other transmitter components within a host product; to requirements for unintentional radiators (Part 15 Subpart B), such as digital devices, computer peripherals, radio receivers, etc.; and to additional authorization requirements for the non-transmitter functions on the transmitter module (i.e., Verification or Declaration of Conformity) as appropriate (e.g., Bluetooth and Wi-Fi transmitter modules may also contain digital logic functions).

#### 4.1.1 LABELING AND USER INFORMATION REQUIREMENTS

The RN1810/RN1810E module has been labeled with its own FCC ID number, and if the FCC ID is not visible when the module is installed inside another device, then the outside of the finished product into which the module is installed must also display a label referring to the enclosed module. This exterior label can use wording as follows:

Contains Transmitter Module FCC ID: W7O24WN0

or

Contains FCC ID: W7O24WN0

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

A user's manual for the product should include the following statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional information on labeling and user information requirements for Part 15 devices can be found in KDB Publication 784748 available at the FCC Office of Engineering and Technology (OET) Laboratory Division Knowledge Database (KDB)

http://apps.fcc.gov/oetcf/kdb/index.cfm.

#### 4.1.2 RF EXPOSURE

All transmitters regulated by FCC must comply with RF exposure requirements. KDB Publication 447498 General RF Exposure Guidance provides guidance in determining whether proposed or existing transmitting facilities, operations or devices comply with limits for human exposure to Radio Frequency (RF) fields adopted by the Federal Communications Commission (FCC).

This module is approved for installation into mobile and/or portable host platforms and must not be colocated or operating in conjunction with any other antenna or transmitter except in accordance with FCC multitransmitter guidelines. End users must be provided with transmitter operating conditions for satisfying RF Exposure compliance.

#### 4.1.3 APPROVED EXTERNAL ANTENNA TYPES

To maintain modular approval in the United States, only the antenna types that have been tested shall be used. It is permissible to use different antenna manufacturer provided the same antenna type and antenna gain (equal to or less than) is used. An antenna type comprises antennas having similar in-band and out-of-band radiation patterns.

Testing of the RN1810/RN1810E module was performed with the antenna types listed in Table 3-1.

#### 4.1.4 HELPFUL WEB SITES

Federal Communications Commission (FCC): http://www.fcc.gov

FCC Office of Engineering and Technology (OET) Laboratory Division Knowledge Database (KDB): http://apps.fcc.gov/oetcf/kdb/index.cfm

#### 4.2 Canada

The RN1810/RN1810E module has been certified for use in Canada under Industry Canada (IC) Radio Standards Procedure (RSP) RSP-100, Radio Standards Specification (RSS) RSS-Gen, RSS-210, and RSS-247. Modular approval permits the installation of a module in a host device without the need to recertify the device.

#### 4.2.1 LABELING AND USER INFORMATION REQUIREMENTS

Labeling Requirements (from RSP-100 - Issue 10, Section 3): The host device shall be properly labeled to identify the module within the host device.

Modular Devices (from RSP-100 - Issue 10, Section 7): The Industry Canada certification label of a module shall be clearly visible at all times when installed in the host device, otherwise the host device must be labeled to display the Industry Canada certification number of the module, preceded by the words "Contains transmitter module", or the word "Contains", or similar wording expressing the same meaning, as follows:

Contains transmitter module IC: 7693A-24WN0

User Manual Notice for License-Exempt Radio Apparatus (from Section 8.4, RSS-Gen, Issue 4, November 2014): User manuals for license-exempt radio apparatus shall contain the following or equivalent notice in a conspicuous location in the user manual or alternatively on the device or both:

This device complies with Industry Canada's licenseexempt RSSs. Operation is subject to the following two conditions:

(1) This device may not cause interference; and(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage;
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### 4.2.2 RF EXPOSURE

All transmitters regulated by IC must comply with RF exposure requirements listed in RSS-102 - Radio Frequency (RF) Exposure Compliance of Radiocommunication Apparatus (All Frequency Bands).

This module is approved for installation into mobile and/or portable host platforms and must not be colocated or operating in conjunction with any other antenna or transmitter except in accordance with Industry Canada's multi-transmitter guidelines. End users must be provided with transmitter operating conditions for satisfying RF Exposure compliance.

#### 4.2.3 APPROVED EXTERNAL ANTENNA TYPES

Transmitter Antenna for License-Exempt Radio Apparatus (from Section 8.3 RSS-Gen, Issue 4, November 2014):

The RN1810/RN1810E module can only be sold or operated with the antenna types with which it was approved. It is permissible to use different antenna manufacturer provided the same antenna type and antenna gain (equal to or less than) is used. An antenna type comprises antennas having similar inband and out-of-band radiation patterns.

Approved external antenna types for the RN1810/ RN1810E module are listed in Table 3-1. User manuals for transmitters equipped with detachable antennas shall also contain the following notice in a conspicuous location:

This radio transmitter (identify the device by certification number) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (identifier le dispositif par son numéro de certification) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal. Les types d'antenne non inclus dans cette liste, et dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Immediately following the above notice, the manufacturer shall provide a list of all antenna types approved for use with the transmitter, indicating the maximum permissible antenna gain (in dBi).

#### 4.2.4 HELPFUL WEB SITES

Industry Canada: http://www.ic.gc.ca/

#### 4.3 Europe

The RN1810/RN1810E module is an R&TTE Directive assessed radio module that is CE marked and has been manufactured and tested with the intention of being integrated into a final product.

The RN1810/RN1810E module has been tested to R&TTE Directive 1999/5/EC Essential Requirements for Health and Safety (Article (3.1(a)), Electromagnetic Compatibility (EMC) (Article 3.1(b)), and Radio (Article 3.2) and are summarized in Table 4-1 European Compliance Testing European Compliance Testing. A Notified Body Opinion has also been issued. All test reports are available on the RN1810/RN1810E product web page at http://www.microchip.com.

The R&TTE Compliance Association provides guidance on modular devices in document **Technical Guidance Note 01** available at

http://www.rtteca.com/html/download\_area.htm.

Note:	To maintain conformance to the testing listed in Table 4-1 European Compliance Testing, the module shall be installed in accordance with the installation instruc- tions in this data sheet and shall not be modified.
	When integrating a radio module into a completed product the integrator becomes the manufacturer of the final product and is therefore responsible for demonstrating compliance of the final product with the essential requirements of the R&TTE Directive.

#### 4.3.1 LABELING AND USER INFORMATION REQUIREMENTS

The label on the final product which contains the RN1810/RN1810E module must follow CE marking requirements. The R&TTE Compliance Association **Technical Guidance Note 01** provides guidance on final product CE marking.

#### 4.3.2 EXTERNAL ANTENNA REQUIREMENTS

From R&TTE Compliance Association document **Technical Guidance Note 01**:

Provided the integrator installing an assessed radio module with an integral or specific antenna and installed in conformance with the radio module manufacturer's installation instructions requires no further evaluation under Article 3.2 of the R&TTE Directive and does not require further involvement of an R&TTE Directive Notified Body for the final product. [Section 2.2.4]]

The European Compliance Testing listed in Table 4-1 was performed using the antenna types listed in Table 3-1.

#### 4.3.3 HELPFUL WEB SITES

A document that can be used as a starting point in understanding the use of Short Range Devices (SRD) in Europe is the European Radio Communications Committee (ERC) Recommendation 70-03 E, which can be downloaded from the European Radio Communications Office (ERO) at: http://www.ero.dk/. Additional helpful web sites are:

- Radio and Telecommunications Terminal Equipment (R&TTE): http://ec.europa.eu/enterprise/rtte/index en.htm
- European Conference of Postal and Telecommunications Administrations (CEPT): http://www.cept.org/
- European Telecommunications Standards Institute (ETSI): http://www.etsi.org
- European Radio Communications Office (ERO): http://www.ero.dk/
- The Radio and Telecommunications Terminal Equipment Compliance Association (R&TTE CA): http://www.rtteca.com/

Certification	Standards	Article	Laboratory	Report Number	Date
Safety	EN 60950-1:2006+A11:2009+A1:2010 +A12:2011	(3.1(a))		Pending	
Health	EN 62479:2010			Pending	
EMC	EN 301 489-1 V1.9.2 (2011-09)	(3.1(b))		Pending	
	EN 301 489-17 V2.2.1 (2012-09)				
Radio	EN 300 328 V1.8.1 (2006-06)	(3.2)		Pending	
Notified Body Opinion				Pending	

#### TABLE 4-1: EUROPEAN COMPLIANCE TESTING

#### 4.4 Australia

The Australia radio regulations do not provide a modular approval policy similar to the United States (FCC) and Canada (IC). However, RN1810/RN1810E module RF transmitter test reports can be used in part to demonstrate compliance in accordance with ACMA Radio communications "Short Range Devices" Standard 2004 (The Short Range Devices standard calls up the AS/NZS 4268:2008 industry standard). The RN1810/RN1810E module test reports can be used as part of the product certification and compliance folder. For more information on the RF transmitter test reports, contact Microchip Technology Australia sales office.

To meet overall Australian final product compliance, the developer must construct a compliance folder containing all relevant compliance test reports e.g. RF, EMC, electrical safety and DoC (Declaration of Conformity) etc. It is the responsibility of the integrator to know what is required in the compliance folder for ACMA compliance. All test reports are available on the RN1810/ RN1810E product web page at http://www.microchip.com. For more information on Australia compliance, refer to the Australian Communications and Media Authority web site http://www.acma.gov.au/.

#### 4.4.1 EXTERNAL ANTENNA REQUIREMENTS

The compliance testing listed in Table 4-1 was performed using the antenna types listed in Table 3-1.

#### 4.4.2 HELPFUL WEB SITES

The Australian Communications and Media Authority: www.acma.gov.au/.

#### 4.5 New Zealand

The New Zealand radio regulations do not provide a modular approval policy similar to the United States (FCC) and Canada (IC). However, RN1810/RN1810E module RF transmitter test reports can be used in part to demonstrate compliance against the New Zealand "General User Radio License for Short Range Devices". New Zealand Radio communications (Radio Standards) Notice 2010 calls up the AS / NZS 4268:2008 industry standard. The RN1810/RN1810E module test reports can be used as part of the product certification and compliance folder. All test reports are available on the RN1810/RN1810E product web page at http://www.microchip.com. For more information on the RF transmitter test reports, contact Microchip Technology sales office.

Information on the New Zealand short range devices license can be found in the following web links:

http://www.rsm.govt.nz/cms/licensees/types-oflicence/general-user-licences/short-range-devices

#### and

#### http://www.rsm.govt.nz/cms/policy-and-planning/spectrum-policy-overview/legislation/gazette-notices/product-compliance.

To meet overall New Zealand final product compliance, the developer must construct a compliance folder containing all relevant compliance test reports e.g. RF, EMC, electrical safety and DoC (Declaration of Conformity) etc. It is the responsibility of the developer to know what is required in the compliance folder for New Zealand Radio communications. For more information on New Zealand compliance, refer to the web site http://www.rsm.govt.nz/.

#### 4.5.1 EXTERNAL ANTENNA REQUIREMENTS

The compliance testing listed in Table 4-1 was performed using the antenna types listed in Table 3-1.

#### 4.5.2 HELPFUL WEB SITES

Radio Spectrum Ministry of Economic Development: http://www.rsm.govt.nz/.

#### 4.6 Japan

The RN1810/RN1810E module has received type certification and is labeled with its own technical conformity mark and certification number as required to conform to the technical standards regulated by the Ministry of Internal Affairs and Communications (MIC) of Japan pursuant to the Radio Act of Japan.

Integration of this module into a final product does not require additional radio certification provided installation instructions are followed and no modifications of the module are allowed. Additional testing may be required:

- If the host product is subject to electrical appliance safety (for example, powered from an AC mains), the host product may require Product Safety Electrical Appliance and Material (PSE) testing. The integrator should contact their conformance laboratory to determine if this testing is required.
- There is a voluntary Electromagnetic Compatibility (EMC) test for the host product administered by VCCII: http://www.vcci.jp/vcci\_e/index.html

#### 4.6.1 LABELING AND USER INFORMATION REQUIREMENTS

The label on the final product which contains the RN1810/RN1810E module must follow Japan marking requirements. The integrator of the module should refer to the labeling requirements for Japan available at the Ministry of Internal Affairs and Communications (MIC) website.

The RN1810/RN1810E module is labeled with its own technical conformity mark and certification number. The final product in which this module is being used must have a label referring to the type certified module inside:

Contains transmitter module with certificate number:

#### 4.6.2 HELPFUL WEB SITES

Ministry of Internal Affairs and Communications (MIC): http://www.tele.soumu.go.jp/e/index.htm

Association of Radio Industries and Businesses (ARIB): http://www.arib.or.jp/english/

#### 4.7 Korea

The RN1810/RN1810E module has received certification of conformity in accordance with the Radio Waves Act. Integration of this module into a final product does not require additional radio certification provided installation instructions are followed and no modifications of the module are allowed.

#### 4.7.1 LABELING AND USER INFORMATION REQUIREMENTS

The label on the final product which contains the RN1810/RN1810E module must follow KC marking requirements. The integrator of the module should refer to the labeling requirements for Korea available on the Korea Communications Commission (KCC) website.

The RN1810/RN1810E module is labeled with its own KC mark. The final product requires the KC mark and certificate number of the module:



#### 4.7.2 EXTERNAL ANTENNA REQUIREMENTS

The Korea compliance testing was performed using the antenna types listed in Table 3-1.

#### 4.7.3 HELPFUL WEB SITES

Korea Communications Commission (KCC): http://www.kcc.go.kr.

National Radio Research Agency (RRA): http://rra.go.kr.

#### 4.8 Taiwan

The RN1810/RN1810E module has received compliance approval in accordance with the Telecommunications Act. Customers seeking to use the compliance approval in their product should contact Microchip Technology sales or distribution partners to obtain a Letter of Authority.

Integration of this module into a final product does not require additional radio certification provided installation instructions are followed and no modifications of the module are allowed.

#### 4.8.1 LABELING AND USER INFORMATION REQUIREMENTS

The RN1810/RN1810E module is labeled with its own NCC ID number, and if the NCC ID is not visible when the module is installed inside another device, then the outside of the device must also display a label referring to the enclosed module. This exterior label can use wording such as the following:



The user's manual should contain below warning (for RF device) in traditional Chinese:

注意!

依據 低功率電波輻射性電機管理辦法 第十二條 經型式認證合格之低功率射頻電 機,非經許可, 公司、商號或使用者均不得擅自變更頻率、 加大功率或變更原設計 之特性及功能。 第十四條 低功率射頻電機之使用不得影響飛 航安全及干擾合法通信; 經發現有干擾現象時,應立即停用,並改善 至無干擾時方得繼續使用。 前項合法通信,指依電信規定作業之無線電 信。 低功率射頻電機須忍受合法通信或工業、科 學及醫療用電波輻射性

電機設備之干擾。

#### 4.8.2 EXTERNAL ANTENNA REQUIREMENTS

The Taiwan compliance testing was performed using the antenna types listed in Table 3-1.

#### 4.8.3 HELPFUL WEB SITES

National Communications Commission (NCC): http://www.ncc.gov.tw.

#### 4.9 Other Regulatory Jurisdictions

Should other regulatory jurisdiction certification be required by the customer, or the customer need to recertify the module for other reasons, a certification utility is available. For further regulatory Certification Utility and documentation, contact your local Microchip Technology sales office.

#### 5.0 ELECTRICAL CHARACTERISTICS

Table 5-1, Table 5-2, Table 5-3 and Table 5-4 provide the absolute maximum ratings, recommended operating conditions, current consumption and the DC characteristics for digital IO pins of the module.

Symbol	Description	Max Rating	Units
Vdd	Voltage on VDD with respect to GND	-0.3 to 4.0	V
V <sub>DI</sub> Min.	Minimum digital input voltage	-0.3	V
V <sub>DO</sub> Max.	Maximum digital input voltage	VDD+0.3	V
RF <sub>IN</sub>	Maximum RF input (referenced to 50 ohms)	+10	dBm

**Note 1:** Stresses above those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device at those or any other conditions above those indicated in the operation listings of this specification is not implied. Exposure above maximum rating conditions for extended periods may affect device reliability.

#### TABLE 5-2: RECOMMENDED OPERATING CONDITIONS

Symbol		Min.	Тур.	Max.	Units
Vdd	Supply voltage	3.15	3.3	3.45	V
Тамв	Ambient temperature under bias	-40	—	85	°C

#### TABLE 5-3: CURRENT CONSUMPTION<sup>(1)</sup> (NOMINAL CONDITIONS: 25°C, VDD = 3.3V)

Parameters	Min	Тур.	Max	Units	Conditions <sup>(2)</sup>
IDD, Sleep	—	12	_	μA	—
IDD, Receive	—	61		mA	11 Mbps
	—	64	_		54 Mbps
	—	62	_		HT20 MCS0
	—	64	_		HT20 MCS7
	—	72	_		HT40 MCS0
	—	73	—		HT40 MCS7
IDD, Transmit	—	248		mA	1 Mbps
	—	246	-		6 Mbps
	—	242	_		11 Mbps
	—	211	_		54 Mbps
	—	263	-		HT20 MCS0
	_	217	—		HT20 MCS7
	_	222	_		HT40 MCS0
	—	196	_		HT40 MCS7

**Note 1:** Current Consumption values represent Typical Peak currents. Wi-Fi applications typically operate at less than 85% TX duty cycle. TX current is dependent on such criteria as transmit power setting, transmit data rate, and bandwidth used. RX current is affected by connection distance.

2: Transmit current consumption at power output levels is listed in Table 5-6.

#### TABLE 5-4: DC CHARACTERISTICS FOR DIGITAL IO PINS

DC CHARACTERISTICS		Operating Conditions <sup>(1)</sup>				
Symbol	Parameter	Min.	Тур.	Max.	Units	
Vih	High-Level Input Voltage	1.8	—	3.6	V	
VIL	Low-Level Input Voltage	-0.3	—	0.3	V	

#### TABLE 5-4: DC CHARACTERISTICS FOR DIGITAL IO PINS (CONTINUED)

DC CHARACTERISTICS			Operating Conditions <sup>(1)</sup>				
Symbol	Parameter	Min.	Тур.	Max.	Units		
Voh	High-Level Output Voltage	2.2	_	3.3	V		
Vol	Low-Level Output Voltage	0	_	0.4	V		
Ін	High-Level Input Current		_	0.1	μA		
lil	Low -Level Input Current	_	_	0.1	μA		
Іон	High-Level Output	_	_	20	mA		
Iol	Low-Level Output Current	_	_	20	mA		
CIN	Input Capacitance	_	3		pF		

Note: Operating temperature: 25°C; Operating voltage: VDD = 3.3V

Table 5-5, Table 5-6 and Table 5-7 show the frequency characteristics of the module.

 TABLE 5-5:
 RADIO RECEIVE CHARACTERISTICS

Symbol	Parameter	Conditions	Min	Typ <sup>(1)</sup>	Max	Unit
fRX	RX input frequency range	—	2.412	—	2.472	GHz
SRF	Sensitivity					
	ССК	1 Mbps	—	-95.7	—	dBm
		11 Mbps	—	-87.7	—	
	OFDM	6 Mbps	—	-92.7	—	
		54 Mbps	—	-75.7	—	
	HT20	MCS0	—	-92.7	—	
		MCS7	—	-72.7	—	
	HT40	MCS0	_	-90.7	_	
		MCS7	—	-69.7	_	

**Note 1:** Performance measured at J1.

#### TABLE 5-6: RADIO TRANSMIT CHARACTERISTICS

Symbol	Parameter	Conditions	Min	Тур	Max	Unit
fRX	TX output frequency range	—	2.412	—	2.472	GHz
роит	Output power <sup>(1)</sup>					
	802.11b mask compliant	1 Mbps	—	20.7	_	dBm
	802.11g mask compliant	6 Mbps	—	20.7	_	
	802.11g EVM compliant	54 Mbps	—	18.8	_	
	802.11n HT20 mask compliant	MCS0	—	20.7	—	
	802.11n HT40 mask compliant	MCS0	—	18.5	—	
	802.11n HT20 EVM compliant	MCS7	—	18.0	—	
	802.11n HT40 EVM compliant	MCS7	—	18.4	_	
aPC	Accuracy of power control	—	—	+/-1.5	_	dB

**Note 1:** Performance measured at J1.

#### TABLE 5-7: SYNTHESIZER CHARACTERISTICS

Symbol	Parameter	Conditions	Min	Тур	Мах	Unit
fC	Center channel frequency	Center frequency at 5 MHz spacing	2.412	_	2.472	GHz
fref	Reference oscillator frequency	+/-20 ppm	-	40	_	MHz
<b>f</b> STEP	Frequency step size (at RF)	_	_	5	_	MHz

#### APPENDIX A: REVISION HISTORY

#### Revision A (January 2016)

This is the initial released version of the document.

NOTES:

#### THE MICROCHIP WEB SITE

Microchip provides online support via our WWW site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- General Technical Support Frequently Asked Questions (FAQ), technical support requests, online discussion groups, Microchip consultant program member listing
- Business of Microchip Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

# CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at www.microchip.com. Under "Support", click on "Customer Change Notification" and follow the registration instructions.

#### **CUSTOMER SUPPORT**

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or Field Application Engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: http://microchip.com/support.

NOTES:

#### **PRODUCT IDENTIFICATION SYSTEM**

To order or obtain information, e.g., on pricing or delivery, refer to the factory or the listed sales office.

PART NO.	ł	RM	XXX	Examples:
Device T	emperature Range	e Package	Firmware Revision Number	RN1810-I/RM100
Device:	RN1810: RN1810E:	Integral Antenna External Antenna Connectio	n	
Temperature Range:	I =	-40°C to +85°C (Industrial)		
Package:	RM =	Radio Module		

NOTES:

#### Note the following details of the code protection feature on Microchip devices:

- · Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

### QUALITY MANAGEMENT SYSTEM CERTIFIED BY DNV = ISO/TS 16949=

#### Trademarks

The Microchip name and logo, the Microchip logo, AnyRate, dsPIC, FlashFlex, flexPWR, Heldo, JukeBlox, KeeLoq, KeeLoq logo, Kleer, LANCheck, LINK MD, MediaLB, MOST, MOST logo, MPLAB, OptoLyzer, PIC, PICSTART, PIC32 logo, RightTouch, SpyNIC, SST, SST Logo, SuperFlash and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

ClockWorks, The Embedded Control Solutions Company, ETHERSYNCH, Hyper Speed Control, HyperLight Load, IntelliMOS, mTouch, Precision Edge, and QUIET-WIRE are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, BodyCom, chipKIT, chipKIT logo, CodeGuard, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, JitterBlocker, KleerNet, KleerNet logo, MiWi, motorBench, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PureSilicon, RightTouch logo, REAL ICE, Ripple Blocker, Serial Quad I/O, SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademarks of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2016, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-5224-0249-7



### **Worldwide Sales and Service**

#### AMERICAS

Corporate Office 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277 Technical Support: http://www.microchip.com/ support

Web Address: www.microchip.com

Atlanta Duluth, GA Tel: 678-957-9614 Fax: 678-957-1455

Austin, TX Tel: 512-257-3370

Boston Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088

**Chicago** Itasca, IL Tel: 630-285-0071 Fax: 630-285-0075

**Cleveland** Independence, OH Tel: 216-447-0464 Fax: 216-447-0643

**Dallas** Addison, TX Tel: 972-818-7423 Fax: 972-818-2924

**Detroit** Novi, MI Tel: 248-848-4000

Houston, TX Tel: 281-894-5983

Indianapolis Noblesville, IN Tel: 317-773-8323 Fax: 317-773-5453

Los Angeles Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608

New York, NY Tel: 631-435-6000

San Jose, CA Tel: 408-735-9110

**Canada - Toronto** Tel: 905-673-0699 Fax: 905-673-6509

#### ASIA/PACIFIC

Asia Pacific Office Suites 3707-14, 37th Floor Tower 6, The Gateway

Harbour City, Kowloon Hong Kong Tel: 852-2943-5100 Fax: 852-2401-3431

Australia - Sydney Tel: 61-2-9868-6733 Fax: 61-2-9868-6755

**China - Beijing** Tel: 86-10-8569-7000 Fax: 86-10-8528-2104

**China - Chengdu** Tel: 86-28-8665-5511 Fax: 86-28-8665-7889

China - Chongqing Tel: 86-23-8980-9588 Fax: 86-23-8980-9500

China - Dongguan Tel: 86-769-8702-9880

**China - Hangzhou** Tel: 86-571-8792-8115 Fax: 86-571-8792-8116

**China - Hong Kong SAR** Tel: 852-2943-5100 Fax: 852-2401-3431

**China - Nanjing** Tel: 86-25-8473-2460 Fax: 86-25-8473-2470

**China - Qingdao** Tel: 86-532-8502-7355 Fax: 86-532-8502-7205

**China - Shanghai** Tel: 86-21-5407-5533 Fax: 86-21-5407-5066

**China - Shenyang** Tel: 86-24-2334-2829 Fax: 86-24-2334-2393

**China - Shenzhen** Tel: 86-755-8864-2200 Fax: 86-755-8203-1760

**China - Wuhan** Tel: 86-27-5980-5300 Fax: 86-27-5980-5118

**China - Xian** Tel: 86-29-8833-7252 Fax: 86-29-8833-7256 ASIA/PACIFIC

**China - Xiamen** Tel: 86-592-2388138 Fax: 86-592-2388130

China - Zhuhai Tel: 86-756-3210040 Fax: 86-756-3210049

India - Bangalore Tel: 91-80-3090-4444 Fax: 91-80-3090-4123

India - New Delhi Tel: 91-11-4160-8631 Fax: 91-11-4160-8632

India - Pune Tel: 91-20-3019-1500

**Japan - Osaka** Tel: 81-6-6152-7160 Fax: 81-6-6152-9310

**Japan - Tokyo** Tel: 81-3-6880- 3770 Fax: 81-3-6880-3771

**Korea - Daegu** Tel: 82-53-744-4301 Fax: 82-53-744-4302

Korea - Seoul Tel: 82-2-554-7200 Fax: 82-2-558-5932 or 82-2-558-5934

Malaysia - Kuala Lumpur Tel: 60-3-6201-9857 Fax: 60-3-6201-9859

Malaysia - Penang Tel: 60-4-227-8870 Fax: 60-4-227-4068

Philippines - Manila Tel: 63-2-634-9065 Fax: 63-2-634-9069

**Singapore** Tel: 65-6334-8870 Fax: 65-6334-8850

**Taiwan - Hsin Chu** Tel: 886-3-5778-366 Fax: 886-3-5770-955

**Taiwan - Kaohsiung** Tel: 886-7-213-7828

**Taiwan - Taipei** Tel: 886-2-2508-8600 Fax: 886-2-2508-0102

Thailand - Bangkok Tel: 66-2-694-1351 Fax: 66-2-694-1350

#### EUROPE

Austria - Wels Tel: 43-7242-2244-39 Fax: 43-7242-2244-393

Denmark - Copenhagen Tel: 45-4450-2828 Fax: 45-4485-2829

France - Paris Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

Germany - Dusseldorf Tel: 49-2129-3766400

Germany - Karlsruhe Tel: 49-721-625370

**Germany - Munich** Tel: 49-89-627-144-0 Fax: 49-89-627-144-44

**Italy - Milan** Tel: 39-0331-742611 Fax: 39-0331-466781

Italy - Venice Tel: 39-049-7625286

Netherlands - Drunen Tel: 31-416-690399 Fax: 31-416-690340

Poland - Warsaw Tel: 48-22-3325737

**Spain - Madrid** Tel: 34-91-708-08-90 Fax: 34-91-708-08-91

Sweden - Stockholm Tel: 46-8-5090-4654

**UK - Wokingham** Tel: 44-118-921-5800 Fax: 44-118-921-5820

07/14/15



Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;

- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);

- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;

- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком):

- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«FORSTAR» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели, кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный) Факс: 8 (812) 320-03-32 Электронная почта: ocean@oceanchips.ru Web: http://oceanchips.ru/ Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А