# MOS DIGITAL INTEGRATED CIRCUIT SILICON GATE CMOS

# 1 GBIT (128M $\times$ 8 BIT) CMOS NAND E<sup>2</sup>PROM

## DESCRIPTION

The TC58BYG0S3HBAI4 is a single 1.8V 1Gbit (1,107,296,256 bits) NAND Electrically Erasable and Programmable Read-Only Memory (NAND E<sup>2</sup>PROM) organized as (2048 + 64) bytes  $\times$  64 pages  $\times$  1024 blocks. The device has a 2112-byte static register which allows program and read data to be transferred between the register and the memory cell array in 2112-bytes increments. The Erase operation is implemented in a single block unit (128 Kbytes + 4 Kbytes: 2112 bytes  $\times$  64 pages).

The TC58BYG0S3HBAI4 is a serial-type memory device which utilizes the I/O pins for both address and data input/output as well as for command inputs. The Erase and Program operations are automatically executed making the device most suitable for applications such as solid-state file storage, voice recording, image file memory for still cameras and other systems which require high-density non-volatile memory data storage.

The TC58BYG0S3HBAI4 has ECC logic on the chip and 8bit read errors for each 528Bytes can be corrected internally.

## **FEATURES**

•	Organization	x8
	Memory cell array	$2112 \times 64K \times 8$
	Register	2112 × 8
	Page size	2112 bytes
	Block size	(128K + 4K) bytes
		( ··· ) ·· ) ··· )

• Modes

Read, Reset, Auto Page Program, Auto Block Erase, Status Read, Page Copy, ECC Status Read

- Mode control
   Serial input/output
   Command control
- Number of valid blocks Min 1004 blocks Max 1024 blocks
- Power supply Vcc = 1.7V to 1.95V
- Access time Cell array to register 40 μs typ. Read Cycle Time 25 ns min (C<sub>L</sub>=30pF)
- Program/Erase time Auto Page Program Auto Block Erase
   330 μs/page typ. 3.5 ms/block typ.

•	Operating current	
	Read (25 ns cycle)	30 mA max
	Program (avg.)	30 mA max
	Erase (avg.)	30 mA max
	Standby	50 μA max

- Package P-TFBGA63-0911-0.80CZ (Weight: 0.15 g typ.)
- 8bit ECC for each 528Bytes is implemented on a chip.


# **PIN ASSIGNMENT (TOP VIEW)**

	1	2	3	4	5	6	7	8	9	10
A	NC	NC							NC	NC
В	NC								NC	NC
С			$\overline{WP}$	ALE	Vss	CE	$\overline{WE}$	RY/BY		
D			NC	RE	CLE	NC	NC	NC		
Е			NC	NC	NC	NC	NC	NC		
F			NC	NC	NC	NC	NC	NC		
G			NC	NC	NC	NC	NC	NC		
Н			NC	I/O1	NC	NC	NC	Vcc		
J			NC	I/O2	NC	Vcc	I/O6	I/O8		
к			Vss	I/O3	I/O4	I/O5	I/07	V <sub>SS</sub>		
L	NC	NC							NC	NC
М	NC	NC							NC	NC

# PIN NAMES

I/O1 to I/O8	I/O port
CE	Chip enable
WE	Write enable
RE	Read enable
CLE	Command latch enable
ALE	Address latch enable
WP	Write protect
RY/BY	Ready/Busy
V <sub>CC</sub>	Power supply
V <sub>SS</sub>	Ground
NC	No Connection

# **BLOCK DIAGRAM**

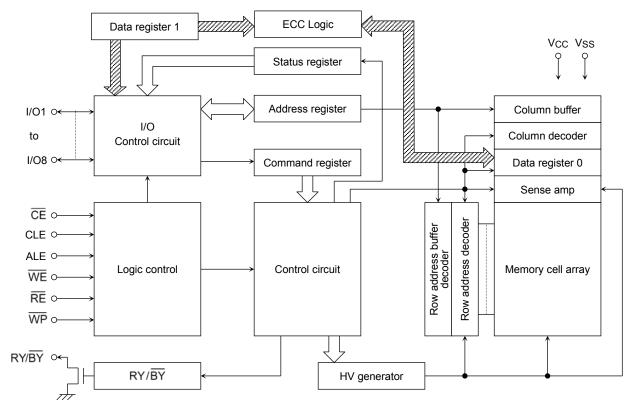

# **ABSOLUTE MAXIMUM RATINGS**

SYMBOL	RATING	VALUE	UNIT
Vcc	Power Supply Voltage	-0.6 to 2.5	V
V <sub>IN</sub>	Input Voltage	-0.6 to 2.5	V
VI/O	Input /Output Voltage	$-0.6$ to V <sub>CC</sub> + 0.3 ( $\leq 2.5$ V)	V
PD	Power Dissipation	0.3	W
T <sub>SOLDER</sub>	Soldering Temperature (10 s)	260	°C
TSTG	Storage Temperature	-55 to 125	°C
T <sub>OPR</sub>	Operating Temperature	-40 to 85	°C

# CAPACITANCE \*(Ta = 25°C, f = 1 MHz)

SYMBOL	PARAMETER	CONDITION	MIN	MAX	UNIT
C <sub>IN</sub>	Input	$V_{IN} = 0 V$	—	10	pF
Соит	Output	Vout = 0 V		10	pF

\* This parameter is periodically sampled and is not tested for every device.

# VALID BLOCKS

SYMBOL	PARAMETER	MIN	TYP.	MAX	UNIT
Nvв	Number of Valid Blocks	1004		1024	Blocks

NOTE: The device occasionally contains unusable blocks. Refer to Application Note (13) toward the end of this document. The first block (Block 0) is guaranteed to be a valid block at the time of shipment.

The specification for the minimum number of valid blocks is applicable over lifetime.

# **RECOMMENDED DC OPERATING CONDITIONS**

SYMBOL	PARAMETER	MIN	TYP.	MAX	UNIT
Vcc	Power Supply Voltage	1.7	_	1.95	V
VIH	High Level Input Voltage	V <sub>CC</sub> x 0.8	_	V <sub>CC</sub> + 0.3	V
VIL	Low Level Input Voltage	-0.3*	_	V <sub>CC</sub> x 0.2	V

\* -2 V (pulse width lower than 20 ns)

# DC CHARACTERISTICS (Ta = -40 to 85°C, V<sub>CC</sub> = 1.7 to 1.95V)

SYMBOL	PARAMETER	CONDITION	MIN	TYP.	MAX	UNIT
IIL	Input Leakage Current	$V_{IN} = 0 V$ to $V_{CC}$		_	±10	μA
ILO	Output Leakage Current	V <sub>OUT</sub> = 0 V to V <sub>CC</sub>			±10	μA
ICCO1	Serial Read Current	$\overline{CE}$ = V <sub>IL</sub> , I <sub>OUT</sub> = 0 mA, t <sub>RC</sub> = 25 ns			30	mA
ICCO2	Programming Current	_			30	mA
ICCO3	Erasing Current	_			30	mA
Iccs	Standby Current	$\overline{CE} = V_{CC} - 0.2 \text{ V},  \overline{WP} = 0 \text{ V/V}_{CC}$			50	μA
Vон	High Level Output Voltage	IOH = -0.1 mA	Vcc - 0.2	_	_	V
Vol	Low Level Output Voltage	I <sub>OL</sub> = 0.1 mA			0.2	V
I <sub>OL</sub> (RY/ <del>BY</del> )	Output Current of RY/BY pin	V <sub>OL</sub> = 0.2 V	_	4	_	mA

# AC CHARACTERISTICS AND RECOMMENDED OPERATING CONDITIONS (Ta = -40 to 85°C, V<sub>CC</sub> = 1.7 to 1.95V)

SYMBOL	PARAMETER	MIN	MAX	UNIT
tCLS	CLE Setup Time	12	_	ns
tCLH	CLE Hold Time	5	—	ns
tcs	CE Setup Time	20	_	ns
tсн	CE Hold Time	5	_	ns
twp	Write Pulse Width	12	—	ns
tals	ALE Setup Time	12	—	ns
talh	ALE Hold Time	5	—	ns
t <sub>DS</sub>	Data Setup Time	12	—	ns
t <sub>DH</sub>	Data Hold Time	5	—	ns
twc	Write Cycle Time	25	—	ns
twн	WE High Hold Time	10	—	ns
tww	WP High to WE Low	100	—	ns
t <sub>RR</sub>	Ready to RE Falling Edge	20	_	ns
t <sub>RW</sub>	Ready to WE Falling Edge	20	—	ns
tRP	Read Pulse Width	12	_	ns
tRC	Read Cycle Time	25	_	ns
t <sub>REA</sub>	RE Access Time	_	20	ns
tCEA	CE Access Time	_	25	ns
tCLR	CLE Low to RE Low	10	—	ns
t <sub>AR</sub>	ALE Low to RE Low	10	—	ns
trнон	RE High to Output Hold Time	25	—	ns
<b>t</b> RLOH	RE Low to Output Hold Time	5	_	ns
t <sub>RHZ</sub>	RE High to Output High Impedance	_	60	ns
tCHZ	CE High to Output High Impedance	_	20	ns
tCSD	CE High to ALE or CLE Don't Care	0	—	ns
t <sub>REH</sub>	RE High Hold Time	10	_	ns
tıR	Output-High-Impedance-to- RE Falling Edge	0	_	ns
t <sub>RHW</sub>	RE High to WE Low	30	_	ns
twнc	WE High to CE Low	30	_	ns
twhr	WE High to RE Low	60	—	ns
twв	WE High to Busy		100	ns
<b>t</b> RST	Device Reset Time (Ready/Read/Program/Erase)	— —	5/5/10/500	μS

\*1: tCLS and tALS can not be shorter than tWP.

\*2: tCS should be longer than tWP + 8ns.

# AC TEST CONDITIONS

	CONDITION
PARAMETER	Vcc: 1.7 to 1.95
Input level	V <sub>CC</sub> -0.2V, 0.2V
Input pulse rise and fall time	3 ns
Input comparison level	V <sub>CC</sub> / 2
Output data comparison level	V <sub>CC</sub> / 2
Output load	CL (30 pF) + 1 TTL

Note: Busy to ready time depends on the pull-up resistor tied to the RY/BY pin. (Refer to Application Note (9) toward the end of this document)

#### **PROGRAMMING / ERASING / READING CHARACTERISTICS** (Ta = -40 to 85°C, V<sub>CC</sub> = 1.7 to 1.95V)

SYMBOL	PARAMETER	MIN	TYP.	MAX	UNIT	NOTES
tprog	Average Programming Time	—	330	700	μS	
Ν	Number of Partial Program Cycles in the Same Page	_		4		(1)
<b>t</b> BERASE	Block Erasing Time		3.5	10	ms	
t <sub>R</sub>	Memory Cell Array to Starting Address		40	120	μS	

(1) Refer to Application Note (12) toward the end of this document.


## Data Output

When tREH is long, output buffers are disabled by /RE=High, and the hold time of data output depend on tRHOH (25ns MIN). On this condition, waveforms look like normal serial read mode.


When tREH is short, output buffers are not disabled by /RE=High, and the hold time of data output depend on tRLOH (5ns MIN). On this condition, output buffers are disabled by the rising edge of CLE, ALE, /CE or falling edge of /WE, and waveforms look like Extended Data Output Mode.

# TIMING DIAGRAMS

# Latch Timing Diagram for Command/Address/Data

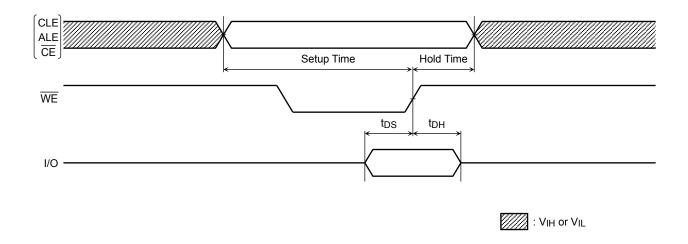


# Command Input Cycle Timing Diagram

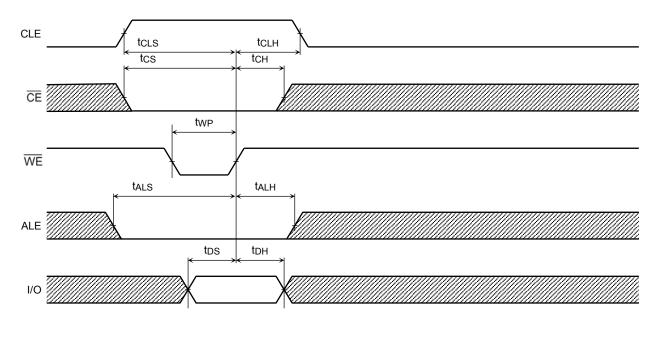


: VIH or VIL

# Address Input Cycle Timing Diagram

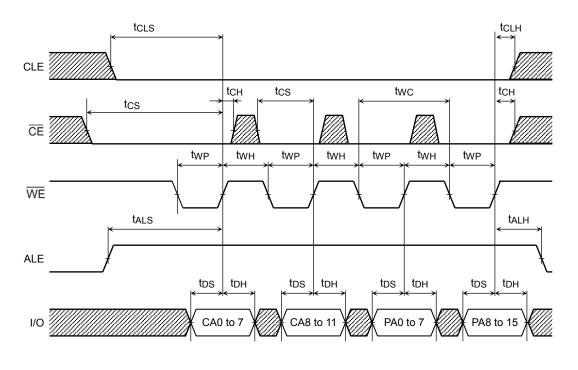


: VIH or VIL


# Data Input Cycle Timing Diagram

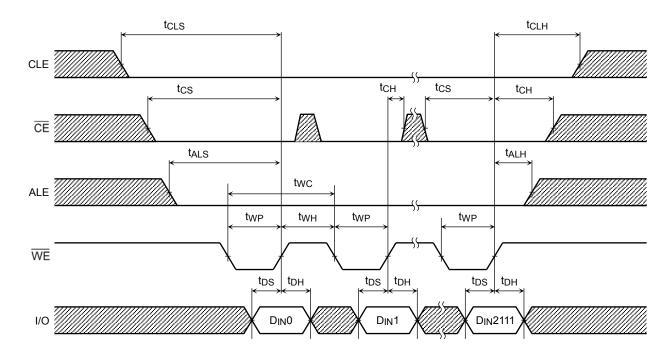

# Serial Read Cycle Timing Diagram

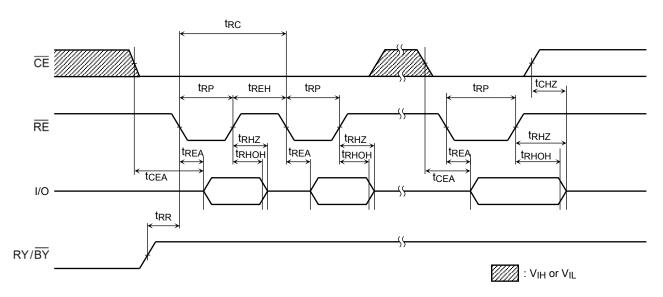


# Status Read Cycle Timing Diagram

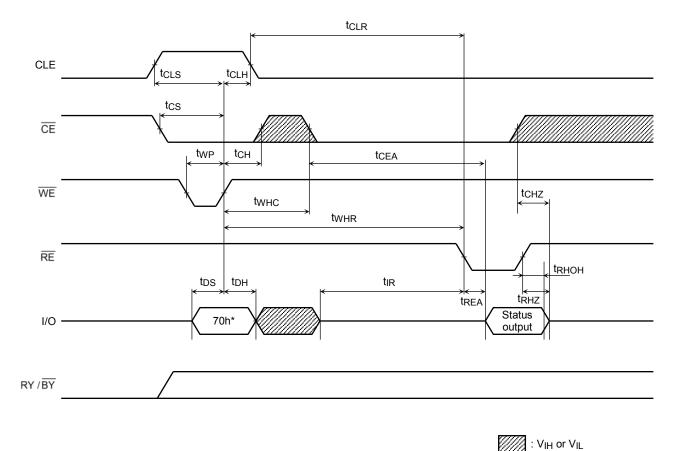


\*: 70h represents the hexadecimal number

# ECC Status Read Cycle Timing Diagram

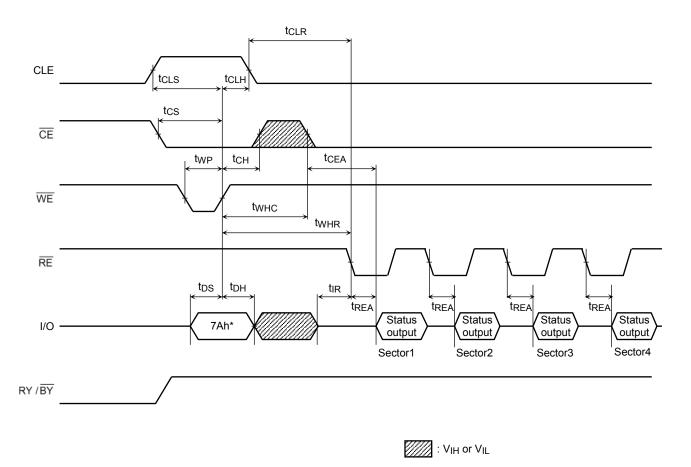


- \* :ECC Status output should be read for all 4 sector information.
- \*\* :7Ah command can be input to the device from [after RY/BY returns to High] to [before Dout or Next command input].


## Read Cycle Timing Diagram

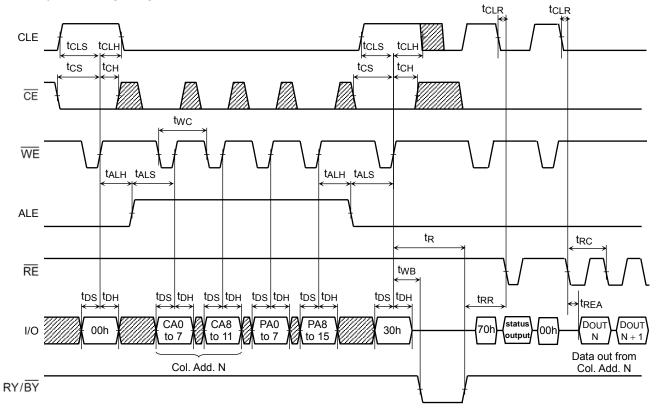

## Read Cycle Timing Diagram: When Interrupted by CE

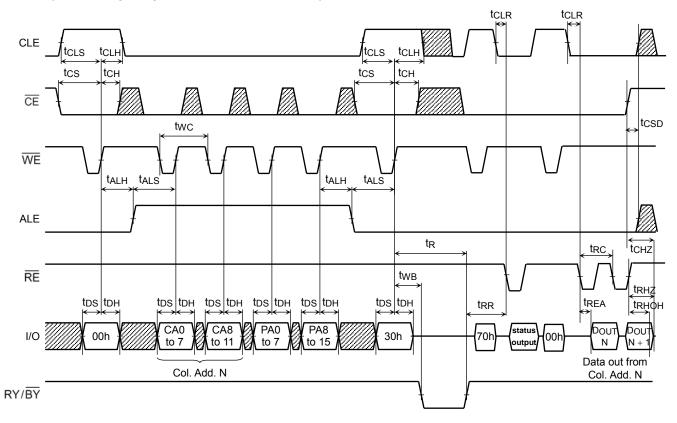


# TC58BYG0S3HBAI4

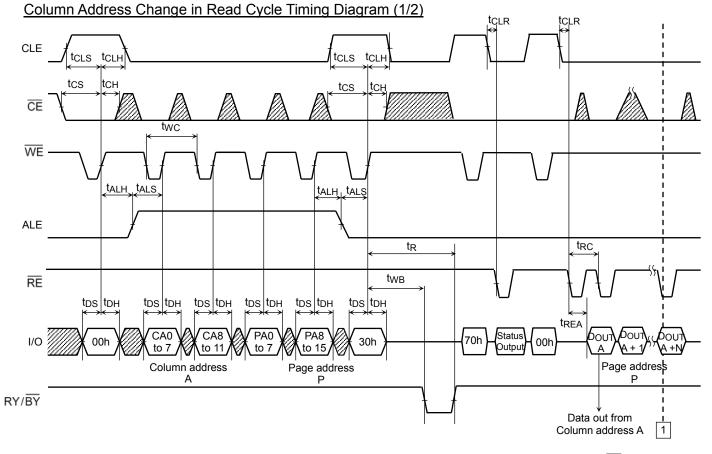


Continues from 1 of next page


### Column Address Change in Read Cycle Timing Diagram (2/2)

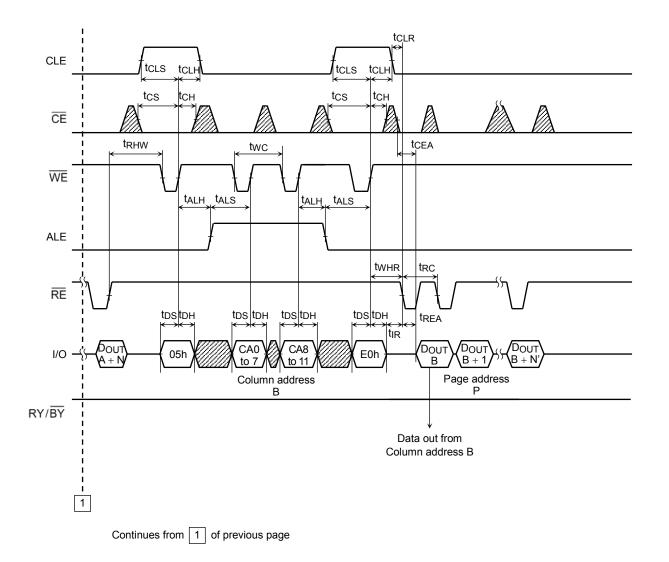

# Data Output Timing Diagram

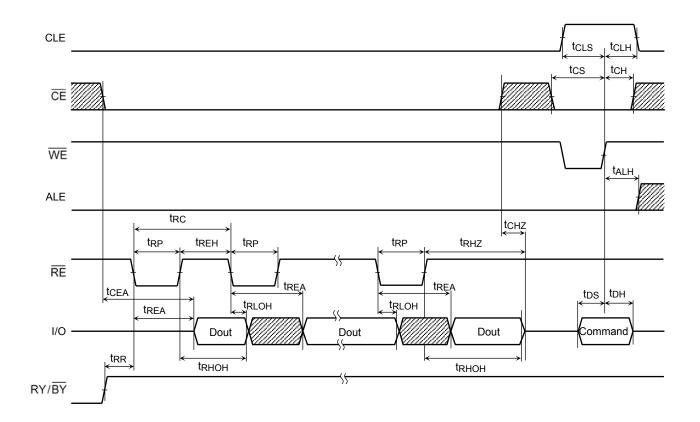


## Auto-Program Operation Timing Diagram

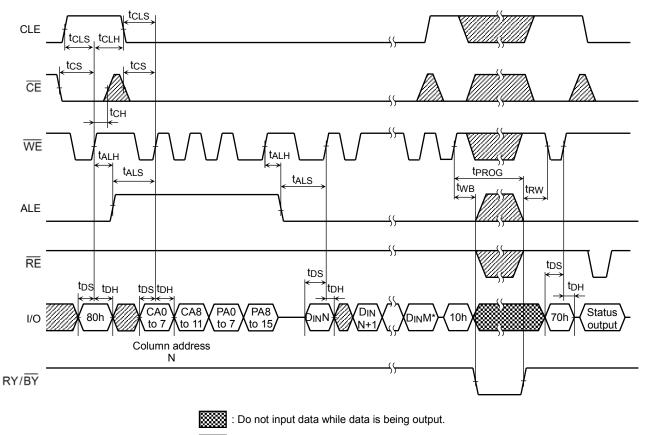


: VIH or VIL

\*) M: up to 2111


# Auto Block Erase Timing Diagram

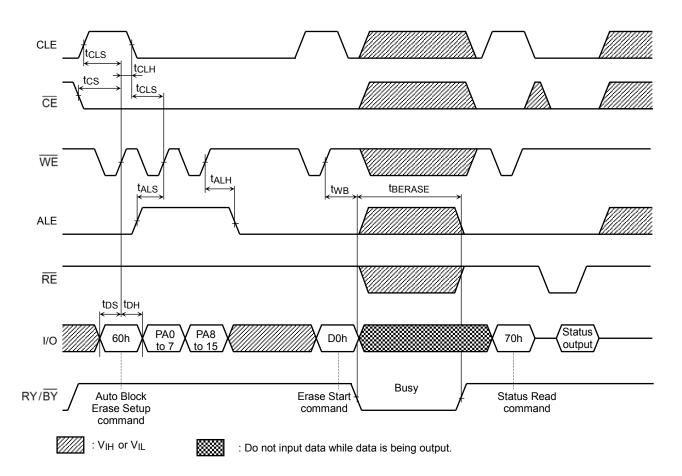



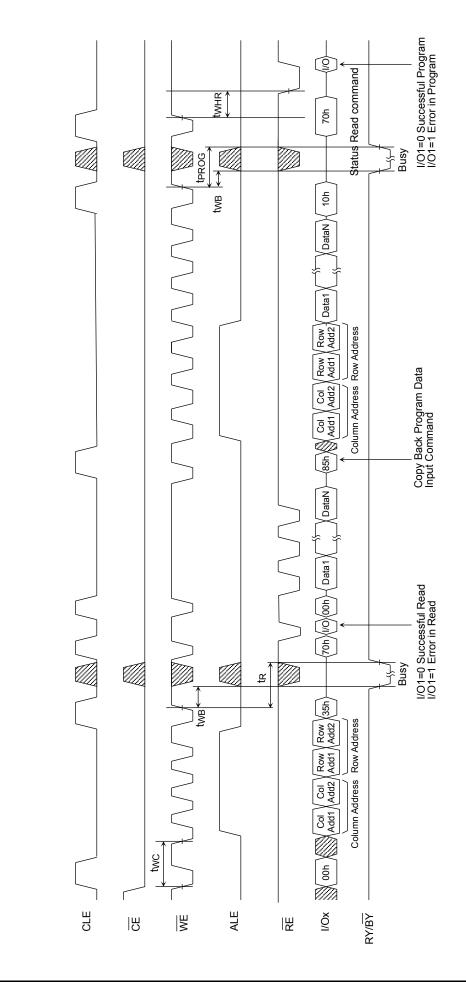

# ID Read Operation Timing Diagram

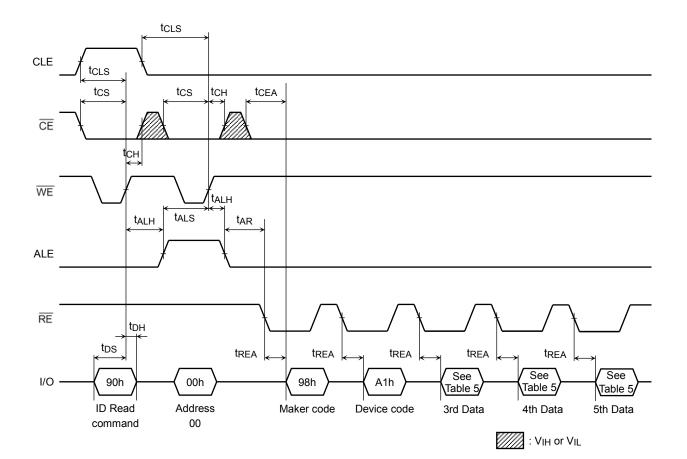

# **PIN FUNCTIONS**

The device is a serial access memory which utilizes time-sharing input of address information.

#### Command Latch Enable: CLE

The CLE input signal is used to control loading of the operation mode command into the internal command register. The command is latched into the command register from the I/O port on the rising edge of the  $\overline{WE}$  signal while CLE is High.

### Address Latch Enable: ALE

The ALE signal is used to control loading address information into the internal address register. Address information is latched into the address register from the I/O port on the rising edge of  $\overline{WE}$  while ALE is High.

#### Chip Enable: CE

The device goes into a low-power Standby mode when  $\overline{CE}$  goes High during the device is in Ready state. The  $\overline{CE}$  signal is ignored when device is in Busy state ( $RY / \overline{BY} = L$ ), such as during a Program, Erase or Read operation, and will not enter Standby mode even if the  $\overline{CE}$  input goes High.

#### Write Enable: WE

The  $\overline{WE}$  signal is used to control the acquisition of data from the I/O port.

#### Read Enable: RE

The  $\overline{\text{RE}}$  signal controls serial data output. Data is available trea after the falling edge of  $\overline{\text{RE}}$ . The internal column address counter is also incremented (Address = Address + 1) on this falling edge.

#### I/O Port: I/O1 to 8

The I/O1 to 8 pins are used as a port for transferring address, command and input/output data to and from the device.

#### Write Protect: WP


The  $\overline{WP}$  signal is used to protect the device from accidental programming or erasing. The internal voltage regulator is reset when  $\overline{WP}$  is Low. This signal is usually used for protecting the data during the power-on/off sequence when input signals are invalid.

#### Ready/Busy: RY/BY

The  $RY/\overline{BY}$  output signal is used to indicate the operating condition of the device. The  $RY/\overline{BY}$  signal is in Busy state ( $RY/\overline{BY}$  = L) during the Program, Erase and Read operations and will return to Ready state ( $RY/\overline{BY}$  = H) after completion of the operation. The output buffer for this signal is an open drain and has to be pulled-up to V<sub>CC</sub> with an appropriate resistor.

## Schematic Cell Layout and Address Assignment

The Program operation works on page units while the Erase operation works on block units.

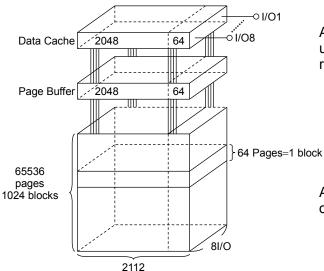

A page consists of 2112 bytes in which 2048 bytes are used for main memory storage and 64 bytes are for redundancy or for other uses.

1 page = 2112 bytes

1 block = 2112 bytes  $\times$  64 pages = (128K + 4K) bytes Capacity = 2112 bytes  $\times$  64 pages  $\times$  1024 blocks

An address is read in via the I/O port over four consecutive clock cycles, as shown in Table 1.

#### Table 1. Addressing

	I/O8	I/07	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1
First cycle	CA7	CA6	CA5	CA4	CA3	CA2	CA1	CA0
Second cycle	L	L	L	L	CA11	CA10	CA9	CA8
Third cycle	PA7	PA6	PA5	PA4	PA3	PA2	PA1	PA0
Fourth cycle	PA15	PA14	PA13	PA12	PA11	PA10	PA9	PA8

CA0 to CA11: Column address PA0 to PA5: Page address in block PA6 to PA15: Block address

### Operation Mode: Logic and Command Tables

The operation modes such as Program, Erase, Read and Reset are controlled by command operations shown in Table 3. Address input, command input and data input/output are controlled by the CLE, ALE,  $\overline{CE}$ ,  $\overline{WE}$ ,  $\overline{RE}$  and  $\overline{WP}$  signals, as shown in Table 2.

#### Table 2. Logic Table

	CLE	ALE	CE	WE	RE	WP *1
Command Input	Н	L	L		Н	*
Data Input	L	L	L		Н	Н
Address Input	L	Н	L		Н	*
Serial Data Output	L	L	L	Н		*
During Program (Busy)	*	*	*	*	*	Н
During Erase (Busy)	*	*	*	*	*	Н
	*	*	н	*	*	*
During Read (Busy)	*	*	L	H (*2)	H (*2)	*
Program, Erase Inhibit	*	*	*	*	*	L
Standby	*	*	Н	*	*	0 V/Vcc


H: VIH, L: VIL, \*: VIH or VIL

\*1: Refer to Application Note (10) toward the end of this document regarding the WP signal when Program or Erase Inhibit.

\*2: If  $\overline{CE}$  is low during read busy,  $\overline{WE}$  and  $\overline{RE}$  must be held High to avoid unintended command/address input to the device or read to device. Reset or Status Read command can be input during Read Busy.

#### Table 3. Command table (HEX)

	First Set	Second Set	Acceptable while Busy
Serial Data Input	80	—	
Read	00	30	
Column Address Change in Serial Data Output	05	E0	
Auto Page Program	80	10	
Column Address Change in Serial Data Input	85	—	
Read for Copy-Back	00	35	
Copy-Back Program	85	10	
Auto Block Erase	60	D0	
ID Read	90		
Status Read	70	—	0
ECC Status Read	7A		
Reset	FF	—	0

 

 


Table 4. Read mode operation states

	CLE	ALE	CE	WE	RE	I/O1 to I/O8	Power
Output select	L	L	L	н	L	Data output	Active
Output Deselect	L	L	L	Н	Н	High impedance	Active


H: VIH, L: VIL



# **DEVICE OPERATION**

### Read Mode

Read mode is set when the "00h" and "30h" commands are issued to the Command register. Between the two commands, a start address for the Read mode needs to be issued. After initial power on sequence, "00h" command is latched into the internal command register. Therefore read operation after power on sequence is executed by the setting of only four address cycles and "30h" command. Refer to the figures below for the sequence and the block diagram (Refer to the detailed timing chart).

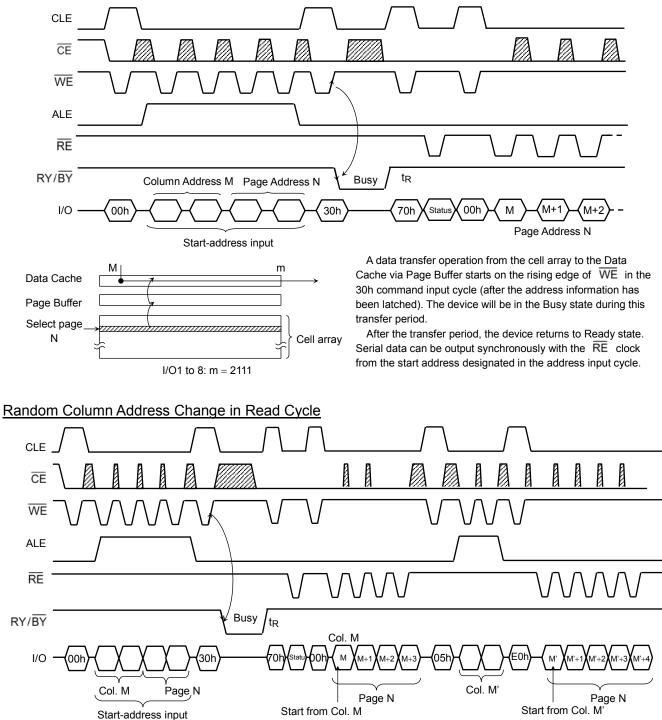

During the serial data output from the register, the column address can be changed by inputting a new column address using the 05h and E0h commands. The data is read out in serial starting at the new column address. Random Column Address Change operation can be done multiple times within the same page.

Select page

Ν

М

M

.....

### ECC & Sector definition for ECC

Internal ECC logic generates Error Correction Code during busy time in program operation. The ECC logic manages 9bit error detection and 8bit error correction in each 528Bytes of main data and spare data. A section of main field (512Bytes) and spare field (16Bytes) are paired for ECC. During read, the device executes ECC of itself. Once read operation is executed, Status Read Command (70h) can be issued to check the read status. The read status remains until other valid commands are executed.

To use ECC function, below limitation must be considered.

- A sector is the minimum unit for program operation and the number of program per page must not exceed 4.

#### 2KByte Page Assignment

1st	2nd	3rd	4th	1st	2nd	3rd	4th
Main	Main	Main	Main	Spare	Spare	Spare	Spare
512B	512B	512B	512B	16B	16B	16B	16B

Note) Internal ECC manages all data of Main area and Spare area.

#### Definition of 528Byte Sector


Sector	Column Address (Byte)	Column Address (Byte)						
	Main Field	Spare Field						
1st Sector	0 to 511	2,048 to 2,063						
2nd Sector	512 to 1,023	2,064 to 2,079						
3rd Sector	1,024 to 1,535	2,080 to 2,095						
4th Sector	1,536 to 2,047	2,096 to 2,111						

Note) The ECC parity code generated by internal ECC is stored in column addresses 2112-2175 and the user cannot access to these specific addresses.

While using the Partial Page Program, the user must program the data to main field and spare field simultaneously by the definition of sector.

## Auto Page Program Operation


The device carries out an Automatic Page Program operation when it receives a "10h" Program command after the address and data have been input. The sequence of command, address and data input is shown below (Refer to the detailed timing chart).

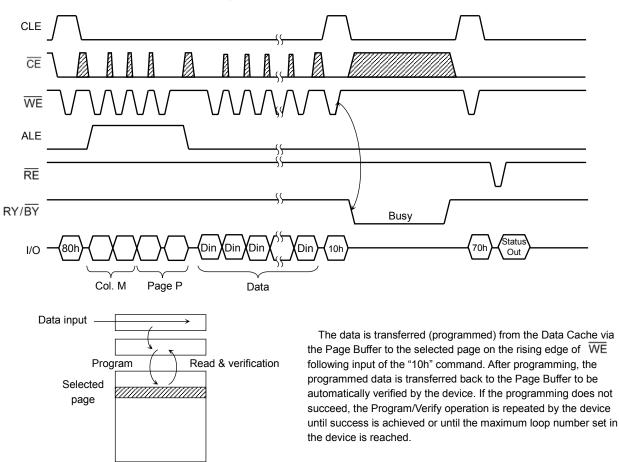

#### Random Column Address Change in Auto Page Program Operation

The column address can be changed by the 85h command during the data input sequence of the Auto Page Program operation.


Two address input cycles after the 85h command are recognized as a new column address for the data input. After the new data is input to the new column address, the 10h command initiates the actual data program into the selected page automatically. The Random Column Address Change operation can be repeated multiple times within the same page.

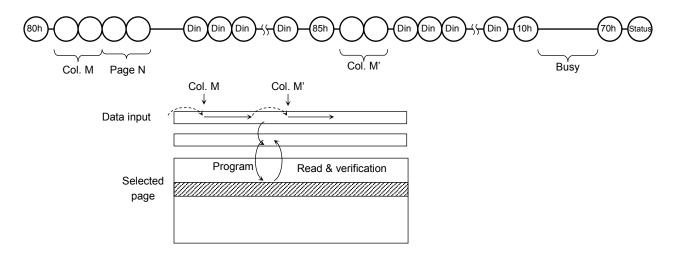



### Auto Block Erase

 
The Auto Block Erase operation starts on the rising edge of  $\overline{WE}$  after the Erase Start command "D0h" which follows the Erase Setup command "60h". This two-cycle process for Erase operations acts as an extra layer of protection from accidental erasure of data due to external noise. The device automatically executes the Erase and Verify operations.




# READ FOR COPY-BACK WITH DATA OUTPUT TIMING GUIDE

Copy-Back operation is a sequence execution of Read for Copy-Back and of copy-back program with the destination page address. A read operation with "35h" command and the address of source page moves the whole 2112 bytes data into the internal data buffer. Bit errors are checked by sequential reading the data or by reading the status in read after read busy time (tR) to check if uncorrectable error occurs. In the case where there is no bit error or no uncorrectable error, the data don't need to be reloaded. Therefore Copy-Back program operation is initiated by issuing Page-Copy Data-Input command (85h) with destination page address. Actual programming operation begins after Program Confirm command (10h) is issued. Once the program process starts, the Status Read command (70h) may be entered to read the status register. The system controller can detect the completion of a program cycle by monitoring the RY/BY output, or the Status Bit (I/O7) of the Status Register. When the Copy-Back Program is complete, the Write Status Bit (I/O1) may be checked. The command register remains in Status Read mode until another valid command is written to the command register. During copy-Back program, data modification is possible using random data input command (85h) as shown below.

## Page Copy-Back Program Operation

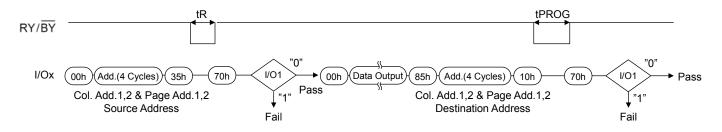


Page Copy-Back Program Operation with Random Data Input

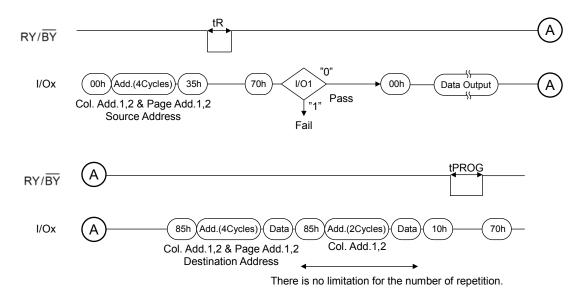

## ID Read

The device contains ID codes which can be used to identify the device type, the manufacturer, and features of the device. The ID codes can be read out under the following timing conditions:

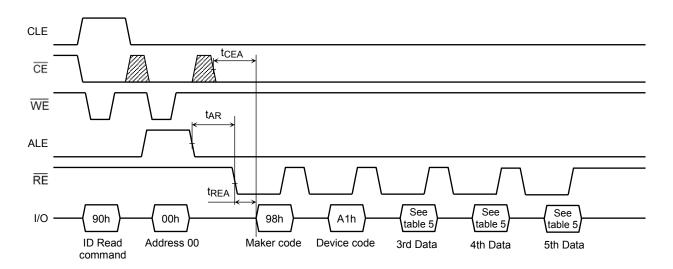

#### Table 5. Code table

	Description	I/O8	I/07	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1	Hex Data
1st Data	Maker Code	1	0	0	1	1	0	0	0	98h
2nd Data	Device Code	1	0	1	0	0	0	0	1	A1h
3rd Data	Chip Number, Cell Type	1	0	0	0	0	0	0	0	80h
4th Data	Page Size, Block Size	0	0	0	1	0	1	0	1	15h
5th Data	District Number	1	1	1	1	0	0	1	0	F2h

#### 3rd Data

	Description	I/O8	I/07	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1
Internal Chip Number	1 2 4 8							0 0 1 1	0 1 0 1
Cell Type	2 level cell 4 level cell 8 level cell 16 level cell					0 0 1 1	0 1 0 1		
Reserved		1	0	0	0				

#### 4th Data

	Description	I/O8	I/07	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1
Page Size (without redundant area)	1 KB 2 KB 4 KB 8 KB							0 0 1 1	0 1 0 1
Block Size (without redundant area)	64 KB 128 KB 256 KB 512 KB			0 0 1 1	0 1 0 1				
I/O Width	x8 x16		0 1						
Reserved		0				0	1		

#### 5th Data

	Description	I/O8	I/07	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1
District Number	1 District 2 District 4 District 8 District					0 0 1 1	0 1 0 1		
ECC engine on chip	With ECC engine	1							
Reserved			1	1	1			1	0

#### Status Read

The device automatically implements the execution and verification of the Program and Erase operations. The Status Read function is used to monitor the Ready/Busy status of the device, determine the result (pass /fail) of a Program or Erase operation, and determine whether the device is in Protect mode. The device status is output via the I/O port using  $\overline{\text{RE}}$  after a "70h" command input. The Status Read can also be used during a Read operation to monitor the Ready/Busy status and to find out the ECC result (pass/fail). The resulting information is outlined in Table 6.

	Definition	Page Program	Block Erase	Read
I/O1	Chip Status Pass: 0 Fail: 1	Pass/Fail	Pass/Fail	Pass/Fail(Uncorrectable)
I/O2	Not Used	Invalid	Invalid	Invalid
I/O3	Not Used	0	0	0
1/04	Chip Read Status Normal or uncorrectable: 0 Recommended to rewrite : 1	0	0	Normal or uncorrectable / Recommended to rewrite
I/O5	Not Used	0	0	0
I/O6	Ready/Busy Ready: 1 Busy: 0	Ready/Busy	Ready/Busy	Ready/Busy
I/07	Ready/Busy Ready: 1 Busy: 0	Ready/Busy	Ready/Busy	Ready/Busy
I/O8	Write Protect Not Protected :1 Protected: 0	Write Protect	Write Protect	Write Protect

Table 6. Status output table

The Pass/Fail status on I/O1 is only valid during a Program/Erase/Read operation when the device is in the Ready state.

### ECC Status Read

The ECC Status Read function is used to monitor the Error Correction Status. The device can correct up to 8bit errors. ECC can be performed on the NAND Flash main and spare areas.

The ECC Status Read function can also show the number of errors in a sector as a result of an ECC check in during a read operation.

8	7	6	5	4	3	2	I/O1
S	Sector In	formatio	n		ECC \$	Status	

#### **ECC Status**

I/O4 to I/O1	ECC Status
0000	No Error
0001	1bit error(Correctable)
0010	2bit error(Correctable)
0011	3bit error(Correctable)
0100	4bit error(Correctable)
0101	5bit error(Correctable)
0110	6bit error(Correctable)
0111	7bit error(Correctable)
1000	8bit error(Correctable)
1111	Uncorrectable Error

#### Sector Information


I/O8 to I/O5	Sector Information
0000	1st Sector (Main and Spare area)
0001	2nd Sector (Main and Spare area)
0010	3rd Sector (Main and Spare area)
0011	4th Sector (Main and Spare area)
Other	Reserved

### <u>Reset</u>

The Reset mode stops all operations. For example, in case of a Program or Erase operation, the internally generated voltage is discharged to 0 volt and the device enters the Wait state.


The response to a "FFh" Reset command input during the various device operations is as follows:

### When a Reset (FFh) command is input during Program operation

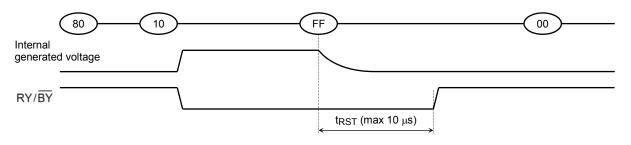




### When a Reset (FFh) command is input during Erase operation

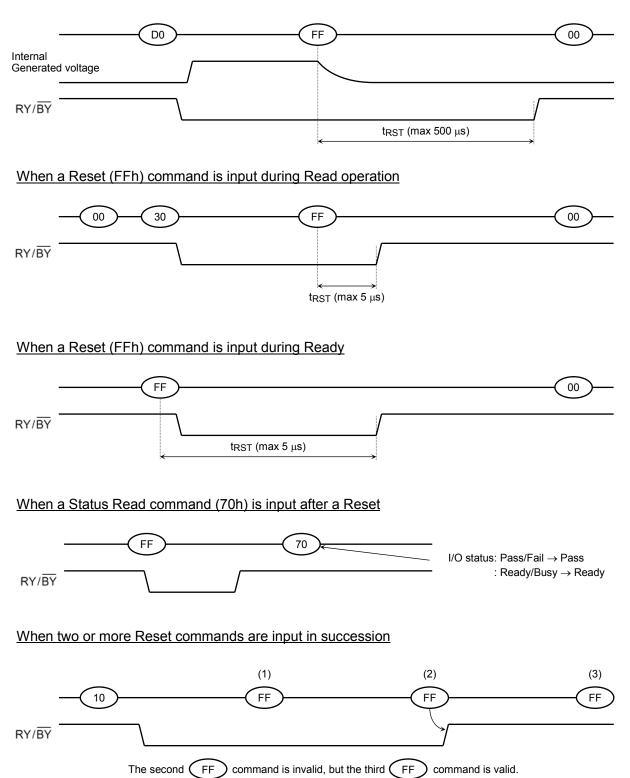

# APPLICATION NOTES AND COMMENTS


#### (1) Power-on/off sequence

The timing sequence shown in the figure below is necessary for the power-on/off sequence. The device internal initialization starts after the power supply reaches an appropriate level in the power on sequence. During the initialization the device Ready/Busy signal indicates the Busy state as shown in the figure below. In this time period, the acceptable commands are FFh or 70h. The  $\overline{WP}$  signal is useful for protecting against data corruption at power-on/off.

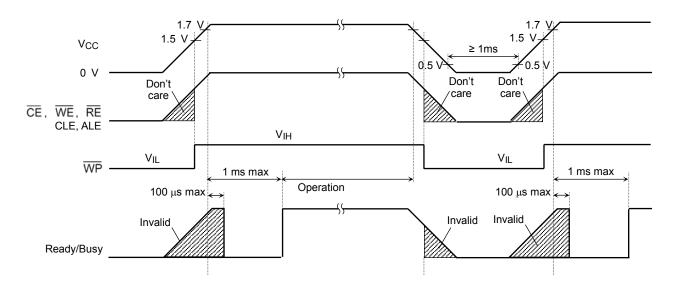

#### (2) Power-on Reset

 The following sequence is necessary because some input signals may not be stable at power-on.



(3) Prohibition of unspecified commands

The operation commands are listed in Table 3. Input of a command other than those specified in Table 3 is prohibited. Stored data may be corrupted if an unknown command is entered during the command cycle.

(4) Restriction of commands while in the Busy state


During the Busy state, do not input any command except 70h and FFh.

34




(5) Acceptable commands after Serial Input command "80h"

Once the Serial Input command "80h" has been input, do not input any command other than the Column Address Change in Serial Data Input command "85h", Auto Program command "10h" or the Reset command "FFh".

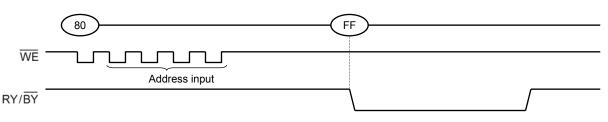


 If a command other than "85h", "10h" or "FFh" is input, the Program operation is not performed and the device operation is set to the mode which the input command specifies.




#### (6) Addressing for program operation


Within a block, the pages must be programmed consecutively from the LSB (least significant bit) page of the block to MSB (most significant bit) page of the block. Random page address programming is prohibited.

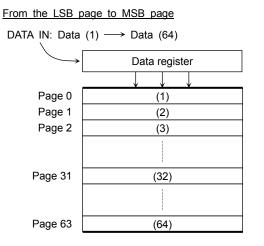

#### Ex.) Random page program (Prohibition)

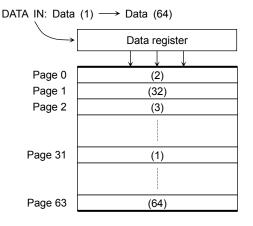


### (7) Status Read during a Read operation

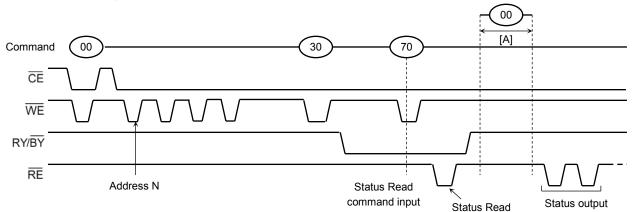


The device status can be read out by inputting the Status Read command "70h" in Read mode. Once the device has been set to Status Read mode by a "70h" command, the device will not return to Read mode unless the Read command "00h" is input during [A]. If the Read command "00h" is input during [A], Status Read mode is reset, and the device returns to Read mode. In this case, data output starts automatically from address N and address input is unnecessary.

#### (8) Auto programming failure

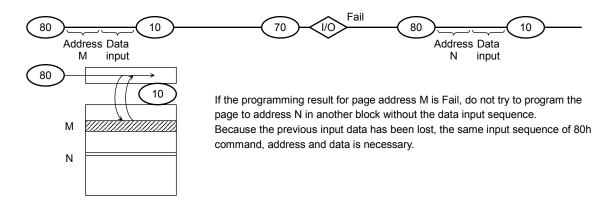

(9)  $RY / \overline{BY}$ : termination for the Ready/Busy pin ( $RY / \overline{BY}$ )

A pull-up resistor needs to be used for termination because the  $RY / \overline{BY}$  buffer consists of an open drain circuit.

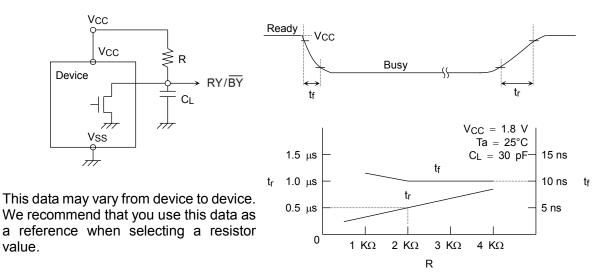





#### (10) Note regarding the $\overline{WP}$ signal

The Erase and Program operations are automatically reset when  $\overline{WP}$  goes Low. The operations are enabled and disabled as follows:


#### Enable Programming

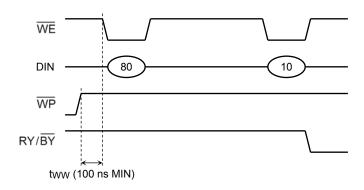


#### **Disable Programming**

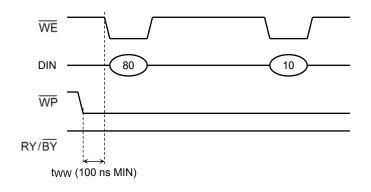

### Enable Erasing

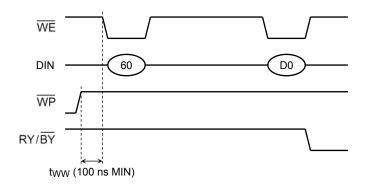


Disable Erasing

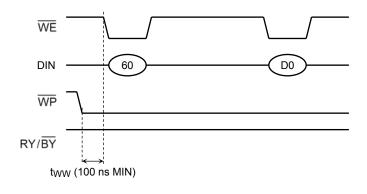

**TOSHIBA** 

(11) When five address cycles are input


Although the device may read in a fifth address, it is ignored inside the chip.

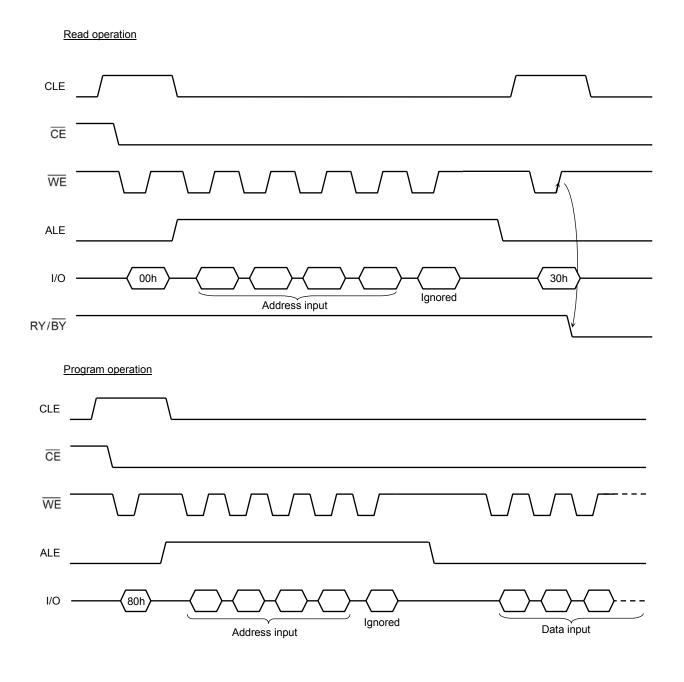

(12) Several programming cycles on the same page (Partial Page Program)

ECC Parity Code is generated during program operation on Main area (512 byte) + Spare area (16byte). While using the Partial Page Program, the user must program the data to main field and spare field simultaneously by the definition of sector in section "ECC & Sector definition for ECC".

For example, each segment can be programmed individually as follows:

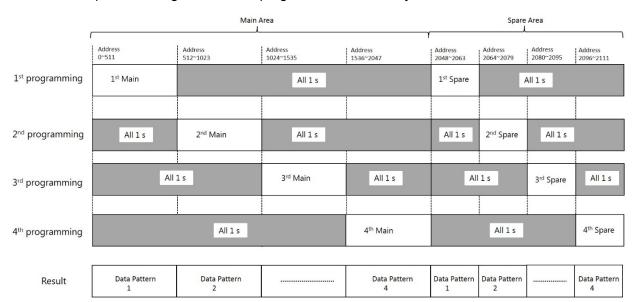


39



## (13) Invalid blocks (bad blocks)

The device occasionally contains unusable blocks. Therefore, the following issues must be recognized:

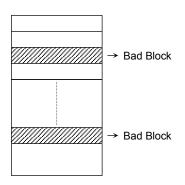

Please do not perform an erase operation to bad blocks. It may be impossible to recover the bad block information if the information is erased.

Check if the device has any bad blocks after installation into the system. Refer to the test flow for bad block detection. Bad blocks which are detected by the test flow must be managed as unusable blocks by the system.

A bad block does not affect the performance of good blocks because it is isolated from the bit lines by select gates.

The number of valid blocks over the device lifetime is as follows:


	MIN	TYP.	MAX	UNIT
Valid (Good) Block Number	1004	_	1024	Blocks

## Bad Block Test Flow

Regarding invalid blocks, bad block mark is in whole pages.

Please read one column of any page in each block. If the data of the column is 00 (Hex), define the block as a bad block.

For Bad Block Test Flow, during Read Check, regardless of Status Read result (ECC Pass or Fail), use the read data value to make judgement for Bad Block.

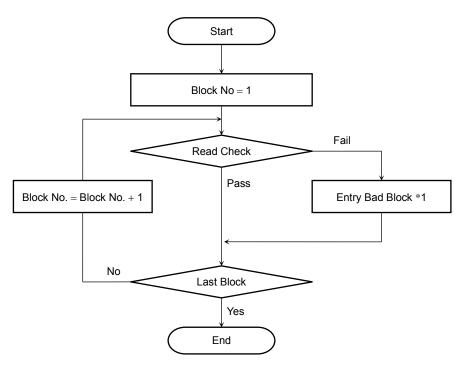

\*1: No erase operation is allowed to detected bad blocks.


(14) Failure phenomena for Program, Erase and Read operations

The device may fail during a Program, Erase or Read operation. The following possible failure modes should be considered when implementing a highly reliable system.

FAILURE MODE		DETECTION AND COUNTERMEASURE SEQUENCE			
Block	Erase Failure	Status Read after Erase $\rightarrow$ Block Replacement			
Page	Programming Failure	Status Read after Program $\rightarrow$ Block Replacement			
Read	9bit Failure(uncorrectable error)	Check the ECC correction status by Status Read or ECC Status Read and take appropriate measures such as rewrite in consideration of Wear Leveling before uncorrectable ECC error occurs.			

- ECC: Error Correction Code. 8 bit correction per 528Bytes is executed in a device.
- Block Replacement

Program

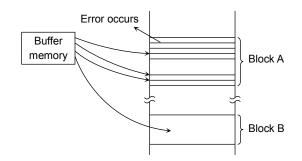

When an error happens in Block A, try to reprogram the data into another Block (Block B) by loading from an external buffer. Then, prevent further system accesses to Block A (by creating a bad block table or by using another appropriate scheme).

#### <u>Erase</u>

When an error occurs during an Erase operation, prevent future accesses to this bad block (by creating a table within the system or by using another appropriate scheme).

(15) Do not turn off the power before write/erase operation is complete. Avoid using the device when the battery is low. Power shortage and/or power failure before write/erase operation is complete will cause loss of data and/or damage to data.

#### (16) Reliability Guidance

This reliability guidance is intended to notify some guidance related to using NAND Flash with 8 bit ECC for each 512 bytes. NAND Flash memory cells are gradually worn out and the reliability level of memory cells is degraded by repeating Write and Erase operation of '0' data in each block. For detailed reliability data, please refer to the reliability note for each product.

Although random bit errors may occur during use, it does not necessarily mean that a block is bad. Generally, a block should be marked as bad when a program status failure or erase status failure is detected.

The reliability of NAND Flash memory cells during the actual usage on system level depends on the usage and environmental conditions. TOSHIBA MEMORY adopts the checker pattern data, 0x55 & 0xAA for alternative Write/Erase cycles, for the reliability test.

#### • Write/Erase Endurance

Write/Erase endurance failures may occur in a cell, page, or block, and are detected by doing a Status Read after either an Auto Program or Auto Block Erase operation. The cumulative bad block count will increase along with the number of Write/Erase cycles.

#### Data Retention

The data in NAND Flash memory may change after a certain amount of storage time. This is due to charge loss or charge gain. After block erasure and reprogramming, the block may become usable again. Data Retention time is generally influenced by the number of Write/Erase cycles and temperature.

Here is the combined characteristics image of Write/Erase Endurance and Data Retention.



#### Read Disturb

A Read operation may disturb the data in NAND Flash memory. The data may change due to charge gain. Usually, bit errors occur on other pages in the block, not the page being read. After a large number of read cycles (between block erases), a tiny charge may build up and can cause a cell to be soft programmed to another state. After block erasure and reprogramming, the block may become usable again. Read Disturb capability is generally influenced by the number of Write/Erase cycles.

#### (17) NAND Management

NAND Management such as Bad Block Management, ECC treatment and Wear Leveling, but not limited to these treatments, should be recognized and incorporated in the system design.

ECC treatment for read data is mandatory against random bit errors, and host should monitor ECC status to take appropriate measures such as rewrite in consideration of Wear Leveling before uncorrectable Error occurs. To realize robust system design, generally it is necessary to prevent the concentration of Write/Erase cycles at the specific blocks by adopting Wear Leveling which manages to distribute Write/Erase cycles evenly among NAND Flash memory. And also it is necessary to avoid dummy '0' data write, e.g. '0' data padding, which accelerate block endurance degradation.

Continuous Write and Erase cycling with high percentage of '0' bits in data pattern can lead to faster block endurance degradation.

Example: NAND cell arra	y with '0' data padding

1 : "1" data cell							: "0	" da	ta ce	ell		
	0	1	0	0	1	0	0	0	0	0	0	0
	0	1	0	1	1	0	0	0	0	0	0	0
	1	0	1	0	0	0	0	0	0	0	0	0
	1	1	0	0	1	0	0	0	0	0	0	0
	0	0	1	1	0	0	0	0	0	0	0	0
	1	0	1	0	1	0	0	0	0	0	0	0
	0	1	0	1	0	0	0	0	0	0	0	0
	1	0	1	0	1	0	0	0	0	0	0	0
Ċ	User data area					J	R	ema		g ar	ea	

User data area

Remaining area


(a) Accelerate block endurance degradation by fixed dummy "0" data write

(b) "1" data for Remaining area (Recommended)

# Package Dimensions

# P-TFBGA63-0911-0.80CZ

Unit: mm

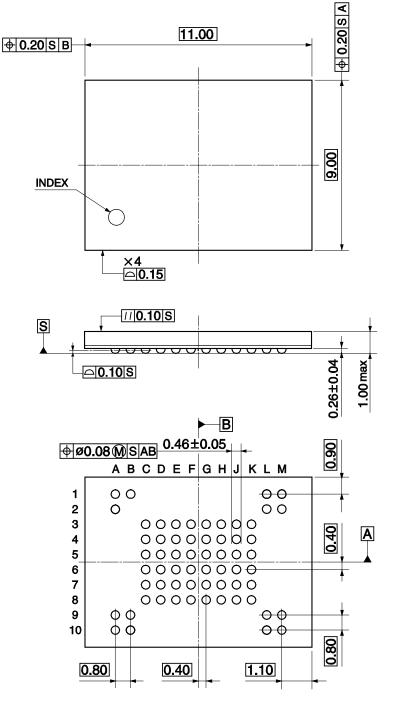

Weight: 0.15g (typ.)

# **Revision History**

Date	Rev.	Description
2012-06-15	0.10	Preliminary version
2012-07-13	0.20	Revised ID Table. Corrected typo.
2012-10-01	1.00	Deleted TENTATIVE/TBD notation.
2018-06-01	1.10	Corrected typo, and described some notes.
		Attached Reliability Guidance and NAND Management.
		Changed "RESTRICTIONS ON PRODUCT USE".

# **RESTRICTIONS ON PRODUCT USE**

Toshiba Memory Corporation and its subsidiaries and affiliates are collectively referred to as "TOSHIBA". Hardware, software and systems described in this document are collectively referred to as "Product".

- TOSHIBA reserves the right to make changes to the information in this document and related Product without notice.
- This document and any information herein may not be reproduced without prior written permission from TOSHIBA. Even with TOSHIBA's written permission, reproduction is permissible only if reproduction is without alteration/omission.
- Though TOSHIBA works continually to improve Product's quality and reliability, Product can malfunction or fail. Customers are responsible for complying with safety standards and for providing adequate designs and safeguards for their hardware, software and systems which minimize risk and avoid situations in which a malfunction or failure of Product could cause loss of human life, bodily injury or damage to property, including data loss or corruption. Before customers use the Product, create designs including the Product, or incorporate the Product into their own applications, customers must also refer to and comply with (a) the latest versions of all relevant TOSHIBA information, including without limitation, this document, the specifications, the data sheets and application notes for Product and the precautions and conditions set forth in the " Reliability Information" in Toshiba Memory Corporation's website and (b) the instructions for the applications, including but not limited to (a) determining the appropriateness of the use of this Product in such design or applications; (b) evaluating and determining the applicability of any information contained in this document, or in charts, diagrams, programs, algorithms, sample application circuits, or any other referenced documents; and (c) validating all operating parameters for such designs and applications. TOSHIBA ASSUMES NO LIABILITY FOR CUSTOMERS' PRODUCT DESIGN OR APPLICATIONS.
- PRODUCT IS NEITHER INTENDED NOR WARRANTED FOR USE IN EQUIPMENTS OR SYSTEMS THAT REQUIRE EXTRAORDINARILY HIGH LEVELS OF QUALITY AND/OR RELIABILITY, AND/OR A MALFUNCTION OR FAILURE OF WHICH MAY CAUSE LOSS OF HUMAN LIFE, BODILY INJURY, SERIOUS PROPERTY DAMAGE AND/OR SERIOUS PUBLIC IMPACT ("UNINTENDED USE"). Except for specific applications as expressly stated in this document, Unintended Use includes, without limitation, equipment used in nuclear facilities, equipment used in the aerospace industry, lifesaving and/or life supporting medical equipment, equipment used for automobiles, trains, ships and other transportation, traffic signaling equipment, equipment used to control combustions or explosions, safety devices, elevators and escalators, and devices related to power plant. IF YOU USE PRODUCT FOR UNINTENDED USE, TOSHIBA ASSUMES NO LIABILITY FOR PRODUCT. For details, please contact your TOSHIBA sales representative or contact us via our website.
- Do not disassemble, analyze, reverse-engineer, alter, modify, translate or copy Product, whether in whole or in part.
- Product shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable laws or regulations.
- The information contained herein is presented only as guidance for Product use. No responsibility is assumed by TOSHIBA for any infringement of patents or any other intellectual property rights of third parties that may result from the use of Product. No license to any intellectual property right is granted by this document, whether express or implied, by estoppel or otherwise.
- ABSENT A WRITTEN SIGNED AGREEMENT, EXCEPT AS PROVIDED IN THE RELEVANT TERMS AND CONDITIONS OF SALE FOR PRODUCT, AND TO THE MAXIMUM EXTENT ALLOWABLE BY LAW, TOSHIBA (1) ASSUMES NO LIABILITY WHATSOEVER, INCLUDING WITHOUT LIMITATION, INDIRECT, CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES OR LOSS, INCLUDING WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF OPPORTUNITIES, BUSINESS INTERRUPTION AND LOSS OF DATA, AND (2) DISCLAIMS ANY AND ALL EXPRESS OR IMPLIED WARRANTIES AND CONDITIONS RELATED TO SALE, USE OF PRODUCT, OR INFORMATION, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY OF INFORMATION, OR NONINFRINGEMENT.
- Do not use or otherwise make available Product or related software or technology for any military purposes, including without limitation, for the design, development, use, stockpiling or manufacturing of nuclear, chemical, or biological weapons or missile technology products (mass destruction weapons). Product and related software and technology may be controlled under the applicable export laws and regulations including, without limitation, the Japanese Foreign Exchange and Foreign Trade Law and the U.S. Export Administration Regulations. Export and re-export of Product or related software or technology are strictly prohibited except in compliance with all applicable export laws and regulations.
- Please contact your TOSHIBA sales representative for details as to environmental matters such as the RoHS compatibility of Product. Please
  use Product in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including
  without limitation, the EU RoHS Directive. TOSHIBA ASSUMES NO LIABILITY FOR DAMAGES OR LOSSES OCCURRING AS A RESULT
  OF NONCOMPLIANCE WITH APPLICABLE LAWS AND REGULATIONS.

# TOSHIBA MEMORY CORPORATION

# **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Toshiba: TC58BYG0S3HBAI4



Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;

- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);

- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;

- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком):

- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«FORSTAR» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели, кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный) Факс: 8 (812) 320-03-32 Электронная почта: ocean@oceanchips.ru Web: http://oceanchips.ru/ Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А