


## 700 Series Dual-Range and Vacuum Pressure Modules

### Instruction Sheet

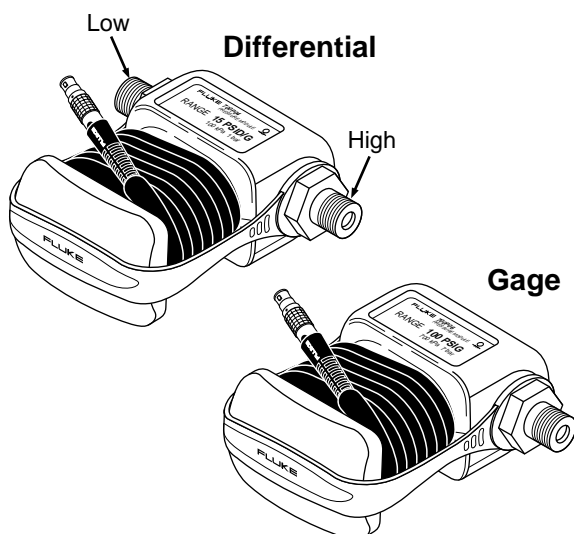

is1f.eps

### Introduction

The Fluke 700PDX Series Pressure Modules measure positive and negative pressure. The 700PVX modules measure vacuum. The 700PDX modules work with the Fluke 700 Series Documenting Process Calibrators. The 700PVX modules work only with the 740 Series Calibrators. Read this sheet before you use the pressure module. This sheet contains specifications and information about how to avoid damaging the pressure module. See the calibrator's Users Manual for operating instructions.

### Note

*If you are using a Fluke-701 or Fluke-702, software V1.3 or higher is required. See specification footnote 1.*

The pressure module measures pressure or vacuum using an internal microprocessor. It receives operating power from and sends digital information to the calibrator.

Gage pressure modules have one pressure fitting and measure pressure with respect to atmospheric pressure. Differential pressure modules have two pressure fittings and measure the difference between the applied pressure on the high fitting versus the low fitting. A differential pressure module functions like a gage module when the low fitting is open.

### Box Contents

Pressure module, strap, 1/4 NPT to 1/4 ISO metric adapters (one for gage, two for differential), and instruction sheet.

### Protecting Yourself from Pressure Releases

To avoid a violent release of pressure in a pressurized system, shut off the isolation valve and slowly bleed off the pressure before you attach or remove the pressure module from the pressure line.

### Avoiding Overpressure Damage

Applying pressure in excess of the BURST PRESSURE specified on the pressure module can destroy the pressure module. Burst pressure is 3X full scale.

### Avoiding Mechanical Damage

To avoid damaging the pressure module, never apply more than 10 ft.-lbs. of torque between the pressure module fittings or between the fittings and the body of the module. Always apply appropriate torque between the pressure module fitting and connecting fittings or adapters. Figure 1 shows the correct way and incorrect ways to use a wrench when applying torque to the pressure module fitting.



is2f.eps

Figure 1.

Table 1. Specifications <sup>1</sup> (% of full scale)

Model	Range <sup>2</sup>	Gage or Differential	Isolated or Nonisolated	Reference Uncertainty (23 ° ± 3 °C)	Stability (1 Year)	Temp (0 ° to 50 °C)	Total Uncertainty <sup>3</sup>
Fluke-700PD2	-1 to 1.0000 psi -6.89 to 6.8900 kPa -6.89E-2 to 6.89 E-2 bar	Differential	Isolated	0.150%	0.025%	0.025%	0.200%
Fluke-700PD3	-5 to 5.0000 psi -34 to 34.000 kPa -0.34 to 0.3400 bar	Differential	Isolated	0.040%	0.015%	0.015%	0.070%
Fluke-700PD4	-15 to 15.000 psi -100 to 100.00 kPa -1 to 1.0000 bar	Differential	Isolated	0.025%	0.010%	0.015%	0.050%
Fluke-700PD5	-15 to 30.000 psi -100 to 200.00 kPa -1 to 2.0000 bar	Gage	Isolated	0.025%	0.010%	0.015%	0.050%
Fluke-700PD6	-15 to 100.00 psi -100 to 700.00 kPa -1 to 7.0000 bar	Gage	Isolated	0.025%	0.010%	0.015%	0.050%
Fluke-700PD7	-15 to 200.00 psi -100 to 1400.0 kPa -1 to 14.000 bar	Gage	Isolated	0.040%	0.015%	0.015%	0.070%
Fluke-700PV3	0 to -5.0000 psi 0 to -34.000 kPa 0 to -0.3400 bar	Differential	Isolated	0.040%	0.015%	0.015%	0.070%
Fluke-700PV4	0 to -15.000 psi 0 to -100.00 kPa 0 to -1.0000 bar	Differential	Isolated	0.040%	0.015%	0.015%	0.070%

- Use of the pressure zero function is required to achieve these specifications. Contact your Fluke Service Center for upgrade of your Fluke 701 or Fluke 702 V1.0, V1.1, or V1.2 Calibrator. (PV3 and PV4 not compatible with the 701 and 702.)
- Available pressure units (psi, kPa, bar, inHg, mmHg, inH<sub>2</sub>O, ftH<sub>2</sub>O, kg/cm<sup>2</sup>, mmH<sub>2</sub>O) are determined by the calibrator being used.
- Accuracy specifications apply for 1 year for full span from 0 °C to 50 °C. Typical uncertainty is 1% of full span from -10 °C to 0 °C.
- Maximum non-destructive pressure: 3X maximum rated pressure, including common mode pressure.
- Maximum common mode pressure: 3X maximum rated pressure.
- Specifications reflect a confidence interval of 95%.

## **Avoiding Corrosion Damage**

To avoid damaging the pressure module from corrosion, use it only with specified media as shown below:

- Isolated: any medium that is compatible with type 316 stainless steel on the high side. Use dry, noncorrosive gasses only on the low side.
- Nonisolated: dry, noncorrosive gasses only.

## **Recommended Measurement Technique**

For best results, it is recommended that the module be pressurized to full scale and then vented to zero pressure (atmosphere) prior to zeroing and making measurements.

### *Note*

*Low range pressure modules may be sensitive to gravity. For best results, pressure modules 30 psi and below should be held at the same physical orientation from the time they are zeroed until the measurement is complete.*

## **Pressure Calibration Kit**

The Fluke-700PCK Pressure Calibration Kit makes it possible to calibrate pressure modules at ambient temperature with a precision pressure calibrator or dead weight tester at least 4X better than the module specification. A 386 or better PC and Windows® 3.1 are required. The kit is an optional accessory available from your distributor or Fluke.

## **Performance Test**

If you need to check that the pressure module meets its accuracy specification, use a dead weight tester or suitable pressure calibrator. The accuracy of the dead weight tester or pressure calibrator should be at least 4X better than the module's pressure specification. Proceed as follows to verify that a pressure module is operating within specification:

1. Read the pressure value with no externally applied pressure to make sure the 0% of scale is correct. When reading the pressure with a 700 Series calibrator, press the ZERO key to remove any zero offset.

### *Note*

*If you are using a Fluke-701 or Fluke-702, the pressure ZERO function is available only with V1.3 or higher software. Contact your Fluke Service Center for upgrade of earlier calibrators.*

2. Connect the pressure module to a dead weight tester.
3. Choose pressure test values that give approximately 20% of full span steps.
4. Set the dead weight tester to each of these pressures and verify that each reading is within the specification in Table 1. Percent of full span is calculated as follows:  
 $100\% \times (\text{reading} - \text{dead weight tester setting}) / (\text{top of span} - \text{bottom of span})$ .
5. If temperature sensitivity is of concern, repeat steps 1 through 4 at various controlled temperatures.

## **Certifications**

CE Conforms to European Standard EN61010-1, EN61326.

### **Limited Warranty**

Each Fluke product is warranted to be free from defects in material and workmanship under normal use and service. The warranty period is one year and begins on the date of shipment. Parts, product repairs and services are warranted for 90 days. This warranty extends only to the original buyer or end user customer of a Fluke authorized reseller, and does not apply to fuses, disposable batteries or to any product which, in Fluke's opinion, has been misused, altered, neglected or damaged by accident or abnormal conditions of operation or handling. Fluke warrants that software will operate substantially in accordance with its functional specifications for 90 days and that it has been properly recorded on nondefective media. Fluke does not warrant that software will be error free or operate without interruption.

Fluke authorized resellers shall extend this warranty on new and unused products to enduser customers only but have no authority to extend a greater or different warranty on behalf of Fluke. Warranty support is available if product is purchased through a Fluke authorized sales outlet or Buyer has paid the applicable international price. Fluke reserves the right to invoice Buyer for importation costs of repair/replacement parts when product purchased in one country is submitted for repair in another country.

Fluke's warranty obligation is limited, at Fluke's option, to refund of the purchase price, free of charge repair, or replacement of a defective product which is returned to a Fluke authorized service center within the warranty period.

To obtain warranty service, contact your nearest Fluke authorized service center or send the product, with a description of the difficulty, postage and insurance prepaid (FOB Destination), to the nearest Fluke authorized service center. Fluke assumes no risk for damage in transit. Following warranty repair, the product will be returned to Buyer, transportation prepaid (FOB Destination). If Fluke determines that the failure was caused by misuse, alteration, accident or abnormal condition of operation or handling, Fluke will provide an estimate of repair costs and obtain authorization before commencing the work.

Following repair, the product will be returned to the Buyer transportation prepaid and the Buyer will be billed for the repair and return transportation charges (FOB Shipping Point).

THIS WARRANTY IS BUYER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. FLUKE SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, INCLUDING LOSS OF DATA, WHETHER ARISING FROM BREACH OF WARRANTY OR BASED ON CONTRACT, TORT, RELIANCE OR ANY OTHER THEORY.

Since some countries or states do not allow limitation of the term of an implied warranty, or exclusion or limitation of incidental or consequential damages, the limitations and exclusions of this warranty may not apply to every buyer. If any provision of this Warranty is held invalid or unenforceable by a court of competent jurisdiction, such holding will not affect the validity or enforceability of any other provision.

### **In Case of Difficulty**

For service or calibration, call your nearest authorized Fluke Service Center. A list of service centers is available on the World Wide Web at [www.fluke.com](http://www.fluke.com) or you can call Fluke using any of the phone numbers listed below.

For application or operation assistance or information on Fluke products, call:

USA: 1-888-99-FLUKE (1-888-993-5853)  
Canada: 1-800-36-FLUKE (1-800-363-5853)  
Europe: +31 402-678-200  
Japan: +81-3-3434-0181  
Singapore: +65-738-5655  
Anywhere in the world: +1-425-446-5500

Fluke Corporation  
P.O. Box 9090  
Everett, WA 98206-9090  
USA

Fluke Europe B.V.  
P.O. Box 1186  
5602 B.D. Eindhoven  
The Netherlands

Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;
- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком);
- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «**JONHON**», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «**FORSTAR**».



**JONHON**

«**JONHON**» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«**FORSTAR**» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели,  
кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный)

Факс: 8 (812) 320-03-32

Электронная почта: [ocean@oceanchips.ru](mailto:ocean@oceanchips.ru)

Web: <http://oceanchips.ru/>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А