

**FLUKE®**

# 51-54 Series II

Thermometer

## Product Overview

PN 1276114

September 1999 Rev. 2, 3/11

© 1999-2011 Fluke Corporation. All rights reserved. Printed in USA. Specifications are subject to change without notice.

All product names are trademarks of their respective companies.

## **LIMITED WARRANTY & LIMITATION OF LIABILITY**

This Fluke product will be free from defects in material and workmanship for three years from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

**THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY.** Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Fluke Corporation  
P.O. Box 9090  
Everett, WA 98206-9090  
U.S.A.

Fluke Europe B.V.  
P.O. Box 1186  
5602 BD Eindhoven  
The Netherlands

# 51–54 Series II

## Introduction

The Fluke Models 51, 52, 53, and 54 Thermometers (“the thermometer”) are microprocessor-based, digital thermometers.

This guide provides an overview of the thermometers. Detailed *Users Manuals* are available on the accompanying CD-ROM. Each thermometer comes with a 3-year warranty, which is described in the *Users Manual*.

<b>Model</b>	<b>Inputs</b>	<b>Thermocouple Types</b>
51	Single	J, K, T, E
52	Dual	J, K, T, E
53	Single	J, K, T, E, R, S, N
54	Dual	J, K, T, E, R, S, N

The Models 53 and 54 have logging and PC interface capabilities.

## 51-54 Series II

### Product Overview

---

## Contacting Fluke

To order accessories, a printout of the *Users Manual*, receive assistance, or locate the nearest Fluke distributor or Service Center, call:

USA: 1-888-99-FLUKE (1-888-993-5853)

Canada: 1-800-36-FLUKE (1-800-363-5853)

Europe: +31 402-678-200

Japan: +81-3-3434-0181

Singapore: +65-738-5655

Anywhere in the world: +1-425-446-5500

Address correspondence to:

Fluke Corporation

P.O. Box 9090

Everett, WA 98206-9090

USA

Fluke Europe B.V.

P.O. Box 1186

5602 BD Eindhoven

The Netherlands

Visit us on the World Wide Web at: [www.fluke.com](http://www.fluke.com)

To register your product, visit [www.fluke-warranty.com](http://www.fluke-warranty.com)

## Replacement Parts and Accessories

Accessory	Part Number
Holster and Flex Stand™ Assembly	1272438
AA NEDA 15A IEC LR6 batteries	376756
80PK-1 K-Type Bead Thermocouple	773135
CD-ROM	1276106
Service Manual	1276123

## Safety Information

### Warning

A Warning identifies conditions and actions that pose hazards to the user. To avoid electrical shock or personal injury, follow these guidelines:

- Before using the thermometer inspect the case. Do not use the thermometer if it appears damaged. Look for cracks or missing plastic. Pay particular attention to the insulation around the connectors.
- Disconnect the thermocouple(s) from the thermometer before opening the case.
- Replace the batteries as soon as the battery indicator (■) appears. The possibility of false readings can lead to personal injury.
- Do not use the thermometer if it operates abnormally. Protection may be impaired. When in doubt, have the thermometer serviced.
- Do not operate the thermometer around explosive gas, vapor, or dust.
- Reflective objects result in lower than actual temperature measurements. These objects pose a burn hazard.
- Do not connect to voltages >30 V ac rms, 42 V pk, 60 V dc from earth ground.

#### Warning (cont.)


- **Models 52 and 54:** Measurement errors may occur if voltages on the measurement surfaces result in potentials greater than 1 V between the two thermocouples. When potential differences are anticipated between the thermocouples, use electrically insulated thermocouples.
- When servicing the thermometer, use only specified replacement parts.
- Do not use the thermometer with any part of the case or cover removed.

#### Caution

To avoid damaging the thermometer or the equipment under test.

- Use the proper thermocouples, function, and range for your thermometer.
- Do not attempt to recharge the batteries.
- Do not throw batteries into a fire to prevent explosion.
- Follow local laws or regulations when disposing batteries.
- Match the + and – polarities of the battery with the battery case.


## Components

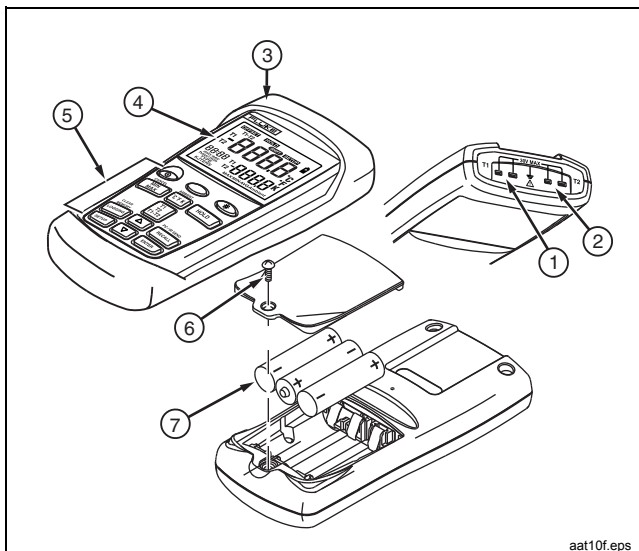

aat10f.eps

①	Thermocouple T1 input	⑤	Buttons
②	<i>Models 52 and 54:</i> Thermocouple T2 input	⑥	Battery door
③	Holster	⑦	Batteries
④	Display		



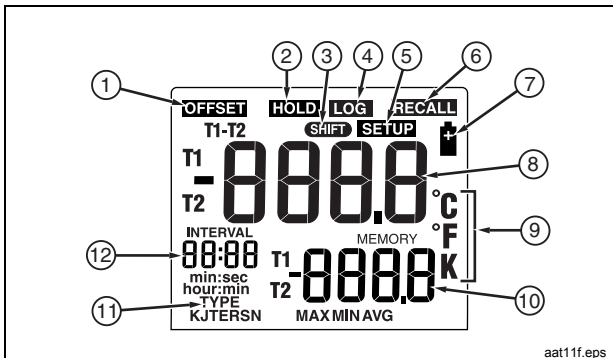
















## Display Elements



①	Measurement includes an offset.	⑦	Low battery.
②	Displayed readings are frozen.	⑧	Primary Display.
③	Shift function is in progress.	⑨	Temperature units.
④	Readings are being logged.*	⑩	Secondary Display.
⑤	Setup is in progress.	⑪	Thermocouple type.
⑥	Logged readings are displayed.*	⑫	Time Display.
* Models 53 and 54			



## Buttons

	Turn the thermometer on or off.
 (Shift function)	 ,  = stop displaying the minimum, maximum, and average readings.  ,  = delete logged readings from memory.  ,  = toggle the IR port on and off.
	Turn the backlight on and off.
	Step through the maximum, minimum, and average readings.
	Switch between Celsius (°C), Fahrenheit (°F), and Kelvin (K).
	Freeze or unfreeze the displayed readings.
	Toggle showing the T1, T2, and T1-T2. ( <i>Models 52 and 54</i> )
	Start or exit Setup.
	Scroll to a Setup option or increase the displayed setting.
	Scroll to a Setup option or decrease the displayed setting.
	Enter a Setup option or store the displayed setting.
	Start or stop logging.*
	Show toggle showing logged and MIN MAX readings.*
* <i>Models 53 and 54</i>	

## **Changing Setup Options**


1. Press **SETUP** to start or exit Setup.
2. Press **▲** or **▼** to scroll to the setup option you want to change.
3. Press **ENTER** to indicate that you want to change this setting.
4. Press **▲** or **▼** until the setting you want to use appears on the display.
5. Press **ENTER** to store the new setting in memory.

### **Setup Options**

<b>Option</b>	<b>Menu Item</b>	<b>Settings</b>
Logging Interval*	<b>INTERVAL</b>	<b>0, 1, 2, 3, 4, or USER</b>
Thermocouple	<b>TYPE</b>	<b>JKTERSN</b>
Offset	<b>OFFSET</b>	<b>T1 or T2</b>
Sleep Mode	<b>SLP</b>	<b>on or OFF</b>
Time*	<b>--:--</b>	<b>0 to 24</b> for hours <b>0 to 60</b> for minutes
Line Frequency Noise Rejection	<b>L i n e</b>	<b>60 H</b> (60 Hz North America) <b>50 H</b> (50 Hz other countries)
* Models 53 and 54		

## Specifications

### General

<b>Weight</b>	280 g (10 oz)
<b>Dimensions (without holster)</b>	2.8 cm × 7.8 cm × 16.2 cm (1.1 in × 3 in × 6.4 in)
<b>Battery</b>	3 AA batteries
<b>Certification</b>	CE, 
<b>Safety</b>	CAN/CSA C22.2 No. 61010-1-04, ANSI/UL 61010-1:2004, EN/IEC 61010-1:2001
<b>EMC</b>	EN/IEC 61326-1:2006
<b>CAT I</b>	OVERVOLTAGE (Installation) CATEGORY I, Pollution Degree 2 per IEC1010-1*
* Refers to the level of Impulse Withstand Voltage protection provided. Category 1 products should not be attached to mains circuits.	

### Environmental

<b>Operating Temperature</b>	–10 °C to 50 °C (14 °F to 122 °F)
<b>Storage Temperature</b>	–40 °C to +60 °C (–40 °F to +140 °F)
<b>Humidity</b>	Non condensing <10 °C (<50 °F) 95% RH: 10 °C to 30 °C (50 °F to 86 °F) 75% RH: 30 °C to 40 °C (86 °F to 104 °F) 45% RH: 40 °C to 50 °C (104 °F to 122 °F)

## 51-54 Series II

### Product Overview

#### Electrical

<b>Measurement Range</b>	J-type: $-210\text{ }^{\circ}\text{C}$ to $+1200\text{ }^{\circ}\text{C}$ ( $-346\text{ }^{\circ}\text{F}$ to $+2192\text{ }^{\circ}\text{F}$ ) K-type: $-200\text{ }^{\circ}\text{C}$ to $+1372\text{ }^{\circ}\text{C}$ ( $-328\text{ }^{\circ}\text{F}$ to $+2501\text{ }^{\circ}\text{F}$ ) T-type: $-250\text{ }^{\circ}\text{C}$ to $+400\text{ }^{\circ}\text{C}$ ( $-418\text{ }^{\circ}\text{F}$ to $+752\text{ }^{\circ}\text{F}$ ) E-type: $-150\text{ }^{\circ}\text{C}$ to $+1000\text{ }^{\circ}\text{C}$ ( $-238\text{ }^{\circ}\text{F}$ to $+1832\text{ }^{\circ}\text{F}$ ) N-type: $-200\text{ }^{\circ}\text{C}$ to $+1300\text{ }^{\circ}\text{C}$ ( $-328\text{ }^{\circ}\text{F}$ to $+2372\text{ }^{\circ}\text{F}$ ) R- and S-type: $0\text{ }^{\circ}\text{C}$ to $+1767\text{ }^{\circ}\text{C}$ ( $+32\text{ }^{\circ}\text{F}$ to $+3212\text{ }^{\circ}\text{F}$ )
<b>Display Resolution</b>	$0.1\text{ }^{\circ}\text{C} / ^{\circ}\text{F} / \text{K} < 1000^{\circ}$ $1.0\text{ }^{\circ}\text{C} / ^{\circ}\text{F} / \text{K} \geq 1000^{\circ}$
<b>Measurement Accuracy</b>	J-, K-, T-, E-, and N-type: $\pm[0.05\text{ \% of reading} + 0.3\text{ }^{\circ}\text{C} (0.5\text{ }^{\circ}\text{F})]$ [Below $-100\text{ }^{\circ}\text{C}$ ( $-148\text{ }^{\circ}\text{F}$ ): add $0.15\text{ \%}$ of reading for J, K, E, and N; and $0.45\text{ \%}$ of reading for T] R- and S-type: $\pm[0.05\text{ \% of reading} + 0.4\text{ }^{\circ}\text{C} (0.7\text{ }^{\circ}\text{F})]$
<b>Temperature Coefficient</b>	$0.01\text{ \% of reading} + 0.03\text{ }^{\circ}\text{C per }^{\circ}\text{C} (0.05\text{ }^{\circ}\text{F per }^{\circ}\text{F})$ outside the specified $+18\text{ }^{\circ}\text{C}$ to $28\text{ }^{\circ}\text{C}$ ( $+64\text{ }^{\circ}\text{F}$ to $+82\text{ }^{\circ}\text{F}$ ) range [Below $-100\text{ }^{\circ}\text{C}$ ( $-148\text{ }^{\circ}\text{F}$ ): add $0.04\text{ \%}$ of reading for J-, K-, E-, and N-type; and $0.08\text{ \%}$ of reading for T-type]
<b>Electromagnetic Compatibility</b>	Susceptibility: $\pm 2\text{ }^{\circ}\text{C}$ ( $\pm 3.6\text{ }^{\circ}\text{F}$ ) for 80 MHz to 200 MHz in 1.5 V/m field, for 200 MHz to 1000 MHz in 3 V/m field. Emissions: Commercial Limits per EN50081-1
<b>Maximum Differential Common Mode Voltage</b>	1 V (Maximum voltage difference between T1 and T2)
<b>Temperature Scale</b>	ITS-90
<b>Applicable Standards</b>	NIST-175
Accuracy is specified for ambient temperatures between $18\text{ }^{\circ}\text{C}$ ( $64\text{ }^{\circ}\text{F}$ ) and $28\text{ }^{\circ}\text{C}$ ( $82\text{ }^{\circ}\text{F}$ ) for a period of 1 year. The above specifications do not include thermocouple error.	

Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;
- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком);
- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



## JONHON

«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«FORSTAR» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели, кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный)

Факс: 8 (812) 320-03-32

Электронная почта: [ocean@oceanchips.ru](mailto:ocean@oceanchips.ru)

Web: <http://oceanchips.ru/>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А