


EE-SPZ301/401


Use standard optical fiber.


- Photomicrosensor with light modulation for reduced external light interference.
- Easy adjustment and operation validation with an operation indicator (lights when light is incident).
- Wide operating voltage range: 5 to 24 VDC
- Supports connection with Programmable Controllers (PLCs).
- Easy-to-wire connectors assure easy maintenance.







 Be sure to read *Safety Precautions* on page 5.

Ordering Information

 Infrared light

Appearance	Application	Output configuration	Model
	Fiber connection	Dark-ON	EE-SPZ301
		Light-ON	EE-SPZ401

Fiber Unit and Attachment Combinations

Model	Fiber Unit	Attachment	Sensing distance	Sensing object	Directional angle
(Fiber connection) EE-SPZ301 EE-SPZ401	(Through-beam) E32-TC200	---	 20 mm	Opaque: 1 mm dia.	5 to 40°
		(Lens) E39-F1	 150 mm	Opaque: 4 mm dia. min.	
		(Side-view) E39-F2	 10 mm	Opaque: 3 mm dia. min.	20 to 60°
	(Reflective) E32-DC200	---	 1 to 6 mm	White paper: 15×15 mm	---

Note 1. The sensing distance given is a reference value applicable only when the fiber length is 60 cm. (Refer to the engineering data for the relationship between fiber length and sensing distance.)

2. Ambient operating temperature of Fiber section: -40 to 70°C, Attachment: -40 to 200°C, Retroreflector: -40 to 70°C

3. Ambient humidity: 5% to 85%


Ratings and Specifications

Item	Models	EE-SPZ301, EE-SPZ401
Power supply voltage		5 to 24 VDC $\pm 10\%$, ripple (p-p): 5% max.
Current consumption		Average: 15 mA max., Peak: 50 mA max.
Response frequency		100 Hz
Control output		5 to 24 VDC 80 mA load current with a residual voltage of 1.0 V max. 10 mA load current with a residual voltage of 0.4 V max.
Light source		GaAs infrared LED (pulse lighting) with a peak wavelength of 940 nm
Indicator		Light indicator (red)
Light-receiving element		Si photodiode (Maximum sensitivity wavelength: 850 nm)
Ambient illumination		3,000 lx max. with incandescent light or sunlight on the surface of the receiver
Degree of protection		IEC Standard IP50 (excluding terminal section.)
Ambient temperature		Operating: -10 to $+55^{\circ}\text{C}$ Storage: -25 to $+65^{\circ}\text{C}$
Ambient humidity		Operating: 5% to 85% Storage: 5% to 95%
Permissible bending radius of Fiber Unit		25 mm
Maximum fiber length		Through-beam: 180 cm Reflective: 100 cm
Vibration resistance		Destruction: 10 to 55 Hz, 1.5-mm double amplitude for 2 h each in X, Y, and Z directions
Shock resistance		Destruction: 500 m/s ² for 3 times each in X, Y, and Z directions
Cable		2 m max. (Thickness: AWG24 min.)
Weight		Approx. 3.0 g


Engineering Data (Typical)

Receiver Output vs. Sensing Distance Characteristics


EE-SPZ301 } + E32-TC200
EE-SPZ401 }

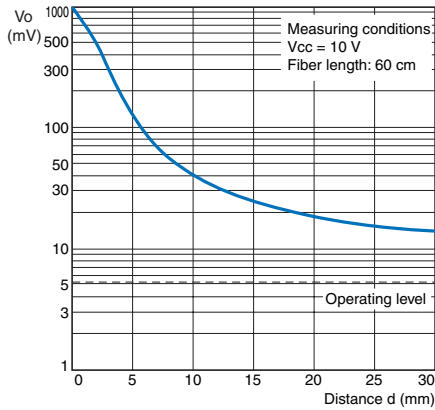


EE-SPZ301 } + E32-TC200
EE-SPZ401 } + E39-F1

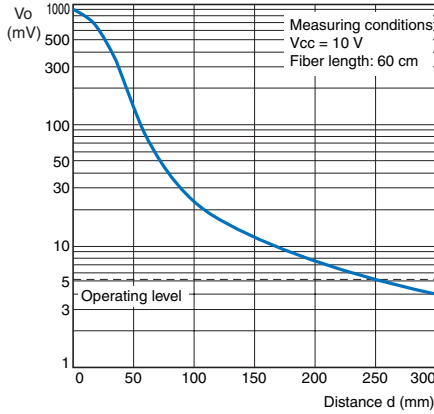

EE-SPZ301 } + E32-TC200
EE-SPZ401 } + E39-F2

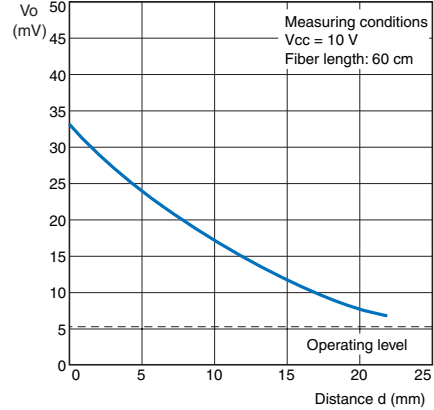


EE-SPZ301 } + E32-DC200
EE-SPZ401 }

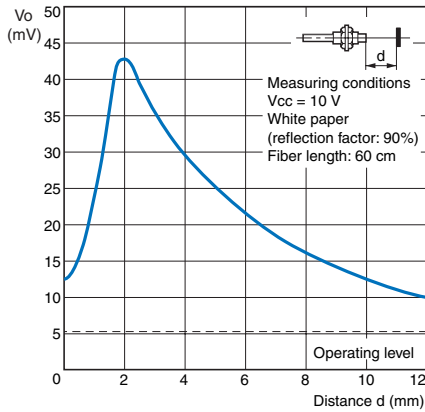


Sensing Angle Characteristics

EE-SPZ301 } + E32-DC200
EE-SPZ401 }

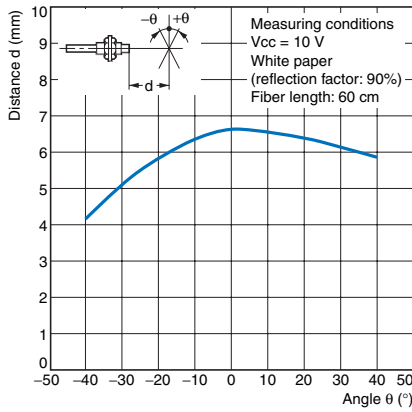


Receiver Output vs. Bending Radius

EE-SPZ301Y-01
EE-SPZ401Y-01

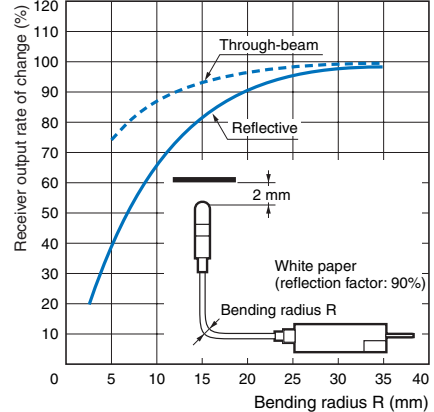


Sensing Position Characteristics


EE-SPZ301 } + E32-TC200
EE-SPZ401 }

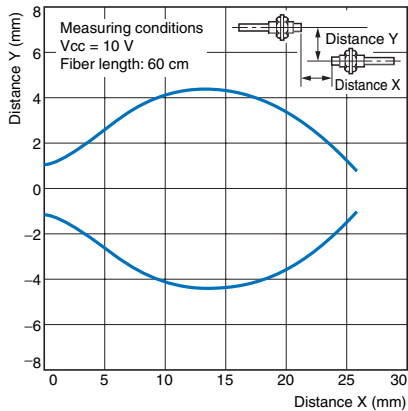


EE-SPZ301 } + E32-TC200
EE-SPZ401 } + E39-F1

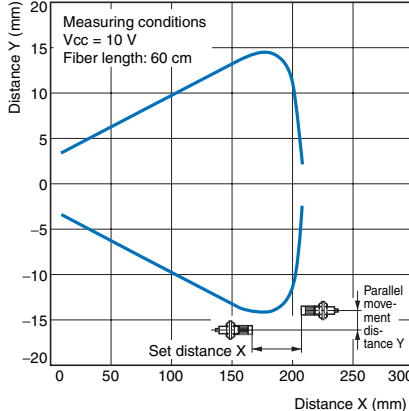


EE-SPZ301 } + E32-TC200
EE-SPZ401 } + E39-F2

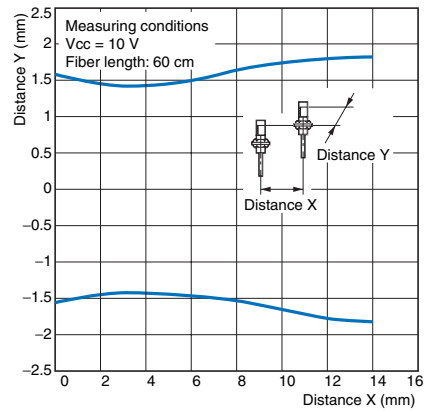

EE-SPZ301 } + E32-TC200
EE-SPZ401 } + E39-F2

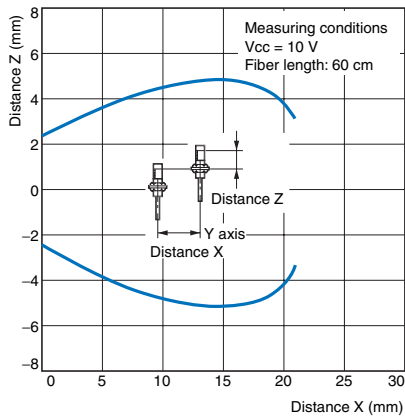


EE-SPZ301 } + E32-DC200
EE-SPZ401 } + E32-DC200

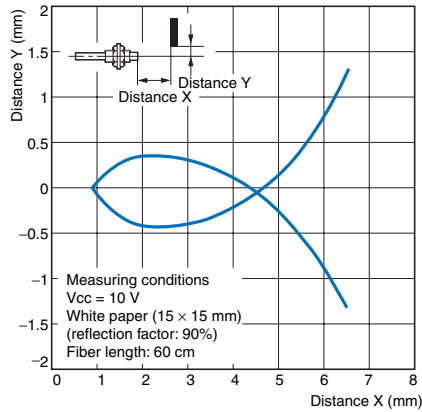


Fiber Length vs. Relative Sensing Distance Characteristics

EE-SPZ301 } + E32-TC200
EE-SPZ401 } + E32-TC200

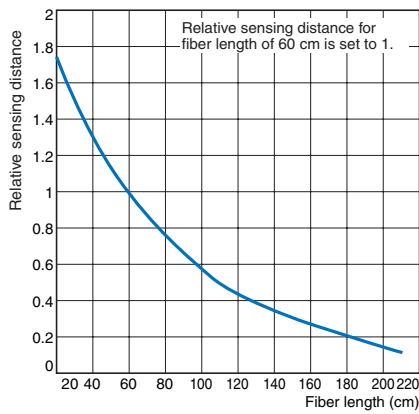

EE-SPZ301 } + E32-DC200
EE-SPZ401 } + E32-DC200

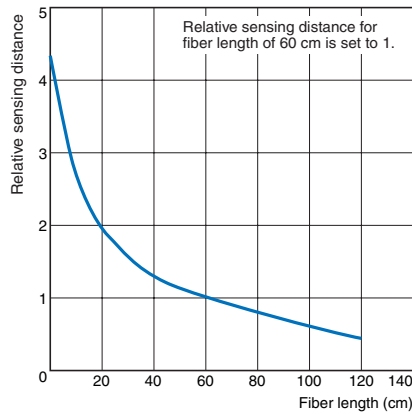

I/O Circuit Diagrams

Model	Output configuration	Timing charts	Output circuit
EE-SPZ401	Light-ON	<p>Incident: [ON]</p> <p>Interrupted: [OFF]</p> <p>Light indicator (red): ON [ON], OFF [OFF]</p> <p>Output transistor: ON [ON], OFF [OFF]</p> <p>Load 1 (relay): Operates [ON], Releases [OFF]</p> <p>Load 2: H [ON], L [OFF]</p>	<p>* Voltage output (when the sensor is connected to a transistor circuit)</p>
EE-SPZ301	Dark-ON	<p>Incident: [ON]</p> <p>Interrupted: [OFF]</p> <p>Light indicator (red): ON [OFF], OFF [ON]</p> <p>Output transistor: ON [OFF], OFF [ON]</p> <p>Load 1 (relay): Operates [OFF], Releases [ON]</p> <p>Load 2: H [OFF], L [ON]</p>	

Safety Precautions

Refer to *Warranty and Limitations of Liability*.

⚠ WARNING

This product is not designed or rated for ensuring safety of persons. Do not use it for such purposes.




Precautions for Correct Use


Make sure that this product is used within the rated ambient environment conditions.

Wiring

- A fiber that has been connected once cannot be disconnected.
- Use a cable with a wire size of at least AWG22 (cross-sectional area: 0.3 mm²). The total cable length must be of 2 m maximum.
- To use a cable length longer than 2 m, attach a capacitor with a capacitance of approximately 10 μF to the wires as shown below. The distance between the terminal and the capacitor must be within 2 m. (Use a capacitor with a dielectric strength that is at least twice the Sensor's power supply voltage.)

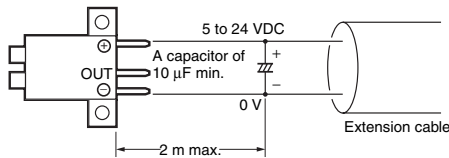


- The sensing distance of the EE-SPZ301/401 with the E32-DC200 are based on sensing a sheet of white paper with a reflection factor of 90%.
- When using the EE-SPZ301/401 with the E32-DC200 to detect a piece of white paper with a reflection factor of 90%, the sensing distance varies from 6 to 10 mm depending on the product.
- When using the EE-SPZ301/401 with the E32-DC200 to detect an object, the objects in the background should not be glossy.

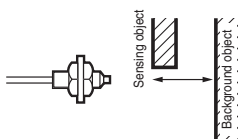


Decrease reflection from the background object, e.g., by providing a sufficient distance to the background or by using a black sponge or similar material as the background.

- Connection is made using a connector. Do not solder to the pins (leads). Use EE-1002 a connector or a EE-1003 (with a 1-m cable) connector. A EE-1003A Hold-down clip is available to prevent the EE-1003 connector from becoming disconnected.

- Make sure that the terminals are not subjected to stress (external force). Stress will cause damage to the terminals.




- If a metal mounting base causes inductive noise, the Photomicrosensor falsely detect incident light. If necessary, implement the following countermeasures.
 - (1) Connect the Sensor's negative terminal and mounting frame so that they have the same electric potential.
 - (2) Connect the Sensor's negative terminal and mounting frame through a 0.47-μF capacitor.
 - (3) Insert a 10-mm-thick plastic insulation plate between the Sensor and the mounting frame.
- When driving a small inductive load, such as a relay, wire as shown below. (Be sure to connect a diode to absorb the reverse voltage.)

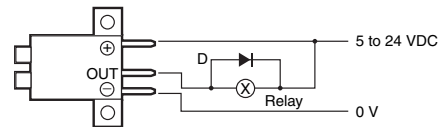



Tightening the Fiber Unit

- Use a tightening force of 0.78 N·m max.
- Use a tool appropriate for the nut.





Mounting the Fiber Unit

- Do not pull, press, or otherwise apply excessive force to the Fiber Unit.
- The bending radius of the Fiber Unit must be as large as possible (radius: 25 mm min.).
- As shown in the following figure, any bends must be made at least 40 mm from the base of the Unit.

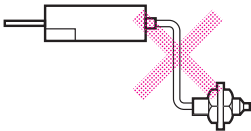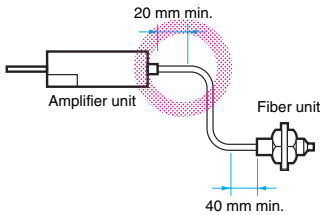


- Do not compress or apply a weight to the Fiber Unit.

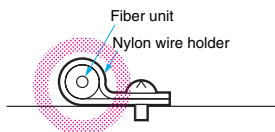

Installation


- When three or four Through-beam Sensors must be installed side-by-side, place the emitters and receivers on alternating sides.
- When using a Reflective Sensor to detect slow moving objects, incorrect operation may occur even if two Sensors are installed side-by-side.
- Be sure to keep the Amplifier Unit under 55°C even when using the fiber ends in high temperature environments.
- The connection force of the fiber and the Photomicrosensor will decrease when the ambient temperature is high. If high ambient temperatures can be expected, install the fiber with a holder or clip, and do not pull on the fiber.

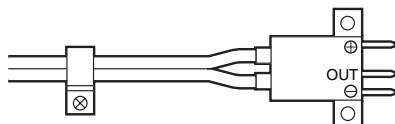

Install the fiber with a holder or clip.

Power Supply

- For increased operation stability, install a FG (frame ground terminal) or G (ground terminal) when using a commercially available switching regulator.

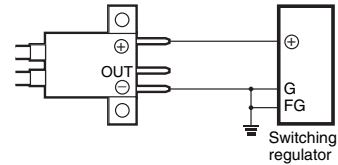


Mounting the Fiber Unit

1. Set at Fiber Unit at the specified length and cut it with the Fiber Cutting Tool.

Fiber Cutting Tool

- Insert the fiber into one of the insertion holes of the E39-F4 Cutting Tool to cut the fiber to the desired length.
- Press down the blade of the Cutting Tool to cut the fiber in a single stroke. Do not stop the Cutting Tool midway.
- Each insertion hole can be used only once. Do not use it again, otherwise the fiber may not be cut properly and the sensing distance may decrease.

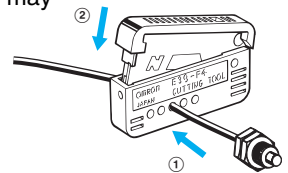

2. Set the Fiber Unit in the EE-SPZ301/401.


(Do not remove the Fiber Unit once it has been installed. Doing so may prevent the stopper in the Sensor from working properly, causing the Fiber Unit to become disconnected.)

Dimensions

Unless otherwise specified, the tolerance class IT16 is used for dimensions in this data sheet.

Sensors

EE-SPZ301
EE-SPZ401

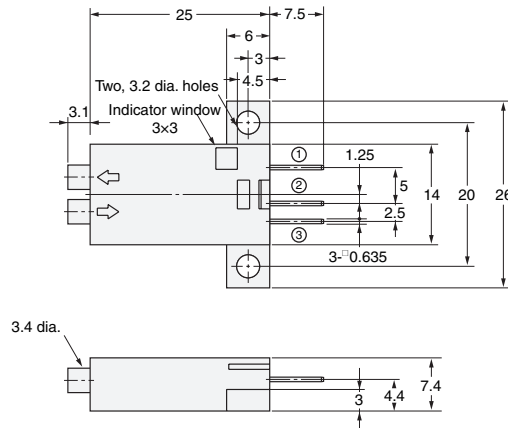


Terminal Arrangement


①	⊕	Vcc
②	OUT	OUTPUT
③	⊖	GND (0 V)

Fiber Units

Standard Fiber, Through-beam
E32-TC200

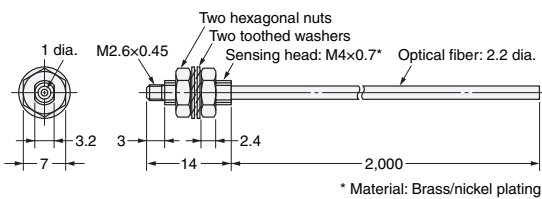


Standard Fiber, Reflective
E32-DC200

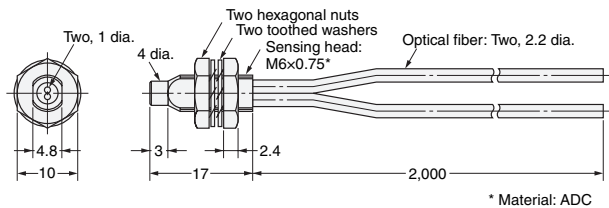


Other Products


Lens Units
E39-F1

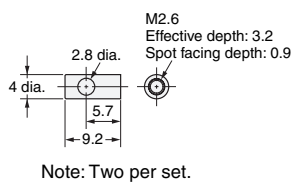

Side-view Units
E39-F2

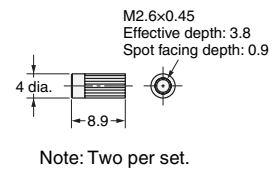

Fiber Cutter
E39-F4

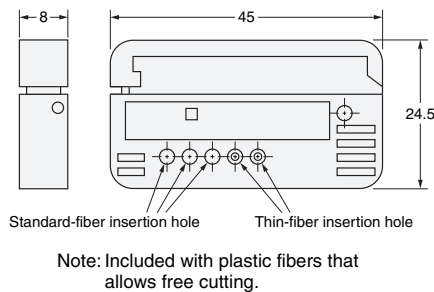

In the interest of product improvement, specifications are subject to change without notice.

Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

Disclaimers

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

ERRORS AND OMISSIONS

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

2008.9

In the interest of product improvement, specifications are subject to change without notice.

OMRON Corporation
Industrial Automation Company

<http://www.ia.omron.com/>

(c)Copyright OMRON Corporation 2008 All Right Reserved.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Omron:](#)

[E39-F2](#)

Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;
- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком);
- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



JONHON

«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«FORSTAR» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели,
кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный)

Факс: 8 (812) 320-03-32

Электронная почта: ocean@oceanchips.ru

Web: <http://oceanchips.ru/>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А