



... the world's most energy friendly microcontrollers

# USER MANUAL

## *Starter Kit EFM32WG-STK3800*



*The EFM32 Wonder Gecko Starter Kit is a feature rich platform for evaluation, prototyping and application development for the EFM32 Wonder Gecko MCU family with the ARM Cortex-M4F CPU core.*

### *Main features:*

- Advanced Energy Monitoring provides real-time information about the energy consumption of an application or prototype design.
- On-board debugger with the possibility to debug external targets.
- Several sensors, a 160-segment LCD Display, backup domain capacitor and an on-board NAND Flash.



# 1 Introduction

## 1.1 Description

The EFM32WG-STK3800 is an excellent starting point to get familiar with the EFM32 Wonder Gecko microcontrollers. The kit contains sensors and peripherals demonstrating some of the MCU's many capabilities. The kit can also serve as a starting point for application development.

## 1.2 Features

- EFM32WG990F256 MCU with 256 KB Flash and 32 KB RAM.
- Advanced Energy Monitoring system for precise current tracking.
- Integrated Segger J-Link USB debugger/emulator with debug out functionality.
- 160 segment Energy Micro LCD.
- 20 pin expansion header.
- Breakout pads for easy access to I/O pins.
- Power sources include USB and CR2032 battery.
- 2 user buttons, 2 user LEDs and a touch slider.
- Ambient Light Sensor and Inductive-capacitive metal sensor.
- EFM32 OPAMP footprint.
- 32 MB NAND Flash.
- USB Micro-AB (OTG) connector.
- 0.03F Super Capacitor for backup power domain.
- Crystals for LFXO and HFXO: 32.768kHz and 48.000MHz.

## 1.3 Getting Started

The first step to get started with your new EFM32WG-STK3800 is to go to

[<http://www.energymicro.com/simplicity>]

The Simplicity Studio software package contains all the tools, drivers, software examples and documentation needed to use the EFM32 Wonder Gecko Starter Kit. Some important tools for use with the EFM32WG-STK3800 are:

- *energyAware Commander*
- *energyAware Profiler*


The *energyAware Commander* is a tool for updating the kit's firmware, programming the MCU and launching demos.

The *energyAware Profiler* is the PC-side interface to the Advanced Energy Monitor. It provides the possibility to do energy-debugging and profiling of application code.

## 2 Kit Block Diagram

An overview of the EFM32 Wonder Gecko Starter Kit is shown in Figure 2.1


**Figure 2.1. EFM32WG-STK3800 Block Diagram**

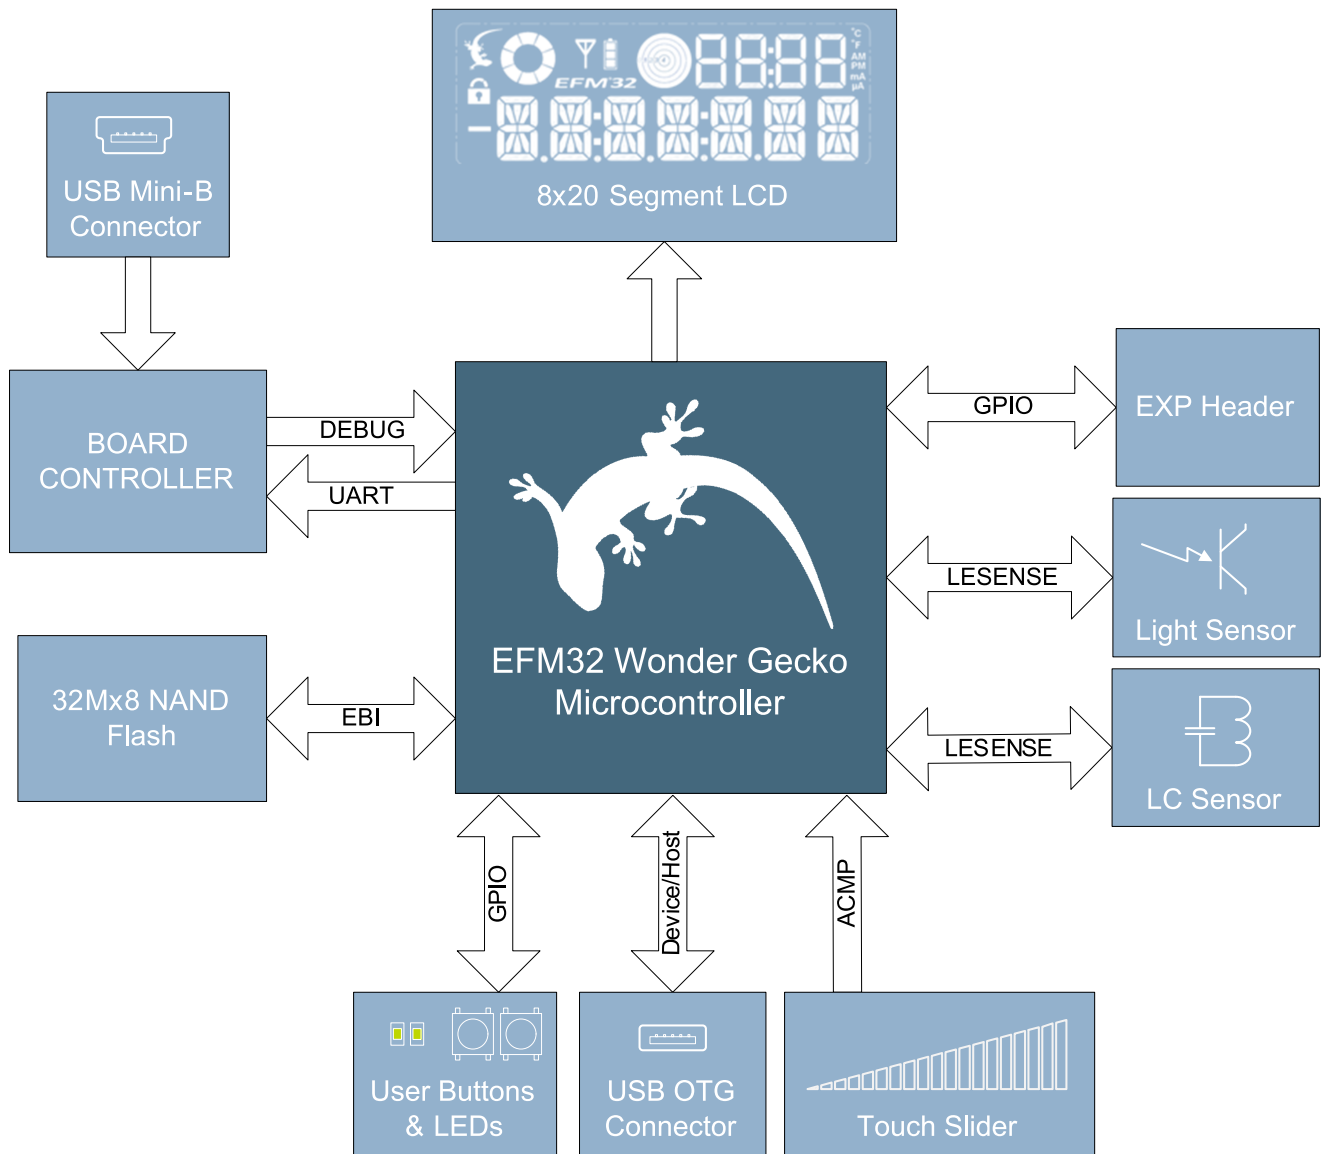

### 3 Kit Hardware Layout

The layout of the EFM32 Wonder Gecko Starter Kit is shown below.

**Figure 3.1. EFM32WG-STK3800 hardware layout**

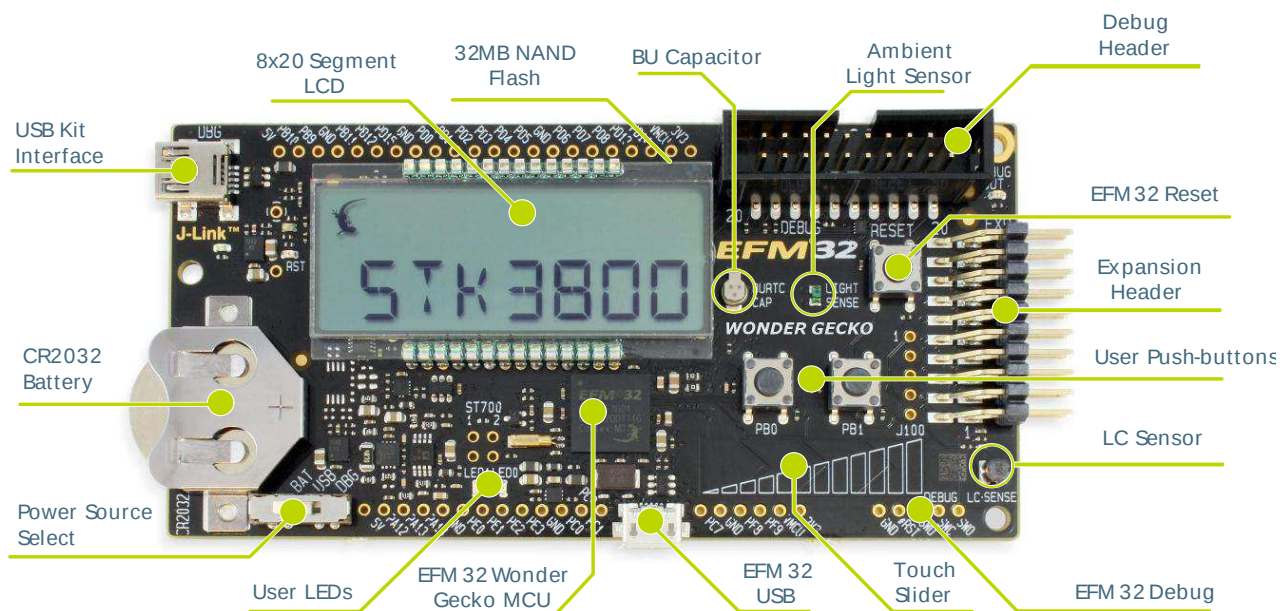

## 4 Power Supply and Reset


### 4.1 MCU Power Selection

The EFM32 Wonder Gecko MCU on the EFM32WG-STK3800 is designed to be powered by three different sources:

- Through the on-board debugger.
- Through the EFM32's own USB regulator.
- By a 3V Battery.

Selecting the power source is done with the slide switch in the lower left corner of the board. Figure 4.1 shows how the different power sources can be selected with the slide switch.

**Figure 4.1. EFM32WG-STK3800 Power Switch**

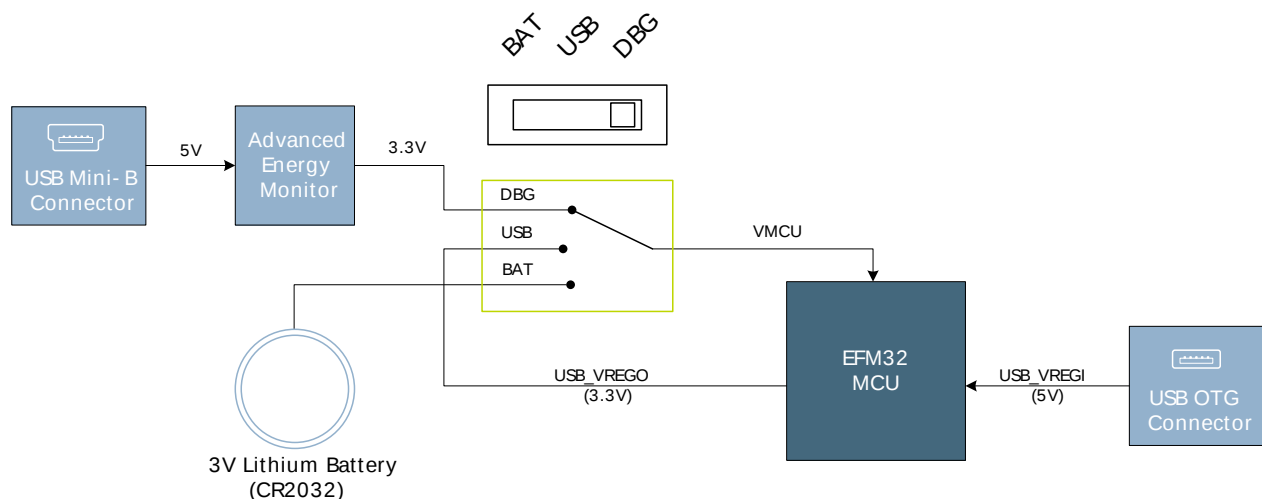

With the switch in the *DBG* position, an on-board low noise LDO with a fixed output voltage of 3.3V is used to power the MCU. This LDO is again powered from the "J-Link" USB cable. The Advanced Energy Monitor is now also connected in series, allowing accurate high speed current measurements and energy debugging/profiling.

With the switch in the *USB* position, the integrated linear regulator in the EFM32 Wonder Gecko MCU is used to power the rest of the chip as well as the USB PHY. This allows a USB device application where the MCU acts as a bus powered device.

Finally, with the switch in the *BAT* position, a 20mm coin cell battery in the CR2032 socket can be used to power the device.

#### Note

The Advanced Energy Monitor can only measure the current consumption of the EFM32 when the power selection switch is in the *DBG* position.

### 4.2 Board Controller Power

The Board Controller is responsible for important features such as the debugger and the Advanced Energy Monitor, and is powered exclusively through the USB port in the top left corner of the board. This part of the kit resides on a separate power domain, so a different power source can be selected for the MCU while retaining debugging functionality. This power domain is also isolated to prevent current leakage from the MCU power domain when power to the Board Controller is removed.

## 4.3 Backup Power Domain

The kit contains a backup capacitor that can be used together with the EFM32 Wonder Gecko's backup power domain. In this case, all other power sources are removed from the kit, and only a small part of the EFM32 runs off the capacitor. It is also possible to enter backup mode while the Board Controller is powered by selecting either *BAT* or *USB* with no battery in the socket or USB cable in the connector.

## 4.4 MCU Reset

The EFM32 MCU can be reset by a few different sources:

- The RESET button.
- The on-board debugger.
- An external debugger by pulling the *#RST* pin low.

## 4.5 Board Controller Reset

The Board Controller can be reset by removing and re-inserting the J-Link USB cable. Removing the Board Controller USB cable will not reset the EFM32, but whenever the Board Controller is powered up again, it will issue a RESET to the EFM32 through the on-board debugger.

## 5 Peripherals

The starter kit has a set of peripherals that showcase some of the features of the EFM32 Wonder Gecko microcontroller.


Be aware that most EFM32 I/O routed to peripherals are also routed to the breakout pads. This must be taken into consideration when using the breakout pads for your application.

### 5.1 Push Buttons and LEDs

The kit has two user push buttons marked PB0 and PB1. They are connected to the EFM32, and are debounced by RC filters with a time constant of 1ms. The buttons are connected to pins PB9 and PB10.

In addition to the two push buttons, the kit also features two yellow LEDs marked *LED0* and *LED1*, that are controlled by GPIO pins on the EFM32. The LEDs are connected to pins PE2 and PE3 in an active-high configuration.


**Figure 5.1. Buttons/LEDs**

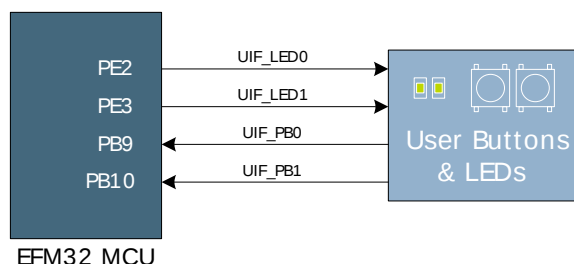

### 5.2 LCD

A 28-pin Energy Micro LCD display is connected to the EFM32. The LCD has 8 common lines and 20 segment lines, giving a total of 160 segments in 8-plexed mode. These lines are not shared on the breakout pads.

**Figure 5.2. 160 Segment LCD**

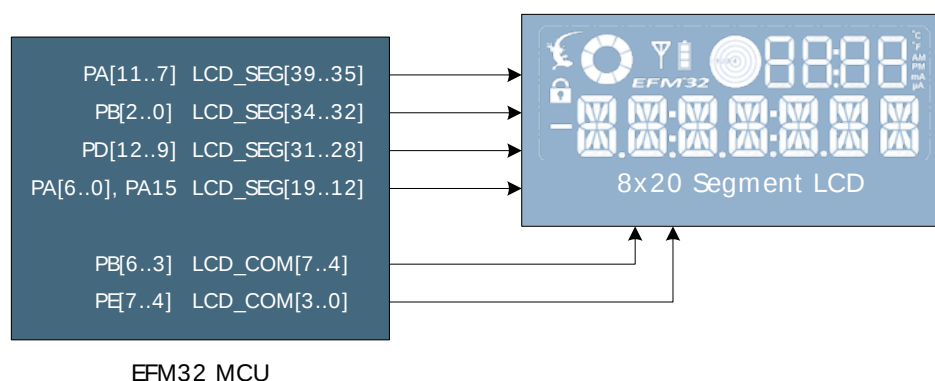


Capacitors for the EFM32 Wonder Gecko LCD boost function are also available on the EFM32WG-STK3800.

## 5.3 Capacitive Touch Slider

A touch slider utilizing the capacitive touch capability is available. It is placed beneath the two push buttons on the kit. The slider interpolates 4 separate pads to find the exact position of a finger. For low power operation, the touch slider can be used together with LESENSE to continuously scan all 4 pads, using LESENSE channels 8 to 11.

**Figure 5.3. Touch Slider**

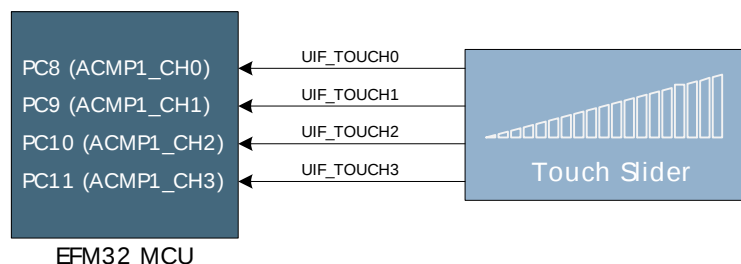


The capacitive touch slider works by sensing changes in the capacitance of the pads when touched by a human finger. Sensing the changes in capacitance is done by setting up the touch pad as part of an RC relaxation oscillator using the EFM32's analog comparator, and then counting the number of oscillations during a fixed period of time.

## 5.4 Ambient Light Sensor

The kit has a light sensitive, transistor type, ambient light sensor connected to the low energy sensor interface of the EFM32 Wonder Gecko MCU. The sensor is placed above the push buttons and can be used to sense changes in ambient light levels.

**Figure 5.4. Light Sensor**

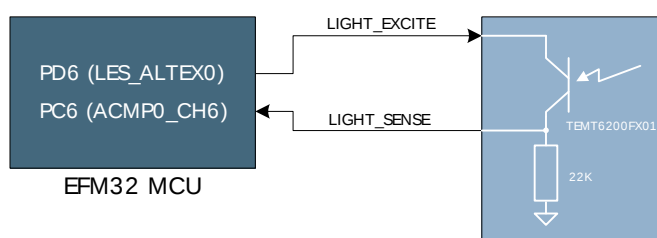


Two pins are used for the light sensor operation: one for excitation, and one for sensing. The sense pin is connected to ACMP0 CH6. Both the excitation pin and the sense pin can be controlled directly from the EFM32's LESENSE module.

## 5.5 LC Sensor

In the bottom right corner there is an inductive-capacitive sensor for demonstrating the low energy sensor interface. By setting up oscillating currents in the inductor, metal nearby the inductor can be sensed by measuring the oscillation decay time. The effective range is a few millimeters.


**Figure 5.5. LC Metal Sensor**

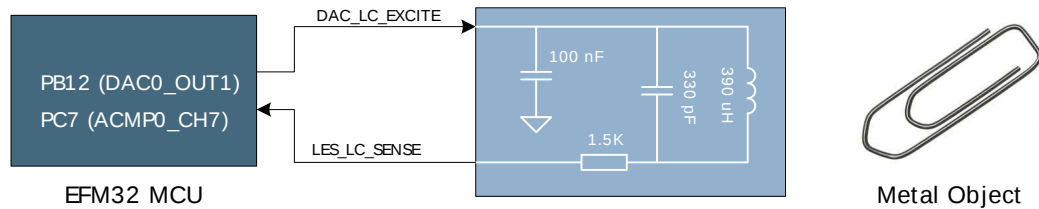

## 5.6 NAND Flash

A 32MB NAND Flash is connected to the external bus interface of the EFM32 Wonder Gecko MCU. The interface is a simple 8-bit parallel interface. This peripheral demonstrates the EFM32 Wonder Gecko's EBI module's NAND support with built in ECC generation.

**Figure 5.6. NAND Flash Interface**

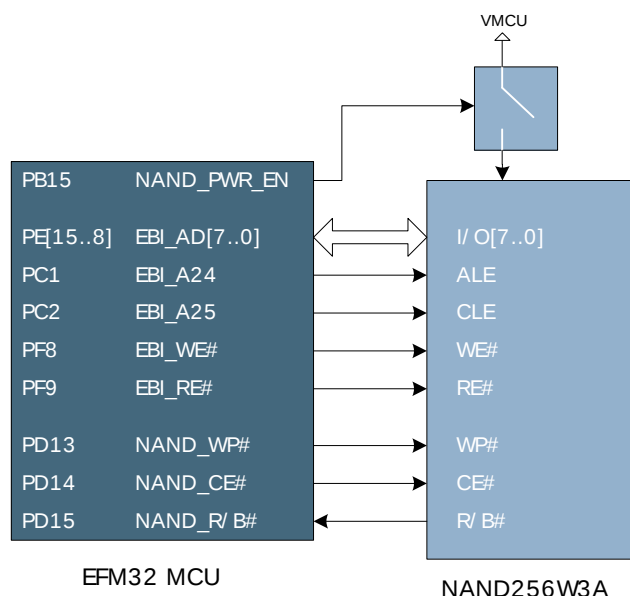

A separate power switch is used to enable/disable the NAND flash, thus avoiding excess current draw when not used. When *NAND\_PWR\_EN* is high, the NAND flash is powered from the same supply as the EFM32 MCU. It is recommended to keep the write-protect line low during power transitions.

The ALE (address latch enable) and CLE (command latch enable) pins of the NAND Flash are connected to the EBI Address pins 24 and 25, and the CE (chip enable) line is connected to a general GPIO pin. This causes the NAND data, address and command registers to be mapped in the EFM32's address space as:

|                   |            |
|-------------------|------------|
| Data register:    | 0x80000000 |
| Address register: | 0x81000000 |
| Command register: | 0x82000000 |

## 5.7 Backup Domain Capacitor

A small super capacitor is provided to evaluate the EFM32 Wonder Gecko MCU's backup power domain. The capacitor has a nominal value of 33 mF, and is connected with a 100 ohm series resistor to the BU\_VIN pin of the EFM32.

Because of the extremely low power consumption of the EFM32 in backup mode (400nA), the capacitor can power a clock application using the low frequency crystal oscillator (LFXO) for more than 8 hours.


The series resistor allows measuring of the current drawn from the capacitor into the EFM32 device, by simply using a multimeter to measure the voltage across it. Please refer to the schematic and assembly drawings to locate the series resistor.

## 5.8 USB Micro-AB Connector

The EFM32WG-STK3800 board is equipped with a USB Micro-AB connector supporting USB Device and Embedded Host modes. The figure below shows how the USB lines are connected to the EFM32.

The USB\_VBUSEN line is connected to a current limited switch which supplies the VBUS line with 5V when operating as a USB Host. The current limited switch also has a flag signal connected to the EFM32 which can notify it in case excessive current is drawn by the attached device. Note that the "J-Link" USB cable must be inserted to provide 5V to the device when operating the EFM32 in host mode.

**Figure 5.7. EFM32 USB Connector**

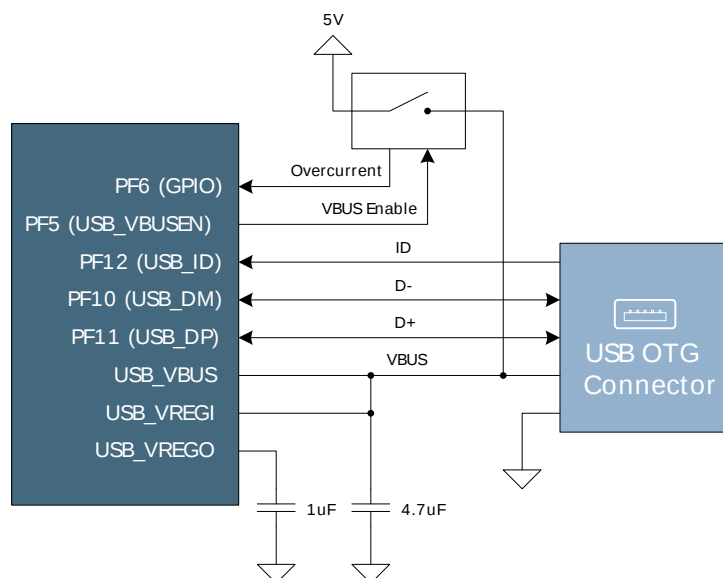

## 5.9 Op-Amp Footprint

If the kit is flipped over there is a silk-print model of a typical operational amplifier feedback circuit. The actual operational amplifier is one of the op-amps inside the EFM32. By soldering 0603 sized resistors the EFM32 internal operational amplifier can be evaluated with exact resistor values.

## 6 Advanced Energy Monitor

### 6.1 Usage


The AEM (Advanced Energy Monitor) data is collected by the board controller and can be displayed by the energyAware Profiler, available through Simplicity Studio. By using the energyAware Profiler, current consumption and voltage can be measured and linked to the actual code running on the EFM32 in realtime.

### 6.2 AEM theory of operation

In order to be able to accurately measure current ranging from 0.1 $\mu$ A to 50mA (114dB dynamic range), a current sense amplifier is utilized together with a dual gain stage. The current sense amplifier measures the voltage drop over a small series resistor, and the gain stage further amplifies this voltage with two different gain settings to obtain two current ranges. The transition between these two ranges occurs around 250 $\mu$ A. Digital filtering and averaging is done within the Board Controller before the samples are exported to the energyAware Profiler application.

During startup of the kit, an automatic calibration of the AEM is performed. This calibration compensates for the offset error in the sense amplifiers.

**Figure 6.1. Advanced Energy Monitor**

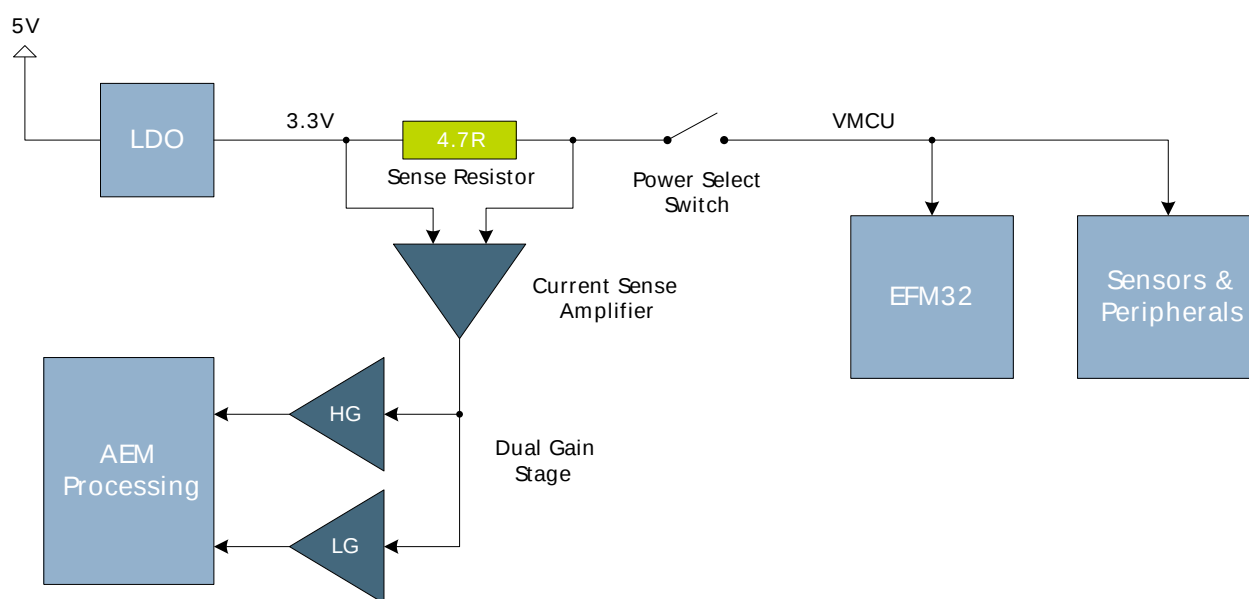

### 6.3 AEM accuracy and performance

The Advanced Energy Monitor is capable of measuring currents in the range of 0.1 $\mu$ A to 50mA. For currents above 250 $\mu$ A, the AEM is accurate within 0.1mA. When measuring currents below 250 $\mu$ A, the accuracy increases to 1 $\mu$ A. Even though the absolute accuracy is 1 $\mu$ A in the sub 250 $\mu$ A range, the AEM is able to detect changes in the current consumption as small as 100nA. The AEM produces 6250 current samples per second.

#### Note

The current measurement will only be correct when powering the EFM32 from USB power through the debugger (power select switch set to "DBG").

## 7 Board Controller

The kit contains a board controller that is responsible for performing various board level tasks, such as handling the debugger and the Advanced Energy Monitor. An interface is provided between the EFM32 and the board controller in the form of a UART connection. The connection is enabled by setting the EFM\_BC\_EN (PF7) line high, and using the lines EFM\_BC\_TX (PE0) and EFM\_BC\_RX (PE1) for communicating.

Specific library functions has been provided in the kit Board Support Package that supports various requests to be made to the board controller, such as quering AEM voltage or current. To use these functions, the Board Support Package must be installed. See the Chapter 8 to find out more.

**Note**

The board controller is only available when USB power is connected.

## 8 Board Support Package

The Board Support Package (BSP) is a set of C source and header files that enables easy access to, and control over some board specific features.

Compared to the Energy Micro development kit, the functionality is limited. Unless you need/want some of the functions contained in the BSP, there is really no need to include or use it. The EFM32 in the Starter Kit is fully usable without BSP support, and you can use all peripherals in the emlib without the BSP.

The BSP use EFM32 peripheral UART0, Location 1 (TX pin PE0, RX pin PE1) on baudrate 115200-8-N-1 to communicate with the board controller.

### Note

The BSP is only functional when the Starter Kit is USB-powered, using these function calls with USB disconnected will give unpredictable results.

### 8.1 Installation location

When installing Simplicity Studio, the BSP will be installed in the user directory, typically in a location such as

Win7: C:\Users\[username]\AppData\Roaming\energymicro\kits\EFM32WG\_STK3800\

or something similar (depending on your OS/Windows version). All files in the board support package are prefixed by stk.

### 8.2 Application Programming Interface

To use the BSP, include the Starter Kit header file, like this:

```
#include "bsp.h"
```

All functions in the BSP are prefixed with BSP\_. The main initialization routine is defined as

```
void BSP_Init ( BSP_INIT_STK_BCUART )
```

and must be called before any access to the STK-functions. This function call will setup the UART communication channel with a 115800 baud rate. This baud rate depends on the current core clock, so correct clock configuration should be set before calling this function.

```
float BSP_CurrentGet ( void )
```

Returns instant current usage in milliamperes.

```
float BSP_VoltageGet ( void )
```

Returns instant voltage (VMCU) reading in volt.

### 8.3 Example Applications

Under the kits/EFM32WG\_STK3800/examples folder in your installation directory, you will find an example program using the BSP, with corresponding project/Makefiles for the supported IDEs.

The *examples* folder also contains examples showing how to use the different peripherals on the EFM32WG-STK3800.

### 8.4 How to include in your own applications

The easiest way to include the BSP in your application is to base your work on the example application that use the BSP. The following items are recommended for correct configuration:

1. Make sure you define the correct part number (i.e. EFM32WG990F256) as a preprocessor defined symbol
2. Make sure you define the correct part number (i.e. EFM32WG990F256) for your project file
3. Add and include the EFM32\_CMSIS-files (startup\_efm32.s, system\_efm32.c, core\_cm3.c) to your project
4. Add and include *all* BSP package .c-files, with the bsp-prefix to your project
5. Configure include paths to point at the CMSIS/CM3/CoreSupport and CMSIS/CM3/DeviceSupport/EnergyMicro/EFM32 directories
6. Configure include paths to point to the kits/EFM32WG\_STK3800/bsp directory

Make sure you call "BSP\_Init()" early at startup, and you should be all set.

## 9 Connectors


### 9.1 Breakout pads

Many of the EFM32's pins are routed out to "breakout pads" at the top and bottom edges of the kit. A 2.54mm pitch pin header can be soldered in for easy access to these pins. Most I/O pins are available, with the exception of pins used to drive the LCD and some pins used to drive the NAND flash.

#### Note

Some of the breakout pads are shared by on-board EFM peripherals. The schematic must be consulted to make sure that it is OK to use a shared pin in your application.

**Figure 9.1. Breakout pads and Expansion Header**

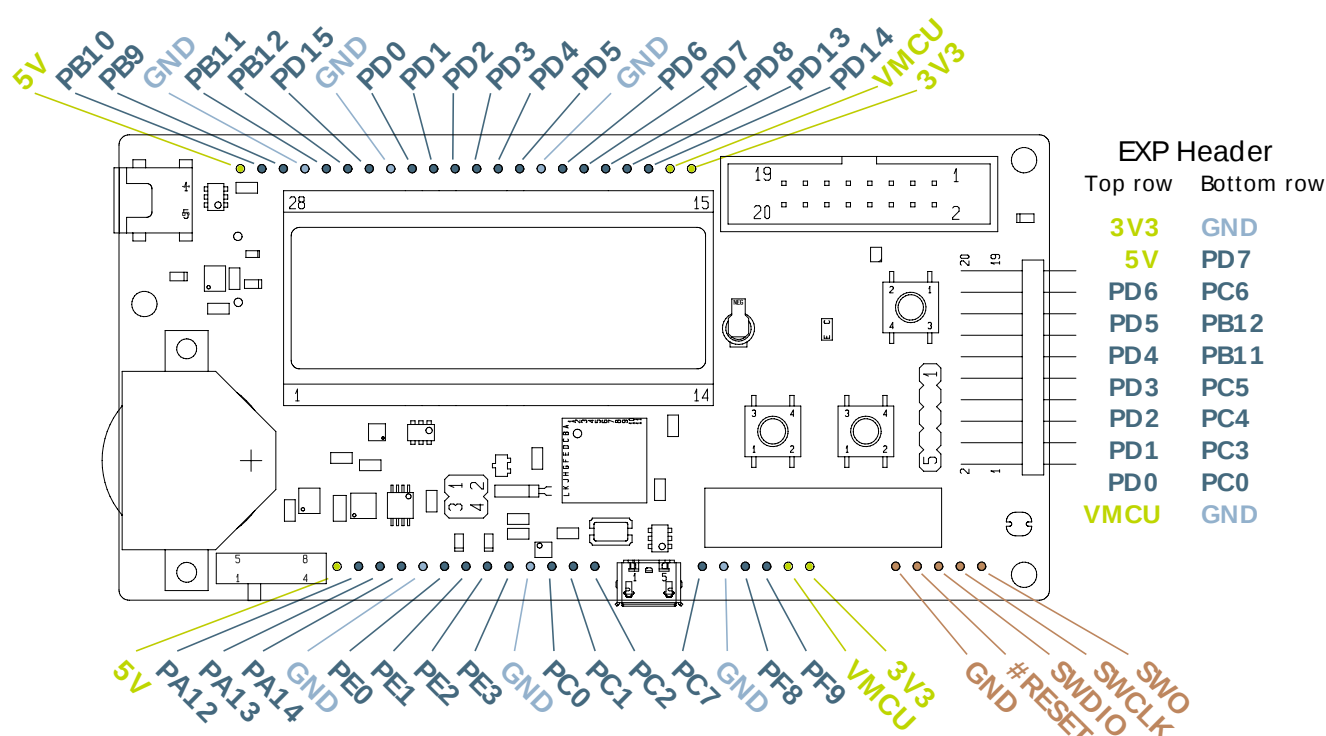

#### Note

Pins PC3, PC4, PC5 and PC6 are also available as surface mounted pads beneath the USB Micro-AB connector

### 9.2 Expansion header

On the right hand side of the board an angled 20 pin expansion header is provided to allow connection of peripherals or plugin boards. The connector contains a number of I/O pins that can be used with most of the EFM32 Wonder Gecko's features. Additionally, the VMCU, 3V3 and 5V power rails are also exported.

Figure Figure 9.1 shows the pin assignment of the expansion header. With the exception of a few pins, most of the Expansion Header's pins are the same as those on the EFM32 Gecko or EFM32 Tiny Gecko starter kits.

Some of the chip peripheral functions that are available on the Expansion Header are listed in table Table 9.1.

**Figure 9.2. Expansion Header**

|      |    |     |    |      |
|------|----|-----|----|------|
| GND  | 1  | □ □ | 2  | VMCU |
| PC0  | 3  | □ □ | 4  | PD0  |
| PC3  | 5  | □ □ | 6  | PD1  |
| PC4  | 7  | □ □ | 8  | PD2  |
| PC5  | 9  | □ □ | 10 | PD3  |
| PB11 | 11 | □ □ | 12 | PD4  |
| PB12 | 13 | □ □ | 14 | PD5  |
| PC6  | 15 | □ □ | 16 | PD6  |
| PD7  | 17 | □ □ | 18 | 5V   |
| GND  | 19 | □ □ | 20 | 3V3  |

**Table 9.1. Some peripheral functions available on Expansion Header**

| Peripheral                  | Peripheral pin | MCU Pin | EXP Header pin number |
|-----------------------------|----------------|---------|-----------------------|
| USART/SPI                   | USART1_TX      | PD0     | 4                     |
|                             | USART1_RX      | PD1     | 6                     |
|                             | USART1_CLK     | PD2     | 8                     |
|                             | USART1_CS      | PD3     | 10                    |
| I <sup>2</sup> C            | I2C1_SDA       | PC4     | 7                     |
|                             | I2C1_SCL       | PC5     | 9                     |
| Low Energy UART             | LEUART0_TX     | PD4     | 12                    |
|                             | LEUART0_RX     | PD5     | 14                    |
| Analog to Digital Converter | ADC0_CH0       | PD0     | 4                     |
|                             | ADC0_CH1       | PD1     | 6                     |
|                             | ADC0_CH2       | PD2     | 8                     |
|                             | ADC0_CH3       | PD3     | 10                    |
|                             | ADC0_CH4       | PD4     | 12                    |
|                             | ADC0_CH5       | PD5     | 14                    |
|                             | ADC0_CH6       | PD6     | 16                    |
|                             | ADC0_CH7       | PD7     | 17                    |
| Digital to Analog Converter | DAC0_CH0       | PB11    | 11                    |
|                             | DAC0_CH1       | PB12    | 13                    |
| Analog Comparator           | ACMP0_CH0      | PC0     | 3                     |
|                             | ACMP0_CH3      | PC3     | 5                     |
|                             | ACMP0_CH4      | PC4     | 7                     |
|                             | ACMP0_CH5      | PC5     | 9                     |
|                             | ACMP0_CH6      | PC6     | 15                    |
|                             | ACMP0_O        | PD6     | 16                    |
|                             | ACMP1_O        | PD7     | 17                    |
| Operational Amplifier       | OPAMP_N0       | PC5     | 9                     |
|                             | OPAMP_P0       | PC4     | 7                     |

| Peripheral                            | Peripheral pin | MCU Pin        | EXP Header pin number |
|---------------------------------------|----------------|----------------|-----------------------|
|                                       | OPAMP_OUT0     | PB11           | 11                    |
|                                       | OPAMP_N1       | PD7            | 17                    |
|                                       | OPAMP_P1       | PD6            | 16                    |
|                                       | OPAMP_OUT1     | PB12           | 13                    |
|                                       | OPAMP_N2       | PD3            | 10                    |
|                                       | OPAMP_P2       | PD4            | 12                    |
|                                       | OPAMP_OUT2     | PD5, PD0       | 14, 4                 |
| Timer Compare/Capture                 | TIMER0_CC0     | PD1            | 6                     |
|                                       | TIMER0_CC1     | PD2            | 8                     |
|                                       | TIMER0_CC2     | PD3            | 10                    |
|                                       | TIMER1_CC0     | PD6            | 16                    |
|                                       | TIMER1_CC1     | PD7            | 17                    |
|                                       | TIMER1_CC2     | PB11           | 11                    |
| Low Energy Timer                      | LETIM0_OUT0    | PD6, PB11, PC4 | 16, 11, 7             |
|                                       | LETIM0_OUT1    | PD7, PB12, PC5 | 17, 13, 9             |
| Low Energy Sensor Interface (LESENSE) | LES_CH0        | PC0            | 3                     |
|                                       | LES_CH3        | PC3            | 5                     |
|                                       | LES_CH4        | PC4            | 7                     |
|                                       | LES_CH5        | PC5            | 9                     |
|                                       | LES_CH6        | PC6            | 15                    |
|                                       | LES_ALTEX0     | PD6            | 16                    |
|                                       | LES_ALTEX1     | PD7            | 17                    |
| Pulse Counter                         | PCNT0_S0IN     | PD6            | 16                    |
|                                       | PCNT0_S1IN     | PD7            | 17                    |
|                                       | PCNT1_S0IN     | PC4            | 7                     |
|                                       | PCNT1_S1IN     | PC5            | 9                     |
|                                       | PCNT2_S0IN     | PD0            | 4                     |
|                                       | PCNT2_S1IN     | PD1            | 6                     |
| Peripheral Reflex System (PRS)        | PRS_CH2        | PC0            | 3                     |

**Note**

Please note that this table only sums up some of the alternate functions available on the expansion header. Consult the EFM32WG990F256 datasheet for a complete list of alternate functions.

## 9.3 Debug connector

This connector is used for Debug In and Debug Out (see chapter on Debugging). The pinout is described in Table 9.2.

**Figure 9.3. Debug Connector**

|            |    |     |    |              |
|------------|----|-----|----|--------------|
| VTARGET    | 1  | □ □ | 2  | NC           |
| #TRST      | 3  | □ □ | 4  | GND          |
| TDI        | 5  | □ □ | 6  | GND          |
| TMS/ SWDIO | 7  | □ □ | 8  | GND          |
| TCK/ SWCLK | 9  | □ □ | 10 | GND          |
| RTCK       | 11 | □ □ | 12 | GND          |
| TDO/ SWO   | 13 | □ □ | 14 | GND          |
| #RESET     | 15 | □ □ | 16 | GND          |
| PD         | 17 | □ □ | 18 | Cable Detect |
| PD         | 19 | □ □ | 20 | GND          |

**Table 9.2. Debug connector pinout**

| Pin number                  | Function     | Note                                                                                                        |
|-----------------------------|--------------|-------------------------------------------------------------------------------------------------------------|
| 1                           | VTARGET      | Target voltage on the debugged application.                                                                 |
| 2                           | NC           | Not Connected                                                                                               |
| 3                           | #TRST        | JTAG tap reset                                                                                              |
| 5                           | TDI          | JTAG data in                                                                                                |
| 7                           | TMS/SWDIO    | JTAG TMS or Serial Wire data I/O                                                                            |
| 9                           | TCK/SWCLK    | JTAG TCK or Serial Wire clock                                                                               |
| 11                          | RTCK         | JTAG RTCK                                                                                                   |
| 13                          | TDO/SWO      | JTAG TDO or Serial Wire Output                                                                              |
| 15                          | #RESET       | Target MCU reset                                                                                            |
| 17                          | PD           | This pin has a 100k pulldown.                                                                               |
| 18                          | Cable detect | This signal must be pulled to ground by the external debugger or application for cable insertion detection. |
| 19                          | PD           | This pin has a 100k pulldown.                                                                               |
| 4, 6, 8, 10, 12, 14, 16, 20 | GND          |                                                                                                             |

## 9.4 Trace Header

A header with connections to the Embedded Trace Module (ETM) in the EFM32 Wonder Gecko MCU is provided on the reverse side of the PCB. The header is not mounted by default, but a 20-pin, 1.27mm pitch SMD header can be soldered on to allow an external trace emulator to be connected.

In addition to the serial wire debug pins, this header also contains the ETM\_CLK and ETM\_TD signals. The pinout is described in Table 9.3. Please refer to the kit assembly drawing to locate the trace header, which has the reference P200.

**Figure 9.4. Trace Header**

|       |    |     |    |                |
|-------|----|-----|----|----------------|
| VTref | 1  | □ □ | 2  | SWDIO/ TMS     |
| GND   | 3  | □ □ | 4  | SWCLK/ TCK     |
| GND   | 5  | □ □ | 6  | SWO/ TDO       |
| NC    | 7  | □ □ | 8  | TDI (NC)       |
| GND   | 9  | □ □ | 10 | nRESET         |
| NC    | 11 | □ □ | 12 | TRACECLK       |
| NC    | 13 | □ □ | 14 | TRACE- DATA[0] |
| GND   | 15 | □ □ | 16 | TRACE- DATA[1] |
| GND   | 17 | □ □ | 18 | TRACE- DATA[2] |
| GND   | 19 | □ □ | 20 | TRACE- DATA[3] |

**Table 9.3. Trace header pinout**

| Pin number          | Function      | Note                                             |
|---------------------|---------------|--------------------------------------------------|
| 1                   | VTref         | Target reference voltage.                        |
| 2                   | SWDIO/TMS     | Serial Wire Data Input/Output                    |
| 4                   | SWCLK/TCK     | Serial Wire Clock input                          |
| 6                   | SWO/TDO       | Serial Wire Output trace port                    |
| 8                   | TDI           | Not Connected on the EFM32WG-STK3800             |
| 10                  | nRESET        | Target CPU reset signal.                         |
| 12                  | TRACECLK      | Trace clock output. Trace clock = 1/2 CPU clock. |
| 14                  | TRACE-DATA[0] | Trace data output pin 0.                         |
| 16                  | TRACE-DATA[1] | Trace data output pin 1.                         |
| 18                  | TRACE-DATA[2] | Trace data output pin 2.                         |
| 20                  | TRACE-DATA[3] | Trace data output pin 3.                         |
| 7, 11, 13           | NC            | Not Connected                                    |
| 3, 5, 9, 15, 17, 19 | GND           |                                                  |

**Note**

The EFM32WG-STK3800 debugger does not contain any trace functionality apart from the basic functionality provided with Serial Wire View (SWV). This header is only useful together with an external trace emulator.

## 10 Integrated Development Environments

The Energy Micro software packages contains various examples in source form to use with the Starter Kit. The following IDEs are supported.

### 10.1 IAR Embedded Workbench for ARM

An evaluation version of IAR Embedded Workbench for ARM is included on a CD in the EFM32WG-STK3800 package. Check the quick start guide for where to find updates, and IAR's own documentation on how to use it. You will find the IAR project file in the

`iar`

subfolder of each project

### 10.2 Rowley Associates - CrossWorks for ARM

See the quick start guide for download details for CrossWorks for ARM. You will find CrossWorks project files in the

`rowley`

subfolder of each project.

### 10.3 CodeSourcery - Sourcery G++

See the quick start guide for download details for Sourcery G++. The

`codesourcery`

subfolder contains Makefiles for use with the Sourcery G++ development environment.

### 10.4 Keil - MDK-ARM

See the quick start guide for download details for evaluation versions of Keil MDK-ARM. The

`arm`

subfolder in each project contains project files for MDK-ARM. Please see the MDK-ARM documentation for usage details.

## 11 energyAware Commander and Upgrades

The *energyAware Commander* is a program that comes with Simplicity Studio. It can perform various kit and EFM32 specific tasks.

### 11.1 eA Commander Operation

This utility gives the ability to program the EFM32, upgrade the kit, lock and unlock devices and more. Some of the features will only work with Energy Micro kits, while other will work with a J-Link debugger connected. Press the "F1" button, or select the "Help->Help" menu item for a full description.

### 11.2 Upgrades

Upgrading the kit is done through Simplicity Studio. The Studio will automatically check for new updates on startup.

You can also use the *energyAware Commander* for manual upgrades. Select the "Kit" icon, use the "Browse" button to select the correct file ending in ".emz", and press the "Install package button".

## 12 Schematics, Assy Drawings and BOM

The schematics, assembly drawings and bill of materials (BOM) for the EFM32 Wonder Gecko Starter Kit board is available through Simplicity Studio when the kit documentation package has been installed.

# 13 Kit Revision History and Errata

## 13.1 Revision History

The kit revision can be found printed on the box label of the kit, as outlined in the figure below.

**Figure 13.1. Revision info**

### Wonder Gecko Starter Kit EFM32WG-STK3800



© 2011 Energy Micro. All rights reserved. Energy Micro®, EFM®, EFM®32, EFR®, logo, and combinations thereof are the registered trademarks, and "the world's most energy friendly microcontrollers™", and others are the trademarks of Energy Micro. ARM®, Cortex™-M0/M3, and Keil™ are the registered trademark and trademarks of ARM Limited. Other terms and product names are the property of their respective owners

(1P) Part#: EFM32WG-STK3800



EFM32WG-STK3800

(D) Date: 20-02-12



(Q) Qty: 1



S.n.r 115100140



Rev. A00

**Table 13.1. Kit Revision History**

| Kit Revision | Released   | Description           |
|--------------|------------|-----------------------|
| A00          | 20.12.2012 | Initial Kit Revision. |

## 13.2 Errata

**Table 13.2. Kit Errata**

| Kit Revision | Problem | Description |
|--------------|---------|-------------|
|              |         |             |

## 14 Document Revision History

**Table 14.1. Document Revision History**

| Revision Number | Effective Date | Change Description                                                    |
|-----------------|----------------|-----------------------------------------------------------------------|
| 0.11            | 10.10.2013     | Updated document template and Silicon Labs contact/legal information. |
| 0.10            | 07.01.2013     | Initial document version.                                             |

## A Disclaimer and Trademarks

### A.1 Disclaimer

*Silicon Laboratories intends to provide customers with the latest, accurate, and in-depth documentation of all peripherals and modules available for system and software implementers using or intending to use the Silicon Laboratories products. Characterization data, available modules and peripherals, memory sizes and memory addresses refer to each specific device, and "Typical" parameters provided can and do vary in different applications. Application examples described herein are for illustrative purposes only. Silicon Laboratories reserves the right to make changes without further notice and limitation to product information, specifications, and descriptions herein, and does not give warranties as to the accuracy or completeness of the included information. Silicon Laboratories shall have no liability for the consequences of use of the information supplied herein. This document does not imply or express copyright licenses granted hereunder to design or fabricate any integrated circuits. The products must not be used within any Life Support System without the specific written consent of Silicon Laboratories. A "Life Support System" is any product or system intended to support or sustain life and/or health, which, if it fails, can be reasonably expected to result in significant personal injury or death. Silicon Laboratories products are generally not intended for military applications. Silicon Laboratories products shall under no circumstances be used in weapons of mass destruction including (but not limited to) nuclear, biological or chemical weapons, or missiles capable of delivering such weapons.*

### A.2 Trademark Information

Silicon Laboratories Inc., Silicon Laboratories, Silicon Labs, SiLabs and the Silicon Labs logo, CMEMS<sup>®</sup>, EFM, EFM32, EFR, Energy Micro, Energy Micro logo and combinations thereof, "the world's most energy friendly microcontrollers", Ember<sup>®</sup>, EZLink<sup>®</sup>, EZMac<sup>®</sup>, EZRadio<sup>®</sup>, EZRadioPRO<sup>®</sup>, DSPLL<sup>®</sup>, ISOmodem<sup>®</sup>, Precision32<sup>®</sup>, ProSLIC<sup>®</sup>, SiPHY<sup>®</sup>, USBXpress<sup>®</sup> and others are trademarks or registered trademarks of Silicon Laboratories Inc. ARM, CORTEX, Cortex-M3 and THUMB are trademarks or registered trademarks of ARM Holdings. Keil is a registered trademark of ARM Limited. All other products or brand names mentioned herein are trademarks of their respective holders.

## B Contact Information

**Silicon Laboratories Inc.**

400 West Cesar Chavez

Austin, TX 78701

Please visit the Silicon Labs Technical Support web page:

<http://www.silabs.com/support/pages/contacttechnicalsupport.aspx>

and register to submit a technical support request.

# Table of Contents

|                                                    |    |
|----------------------------------------------------|----|
| 1. Introduction .....                              | 2  |
| 1.1. Description .....                             | 2  |
| 1.2. Features .....                                | 2  |
| 1.3. Getting Started .....                         | 2  |
| 2. Kit Block Diagram .....                         | 3  |
| 3. Kit Hardware Layout .....                       | 4  |
| 4. Power Supply and Reset .....                    | 5  |
| 4.1. MCU Power Selection .....                     | 5  |
| 4.2. Board Controller Power .....                  | 5  |
| 4.3. Backup Power Domain .....                     | 6  |
| 4.4. MCU Reset .....                               | 6  |
| 4.5. Board Controller Reset .....                  | 6  |
| 5. Peripherals .....                               | 7  |
| 5.1. Push Buttons and LEDs .....                   | 7  |
| 5.2. LCD .....                                     | 7  |
| 5.3. Capacitive Touch Slider .....                 | 8  |
| 5.4. Ambient Light Sensor .....                    | 8  |
| 5.5. LC Sensor .....                               | 9  |
| 5.6. NAND Flash .....                              | 10 |
| 5.7. Backup Domain Capacitor .....                 | 10 |
| 5.8. USB Micro-AB Connector .....                  | 11 |
| 5.9. Op-Amp Footprint .....                        | 11 |
| 6. Advanced Energy Monitor .....                   | 12 |
| 6.1. Usage .....                                   | 12 |
| 6.2. AEM theory of operation .....                 | 12 |
| 6.3. AEM accuracy and performance .....            | 12 |
| 7. Board Controller .....                          | 13 |
| 8. Board Support Package .....                     | 14 |
| 8.1. Installation location .....                   | 14 |
| 8.2. Application Programming Interface .....       | 14 |
| 8.3. Example Applications .....                    | 14 |
| 8.4. How to include in your own applications ..... | 14 |
| 9. Connectors .....                                | 16 |
| 9.1. Breakout pads .....                           | 16 |
| 9.2. Expansion header .....                        | 16 |
| 9.3. Debug connector .....                         | 19 |
| 9.4. Trace Header .....                            | 19 |
| 10. Integrated Development Environments .....      | 21 |
| 10.1. IAR Embedded Workbench for ARM .....         | 21 |
| 10.2. Rowley Associates - CrossWorks for ARM ..... | 21 |
| 10.3. CodeSourcery - Sourcery G++ .....            | 21 |
| 10.4. Keil - MDK-ARM .....                         | 21 |
| 11. energyAware Commander and Upgrades .....       | 22 |
| 11.1. eA Commander Operation .....                 | 22 |
| 11.2. Upgrades .....                               | 22 |
| 12. Schematics, Assy Drawings and BOM .....        | 23 |
| 13. Kit Revision History and Errata .....          | 24 |
| 13.1. Revision History .....                       | 24 |
| 13.2. Errata .....                                 | 24 |
| 14. Document Revision History .....                | 25 |
| A. Disclaimer and Trademarks .....                 | 26 |
| A.1. Disclaimer .....                              | 26 |
| A.2. Trademark Information .....                   | 26 |
| B. Contact Information .....                       | 27 |
| B.1. ....                                          | 27 |

## List of Figures

|                                               |    |
|-----------------------------------------------|----|
| 2.1. EFM32WG-STK3800 Block Diagram .....      | 3  |
| 3.1. EFM32WG-STK3800 hardware layout .....    | 4  |
| 4.1. EFM32WG-STK3800 Power Switch .....       | 5  |
| 5.1. Buttons/LEDs .....                       | 7  |
| 5.2. 160 Segment LCD .....                    | 7  |
| 5.3. Touch Slider .....                       | 8  |
| 5.4. Light Sensor .....                       | 8  |
| 5.5. LC Metal Sensor .....                    | 9  |
| 5.6. NAND Flash Interface .....               | 10 |
| 5.7. EFM32 USB Connector .....                | 11 |
| 6.1. Advanced Energy Monitor .....            | 12 |
| 9.1. Breakout pads and Expansion Header ..... | 16 |
| 9.2. Expansion Header .....                   | 17 |
| 9.3. Debug Connector .....                    | 19 |
| 9.4. Trace Header .....                       | 20 |
| 13.1. Revision info .....                     | 24 |

# List of Tables

9.1. Some peripheral functions available on Expansion Header ..... 17

9.2. Debug connector pinout ..... 19




9.3. Trace header pinout ..... 20

13.1. Kit Revision History ..... 24

13.2. Kit Errata ..... 24

14.1. Document Revision History ..... 25

# silabs.com

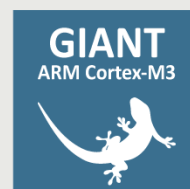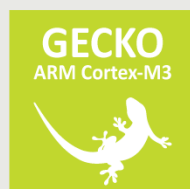

Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;
- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком);
- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



## JONHON

«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«FORSTAR» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели,  
кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный)

Факс: 8 (812) 320-03-32

Электронная почта: [ocean@oceanchips.ru](mailto:ocean@oceanchips.ru)

Web: <http://oceanchips.ru/>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А