GF Data Sheet

#### EBDW020A0B Barracuda\* Series; DC-DC Converter Power Modules

36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### **RoHS Compliant**



#### **Applications**

- Distributed power architectures
- Intermediate bus voltage applications
- Servers and storage applications
- Networking equipment including Power over Ethernet
- Fan assemblies other systems requiring a tightly regulated output voltage

#### **Options**

- Negative Remote On/Off logic (1=option code, factory preferred)
- Auto-restart after fault shutdown (4=option code, factory preferred)
- Base plate option (-H=option code)
- Passive Droop Load Sharing (-P=option code)
- Surface Mount Pins (SMT, -S=option code)

#### **Features**

- Compliant to RoHS II EU "Directive 2011/65/EU (-Z versions)
- Compliant to REACH Directive (EC) No 1907/2006
- Compatible with reflow pin/paste soldering process
- High and flat efficiency profile >95.4% at 12V<sub>dc</sub>, 55% to 90% rated output
- Wide input voltage range: 36-75V<sub>dc</sub>
- Delivers up to 20A<sub>dc</sub> output current
- Remote sense and output voltage trim
- Fully very tightly regulated output voltage
- Output voltage adjust (via PMBus): 5.0V<sub>dc</sub> to 13.2V<sub>dc</sub>
- Low output ripple and noise
- No reverse current during prebias start-up or shut-down
- Industry standard, DOSA compliant Eighth brick: 58.4 mm x 22.8 mm x 11.3 mm  $(2.30 \text{ in } \times 0.90 \text{ in } \times 0.44 \text{ in})$
- Constant switching frequency
- Positive remote On/Off logic
- Output over current/voltage protection
- Digital interface with PMBus™ Rev.1.2 compliance^
- Over temperature protection
- Wide operating temperature range (-40°C to 85°C)
- CAN/CSA† C22.2 No. 60950-1-07, 2nd Edition + A1:2011 (MOD), ANSI/UL#60950-1-2011, IEC 60950-1 (2nd edition); am1, and VDE‡ (EN60950-1, 2nd Ed.) Licensed
- CE mark 2006/96/EC directives§
- Meets the voltage and current requirements for ETSI 300-132-2 and complies with and licensed for Basic insulation rating per EN60950-1
- 2250 Vdc Isolation tested in compliance with IEEE 802.3 PoE standards
- ISO\*\* 9001 and ISO14001 certified manufacturing facilities

#### **Description**

The EBDW020A0B Barracuda series of dc-dc converters are a new generation of DC/DC power modules designed to support 9.6 -12V<sub>dc</sub> intermediate bus applications where multiple low voltages are subsequently generated using point of load (POL) converters, as well as other application requiring a tightly regulated output voltage. The EBDW020A0B series operate from an input voltage range of 36 to  $75V_{dc}$ , and provide up to 20A output current at output voltages from  $5.0V_{dc}$  to  $12.0V_{dc}$ , and 240W output power from output voltages of 12.1V<sub>dc</sub> to 13.2V<sub>dc</sub> in a DOSA standard eighth brick. The converter incorporates digital control, synchronous rectification technology, a fully regulated control topology and innovative packaging techniques to achieve efficiency reaching 95.4% peak at  $12V_{dc}$  output. This leads to lower power dissipations such that for many applications a heat sink is not required. Standard features include output voltage trim, remote sense, on/off control, output overcurrent and over voltage protection, over temperature protection, input under and over voltage lockout, power good signal and PMBus interface.

The output is fully isolated from the input, allowing versatile polarity configurations and grounding connections. Built-in filtering for both input and output minimizes the need for external filtering.

- \* Trademark of General Electric Company
  ^ PMBus name and logo are registered trademarks of SMIF, Inc.
- UL is a registered trademark of Underwriters Laboratories, Inc. CSA is a registered trademark of Canadian Standards Association.
- VDE is a trademark of Verband Deutscher Elektrotechniker e.V.
- § This product is intended for integration into end-user equipment. All of the required procedures of end-use equipment should be followed.
- IEEE and 802 are registered trademarks of the Institute of Electrical and Electronics Engineers, Incorporated
   ISO is a registered trademark of the International Organization of Standards.

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules

36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### **Absolute Maximum Ratings**

Stresses in excess of the absolute maximum ratings can cause permanent damage to the device. These are absolute stress ratings only, functional operation of the device is not implied at these or any other conditions in excess of those given in the operations sections of the Data Sheet. Exposure to absolute maximum ratings for extended periods can adversely affect device reliability.

Parameter	Device	Symbol	Min	Max	Unit
Input Voltage*					
Continuous		$V_{IN}$	-0.3	75	$V_{dc}$
Operating transient ≤ 100mS				100	$V_{dc}$
Operating Input transient slew rate, 50V <sub>IN</sub> to 75V <sub>IN</sub> (Output may exceed regulation limits, no protective shutdowns shall activate, Co=220µF to Co, max)		-	-	10	V/µs
Non- operating continuous		V <sub>IN</sub>	80	100	$V_{dc}$
Operating Ambient Temperature	All	T <sub>A</sub>	-40	85	°C
(See Thermal Considerations section)					
Logic Pin Voltage (to SIG_GND or $V_0$ (-)) TRIM/C1, C2, ADDR0, ADDR1, CLK, DATA, SMBALERT	All	V <sub>pin</sub>	-0.3	3.6	V <sub>dc</sub>
Storage Temperature	All	T <sub>stg</sub>	-55	125	°C
I/O Isolation Voltage (100% factory Hi-Pot tested)	All	_	_	2250	$V_{dc}$

<sup>\*</sup> Input over voltage protection will shutdown the output voltage when the input voltage exceeds threshold level.

#### **Electrical Specifications**

Unless otherwise indicated, specifications apply over all operating input voltage, resistive load, and temperature conditions.

Parameter	Device	Symbol	Min	Тур	Max	Unit
Operating Input Voltage		V <sub>IN</sub>	36	48	75	V <sub>dc</sub>
Maximum Input Current		I <sub>IN.max</sub>	_	_	7	A <sub>dc</sub>
$(V_{IN}=0V \text{ to } 75V, I_0=I_{0, max})$		nn,max			,	/ ldc
Input No Load Current	All	I <sub>IN.No load</sub>		50		mA
$(V_{IN} = V_{IN, nom}, I_O = 0, module enabled)$	All	IIN,No load		30		IIIA
Input Stand-by Current	All	las e es			25	mA
$(V_{IN} = V_{IN, nom}, module disabled)$	All	I <sub>IN,stand-by</sub>			23	IIIA
External Input Capacitance	All	C <sub>IN</sub>	100	-	-	μF
Inrush Transient	All	I²t	-	-	1	A <sup>2</sup> s
Input Terminal Ripple Current (Measured at module input pin with maximum specified input capacitance and $<$ 500uH inductance between voltage source and input capacitance $C_{IN}=220$ uF, 5Hz to 20MHz, $V_{IN}=48$ V, $I_{Omax}$ )	All		-	900	-	mA <sub>rms</sub>
Input Reflected Ripple Current, peak-to-peak (5Hz to 20MHz, $12\mu$ H source impedance; $V_{IN}$ = 48V, $I_{O}$ = $I_{Omax}$ ; see Figure 11)	All		-	24	-	mA <sub>p-p</sub>
Input Ripple Rejection (120Hz)	All		-	50	-	dB

#### CAUTION: This power module is not internally fused. An input line fuse must always be used.

This power module can be used in a wide variety of applications, ranging from simple standalone operation to an integrated part of sophisticated power architecture. To preserve maximum flexibility, internal fusing is not included, however, to achieve maximum safety and system protection, always use an input line fuse. The safety agencies require a fast-acting fuse with a maximum rating of 15 A (see Safety Considerations section). Based on the information provided in this Data Sheet on inrush energy and maximum dc input current, the same type of fuse with a lower rating can be used. Refer to the fuse manufacturer's Data Sheet for further information.

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules

36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### **Electrical Specifications (continued)**

Unless otherwise indicated, specifications apply over all operating input voltage, resistive load, and temperature conditions.

Parameter	Device	Symbol	Min	Тур	Max	Unit
Output Voltage Set-point (Default) (V <sub>IN</sub> =V <sub>IN,nom</sub> , I <sub>O</sub> =10A, T <sub>A</sub> =25°C) (Adjustable via PMBus)	All	V <sub>O, set</sub>	11.97	12.00	12.03	$V_{dc}$
Output Voltage Variation from Default	All w/o -P	Vo	11.76	_	12.24	$V_{dc}$
(Over all operating input voltage (40V to 75V), resistive load, and temperature conditions until end of life)	-P Option	Vo	11.63	_	12.37	V <sub>dc</sub>
Output Voltage ( $V_{IN}$ =36V, $T_A$ = 25°C)	All	Vo	10.8	_	_	$V_{dc}$
Output Regulation $[V_{IN, min} = 40V]$						
Line (V <sub>IN</sub> =V <sub>IN, min</sub> to V <sub>IN, max</sub> )	All w/o -P		_	0.2	_	% V <sub>O, set</sub>
Load (Io=Io, min to Io, max)	All w/o -P		_	0.2	_	% V <sub>O, set</sub>
Line (V <sub>IN</sub> =V <sub>IN, min</sub> to V <sub>IN, max</sub> )	-P Option		_	0.5	_	% V <sub>O, set</sub>
Load (Io=Io, min to Io, max), Intentional Droop	-P Option			0.50		$V_{dc}$
Temperature ( $T_A = -40$ °C to +85°C)	All		_	2	_	% V <sub>O, set</sub>
Output Ripple and Noise on nominal output						
(VIN=VIN, nom and Io=Io, min to Io, max)						
RMS (5Hz to 20MHz bandwidth)	All		_	70	_	mV <sub>rms</sub>
Peak-to-Peak (5Hz to 20MHz bandwidth)	All		_	200	_	mV <sub>pk-pk</sub>
External Output Capacitance	All w/o -02 All w -02	Соит Соит	220 220 <sup>1</sup>	_	10,000 10,000	μF μF
Output Current	All	lo	0		20	A <sub>dc</sub>
VOUT_OC_FAULT_LIMIT (Default) (Adjustable via PMBus)	All w/o -02 All w -02	I <sub>O,lim</sub> I <sub>O,lim</sub>		23 28	_	A <sub>dc</sub> A <sub>dc</sub>
Efficiency (V <sub>IN</sub> =V <sub>IN, nom</sub> , V <sub>O</sub> = V <sub>O,set</sub> , T <sub>A</sub> =25°C)						
lo= 100% lo, max	All	η		95.2		%
I <sub>0</sub> = 55% - 90% I <sub>0, max</sub>	All	η		95.4		%
Switching Frequency (primary MOSFETs) (Output Ripple 2X switching frequency)		$f_{\text{sw}}$		150		kHz
Dynamic Load Response $ (dl_0/d_t=1A/10\mu s; V_{in}=V_{in,nom}; T_A=25^{\circ}C; tested with a 10\mu F \\ ceramic and 1 \times 470\mu F polymer capacitor across the load.) \\ Load Change from l_0=50\% to 75% of l_{0,max}:$						
Peak Deviation Settling Time (Vo <10% peak deviation)	All w/o - 02	$\begin{matrix} V_{pk} \\ t_s \end{matrix}$	<u> </u>	750 800	<u> </u>	${\sf mV}_{\sf pk}$ ${\sf \muS}$
Load Change from I <sub>0</sub> = 75% to 50% of I <sub>0,max</sub> : Peak Deviation Settling Time (V <sub>0</sub> <10% peak deviation)	All w/o - 02	$\begin{matrix} V_{pk} \\ t_s \end{matrix}$	_	750 800	_	mV <sub>pk</sub> μs
(dl <sub>0</sub> /d <sub>t</sub> =1A/10 $\mu$ s; V <sub>in</sub> =V <sub>in,nom</sub> ; T <sub>A</sub> =25°C; tested with a 10 $\mu$ F ceramic and 1 × 220 $\mu$ F polymer capacitor across the load.)						
Load Change from $I_0$ = 50% to 75% of $I_{0,max}$ : Peak Deviation Settling Time ( $V_0$ < 10% peak deviation) Load Change from $I_0$ = 75% to 50% of $I_{0,max}$ :	All w -02	$\begin{matrix} V_{pk} \\ t_s \end{matrix}$	_ _	300 700	_ _	mV <sub>pk</sub> μS
Peak Deviation Settling Time (Vo<10% peak deviation)	All w -02	$\begin{matrix} V_{pk} \\ t_s \end{matrix}$	_ _	300 700		mV <sub>pk</sub> μs

Note (1): Polymer capacitors required.

#### **Isolation Specifications**

Parameter	Symbol	Min	Тур	Max	Unit
Isolation Capacitance	C <sub>iso</sub>	_	1000	_	pF
Isolation Resistance	Riso	10	_	_	ΜΩ

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules

36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### **Feature Specifications**

Unless otherwise indicated, specifications apply over all operating input voltage, resistive load, and temperature conditions. See Feature Descriptions for additional information.

Parameter	Device	Symbol	Min	Тур	Max	Unit
Remote On/Off Signal Interface						
$(V_{IN}=V_{IN,min}$ to $V_{IN,max}$ , Signal referenced to $V_{IN-}$ terminal)						
Negative Logic: device code suffix "1" Logic Low = module On, Logic High = module Off Positive Logic: No device code suffix required Logic Low = module Off, Logic High = module On On/Off Thresholds:						
Remote On/Off Current – Logic Low (Vin =100V)	All	I <sub>on/off</sub>	280	_	310	μA
Logic Low Voltage Logic High Voltage – (Typ = Open Collector)	All All	V <sub>on/off</sub>	-0.3 2.0	_	0.8 14.5	V <sub>dc</sub>
Logic High maximum allowable leakage current (Von/off = 2.0V)	All	l <sub>on/off</sub>	_	_	10	μΑ
Maximum voltage allowed on On/Off pin	All	V <sub>on/off</sub>		_	14.5	$V_{dc}$
TON_DELAY and TON_RISE (Io=Io, max)						
(Adjustable via PMBus)	All/- D	-			160	
$T_{delay}$ =Time until $V_0$ = 10% of $V_{0,set}$ from either application of Vin	All w/o -P	Tdelay, Enable with Vin Tdelay, Enable with	_	_	160	ms
with Remote On/Off set to On (Enable with Vin); or operation of Remote On/Off from Off to On with Vin already applied for at	All w/o-P	on/off	_	_	40	ms
least 150 milli-seconds (Enable with on/off).	w/ -P	T <sub>delay</sub> , Enable with Vin	_	_	180*	ms
* Increased T <sub>delay</sub> due to startup for parallel modules.	w/ -P	T <sub>delay</sub> , Enable with on/off	_	_	40*	ms
Trise=Time for V <sub>0</sub> to rise from 10% to 90% of V <sub>0,set</sub> , For C <sub>0</sub> >5000uF, I <sub>0</sub> must be < 50% I <sub>0,mox</sub> during T <sub>rise</sub> .	All w/o -P	$T_{rise}$	_	_	40	ms
* Increased T <sub>rise</sub> when Vo exists at startup for parallel modules.	w/ -P	$T_{rise}$	_	_	300*	ms
Load Sharing Current Balance (difference in output current across all modules with outputs in parallel, no load to full load)	-P Option	l <sub>diff</sub>			3	А
Remote Sense Range	All	V <sub>Sense</sub>	1	_	0.5	$V_{dc}$
External Resistor Trim Range	All	V <sub>O, set</sub>	6.0		13.2	$V_{dc}$
VOUT_COMMAND (Adjustable via PMBus)	All	$V_{O,set}$	5.0		13.2	$V_{dc}$
VOUT_OV_FAULT_LIMIT (Adjustable via PMBus)	All	V <sub>O,limit</sub>		15		V <sub>dc</sub>
OT_FAULT_LIMIT (Adjustable via PMBus)	All	$T_{ref}$		140	_	°C
Input Undervoltage Lockout (Adjustable via PMBus)						
VIN_ON			34	35 77.5	36	V <sub>dc</sub>
VIN_OFF Input Overvoltage Lockout			32	33.5	34.5	V <sub>dc</sub>
(Adjustable via PMBus) Turn-off Threshold (VIN_OV_FAULT_LIMIT)			_	85	_	$V_{dc}$
Turn-on Threshold (follows VIN_OV_FAULT_LIMIT -7V)			_	79	_	$V_{dc}$
Pull down resistance of Power Good pin	All				150	Ω
Sink current capability into Power Good pin (V <sub>PG</sub> =2.2V)	All				15	mA

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules

36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### **General Specifications**

Parameter	Device	Symbol	Тур	Unit
Calculated Reliability Based upon Telcordia SR-332 Issue	All	MTBF	4,169,213	Hours
2: Method I, Case 3, ( $I_0=80\%I_{0,max}$ , $T_A=40$ °C, Airflow = 200 LFM), 90% confidence	All	FIT	239.9	109/Hours
Weight – Open Frame			30.0 (1.06)	g (oz.)
Weight – with Base plate option	39.5 (1.39)	g (oz.)		

#### **Digital Interface Specifications**

Unless otherwise indicated, specifications apply over all operating input voltage, resistive load, and temperature conditions. See Feature Descriptions for additional information.

Parameter	Conditions	Symbol	Min	Тур	Max	Unit
PMBus Signal Interface Characteristics						
Input High Voltage (CLK, DATA)		VIH	2.1		3.6	V
Input Low Voltage (CLK, DATA)		VIL			0.8	V
Input high level current (CLK, DATA)		I <sub>IH</sub>	-10		10	μΑ
Input low level current (CLK, DATA)		I <sub>IL</sub>	-10		10	μΑ
Output Low Voltage (CLK, DATA, SMBALERT#)	I <sub>out</sub> =2mA	Vol			0.4	V
Output high level open drain leakage current (DATA, SMBALERT#)	V <sub>OUT</sub> =3.6V	Іон	0		10	μΑ
Pin capacitance		Со		0.7		pF
PMBus Operating frequency range (* 5-10 kHz to accommodate hosts not supporting clock stretching)	Slave Mode	<b>Г</b> РМВ	5*		400	kHz
Measurement System Characteristics						
Output current reading range		I <sub>OUT(RNG)</sub>	0.56		63.9375	Α
Output current reading resolution		I <sub>OUT(RES)</sub>		0.19		Α
Output current reading accuracy	5A < lout <20A	I <sub>OUT(ACC)</sub>	-5.0		4.0	%
Output current reading accuracy (absolute difference between actual and reported values)	0.56A < lout <5A	lout(ACC)	-1.4		2.7	А
V <sub>OUT</sub> reading range		V <sub>OUT(RNG)</sub>	0		15.9997	V
V <sub>OUT</sub> reading resolution		V <sub>OUT(RES)</sub>		0.244		mV
V <sub>OUT</sub> reading accuracy		V <sub>OUT(ACC)</sub>	-2.0	0.6	2.0	%
V <sub>IN</sub> reading range		V <sub>IN(RNG)</sub>	0		127.875	V
$V_{IN}$ reading resolution		V <sub>IN(RES)</sub>		125		mV
V <sub>IN</sub> reading accuracy		V <sub>IN(ACC)</sub>	-4.0	0.8	4.0	%
Temperature reading resolution		T <sub>(RES)</sub>		0.25		°C
Temperature reading accuracy		T <sub>(ACC)</sub>	-5.0		5.0	%

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules

36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### **Characteristic Curves**

The following figures provide typical characteristics for the EBDW020A0B (12V, 20A) at 25°C. The figures are identical for either positive or negative Remote On/Off logic.

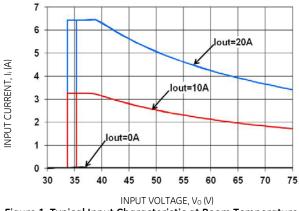


Figure 1. Typical Input Characteristic at Room Temperature.

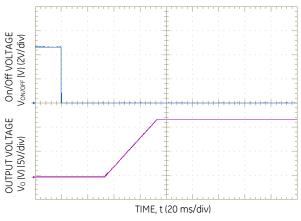


Figure 3. Typical Start-Up Using Remote On/Off with Vin applied, negative logic version shown.

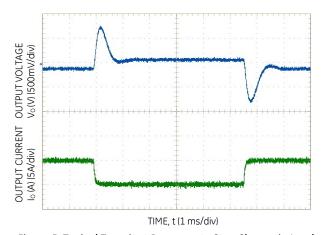


Figure 5. Typical Transient Response to Step Change in Load from 25% to 50% to 25% of Full Load at 48Vdc Input and  $C_0$ = 470uF Polymer, without -02 option.

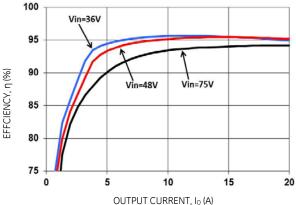


Figure 2. Typical Converter Efficiency Vs. Output current at Room Temperature.

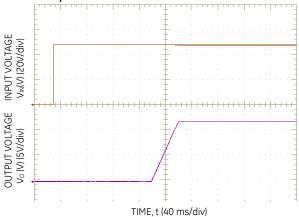


Figure 4. Typical Start-Up Using Vin with Remote On/Off enabled, negative logic version shown.

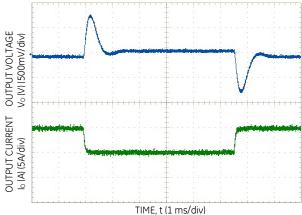



Figure 6. Typical Transient Response to Step Change in Load from 50% to 75% to 50% of Full Load at 48Vdc Input and  $C_0$ = 470 $\mu$ F Polymer, without -02 option.

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules

36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### Characteristic Curves (continued)


The following figures provide typical characteristics for the EBDW020A0B (12V, 20A) at 25°C. The figures are identical for either positive or negative Remote On/Off logic.

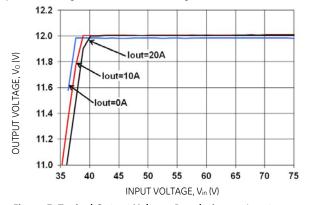

12.4 12.2 lout=0A 12.0 OUTPUT VOLTAGE, Vo (V) lout=10A 11.8 11.6 lout=20A 11.4 11.2 11.0 10.8 55 35 40 45 50 60 65 70 75 INPUT VOLTAGE, Vin (V)

Figure 7. Typical Output Voltage Regulation vs. Input Voltage at Room Temperature.

Figure 8. Typical Output Voltage Regulation vs. Input Voltage for the –P Version at Room Temperature.

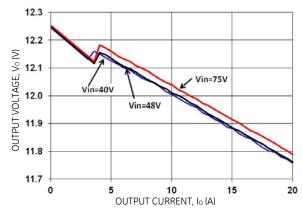

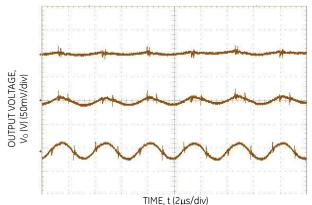
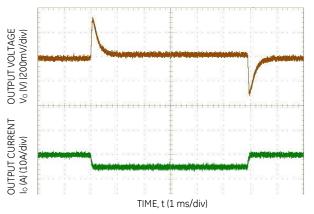


Figure 9. Typical Output Voltage Regulation vs. Output Current for the –P Version at Room Temperature.

Figure 10. Typical Output Ripple and Noise at Room Temperature  $I_o = I_{o,max}$  and and  $C_{OMin}$ .




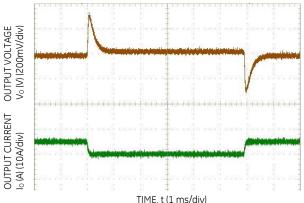


Figure 11. Typical Transient Response to Step Change in Load from 25% to 50% to 25% of Full Load at 48Vdc Input and  $C_0$ = 220µF Polymer, with -02 option.

Figure 12. Typical Transient Response to Step Change in Load from 50% to 75% to 50% of Full Load at 48Vdc Input and  $C_0$ = 220µF Polymer, with -02 option.


# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### **Test Configurations**

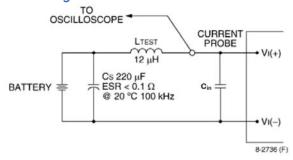

Note: Measure input reflected-ripple current with a simulated source inductance (LTEST) of 12  $\mu$ H. Capacitor CS offsets possible battery impedance. Measure current as shown above.


Figure 13. Input Reflected Ripple Current Test Setup.

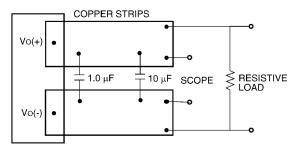

8-3299 (F

Note: Use a 1.0  $\mu$ F ceramic capacitor and a 10  $\mu$ F aluminum or tantalum capacitor. Scope measurement should be made using a BNC socket. Position the load between 51 mm and 76 mm (2 in. and 3 in.) from the module.

Figure 14. Output Ripple and Noise Test Setup.

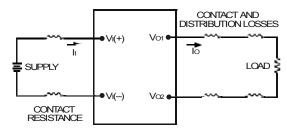

Note: All measurements are taken at the module terminals. When socketing, place Kelvin connections at module terminals to avoid measurement errors due to socket contact resistance.

$$\eta = \left(\frac{[V_{O}(+) - V_{O}(-)]I_{O}}{[V_{I}(+) - V_{I}(-)]I_{I}}\right) \times 100 \%$$

Figure 15. Output Voltage and Efficiency Test Setup.

#### **Design Considerations**

#### **Input Source Impedance**

The power module should be connected to a low ac-impedance source. A highly inductive source impedance can affect the stability of the power module. For the test configuration in Figure 13, a 100 $\mu$ F electrolytic capacitor, C<sub>in</sub>, (ESR<0.7 $\Omega$  at 100kHz), mounted close to the power module helps ensure the stability of the unit. If the module is subjected to rapid on/off cycles, a 330 $\mu$ F input capacitor is required. Consult the factory for further application guidelines.

#### **Safety Considerations**

For safety-agency approval of the system in which the power module is used, the power module must be installed in compliance with the spacing and separation requirements of the end-use safety agency standard, i.e., UL60950-1 2<sup>nd</sup> Ed., CSA C22.2 No. 60950-1 2<sup>nd</sup> Ed., and VDE0805-1 EN60950-1 2<sup>nd</sup> Ed.

If the input source is non-SELV (ELV or a hazardous voltage greater than 60 Vdc and less than or equal to 75Vdc), for the module's output to be considered as meeting the requirements for safety extra-low voltage (SELV), all of the following must be true:

- The input source is to be provided with reinforced insulation from any other hazardous voltages, including the ac mains.
- One V<sub>IN</sub> pin and one V<sub>OUT</sub> pin are to be grounded, or both the input and output pins are to be kept floating.
- The input pins of the module are not operator accessible.
- Another SELV reliability test is conducted on the whole system (combination of supply source and subject module), as required by the safety agencies, to verify that under a single fault, hazardous voltages do not appear at the module's output.

**Note:** Do not ground either of the input pins of the module without grounding one of the output pins. This may allow a non-SELV voltage to appear between the output pins and ground.

The power module has safety extra-low voltage (SELV) outputs when all inputs are SELV.

The input to these units is to be provided with a maximum 15 A fast-acting (or time-delay) fuse in the unearthed lead.

The power module has internally generated voltages exceeding safety extra-low voltage. Consideration should be taken to restrict operator accessibility.

# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### **Feature Descriptions**

#### **Overcurrent Protection**

To provide protection in a fault output overload condition, the EBDW020A0B module is equipped with internal current-limiting circuitry and can endure current limiting continuously. If the overcurrent condition causes the output voltage to fall below 4.0V, the module will shut down. The module is factory default configured for auto-restart operation. The auto-restart feature continually attempts to restore the operation until fault condition is cleared. If the output overload condition still exists when the module restarts, it will shut down again. This operation will continue indefinitely until the overcurrent condition is corrected.

The IOUT\_OC\_WARN threshold level, IOUT\_OC\_FAULT threshold level, and IOUT\_OC\_FAULT\_RESPONSE can be reconfigured via the PMBus interface. If the FAULT\_RESPONSE is reconfigured to remain latched off following an overcurrent shutdown, the overcurrent latch is reset by either cycling the input power, or by toggling the on/off pin for one millisecond.

#### **Output Overvoltage Protection**

The module contains circuitry to detect and respond to output overvoltage conditions. If the overvoltage condition causes the output voltage to rise above the limit in the Specifications Table, the module will shut down. The EBDW020A0B module is factory default configured for auto-restart operation. The auto-restart feature continually attempts to restore the operation until fault condition is cleared. If the output overvoltage condition still exists when the module restarts, it will shut down again. This operation will continue indefinitely until the overvoltage condition is corrected.

The VOUT\_OV\_FAULT threshold level and VOUT\_OV\_FAULT \_RESPONSE can be reconfigured via the PMBus interface. If the FAULT \_RESPONSE is reconfigured to remain latched off following an overvoltage shutdown, the overvoltage latch is reset by either cycling the input power, or by toggling the on/off pin for one millisecond.

#### **Overtemperature Protection**

The modules feature an overtemperature protection circuit to safeguard against thermal damage. The circuit shuts down the module when the default maximum device reference temperature is exceeded. The module is factory default configured to automatically restart once the reference temperature cools by ~25°C.

The OT\_WARNING and OT\_FAULT threshold levels and OT\_FAULT\_RESPONSE can be reconfigured via the PMBus interface. If the FAULT\_RESPONSE is reconfigured to remain latched off following an overtemperature shutdown, the overtemperature latch is reset by either cycling the input power or by toggling the on/off pin for one millisecond.

#### Input Under Voltage Lockout

When Vin exceeds VIN\_ON, the module output is enabled, when Vin falls below VIN\_OFF, the module output is disabled. VIN\_ON and VIN\_OFF can be reconfigured via the PMBus interface. A minimum 2V hysteresis between VIN\_ON and VIN\_OFF is required.

#### **Input Over Voltage Lockout**

The EBDW020A0B module contains circuitry to detect and respond to input overvoltage conditions. If the overvoltage condition causes the input voltage to rise above the limit in the Specifications Table, the module will shut down. The module is factory default configured for auto-restart operation. The auto-restart feature continually monitors the input voltage and will restart the module when the level falls 7V below the VIN\_OV\_FAULT level.

The VIN\_OV\_FAULT threshold level can be reconfigured via the PMBus interface.

#### Remote On/Off (i)

The module contains a standard on/off control circuit reference to the V<sub>IN</sub>(-) terminal. Two factory configured remote on/off logic options are available. Positive logic remote on/off turns the module on during a logic-high voltage on the ON/OFF pin, and off during a logic LO. Negative logic remote on/off turns the module off during a logic HI, and on during a logic LO. Negative logic, device code suffix "1," is the factorypreferred configuration. The On/Off circuit is powered from an internal bias supply, derived from the input voltage terminals. To turn the power module on and off, the user must supply a switch to control the voltage between the On/Off terminal and the  $V_{IN}(-)$  terminal ( $V_{on/off}$ ). The switch can be an open collector or equivalent (see Figure 16). A logic LO is  $V_{on/off} = -0.3V$  to 0.8V. The typical Ion/off during a logic LO (Vin=48V, On/Off Terminal=0.3V) is 147µA. The switch should maintain a logiclow voltage while sinking 310µA. During a logic HI, the maximum  $V_{\text{on/off}}$  generated by the power module is 8.2V. The maximum allowable leakage current of the switch at Von/off = 2.0V is 10µA. If using an external voltage source, the maximum voltage  $V_{on/off}$  on the pin is 14.5V with respect to the  $V_{IN}(-)$ terminal.

If not using the remote on/off feature, perform one of the following to turn the unit on:

For negative logic, short ON/OFF pin to  $V_{IN}(-)$ . For positive logic: leave ON/OFF pin open.

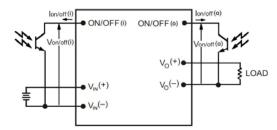


Figure 16. Remote On/Off Implementation.

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

### Feature Descriptions (continued) Load Sharing

For higher power requirements, the EBDW020A0 power module offers an optional feature for parallel operation (-P Option code). This feature provides a precise forced output voltage load regulation droop characteristic. The output set point and droop slope are factory calibrated to insure optimum matching of multiple modules' load regulation characteristics. To implement load sharing, the following requirements should be followed:

- The V<sub>OUT</sub>(+) and V<sub>OUT</sub>(-) pins of all parallel modules must be connected together. Balance the trace resistance for each module's path to the output power planes, to insure best load sharing and operating temperature balance.
- It is permissible to use a common Remote On/Off signal to start all modules in parallel.
- These modules contain means to block reverse current flow upon start-up, when output voltage is present from other parallel modules, thus eliminating the requirement for external output ORing devices. Modules with the –P option will self-determine the presence of voltage on the output from other operating modules, and automatically increase its Turn On delay, T<sub>delay</sub>, as specified in the Feature Specifications Table
- When parallel modules startup into a pre-biased output, e.g. partially discharged output capacitance, the Trise is automatically increased, as specified in the Feature Specifications Table, to insure graceful startup.
- Insure that the load is <50% I<sub>O,MAX</sub> (for a single module) until all parallel modules have started (load full start > module T<sub>delay</sub> time max + T<sub>rise</sub> time).
- If fault tolerance is desired in parallel applications, output ORing devices should be used to prevent a single module failure from collapsing the load bus.

#### **Remote Sense**

Remote sense minimizes the effects of distribution losses by regulating the voltage at the remote-sense connections (See Figure 17). The SENSE(-) pin should be always connected to  $V_0$ (-). The voltage between the remote-sense pins and the output terminals must not exceed the output voltage sense range given in the Feature Specifications table:

 $[V_0(+) - V_0(-)] - [SENSE(+)] \le 0.5 \text{ V}$ 

Although the output voltage can be increased by both the remote sense and by the trim, the maximum increase for the output voltage is not the sum of both. The maximum increase is the larger of either the remote sense or the trim. The amount of power delivered by the module is defined as the voltage at the output terminals multiplied by the output current. When using remote sense and trim, the output voltage of the module can be increased, which at the same output current, would increase the power output of the module. Care should be taken to ensure that the maximum output power of the module remains at or below the maximum rated power (Maximum rated power = Vo,set x Io,max).

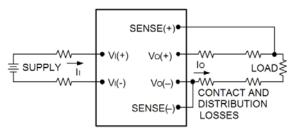


Figure 17. Circuit Configuration for remote sense.

#### Remote On/Off(o)

The module contains an additional remote on/off control input On/Off(o), via either the T/C1 or C2 pin, reference to the SIG\_GND pin. The factory default configuration is set to ignore this input, unless activated by the PMBus command, MFR\_CPIN\_ON\_OFF\_CONFIG. This command is also used to configure the logic for the On/Off(o) pin. Positive logic remote on/off turns the module on during a logic HI voltage on the ON/OFF pin, and off during a logic LO. Negative logic remote on/off turns the module off during a logic HI, and on during a logic LO. The On/Off(o) circuit is powered from an internal bias supply, referenced to SIG\_GND. To turn the power module on and off, the user must supply a switch to control the voltage between the On/Off (o) terminal and the SIG GND pin (Von/off(o)). The switch can be an open collector or equivalent (see Figure 14). A logic LO is  $V_{on/off}(o) = -0.3V$  to 0.8V. The typical  $I_{on/off}(o)$ during a logic low is 330µA. The switch should maintain a logic LO voltage while sinking 250µA. During a logic HI, the maximum V<sub>on/off</sub>(o) generated by the power module is 3.3V. The maximum allowable leakage current of the switch at Von/off(0) = 2.0V is  $130\mu A$ . If using an external voltage source, the maximum voltage V<sub>on/off</sub> on the pin is 3.3V with respect to the V<sub>i</sub>(-) terminal.

If not using the Remote On/Off(o) feature, the pin may be left N/C

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

### Feature Descriptions (continued) Power Good. PG

The EBDW020A0B module provides a Power Good (PG) feature, which compares the module's output voltage to the module's POWER\_GOOD\_ON and POWER\_GOOD\_OFF values. These values are adjustable via PMBus. PG is asserted when the module's output voltage is above the POWER\_GOOD\_ON value, and PG is de-asserted if any condition such as overtemperature, overcurrent or loss of regulation occurs that would result in the output voltage going below the POWER\_GOOD\_OFF value.

The PG signal, provided on pin C2, is implemented with an open-drain node, pulled up via a  $10k\Omega$  resistor to 3.3V internally. For Positive Logic PG (default), the PG signal is HI, when PG is asserted, and LO, when the PG is de-asserted. For Negative Logic PG, the PG signal is LO, when PG is asserted, and HI, when the PG is de-asserted.

The PMBus command MFR\_PGOOD\_POLARITY is used to set the logic polarity of the signal.

If not using the Power Good feature, the pin may be left N/C.

#### **Trim, Output Voltage Programming**

Trimming allows the output voltage set point to be increased or decreased; this is accomplished by connecting an external resistor between the TRIM pin and either the  $V_0(+)$  pin or the  $V_0(-)$  pin.

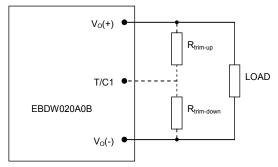


Figure 18. Circuit Configuration to Trim Output Voltage.

Connecting an external resistor ( $R_{trim-down}$ ) between the T/C1 pin and the Vo(-) (or Sense(-)) pin decreases the output voltage set point. To maintain set point accuracy, the trim resistor tolerance should be  $\pm 1.0\%$ .

The following equation determines the required external resistor value to obtain a percentage output voltage change of  $\Delta\%$ .

$$R_{\it trim -down} \ = \left[\frac{511}{\Delta\,\%} - 10.22\,\right] K\Omega$$
 Where 
$$\Delta\,\% \ = \left(\frac{12.0V - V_{\it desired}}{12.0V}\right) \times 100$$

For example, to trim-down the output voltage of the module by 20% to 9.6V, Rtrim-down is calculated as follows:

$$\Lambda \% = 20$$

$$R_{trim-down} = \left[\frac{511}{20} - 10.22\right] K\Omega$$

$$R_{trim-down} = 15.3k\Omega$$

Connecting an external resistor ( $R_{\text{trim-up}}$ ) between the T/C1 pin and the V<sub>O</sub>(+) (or Sense (+)) pin increases the output voltage set point. The following equations determine the required external resistor value to obtain a percentage output voltage change of  $A_{OC}$ .

$$R_{\it trim-up} = \left[ \frac{5.11 \times 12.0V \times (100 + \Delta\%)}{1.225 \times \Delta\%} - \frac{511}{\Delta\%} - 10.22 \right] \text{K}\Omega$$
 Where  $\Delta\% = \left( \frac{V_{\it desired} - 12.0V}{12.0V} \right) \times 100$ 

For example, to trim-up the output voltage of the module by 5% to 12.6V, R<sub>trim-up</sub> is calculated is as follows:

$$A\% = 5$$

$$R_{trim-up} = \left[ \frac{5.11 \times 12.0 \times (100 + 5)}{1.225 \times 5} - \frac{511}{5} - 10.22 \right] K\Omega$$

$$R_{trim-up} = 938.8 K\Omega$$

The voltage between the  $V_0(+)$  and  $V_0(-)$  terminals must not exceed the minimum output overvoltage protection value shown in the Feature Specifications table. This limit includes any increase in voltage due to remote-sense compensation and output voltage set-point adjustment trim. Although the output voltage can be increased by both the remote sense and by the trim, the maximum increase for the

Although the output voltage can be increased by both the remote sense and by the trim, the maximum increase for the output voltage is not the sum of both. The maximum increase is the larger of either the remote sense or the trim. The amount of power delivered by the module is defined as the voltage at the output terminals multiplied by the output current. When using remote sense and trim, the output voltage of the module can be increased, which at the same output current would increase the power output of the module. Care should be taken to ensure that the maximum output power of the module remains at or below the maximum rated power (Maximum rated power = Vo.set X Iomax).

#### **Thermal Considerations**

The power modules operate in a variety of thermal environments and sufficient cooling should be provided to help ensure reliable operation.

Thermal considerations include ambient temperature, airflow, module power dissipation, and the need for increased reliability. A reduction in the operating temperature of the module will result in an increase in reliability.


The thermal data presented here is based on physical measurements taken in a wind tunnel, using automated thermo-couple instrumentation to monitor key component temperatures: FETs, diodes, control ICs, magnetic cores, ceramic capacitors, opto-isolators, and module pwb conductors, while controlling the ambient airflow rate and temperature. For a given airflow and ambient temperature, the module output power is increased, until one (or more) of the components reaches its maximum derated operating

GF Data Sheet

#### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### Thermal Considerations (continued)

temperature, as defined in IPC-9592. This procedure is then repeated for a different airflow or ambient temperature until a family of module output derating curves is obtained.

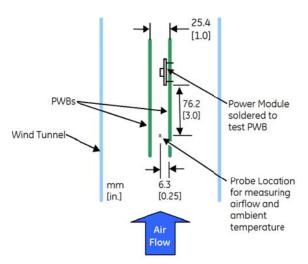

Heat-dissipating components are mounted on the top side of the module. Heat is removed by conduction, convection and radiation to the surrounding environment. Proper cooling can be verified by measuring the thermal reference temperature (TH<sub>1</sub> or TH<sub>2</sub>). Peak temperature occurs at the position indicated in Figure 19 and 20. For reliable operation this temperature should not exceed TH1=125°C or TH2=105°C. For extremely high reliability you can limit this temperature to a lower value.

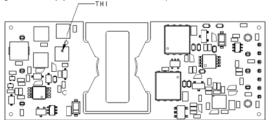


Figure 19. Location of the thermal reference temperature TH. Do not exceed 113 °C.

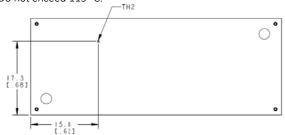


Figure 20. Location of the thermal reference temperature TH3 for Baseplate module. Do not exceed 110 °C.

The output power of the module should not exceed the rated power for the module as listed in the Ordering Information table.

Please refer to the Application Note "Thermal Characterization Process For Open-Frame Board-Mounted Power Modules" for a detailed discussion of thermal aspects including maximum device temperatures.

#### **Heat Transfer via Convection**

Increased airflow over the module enhances the heat transfer via convection. The thermal derating of figure 21-23 shows the maximum output current that can be delivered by each module in the indicated orientation without exceeding the maximum TH<sub>x</sub> temperature versus local ambient temperature (TA) for several air flow conditions.

The use of Figure 21 is shown in the following example: Example

What is the minimum airflow necessary for a EBDW020A0B operating at  $V_1 = 48 \text{ V}$ , an output current of 15A, and a maximum ambient temperature of 60 °C in transverse orientation.

Solution:

Velocity = 0.5m/s (100 LFM) or greater. Given: V<sub>in</sub>= 48V, I<sub>0</sub> = 14A, T<sub>A</sub> = 60 °C Determine required airflow velocity (Use Figure 21): Velocity = 0.5m/s (100 LFM) or greater.

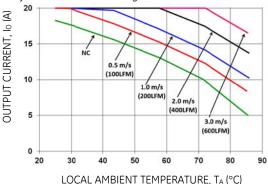


Figure 21. Output Current Derating for the Open Frame EBDW020A0B in the Transverse Orientation: Airflow Direction from Vin(-) to Vin(+); Vin = 48V.


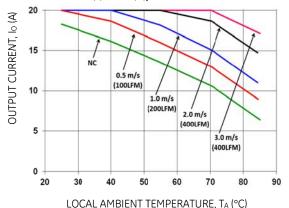


Figure 22. Output Current Derating for the Base Plate

EBDW020A0Bxx-H in the Transverse Orientation: Airflow Direction from Vin(-) to Vin(+); Vin = 48V.

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### Thermal Considerations (continued)

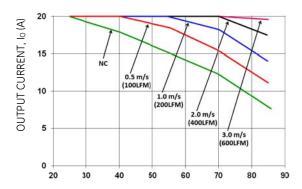

LOCAL AMBIENT TEMPERATURE, TA (°C)

Figure 23. Output Current Derating for the Base Plate EBDW020A0Bxx-H and 0.25" heat sink in the Transverse Orientation; Airflow Direction from Vin(-) to Vin(+); Vin = 48V. Layout Considerations

The EBDW020A0B power module series are low profile in order to be used in fine pitch system card architectures. As such, component clearance between the bottom of the power module and the mounting board is limited. Avoid placing copper areas on the outer layer directly underneath the power module. Also avoid placing via interconnects underneath the power module.

For additional layout guide-lines, refer to FLT007A0Z Data Sheet.

### Through-Hole Lead-Free Soldering Information

The RoHS-compliant, Z version, through-hole products use the SAC (Sn/Ag/Cu) Pb-free solder and RoHS-compliant components. The non-Z version products use lead-tin (Pb/Sn) solder and RoHS-compliant components. Both version modules are designed to be processed through single or dual wave soldering machines. The pins have an RoHS-compliant, pure tin finish that is compatible with both Pb and Pb-free wave soldering processes. A maximum preheat rate of 3°C/s is suggested. The wave preheat process should be such that the temperature of the power module board is kept below 210°C. For Pb solder, the recommended pot temperature is 260°C. while the Pb-free solder pot is 270°C max. Not all RoHScompliant through-hole products can be processed with paste-through-hole Pb or Pb-free reflow process. If additional information is needed, please consult with your GE representative for more details.

#### Reflow Lead-Free Soldering Information

The RoHS-compliant through-hole products can be processed with the following paste-through-hole Pb or Pb-free reflow process.

Max. sustain temperature:

245°C (J-STD-020C Table 4-2: Packaging Thickness>=2.5mm / Volume > 2000mm<sup>3</sup>),

Peak temperature over 245°C is not suggested due to the potential reliability risk of components under continuous high-temperature.

Min. sustain duration above 217°C: 90 seconds Min. sustain duration above 180°C: 150 seconds

Max. heat up rate: 3°C/sec Max. cool down rate: 4°C/sec

In compliance with JEDEC J-STD-020C spec for 2 times reflow requirement.

#### **Pb-free Reflow Profile**

BMP module will comply with J-STD-020 Rev. C (Moisture/Reflow Sensitivity Classification for Nonhermetic Solid State Surface Mount Devices) for both Pb-free solder profiles and MSL classification procedures. BMP will comply with JEDEC J-STD-020C specification for 3 times reflow requirement. The suggested Pb-free solder paste is Sn/Ag/Cu (SAC). The recommended linear reflow profile using Sn/Ag/Cu solder is shown in Figure 24

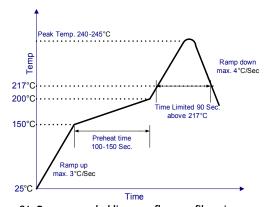


Figure 24. Recommended linear reflow profile using Sn/Ag/Cu solder.

### Surface Mount Information Storage and Handling

The recommended storage environment and handling procedures for moisture-sensitive surface mount packages is detailed in J-STD-033 Rev. A (Handling, Packing, Shipping and Use of Moisture/Reflow Sensitive Surface Mount Devices). Moisture barrier bags (MBB) with desiccant are provided for the EBDW020A0Bxx-SZ modules. These sealed packages should not be broken until time of use. Once the original package is broken, the floor life of the product at conditions of  $\leq$  30°C and 60% relative humidity varies according to the MSL rating (see J-STD-033A). The shelf life for dry packed SMT packages is a minimum of 12 months from the bag seal date, when stored at the following conditions: < 40° C, < 90% relative humidity.

# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### Pick and Place

The EBDW020A0B modules use an open frame construction and are designed for a fully automated assembly process. The modules are fitted with a label designed to provide a large surface area for pick and place operations. The label meets all the requirements for surface mount processing, as well as safety standards, and is able to withstand reflow temperatures of up to 300°C. The label also carries product information such as product code, serial number and the location of manufacture.

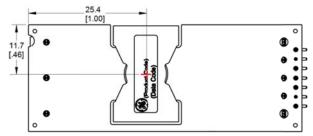


Figure 25. Pick and Place Location.

#### **Nozzle Recommendations**

The module weight has been kept to a minimum by using open frame construction. Even so, these modules have a relatively large mass when compared to conventional SMT components. Variables such as nozzle size, tip style, vacuum pressure and placement speed should be considered to optimize this process. The minimum recommended nozzle diameter for reliable operation is 6mm. The maximum nozzle outer diameter, which will safely fit within the allowable component spacing, is 9 mm.

Oblong or oval nozzles up to  $11 \times 9$  mm may also be used within the space available.

#### **MSL Rating**

The EBDW020A0B modules have a MSL rating as indicated in the Device Codes table, last page of this document.


### Post Solder Cleaning and Drying Considerations

Post solder cleaning is usually the final circuit-board assembly process prior to electrical board testing. The result of inadequate cleaning and drying can affect both the reliability of a power module and the testability of the finished circuit-board assembly. For guidance on appropriate soldering, cleaning and drying procedures, refer to GE Board Mounted Power Modules: Soldering and Cleaning Application Note (APO1-056EPS).

# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### **EMC Considerations**

The circuit and plots in Figure 26 shows a suggested configuration to meet the conducted emission limits of EN55022 Class B. For further information on designing for EMC compliance, please refer to the FLT007A0Z data sheet.

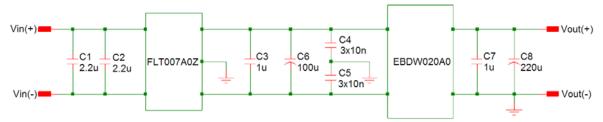

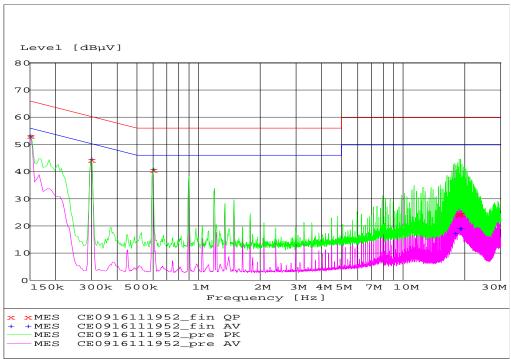


Figure 26. EMC Considerations.

#### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### **Packaging Details**

All versions of the EBDW020A0B are supplied as standard in the plastic trays shown in Figure 27. The trays are selfstacking and each shipping box for the EBDW020A0B module contains 2 or 3 full trays plus one empty hold-down tray giving a total number of 36 power modules.

#### **Tray Specification**

Material Max surface resistivity Color Capacity Min order quantity

PET (1mm)  $10^9 - 10^{11}\Omega/PET$ Clear

18 power modules/Through Hole Pin Tray; 12 power modules/SMT Pin Tray Through Hole Pin: 36pcs (1 box of 2 full trays + 1 empty top tray) SMT Pin: 36pcs (1 box of 3 full trays + 1 empty top tray)

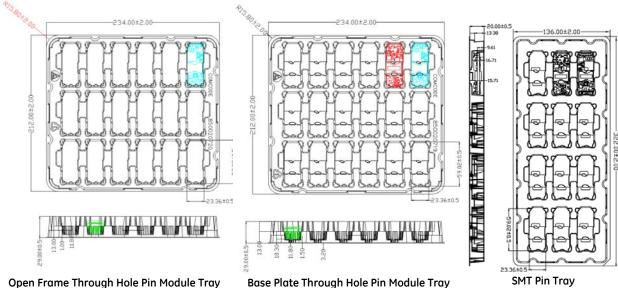


Figure 27. EBDW020 Packaging Tray

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### **Digital Feature Descriptions**

#### **PMBus Interface Capability**

The EBDW020A0B series is equipped with a digital PMBus interface to allow the module to be configured, and communicate with system controllers. Detailed timing and electrical characteristics of the PMBus can be found in the PMB Power Management Protocol Specification, Part 1, revision 1.2, available at http://pmbus.org. The EBDW020A0B supports both the 100kHz and 400kHz bus timing requirements. The EBDW020A0B shall stretch the clock, as long as it does not exceed the maximum clock LO period of 20ms. The EBDW020A0B will check the Packet Error Checking scheme (PEC) byte, if provided by the PMBus master, and include a PEC byte in all responses to the master. However, the EBDW020A0B does not require a PEC byte from the PMBus master.

The EBDW020A0B supports a subset of the commands in the PMBus 1.2 specification. Most all of the controller parameters can be programmed using the PMBus and stored as defaults for later use. All commands that require data input or output use the linear format. The exponent of the data words is fixed at a reasonable value for the command and altering the exponent is not supported. Direct format data input or output is not supported by the EBDW020A0B. The supported commands are described in greater detail below.

The EBDW020A0B contains non-volatile memory that is used to store configuration settings and scale factors. The settings programmed into the device are not automatically saved into this non-volatile memory though. The STORE\_DEFAULT\_ALL command must be used to commit the current settings to non-volatile memory as device defaults. The settings that are capable of being stored in non-volatile memory are noted in their detailed descriptions.

#### **SMBALERT Interface Capability**

The EBDW020A0B also supports the SMBALERT response protocol. The SMBALERT response protocol is a mechanism through which the EBDW020A0B can alert the PMBus master that it has an active status or alarm condition via pulling the SMBALERT pin to an active low. The master processes this condition, and simultaneously addresses all slaves on the PMBus through the Alert Response Address. Only the slave(s) that caused the alert (and that support the protocol) acknowledges this request. The master performs a modified receive byte operation to get the slave's address. At this point, the master can use the PMBus status commands to query the slave that caused the alert. Note: The EBDW020A0B can only respond to a single address at any given time. Therefore, the factory default state for the EBDW020A0B module is to retain it's resistor programmed address, when it is in an ALERT active condition, and not respond to the ARA. This allows master systems, which do not support ARA, to continue to communicate with the slave EBDW020A0B using the programmed address, and using the various READ STATUS commands to determine the cause for the SMBALERT. The CLEAR\_FAULTS command will retire the

active SMBALERT. However, when the EBDW020A0B module is used in systems that do support ARA, Bit 4 of the MFR\_CPIN\_ARA\_CONFIG command can be used to reconfigure the module to utilize ARA. In this case, the EBDW020A0B will no longer respond to its programmed address, when in an ALERT active state. The master is expected to perform the modified received byte operation, and retire the ALERT active signal. At this time, the EBDW020A0B will return to it's resistor programmed address, allowing normal master-slave communications to proceed. The EBDW020A0B does not contain capability to arbitrate data bus contention caused by multiple modules responding to the modified received byte operation. Therefore, when the ARA is used in a multiple module PMBus application, it is necessary to have the EBDW020A0B module at the lowest programmed address in order for the host to properly determine all modules' address that are associated with an active SMBAlert. Please contact your GE sales representative for further assistance, and for more information on the SMBus alert response protocol, see the System Management Bus (SMBus) specification.

#### **PMBus Addressing**

The power module can be addressed through the PMBus using a device address. The module has 64 possible addresses (0 to 63 in decimal) which can be set using resistors connected from the ADDR0 and ADDR1 pins to GND. Note that some of these addresses (0 through 12, 40, 44, 45, and 55 in decimal) are reserved according to the SMBus specifications and may not be useable. The address is set in the form of two octal (0 to 7) digits, with each pin setting one digit. The ADDR1 pin sets the high order digit and ADDR0 sets the low order digit. The resistor values suggested for each digit are shown in Table 4 (1% tolerance resistors are recommended).

Table 4

Digit	Resistor Value (KΩ)
0	10
1	15.4
2	23.7
3	36.5
4	54.9
5	84.5
6	130
7	200




Figure 28. Circuit showing connection of resistors used to set the PMBus address of the module.


The user must know which I<sup>2</sup>C addresses are reserved in a system for special functions and set the address of the module to avoid interfering with other system operations.

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

Both 100kHz and 400kHz bus speeds are supported by the module. Connection for the PMBus interface should follow the High Power DC specifications given in section 3.1.3 in the SMBus specification V2.0 for the 400kHz bus speed or the Low Power DC specifications in section 3.1.2. The complete SMBus specification is available from the SMBus web site, smbus.org.

#### **PMBus Data Format**


For commands that set or report any voltage thresholds related to output voltage (including VOUT\_COMMAND, VOUT\_MARGIN, POWER\_GOOD and READ\_VOUT), the module supports the linear data format consisting of a two byte value with a 16-bit, unsigned mantissa, and a fixed exponent of -12. The format of the two data bytes is shown below:



The value of the number is then given by

Value = Mantissa 
$$\times 2^{-12}$$

For commands that set all other thresholds, voltages or report such quantities, the module supports the linear data format consisting of a two byte value with an 11-bit, two's complement mantissa and a 5-bit, two's complement exponent. The format of the two data bytes is shown below:



The value is of the number is then given by

Value = Mantissa x 2 Exponent

#### **PMBus Enabled On/Off**

The module can also be turned on and off via the PMBus interface. The OPERATION command is used to actually turn the module on and off via the PMBus, while the ON\_OFF\_CONFIG command configures the combination of analog ON/OFF pin input and PMBus commands needed to turn the module on and off. Bit [7] in the OPERATION command data byte enables the module, with the following functions:

0 : Output is disabled1 : Output is enabled

This module uses the lower five bits of the ON\_OFF\_CONFIG data byte to set various ON/OFF options as follows:

Bit Position	4	3	2	1	0
Access	r	r/w	r	r	r
Function	PU	CMD	CPR	POL	CPA
Default Value	1	1	1	1	1

PU: Factory set to 1. EBDW025A0B requires On/Off(i) pin to be connected to proper input rail for module to power up. This bit is used together with the CMD, CPR and ON bits to determine startup.

# Bit Value Module does not power up until commanded by the analog ON/OFF pin and the OPERATION command as programmed in bits [2:0] of the ON OFF CONFIG register.

CMD: The CMD bit controls how the device responds to the OPERATION command.

Bit Value	Action
0	Module ignores the ON bit in the OPERATION command
1	Module responds to the ON bit in the OPERATION command

CPR: Factory set to 1. EBDW025A0B requires On/Off(i) pin to be connected to proper input rail for module to power up. This bit is used together with the CMD and ON bits to determine startup.

Bit Value	Action
1	Module requires the analog ON/OFF pin to be
_	asserted to start the unit

#### PMBus Adjustable Input Undervoltage Lockout

The module allows adjustment of the input under voltage lockout and hysteresis. The command VIN\_ON allows setting the input voltage turn on threshold, while the VIN\_OFF command sets the input voltage turn off threshold. For both the VIN\_ON and VIN\_OFF commands, possible values range from 32.000 to 46.000V in 0.125V steps. VIN\_ON must be 2.000V greater than VIN\_OFF.

Both the VIN\_ON and VIN\_OFF commands use the "Linear" format with two data bytes. The upper five bits [7:3] of the high data byte form the two's complement representation of the exponent, which is fixed at -3 (decimal). The remaining 11 bits are used for two's complement representation of the mantissa, with the  $11^{\text{th}}$  bit fixed at zero since only positive numbers are valid. The data associated with VIN\_ON and VIN\_OFF can be stored to non-volatile memory using the STORE DEFAULT ALL command.

#### PMBus Adjustable Soft Start Delay and Rise Time

The soft start delay and rise time can be adjusted in the module via PMBus. The TON\_DELAY command sets the delay time in ms, and allows choosing delay times between 10ms and 500ms, with resolution of 0.5ms. The TON\_RISE command sets the rise time in ms, and allows choosing soft start times between 15ms and 500ms, with resolution of 0.5ms. When setting TON\_RISE, make sure that the charging current for output capacitors can be delivered by the module in addition to any load current to avoid nuisance tripping of the overcurrent protection circuitry during startup. Both the TON\_RISE and TON\_DELAY commands use the "Linear" format with two data bytes. The upper five bits [7:3] of the high data byte form the two's complement representation of the exponent, which is fixed at -1 (decimal). The remaining 11

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

bits are used for two's complement representation of the mantissa, with the  $11^{\rm th}$  bit fixed at zero since only positive numbers are valid. The data associated with TON\_RISE and TON\_DELAY can be stored to non-volatile memory using the STORE\_DEFAULT\_ALL command.

#### Output Voltage Adjustment Using the PMBus

The EBDW020A0B module output voltage set point is adjusted using the VOUT\_COMMAND. The output voltage setting uses the Linear data format, with the 16 bits of the VOUT\_COMMAND formatted as an unsigned mantissa, and a fixed exponent of -12 (decimal) (read from VOUT MODE).

 $V_{OUT} = Mantissa \times 2^{-12}$ 

The range limits for VOUT\_COMMAND are 5.00V to 13.20V, and the resolution is 0.244mV.

The data associated with VOUT\_COMMAND can be stored to non-volatile memory using the STORE\_DEFAULT\_ALL command.

#### **Output Voltage Margining Using the PMBus**

The EBDW020A0B module can also have its output voltage margined via PMBus commands. The command VOUT\_MARGIN\_HIGH sets the margin high voltage, while the command VOUT\_MARGIN\_LOW sets the margin low voltage. Both the VOUT\_MARGIN\_HIGH and VOUT\_MARGIN\_LOW commands use the "Linear" mode with the exponent fixed at -12 (decimal). The data associated with VOUT\_MARGIN\_HIGH and VOUT\_MARGIN\_LOW can be stored to non-volatile memory using the STORE\_DEFAULT\_ALL command.

The module is commanded to go to the margined high or low voltages using the OPERATION command. Bits [5:2] are used to enable margining as follows:

00XX : Margin Off

0110 : Margin Low (Act on Fault) 1010 : Margin High (Act on Fault)

#### Measuring Output Voltage Using the PMBus

The module can provide output voltage information using the READ\_VOUT command. The command returns two bytes of data in the linear format, with the 16 bits of the READ\_VOUT formatted as an unsigned mantissa, and a fixed exponent of -12 (decimal).

During module manufacture, an offset correction value is written into the non-volatile memory of the module to null errors in the tolerance and A/D conversion of V<sub>OUT</sub>. The command MFR\_VOUT\_READ\_CAL\_OFFSET can be used to read the offset - two bytes consisting of a signed 16-bit mantissa in two's complement format, using a fixed exponent of -12 (decimal). The resolution is 0.244mV. The corrected Output voltage reading is then given by:

 $V_{OUT}(\text{Re}ad) = [V_{OUT}(A/D) +$ 

MFR\_VOUT\_READ\_CAL\_OFFSET

#### Measuring Input Voltage Using the PMBus

The module can provide input voltage information using the READ VIN command. The command returns two bytes of

data in the linear format. The upper five bits [7:3] of the high data byte form the two's complement representation of the exponent, which is fixed at -3 (decimal). The remaining 11 bits are used for two's complement representation of the mantissa, with the  $11^{th}$  bit fixed at zero since only positive numbers are valid.

During module manufacture, offset and gain correction values are written into the non-volatile memory of the module to null errors in the tolerance and A/D conversion of Vin. The command MFR\_VIN\_READ\_CAL\_OFFSET can be used to read the offset - two bytes consisting of a five-bit exponent (fixed at -3) and a 11-bit mantissa in two's complement format. The resolution is 120mV. The command MFR\_VIN\_READ\_CAL\_GAIN can be used to read the gain correction - two bytes consisting of a unsigned 16 bit number. The resolution of this correction factor 0.000122. The corrected input voltage reading is then given by:  $V_{\rm re}({\rm Re} ad) =$ 

[V<sub>IN</sub>(A/D)×(MFR\_VIN\_READ\_CAL\_GAIN8192)] +MFR\_VIN\_READ\_CAL\_OFFSET

#### **Measuring Output Current Using the PMBus**

The module measures output current by using the output filter inductor winding resistance as a current sense element. The module can provide output current information using the READ\_IOUT command. The command returns two bytes of data in the linear format. The upper five bits [7:3] of the high data byte form the two's complement representation of the exponent, which is fixed at -4 (decimal). The remaining 11 bits are used for two's complement representation of the mantissa, with the  $11^{\rm th}$  bit fixed at zero since only positive numbers are valid.

During module manufacture, offset and gain correction values are written into the non-volatile memory of the module to null errors in the tolerance and A/D conversion of  $l_{OUT}$ . The command MFR\_IOUT\_CAL\_OFFSET can be used to read the offset - two bytes consisting of a five-bit exponent (fixed at -4) and a 11-bit mantissa in two's complement format. The resolution is 0.19A. The command MFR\_IOUT\_CAL\_GAIN can be used to read the gain correction - two bytes consisting of a unsigned 16 bit number. The resolution of this correction factor 0.000122. The READ\_IOUT command provides module average output current information. This command only supports positive current sourced from the module. If the converter is sinking current a reading of 0 is provided.

 $I_{OUT}(\text{Re}\,ad) =$ 

$$\begin{split} &[I_{OUT}(A/D) \times (MFR\_IOUT\_CAL\_GAIN/8192)] \\ &+ MFR\_IOUT\_CAL\_OFFSET \end{split}$$

Note that the current reading provided by the module is corrected for temperature.

# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### Measuring the Temperature using the PMBus

The module can provide temperature information using the READ\_TEMPERATURE\_1 command. The command returns two bytes of data in the linear format. The upper five bits [7:3] of the high data byte form the two's complement representation of the exponent, which is fixed at –2 (decimal). The remaining 11 bits are used for two's complement representation of the mantissa.

Note that the module's temperature sensor is located close to the module hot spot TH1 (see Thermal Considerations) and is subjected to temperatures higher than the ambient air temperature near the module. The temperature reading will be highly influenced by module load and airflow conditions.

#### Reading the Status of the Module using the PMBus

The module supports a number of status information commands implemented in PMBus. However, not all features are supported in these commands. A X in the FLAG cell indicates the bit is not supported.

STATUS\_WORD: Returns two bytes of information with a summary of the module's fault/warning conditions.

High Byte

Tiigii byte						
<b>Bit Position</b>	Flag	Default Value				
15	VOUT fault	0				
14	IOUT fault or warning	0				
13	Input Voltage fault	0				
12	X	0				
11	POWER_GOOD# (is negated)	0				
10	X	0				
9	X	0				
8	X	0				

Low Byte

Bit Position	Flag	Default Value
7	X	0
6	OFF	0
5	VOUT Overvoltage	0
4	IOUT Overcurrent	0
3	VIN Undervoltage	0
2	Temperature	0
1	CML (Comm. Memory Fault)	0
0	X	0

STATUS\_VOUT: Returns one byte of information relating to the status of the module's output voltage related faults.

Bit Position	Flag	Default Value
7	VOUT OV Fault	0
6	X	0
5	X	0
4	X	0
3	X	0
2	X	0
1	X	0
0	X	0

STATUS\_IOUT: Returns one byte of information relating to the status of the module's output current related faults.

Bit Position	Flag	Default Value
7	IOUT OC Fault	0
6	X	0
5	IOUT OC Warning	0
4	X	0
3	X	0
2	X	0
1	X	0
0	X	0

STATUS\_INPUT: Returns one byte of information relating to the status of the module's input voltage related faults.

Bit Position	Flag	Default Value
7	VIN OV Fault	0
6	X	0
5	X	0
4	VIN UV Fault	0
3	Module Off (Low VIN)	0
2	X	0
1	X	0
0	X	0

STATUS\_TEMPERATURE: Returns one byte of information relating to the status of the module's temperature related faults.

<b>Bit Position</b>	Flag	Default Value
7	OT Fault	0
6	OT Warning	0
5	X	0
4	X	0
3	X	0
2	X	0
1	X	0
0	X	0

STATUS\_CML: Returns one byte of information relating to the status of the module's communication related faults.

Bit Position	Flag	Default Value
7	Invalid/Unsupported Command	0
6	Invalid/Unsupported Data	0
5	Packet Error Check Failed	0
4	X	0
3	X	0
2	X	0
1	X	0
0	X	0

# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### **Summary of Supported PMBus Commands**

This section outlines the PMBus command support for the EBDW020A0B bus converters. Each supported command is outlined in order of increasing command codes with a quick reference table of all supported commands included at the end of the section. Each command will have the following basic information.

#### Command Name [Code]

Command support Data format Factory default

Additional information may be provided in tabular form or other format, if necessary.

#### OPERATION [0x01]

Command support: On/Off Immediate and Margins (Act on Fault). Soft off with sequencing not supported and Margins (Ignore Fault) not supported. Therefore bits 6, 3, 2, 1 and 0 set as read only at factory defaults.

Format	8 bit unsig	gned (bit field)						
Bit Position	7	6	5	4	3	2	1	0
Access	r/w	r	r/w	r/w	r	r	r	r
Function	10	ON/OFF Bi		[5:4]	Bits	[3:2]	N.	/A
Default Value	1	0	0	0	1	0	0	0

#### ON\_OFF\_CONFIG [0x02]

Command support: Bit 1 polarity will be set based upon module code [0=Negative on/off logic, 1=positive on/off logic to allow customer system to know hardware on/off logic

Format	8 bit unsig	8 bit unsigned (bit field)									
Bit Position	7	6	5	4	3	2	1	0			
Access	r	r	r	r	r	r/w	r	r			
Function	(reserved)			Bit 4 pu	Bit 3 cmd	Bit 2 cpr	Bit 1 pol	Bit 0 cpa			
Default Value	0	0	0	1	1	1	module code	1			

#### CLEAR FAULTS [0x03]

Command support: All functionality STORE DEFAULT ALL[0x11]

#### RESTORE DEFAULT ALL[0x12]

Command support: All functionality – Restores operating parameters from EEprom memory.

#### VOUT MODE[0x20]

Command support: Supported. Factory default: 0x14 - indicates linear mode with exp = -12

Format	8 bit unsigr	8 bit unsigned (bit field)									
Bit Position	7	6	5	4	3	2	1	0			
Access	r	r	r	r	r	r	r	r			
Function	Mode (linear)				2's co	mplement exp	onent				
Default Value	0	0	0	1	0	1	0	0			

#### **VOUT COMMAND [0x21]**

Data format: 16 bit unsigned mantissa (implied exponent per VOUT\_MODE)

Factory default:  $12.000V(12.00 / 2^{-12} \rightarrow 49,152 = 0 \times C000)$ 

Range limits (max/min): 13.200V/5.000V

Units: volt

Command support: Supported

### **VOUT\_CAL\_OFFSET [0x23]**Range limits (max/min): +0.25/-0.25

Units: volt

1). +0.23/-0.23

Command support: read/write support, lockout per MFR DEVICE TYPE, functionality implemented

# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### VOUT MARGIN HIGH [0x25]

Range limits (max/min): 13.2/5.0

Units: volt

Command support: read/write support, full functionality except "Ignore faults". Note: Range cross-check - value must be greater than VOUT\_MARGIN\_LOW value.

#### **VOUT MARGIN LOW [0x26]**

Range limits (max/min): 13.2/5.0

Units: volt

Command support: read/write support, full functionality except "Ignore faults". Note: Range cross-check - value must be less than VOUT MARGIN HIGH value.

#### VOUT\_DROOP [0x28]

Factory default: 0 (No droop); 15 (Parallel operation)

Range limits (max/min): 50/0

Units: mv/A

Command support: All functionality

#### VIN\_ON [0x35]

Range limits (max/min): 46/32

Units: volt

Command support: All functionality

Note: Special interlock checks between VIN\_ON and VIN\_OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF level to be higher than and ON level

#### VIN\_OFF [0x36]

Range limits (max/min): 46/32

Units: volt

Command support: All functionality

 $Note: Special interlock checks between VIN\_ON and VIN\_OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V minimum and do not allow the OFF maintain a hysteresis gap of 2V mini$ 

level to be higher than and ON level

#### VOUT\_OV\_FAULT\_LIMIT [0x40]

Range limits (max/min): 15.99/8.0

Units: volt

Command support: All functionality

Note: Range cross- check - value must be greater than VOUT COMMAND value.

#### **VOUT OV FAULT RESPONSE [0x41]**

#### Command support:

- Response settings (bits RSP0:1) only a setting of 10, unit shuts down and responds according to the retry settings below, is supported.
- Retry settings (bits RS0:2) only settings of 000 (unit does not attempt to restart on fault) and 111 unit continuously restarts (normal startup) while fault is present until commanded off, bias power is removed or another fault condition causes the unit to shutdown.
- Delay time setting (bits 0-2) only DT0:2 = 0 (no delay) supported.

Default Settings: The default settings for the VOUT\_OV\_FAULT\_RESPONSE command are;

- The unit shuts down in response to a VOUT over voltage condition.
- The unit will continuously restart (normal startup) while the VOUT over voltage condition is present until it is commanded off, bias power is removed or another fault condition causes the unit to shutdown.
- The shutdown delay is set to 0 delay cycles.

Format	8 bit unsign	B bit unsigned (bit field)									
Bit Position	7	6	5	4	3	2	1	0			
Access	r	r	r/w	r/w	r/w	r	r	r			
Function	RSP[1]	RSP[0]	RS[2]	RS[1]	RS[0]	DT[2]	DT[1]	DT[0]			
Default Value	1	0	1	1	1	0	0	0			

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### **IOUT OC FAULT LIMIT [0x46]**

Range limits (max/min): 41.5/20

Units: amp

Command support: All functionality

Note: Range cross-check - value must be greater than IOUT\_OC\_WARN\_LIMIT value.

#### **IOUT OC FAULT RESPONSE [0x47]**

Command support:

- Response settings (bits RSP0:1) only settings of 11, unit shuts down and responds according to the retry settings below, is supported.
- Retry settings (bits RSO:2) only settings of 000 (unit does not attempt to restart on fault) and 111 unit continuously restarts (normal startup) while fault is present until commanded off, bias power is removed or another fault condition causes the unit to shutdown.
- Delay time setting (bits 0-2) only DT0:2 = 0 (no delay) supported.

Default Settings: The default settings for the IOUT\_OC\_FAULT\_RESPONSE command are;

- The unit shuts down in response to an IOUT over current condition.
- The unit will continuously restart (normal startup) while the IOUT over current condition is present until it is commanded off, bias power is removed or another fault condition causes the unit to shutdown.

- The shutdown delay is set to 0 delay cycles.

Format	8 bit unsigne	8 bit unsigned (bit field)								
Bit Position	7	6	5	4	3	2	1	0		
Access	r	r	r/w	r/w	r/w	r	r	r		
Function	RSP[1]	RSP[0]	RS[2]	RS[1]	RS[0]	DT[2]	DT[1]	DT[0]		
Default Value	1	1	1	1	1	0	0	0		

#### IOUT OC WARN LIMIT [0x4A]

Range limits (max/min): 30.3/7.6

Units: amp

Command support: read/write support, functionality complete

Note: Range cross-check - value must be less than IOUT\_OC\_FAULT\_LIMIT value.

#### OT\_FAULT\_LIMIT [0x4F]

Range limits (max/min): 140/25

Units: degrees C.

Command support: All functionality

Note: Range cross-check - value must be greater than OT\_WARN\_LIMIT value.

#### OT\_FAULT\_RESPONSE [0x50]

Command support:

- Response settings (bits RSP0:1) only setting of 10, unit shuts down and responds according to the retry settings below
- Retry settings (bits RSO:2) only settings of 000 (unit does not attempt to restart on fault) and 111 unit continuously restarts (normal startup) while fault is present until commanded off, bias power is removed or another fault condition causes the unit to shutdown.
- Delay time setting (bits 0-2) only DT0:2 = 0 (no delay) supported.

Default Settings: The default settings for the OT\_FAULT\_RESPONSE command are;

- The unit shuts down in response to an over-temperature condition.
- The unit will continuously restart (normal startup) while the over-temperature condition is present until it is commanded off, bias power is removed or another fault condition causes the unit to shutdown.
- The shutdown delay is set to 0 delay cycles.

Format	8 bit unsigne	8 bit unsigned (bit field)									
Bit Position	7	6	5	4	3	2	1	0			
Access	r	r	r/w	r/w	r/w	r	r	r			
Function	RSP[1]	RSP[0]	RS[2]	RS[1]	RS[0]	DT[2]	DT[1]	DT[0]			
Default Value	1	0	1	1	1	0	0	0			

# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### OT\_WARN\_LIMIT [0x51]

Range limits (max/min): 125/25

Units: degrees C.

Command support: All functionality

Note: Range cross-check – value must be less than OT\_FAULT\_LIMIT value.

#### VIN\_OV\_FAULT\_LIMIT [0x55]

Range limits (max/min): 90/48

Units: volt

Command support: All functionality

#### VIN OV FAULT RESPONSE [0x56]

Command support:

Response settings (bits RSP0:1) - only settings of 11 (The device's output is disabled while the fault is present.) is supported..

- Retry settings (bits RS0:2) only settings of 000 (unit does not attempt to restart on fault.
- Delay time setting (bits 0-2) only DT0:2 = 0 (no delay) supported.

Default Settings: The default settings for the VIN OV FAULT RESPONSE command are:

- The unit shuts down in response to a VIN over voltage condition.
- The unit will continuously prepares to restart (normal startup) while the VIN over voltage condition is present until it is commanded off, bias power is removed, the VIN over voltage condition is removed, or another fault condition causes the unit to shutdown.
- The shutdown delay is set to 0 delay cycles.

Format	8 bit unsign	8 bit unsigned (bit field)									
Bit Position	7	6	5	4	3	2	1	0			
Access	r	r	r	r	r	r	r	r			
Function	RSP[1]	RSP[0]	RS[2]	RS[1]	RS[0]	DT[2]	DT[1]	DT[0]			
Default Value	1	1	0	0	0	0	0	0			

#### POWER\_GOOD\_ON [0x5E]

Range limits (max/min): 13.2/4.8 Units: volt

Command support: full support

Note: Range cross-check - value must be greater than POWER\_GOOD\_OFF value by 1.6V.

#### POWER GOOD OFF [0x5F]

Range limits (max/min): 13.2/3.0

Units: volt

Command support: full support

Note: Range cross-check – value must be less than POWER\_GOOD\_ON value by 1.6V.

#### TON\_DELAY [0x60]

Range limits (max/min): 500/40

Units: milliseconds

Command support: full support

#### TON\_RISE [0x61]

Range limits (max/min): 500/40

Units: milliseconds

Command support: full support

# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### STATUS\_WORD [0x79]

Command support: full implementation for supported functions (note: Fans, MFR SPECIFIC, Unknown not supported)

Format	8 bit unsigned (bit field)								
Bit Position	15	14	13	12	11	10	9	8	
Access	r	r	r	r	r	r	r	r	
Function	VOUT	I/POUT	INPUT	MFR_SPEC <sup>1</sup>	#PWR_ GOOD	FANS <sup>1</sup>	OTHER <sup>1</sup>	UN KNOWN <sup>1</sup>	

Format	8 bit unsigi	ned (bit field)						
Bit Position	7	6	5	4	3	2	1	0
Access	r	r	r	r	r	r	r	r
Function	BUSY <sup>1</sup>	OUTPUT _OFF	VOUT_O V_FAULT	IOUT_OC _FAULT	VIN_UV _FAULT	TEMP	CML	NONE OF ABOVE <sup>1</sup>

<sup>(1)</sup> Not supported

#### STATUS\_VOUT [0x7A]

Command support: VOUT\_OV\_FAULT support, all bit reset supported

Format	8 bit unsigned	bit unsigned (bit field)									
Bit Position	7	6	5	4	3	2	1	0			
Access	r/reset(1)	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset			
Function	VOUT_OV _FAULT	VOUT_OV _WARN¹	VOUT_UV _WARN¹	VOUT_UV _FAULT <sup>1</sup>	VOUT_ MAX _WARN <sup>1</sup>	TON_ MAX_ FAULT <sup>1</sup>	TOFF_ MAX_ WARN <sup>1</sup>	VOUT TRACKING ERROR <sup>1</sup>			

<sup>(1)</sup> Not supported

#### STATUS\_IOUT [0x7B]

Command support: IOUT\_OC\_FAULT support, all bit reset supported

Format	8 bit unsigne	8 bit unsigned (bit field)									
Bit Position	7	6	5	4	3	2	1	0			
Access	r/ reset(1)	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset			
Function	IOUT_OC _FAULT	IOUT_OC _LV _FAULT <sup>1</sup>	IOUT_OC _WARN	IOUT_UC _FAULT <sup>1</sup>	Current Share Fault <sup>1</sup>	In Power Limiting Mode <sup>1</sup>	POUT_OP _FAULT <sup>1</sup>	POUT_OP _WARN¹			

<sup>(1)</sup> Not supported

#### STATUS\_INPUT [0x7C]

Command support: VIN OV FAULT support, all bit reset supported

command supp	ommand support: Vivi_o v_17.621 support; an ottreset supported										
Format	8 bit unsigne	8 bit unsigned (bit field)									
Bit Position	7	6	5	4	3	2	1	0			
Access	r/ reset(1)	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset			
Function	VIN_OV _FAULT	VIN_OV _WARN¹	VIN_UV _WARN¹	VIN_UV _FAULT	Unit Off (low input voltage)	IIN_OC _FAULT <sup>1</sup>	IIN_OC _WARN¹	PIN_OP _WARN¹			

<sup>(1)</sup> Not supported

#### STATUS\_TEMPERATURE [0x7D]

Command support: OT\_WARN, OT\_FAULT supported, all bit reset supported

Format	8 bit unsigne	B bit unsigned (bit field)								
Bit Position	7	6	5	4	3	2	1	0		
Access	r/ reset(1)	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset		
Function	OT_FAULT	OT_WARN	UT_ WARN¹	UT_ FAULT <sup>1</sup>	reserved	reserved	reserved	reserved		

<sup>(1)</sup> Not supported

# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### STATUS\_CML [0x7E]

Command support: PEC\_FAULT, INVALID\_DATA, INVALID\_CMD supported, all bit reset supported

Format	8 bit unsigned (bit field)								
Bit Position	7	6	5	4	3	2	1	0	
Access	r/ reset(1)	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset	r/ reset	
Function	INVALID CMD	INVALID DATA	PEC FAILED	MEMORY FAULT <sup>1</sup>	PROC FAULT <sup>1</sup>	reserved	COM FAULT (other) <sup>1</sup>	Memory/ Logic fault (other) <sup>1</sup>	

(1) Not supported

READ\_VIN [0x88]

Command support: full support

READ VOUT [0x8B]

Command support: full support

READ IOUT [0x8C]

Command support: full support

#### READ TEMPERATURE 1 [0x8D]

Command support: full support

#### MFR\_DEVICE\_TYPE [0xD0]

Command support: partial support in place (Mod Name)

Format	Unsig	Insigned Binary														
Bit Pos.	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
Access	r/w	r/w r/w r/w r/w r/w r r r r r/w r/w r/w						r/w	r/w							
Function		Reserved									Module	Name			WPE	Res
Default	0	0	0	0	0	0	0	0	1	0	0	0	1	1	1	0

Byte	Bit	Description	Value	Meaning	
High Byte	7:0	Reserved			
	7:2	Module Name <sup>1</sup>	1xxxxx	Module Name	
Low Byte	1	WIDE	0	Write Protect Enable not active.	
Low Byte	1 WPE		1	Write Protect Enable active.	
	0	Reserved	0	Reserved	

1. Present module designations (Non-isolated units will have a 0XXXXX format)

a. QBDW033A0B4xxx: 100000

b. QBDW025A0B4xxx: 100001

c. EBDW025A0B4xxx: 100010

d. EBDW020A0B4xxx: 100011

#### MFR\_VOUT\_READ\_CAL\_GAIN [0xD1]

Factory default: 0x2000

Range limits (max/min): 0x2666/0x1999

Units: N/A

Command support: support for VOUT gain calibration (factor in flash), lockout per MFR\_DEVICE\_TYPE

#### MFR\_VOUT\_READ\_CAL\_OFFSET [0xD2]

Range limits (max/min): exp must = -12

Units: N/A

Command support: support for VOUT offset calibration (factor in flash), lockout per MFR\_DEVICE\_TYPE

#### MFR\_VIN\_READ\_CAL\_GAIN [0xD3]

Factory default: 0X2000

Range limits (max/min): 0x2666/0x1999

 ${\tt Command \ support: \ support \ for \ VIN \ gain \ calibration \ (factor \ in \ flash), \ lockout \ per \ MFR\_DEVICE\_TYPE}$ 

# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### MFR\_VIN\_READ\_CAL\_OFFSET [0xD4]

Data format: VIN linear format Range limits (max/min): exp must = -3

Units: N/A

Command support: support for VIN offset calibration (factor in flash), lockout per MFR\_DEVICE\_TYPE

#### MFR IOUT CAL GAIN [0xD6]

Range limits (max/min): 0x2666/0x1999

Units: N/A

Command support: support for IOUT gain calibration, lockout per MFR\_DEVICE\_TYPE

#### MFR\_IOUT\_CAL\_OFFSET [0xD7]

Range limits (max/min): exp must = -4

Units: N/A

Command support: support for IOUT offset calibration, lockout per MFR\_DEVICE\_TYPE

#### MFR FW REV [0xDB]

Range limits (max/min): 0 - 0xff (0.00 - 15.15)

Units: N/A

Command support: full read support

#### MFR\_C1\_C2\_ARA\_CONFIG [0xE0]

Command Code

Command support: Full support.

Command	MFR_C1_C	MFR_C1_C2_ARA_CONFIG								
Format	8 bit unsigr	8 bit unsigned (bit field)								
Bit Position	7	7 6 5 4 3 2 1 0								
Access	r	r	r	r/w	r/w	r/w	r/w	r/w		
Function		Reserved		ARA		Assignm	ent Table			
Default Value	0	0	0	0	0	0	0	0		

Bit	Description	Value	Meaning
7:5	Reserved	000	Reserved
4	ARA	0	ARA not functional, module remains at resistor programmed address when SMBLAERT is asserted
		1	ARA functional, module responds to ARA only, when SMBLAERT is asserted
		0000	T/C1 pin: ON/OFF (Secondary) C2 pin: POWER_GOOD
3:0	3:0 PIN Configuration*	0001	T/C1 pin: TRIM C2 pin: POWER_GOOD
		0010	T/C1 pin: TRIM C2 pin: ON/OFF (Secondary)

<sup>\*</sup> All EBDW without -P option

Bit	Description	Value	Meaning
7:5	Reserved	000	Reserved
4	ARA	0	ARA not functional, module remains at resistor programmed address when SMBLAERT is asserted
		1	ARA functional, module responds to ARA only, when SMBLAERT is asserted
3:0	PIN Configuration**	0000	T/C1 pin: ON/OFF (Secondary) C2 pin: POWER_GOOD

<sup>\*\*</sup> All EBDW with -P option

# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### MFR\_C2\_LOGIC [0xE1]

Command Code

Command support: full support (bits 0 and 1) as follows:

Command	MFR_C	MFR_C2_LOGIC										
Format	8 bit un	3 bit unsigned (bit field)										
Bit Position	7	6	5	4	3	2	1	0				
Access	r	r	r	r	r	r	r/ w	r/w				
Function	Reserved On/Off(primary & secondary) combination logic						logic					
Default Value	0	0	0	0	0	0	0	0				

Bit	Description	Value	Meaning
7:2	Reserved	000000	Reserved
1	ON/OFF	0	Secondary side on/off pin state when mapped to either T/C1 or C2 is ignored
1	Configuration	1	AND – Primary and Secondary side on/off
0	Secondary Side	0	Negative Logic (Low Enable: Input < 0.8V wrt Vout(-)
0	ON/OFF Logic	1	Positive Logic (High Enable: Input > 2.0V wrt Vout(-)

#### MFR\_PGOOD\_POLARITY [0xE2]

Command support: full support (bit 0) as follows:

Bit 0: 0 = Negative PGOOD logic (module PGOOD asserted when pin is LO, PGOOD de-asserted when pin is HI) 1 = Positive PGOOD logic (module PGOOD de-asserted when pin is LO, PGOOD asserted when pin is HI)

Command	MFR_PGO	MFR_PGOOD_POLARITY									
Format	8 bit unsig	8 bit unsigned (bit field)									
Bit Position	7	7 6 5 4 3 2 1 0									
Access	r	r	r	r	r	r	r	r/w			
Function		Reserved logic									
Default Value	0	0	0	0	0	0	0	1			

#### MFR\_MODULE\_DATE\_LOC\_SN [0xF0]

Command support: read/write support for 12 byte block, lockout per MFR\_DEVICE\_TYPE

# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### Barracuda PMBus Command Quick Reference Table

PMBUS CMD	CMD CODE	DATA BYTES	DATA FORMAT	DATA UNITS	TRANSFER TYPE	DEFAULT VALUE
OPERATION	0×01	1	Bit field	N/A	R/W byte	0×80
ON_OFF_CONFIG	0x02	1	Bit field	N/A	R/W byte	0x1D (Neg Logic) 0x1F (Pos Logic)
CLEAR_FAULTS	0×03	0	N/A	N/A	Send byte	none
STORE_DEFAULT_ALL	0×11	0	N/A	N/A	Send byte	none
RESTORE_DEFAULT_ALL	0×12	0	N/A	N/A	Send byte	none
VOUT_MODE	0x20	1	mode + exp	N/A	Read byte	0×14
VOUT_COMMAND	0x21	2	VOUT linear	Volts	R/W word	12.000V
VOUT_CAL_OFFSET	0x23	2	VOUT linear	Volts	R/W word	MS
VOUT_MARGIN_HIGH	0x25	2	VOUT linear	Volts	R/W word	12.600V
VOUT_MARGIN_LOW	0x26	2	VOUT linear	Volts	R/W word	11.400V
VOUT_DROOP	0x28	2	VOUT linear	mV/A	R/W word	0
VIN_ON	0x35	2	VIN linear	V	R/W word	35.000V
VIN_OFF	0x36	2	VIN linear	V	R/W word	33.000V
VOUT OV FAULT LIMIT	0x40	2	VOUT linear	V	R/W word	15.99V
VOUT OV FAULT RESPONSE	0x41	1	Bit field	N/A	R/W byte	0xB8
IOUT_OC_FAULT_LIMIT	0x46	2	IOUT linear	Amps	R/W word	23.000A (w/o -02 option) 28.000A (w -02 option)
IOUT_OC_FAULT_RESPONSE	0x47	1	Bit field	N/A	R/W byte	0×F8
IOUT_OC_WARN_LIMIT	0x4A	2	IOUT linear	Amps	R/W word	21.000A
OT FAULT LIMIT	0x4F	2	TEMP linear	Deg. C	R/W word	135C
OT FAULT RESPONSE	0×50	1	Bit field	N/A	R/W byte	0x88
OT_WARN_LIMIT	0x51	2	TEMP linear	Deg. C	R/W word	125C
VIN_OV_FAULT_LIMIT	0x55	2	VIN linear	V V	R/W word	85V
VIN_OV_FAULT_RESPONSE	0x56	1	Bit field	N/A	R/W byte	0×C0
POWER GOOD ON	0x5E	2	VOUT linear	V	R/W word	10.100V
POWER GOOD OFF	0x5F	2	VOUT linear	V	R/W word	8.500V
TON DELAY	0x60	2	Time linear	msec	R/W word	40ms
TON_RISE	0x61	2	Time linear	msec	R/W word	40ms
STATUS WORD	0x79	2	Bit field	N/A	Read word	N/A
STATUS_WORD	0x7A	1	Bit field	N/A	Read byte	N/A
STATUS_IOUT	0x7B	1	Bit field	N/A	Read byte	N/A
STATUS_INPUT	0x7C	1	Bit field	N/A	Read byte	N/A
STATUS_TEMPERATURE	0x7D	1	Bit field	N/A	Read byte	N/A
STATUS CML	0x7E	1	Bit field	N/A	Read byte	N/A
READ_VIN	0x7E	2	VIN linear	V	Read word	N/A
READ_VIIV	0x8B	2	VOUT linear	V	Read word	N/A
READ IOUT	0x8C	2	IOUT linear	Amps	Read word	N/A
READ_TEMP1	0x8D	2	TEMP linear	Deg. C	Read word	N/A
PMBUS REVISION	0x98	1	Bit Field	n/a	Read byte	1.2
MFR_DEVICE_TYPE	0x90	2	Custom	N/A	R/W word	0x008E
MFR VOUT READ CAL GAIN	0xD1	2	16 bit unsigned	N/A	R/W word	0x2000
MFR VOUT READ CAL OFF	0xD1	2	VOUT linear	N/A	R/W word	MS
MFR_VIN_READ_CAL_GAIN	0xD3	2	16 bit unsigned	N/A	R/W word	MS
MFR VIN READ CAL OFF	0xD3	2	VIN linear	N/A	R/W word	MS
MFR_IOUT_CAL_GAIN	0xD4	2	16 bit unsigned	N/A	R/W word	MS
MFR_IOUT_CAL_OFFSET	0xD7	2	IOUT linear	N/A	R/W word	MS
MFR FW REV	0xD7	2	8 bit unsigned	N/A	Read byte	0xMj.Mn.Bh.Bl
MFR_C1_C2_ARA_CONFIG	0xDB	1	Bit field	N/A	R/W byte	0x00
MFR_C2_LOGIC	0xE0	1	Bit field	N/A	R/W byte	0x00 0x00
MFR_PGOOD_POLARITY	0xE1	1	Bit field	N/A N/A	R/W byte	0x00 0x01
					,	
MFR_MOD_DATE_LOC_SN	0xF0	12	8 bit char	N/A	R/W block	YYLLWW123456

MS=Module specific

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output


#### Mechanical Outline for EBDW020A0B Through-hole Module

Dimensions are in millimeters and [inches].

Tolerances: x.x mm  $\pm$  0.5 mm [x.xx in.  $\pm$  0.02 in.] (Unless otherwise indicated)

x.xx mm  $\pm$  0.25mm [x.xxx in  $\pm$  0.010 in.]


Top side label includes GE name, product designation and date code.

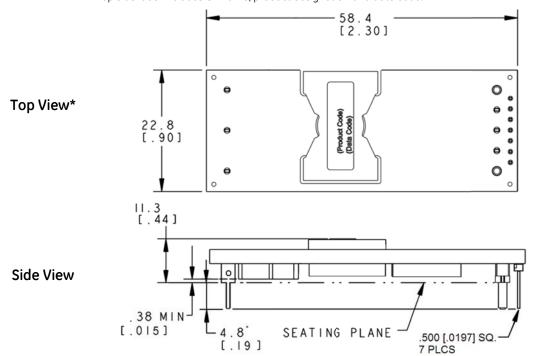

\*For optional pin lengths, see Table 2, Device Coding Scheme and Options

#### **Bottom View**

Pin	
Number	Pin Name
1	VIN(+)
2	ON/OFF
3	VIN(-)
4	VOUT(-)
5	SENSE(-)
6	TRIM/C1
7	SENSE(+)
8	VOUT(+)
9	C2
10	SIG_GND
11	DATA
12	SMBALERT
13	CLK
14	ADDR1
15	ADDR0

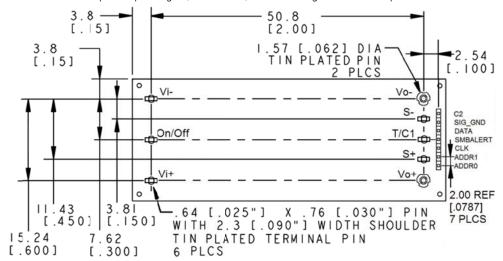

GE

### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules


36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### Mechanical Outline for EBDW020A0Bxx-S SMT Module


Dimensions are in millimeters and [inches].

Tolerances: x.x mm  $\pm$  0.5 mm [x.xx in.  $\pm$  0.02 in.] (Unless otherwise indicated)


x.xx mm  $\pm$  0.25mm [x.xxx in  $\pm$  0.010 in.]

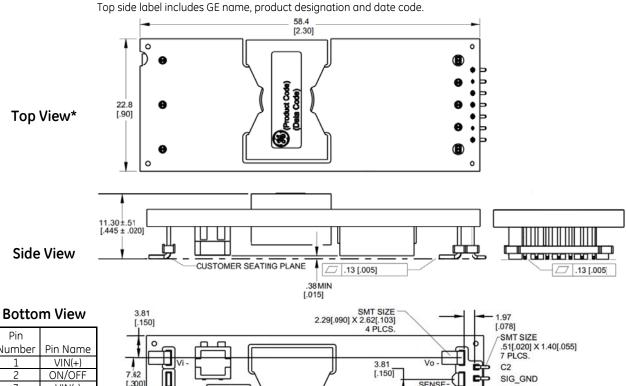

Pin	
Number	Pin Name
1	VIN(+)
2	ON/OFF
3	VIN(-)
4	VOUT(-)
5	SENSE(-)
6	TRIM/C1
7	SENSE(+)
8	VOUT(+)
9	C2
10	SIG_GND
11	DATA
12	SMBALERT
13	CLK
14	ADDR1
15	ADDR0

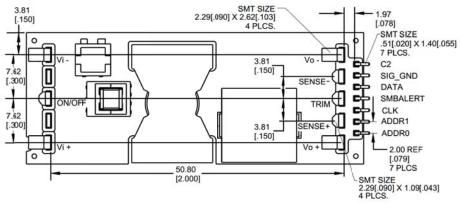

Isometric View **Bottom Side** (Components removed for clarity)

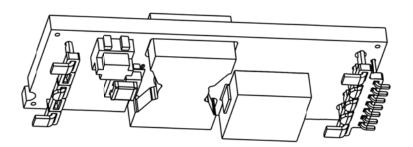


### EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### Mechanical Outline for EBDW020A0B-H (Baseplate version) Module

Dimensions are in millimeters and [inches].


Tolerances: x.x mm  $\pm$  0.5 mm [x.xx in.  $\pm$  0.02 in.] (Unless otherwise indicated) x.xx mm  $\pm$  0.25 mm [x.xxx in  $\pm$  0.010 in.]

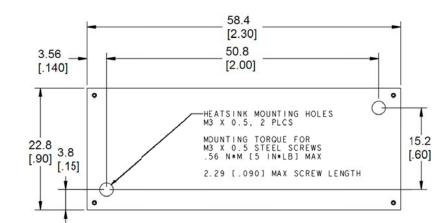

**Top View** 

\*Side label includes product designation, and data code.


\*For optional pin lengths, see Table 2, Device Coding Scheme and Options

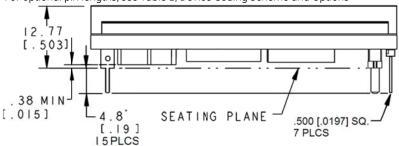

Side View\*

#### **Bottom View\*\*\***

Pin	
Number	Pin Name
1	VIN(+)
2	ON/OFF
3	VIN(-)
4	VOUT(-)
5	SENSE(-)
6	TRIM/C1
7	SENSE(+)
8	VOUT(+)
9	C2
10	SIG_GND
11	DATA
12	<b>SMBALERT</b>
13	CLK
14	ADDR1
15	ADDR0

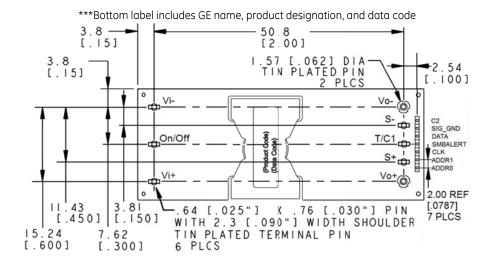


# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### **Recommended Pad Layouts**

Dimensions are in millimeters and [inches]. Tolerances: x.x mm  $\pm$  0.5 mm [x.xx in.  $\pm$  0.02 in.[ (unless otherwise indicated) x.xx mm  $\pm$  0.25mm [x.xxx in  $\pm$  0.010 in.]

#### **Through-Hole Modules**

Pin	
Number	Pin Name
1	VIN(+)
2	ON/OFF
3	VIN(-)
4	VOUT(-)
5	SENSE(-)
6	TRIM/C1
7	SENSE(+)
8	VOUT(+)
9	C2
10	SIG_GND
11	DATA
12	SMBALERT
13	CLK
14	ADDR1
15	ADDR0

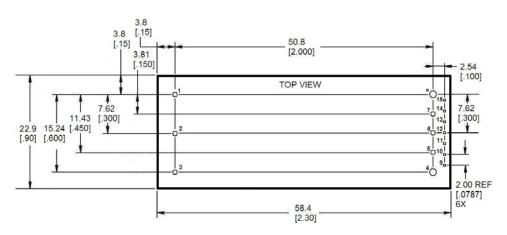


Hole and Pad diameter recommendations:

Pin Number	Hole Dia mm [in]	Pad Dia mm [in]		
1, 2, 3, 5, 6, 7	1.6 [.063]	2.1 [.083]		
4, 8	2.2 [.087]	3.2 [.126]		
9, 10, 11, 12, 13, 14, 15	1.0 [.039]	1.5 [.059]		

#### **SMT Modules**

Pin	
Number	Pin Name
1	VIN(+)
2	ON/OFF
3	VIN(-)
4	VOUT(-)
5	SENSE(-)
6	TRIM/C1
7	SENSE(+)
8	VOUT(+)
9	C2
10	SIG_GND
11	DATA
12	<b>SMBALERT</b>
13	CLK
14	ADDR1
15	ADDR0

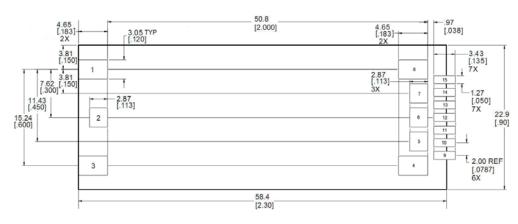

# EBDW020A0B Barracuda Series; DC-DC Converter Power Modules 36-75Vdc Input; 12.0Vdc, 20.0A, 240W Output

#### Ordering Information

Please contact your GE Sales Representative for pricing, availability and optional features.

**Table 1. Device Codes** 

Product codes	Input Voltage	Output Voltage	Output Current	Efficiency	Connector Type	MSL Rating	Comcodes
EBDW020A0B41Z	48V (36–75Vdc)	12V	20A	94.8%	Through hole	2a	CC109167482
EBDW020A0B641Z	48V (36-75Vdc)	12V	20A	94.8%	Through hole	2a	150046402
EBDW020A0B41-HZ	48V (36-75Vdc)	12V	20A	94.8%	Through hole	2a	CC109167490
EBDW020A0B641-HZ	48V (36-75Vdc)	12V	20A	94.8%	Through hole	2a	150023769
EBDW020A0B841-HZ	48V (36-75Vdc)	12V	20A	94.8%	Through hole	2a	150029356
EBDW020A0B641-02HZ	48V (36-75Vdc)	12V	20A	94.8%	Through hole	2a	150027293
EBDW020A0B841-02HZ	48V (36-75Vdc)	12V	20A	94.8%	Through hole	2a	150035275
EBDW020A0B641-PHZ	48V (36-75Vdc)	12V	20A	94.8%	Through hole	2a	CC109170552
EBDW020A0B41-SZ	48V (36-75Vdc)	12V	20A	94.8%	SMT	2a	150048139

**Table 2. Device Options** 

Table 2. Device Options			
	Characteristic	Character and Position	Definition
Ratings	Form Factor	E	E = Eighth Brick
	Family Designator	BD	BD = BARRACUDA Series, with PMBus interface
	Input Voltage*	W	W = Wide Range, 36V-75V
	Output Current*	020A0	020A0 = 020.0 Amps Maximum Output Current
	Output Voltage*	В	B = 12.0V nominal
Options	Pin Length	8 6	Omit = Default Pin Length shown in Mechanical Outline Figures $8 = \text{Pin Length: } 2.79 \text{ mm} \pm 0.25 \text{mm}$ , $\{0.110 \text{ in.} \pm 0.010 \text{ in.}\}$ $6 = \text{Pin Length: } 3.68 \text{ mm} \pm 0.25 \text{mm}$ , $\{0.145 \text{ in.} \pm 0.010 \text{ in.}\}$
	Action following Protective Shutdown*	4	4 = Auto-restart following shutdown (Overcurrent/Overvoltage) Must be ordered, Latching feature configured via PMBus
	On/Off Logic	1	Omit = Positive Logic 1 = Negative Logic
	Customer Specific	ху	xy: 01-09. Altered firmware defaults from base codes xy: 10-99. Customer specific build, hardware and/or default changes
	Optional Features	02	02 = Faster control loop requiring polymer output capacitors and IOUT_OC_FAULT_LIMIT default = 28A
			Omit = Standard open Frame Module
		S	S = Surface Mount Connection (SMT)
		P	P = Forced Droop Output for use in parallel applications
			(Trim and Sense feature disabled for -P option)
		<u> </u>	H = Heat plate, for use with heat sinks or cold-walls
	RoHS		Omit = RoHS 5/6, Lead Based Solder Used
			Z Z = RoHS 6/6 Compliant, Lead free

<sup>\*</sup> Feature may be reconfigured from factory default using PMBus. See Feature Descriptions for additional details.

### Contact Us

For more information, call us at

USA/Canada:

+1 877 546 3243, or +1 972 244 9288

Asia-Pacific:

+86.021.54279977\*808

Europe, Middle-East and Africa:

+49.89.878067-280

www.ge.com/powerelectronics



GE Critical Power reserves the right to make changes to the product(s) or information contained herein without notice, and no liability is assumed as a result of their use or application. No rights under any patent accompany the sale of any such product(s) or information.



Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

#### Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;
- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком);
- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



**«JONHON»** (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«**FORSTAR**» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели, кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный)

Факс: 8 (812) 320-03-32

Электронная почта: ocean@oceanchips.ru

Web: http://oceanchips.ru/

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А