ASI QUINT 100-240/2.4 EFD

Primary-Switched Power Supply for Supplying AS-Interface Systems



Data Sheet 01/2005

Short Description

One Cable - Two Functions

AS-Interface (AS-i) enables maximum control potential with its simplified installation technique.

Information and power supply are transmitted at the same time via a two-wire cable to minimize connection points.

AS-i power supply units use an integrated filter to ensure that the modulated data flow is not affected.

In addition to this, the short-circuit and idling-proof voltage output provides a current reserve of approximately 60%. This means that even loads with high inrush currents can be started safely.

Safety Through Automatic Ground Fault Detection

If two ground faults occur in an AS-i system, this can cause an unauthorized machine startup or mean that the machine can no longer be stopped.

To prevent this from happening, AS-i power supply units from Phoenix Contact indicate the first ground fault as it occurs. The message is indicated by the LEDs on the device and reported via an output.

In the default configuration, the signal of the message output can be used to stop the system via the control program or the PLC.

There is also the option of configuring the AS-i power supply unit so that the AS-i power is switched off automatically when a ground fault is detected. This prevents potential danger to operating personnel and machines/systems before it happens.

Global Use

The wide range input, which can be used to operate the AS-i power supply units from Phoenix Contact with all popular single-phase AC and DC networks, provides the starting point for global use.

Integrated Harmonic Filter

EN 61000-3-2 came into force on January 1, 2001. As from this date, all primary-switched power supplies that are directly connected to the public low-voltage network must be equipped with a harmonic filter to suppress the supply of high-frequency reverse currents in the power supply company network.

All AS-i power supply units from Phoenix Contact are equipped with an active PFC filter (Power Factor Correction). In addition to the filter function, this feature provides mains buffering of more than 20 ms over the entire input voltage range.

Wide Range of Applications

The ASI QUINT 100-240/2.4 EFD power supply unit meets the noise immunity and noise emission requirements of EN 55022 Class B. The device can therefore be used universally in harsh industrial environments as well as in commercial and domestic environments, which are susceptible to interference.

Technical Data

Input Data	
Nominal input voltage (wide-range input)	100 V AC - 240 V AC
Input voltage range	85 V AC - 264 V AC/90 V AC - 350 V DC
Frequency	45 Hz - 65 Hz/0 Hz
Current consumption (for nominal values)	1.2 A (120 V AC)/0.5 A (230 V AC), approximately
Inrush current limiting/I ² t (+25°C [+77°F])	< 15 A/< 2.2 A ² s, typical
Mains buffering for a nominal load (typical)	> 20 ms (120 V AC)/> 80 ms (230 V AC)
Switch-on time after applying the mains voltage < 0.5 s	
Transient surge protection	Varistor
Input fuse, internal (device protection)	5 AT
Recommended backup fuse	
Circuit breaker	6 A/10 A/16 A
Characteristic (EN 60898)	В
Discharge current for PE	< 3.5 mA

Output Data		
Nominal output voltage U _N /tolerance	30.1 V DC/±1.5%	
Output current during convection cooling:		
POWER BOOST IBOOST	3 A (U _{out} = 30.1 V DC)	
-25°C to +40°C (-13°F to +104°F)		
Nominal output current I _N	2.4 A (U _{out} = 30.1 V DC)	
-25°C to +60°C (-13°F to +140°F)		
Derating from +60°C (+140°F)	2.5%/K	
Short-circuit current limit I _{BOOST} , approximately	≈ 3 A	
Startup of unlimited capacitive loads	Yes	
Maximum power dissipation No load/nominal load,	3 W/11 W	
approximately		
Efficiency (for 230 V AC and nominal values)	> 86%	
Residual ripple/switching peaks	< 100 mV _{SS} / $<$ 50 mV _{SS}	
(0 - 10 kHz/10 - 500 kHz)		
Internal surge protection	Yes, < 35 V DC	
Resistance to return supply	35 V DC	

Signal Output Data	
EFD (floating: ground fault detected contact open)	≤ 30 V AC/DC; ≤ 1 A
EFD (ground fault detected LED flashes)	Red LED
LED DC OK (U _{out} < 0.9 x U _N ≘ LED flashes)	Green LED

Approvals/Standards	CB scheme
Electrical equipment of machines (Surge Voltage	EN 60204
Category III)	
Safety transformers for switched-mode power supply	EN 61558-2-17
units	
Electrical safety (of IT equipment)	EN 60950/VDE 0805,
	UL/C-UL Recognized UL 60950 • 91 s
Industrial control equipment	UL/C-UL Listed UL 508 (%)"
Electronic equipment for use in electrical power installations	EN 50178/VDE 0160
Safety extra-low voltage	PELV (EN 60204)/SELV (EN 60950)
Safe isolation	VDE 0100-410
Protection against electric shock	DIN 57100-410
Protection against electric shock, basic requirements	DIN VDE 0106-101
for safe isolation in electrical equipment	
Limitation of harmonic line currents	According to EN 61000-3-2

General Data		
Insulation voltage input/output		
Type test/routine test	4 kV AC/2 kV AC	
Input/PE Type test/routine test	3.5 kV AC/2 kV AC	
Output/PE Routine test	500 V DC	
Degree of protection	IP20	
Class of protection (with PE connection)	I	
MTBF according to IEC 61709 (SN 29 500)	> 500,000 h	
Housing version	AluNox (AlMg1), closed	
Dimensions (W x H x D)	55 mm x 130 mm x 125 mm (2.165 x 5.118 x 4.921 in.)	
+ DIN rail	122 mm x 130 mm x 58 mm (4.803 x 5.118 x 2.283 in.)	
Weight	0.75 kg, approximately	

Climatic Data	Climatic Data				
Ambient temperature					
Operation		-25°C to +70°C (-13°F to +158°F) (> +60°C [+140°F] derating)			
Storage		-40°C to +85°C (-40°F to +185°F)			
Humidity	at +25°C (+77°F), no condensation	≤ 95%			
Vibration	according to IEC 60068-2-6	< 15 Hz, amplitude ±2.5 mm			
		15 Hz - 150 Hz, 2.3g, t _V = 90 minutes			

Climatic Data (Continued)		
Shock (in all space directions) according to IEC 60068-2-27		30g
Degree of pollution	according to EN 50178	2
Climatic category	according to EN 60721	3K3

Conformance With EMC Directive 89/336/EEC and Low Voltage Directive 73/23/EEC						
Noise Immunity Test According	Noise Immunity Test According to EN 61000-6-2 ¹					
Electrostatic discharge (ESD)	EN 61000-4-2	Criterion B ²	Housing:	Level 4		
			Contact discharge:	8 kV		
			Air discharge:	15 kV		
Electromagnetic HF field	EN 61000-4-3	Criterion A ³	Housing:	Level 3		
			Frequency/field strength:	80 MHz - 1000 MHz/ 1.4 GHz - 2.0G Hz/ 10 V/m		
Fast transients (burst)	EN 61000-4-4	Criterion B ²	Input:	4 kV (Level 4) ⁴		
			Output:	2 kV (Level 3) ⁴		
			Signal:	1 kV (Level 2) ⁴		
Surge current loads (surge)	EN 61000-4-5	Criterion B ²	Input:	4 kV ⁴ /2 kV ⁵ (Level 4)		
			Output:	0.5 kV ⁴ /0.5 kV ⁵ (Level 1)		
			Signal:	1 kV ⁴ (Level 2)		
Conducted interference	EN 61000-4-6	Criterion A ³	Input/Output/ Signal:	(Level 3) ⁴		
			Frequency/U ₀ :	0.15 MHz - 80 MHz/10 V		
Voltage dips	EN 61000-4-11	Criterion B ²	Input: See mains buffering	> 20 ms		
Noise Emission Test According to EN 61000-6-3						
Radio interference emission	EN 55011 EN 55022 ⁶	Class B ⁷				
Radio interference voltage	EN 55011 EN 55022 ⁶	Class B ⁷				

¹ EN 61000 corresponds to IEC 61000

² Criterion B: Temporary adverse effects on the operating characteristics, which the device corrects automatically.

³ Criterion A: Normal operating characteristics within the specified limits.

Asymmetrical: Cable to ground
 Symmetrical: Cable to cable

 $^6\,$ EN 55011 corresponds to CISPR11, EN 55022 corresponds to CISPR22/EN 61000 corresponds to IEC 61000

⁷ Class B: Industrial and domestic applications



Ordering Data

Description	Order Designation	Order No.
Primary-switched power supply	ASI QUINT 100-240/2.4 EFD	27 36 68 6

Device View, Connections, and Control Elements

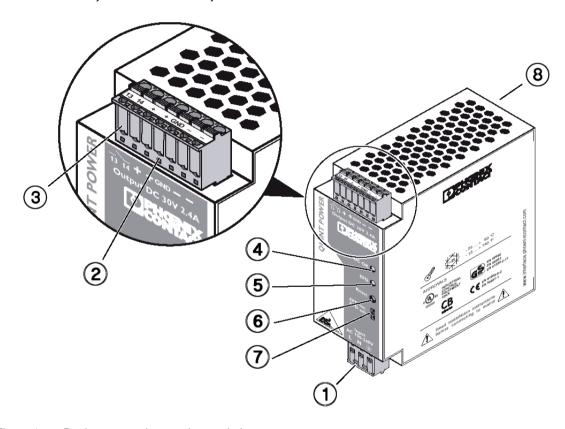


Figure 1 Device connections and control elements

- 1 AC input: Input voltage 85 264 V AC, frequency 45 65 Hz
- 2 DC output: Output voltage 30 V DC
- 3 Floating EFD output
- 4 Green DC OK LED
- 5 Red EFD LED
- 6 Reset button
- 7 Internal/external EFD switch

8 Universal DIN rail adapter UTA 107

Installation

Safety Notes and Warning Instructions



Every AS-Interface system (or segment when using repeaters/extenders) must only ever be supplied by **one** AS-Interface power supply unit.



Installation and startup must only be carried out by qualified personnel. The relevant country-specific regulations (e.g., VDE, DIN) must also be observed.



Before startup it is particularly important to ensure that:

- The mains has been connected correctly and protection is provided against electric shock.
- The device can be switched off outside the power supply according to EN 60950 regulations (e.g., by the line protection on the primary side).
- The protective conductor is connected.
- All supply lines have sufficient fuse protection and are the correct size.
- All output cables are the correct size for the maximum device output current or have separate fuse protection.
- Sufficient convection is ensured.



QUINT POWER is a built-in device. After installation the terminal area must be covered to provide sufficient protection against unauthorized access to live parts. This is ensured by installing the device in the control cabinet or distributor box.



Mounting



Danger

Never carry out work when the power is turned on.



Explosion hazard

Only remove equipment when the power is switched off or the equipment is located in the safe area.




To ensure sufficient convection, we recommend a minimum spacing of 5 cm (1.969 in.) to other modules above and below the device.

No minimum spacing to other modules at the sides is required for proper operation of the device.

The housing temperature can reach high values depending on the ambient temperature and the load of the device.

Mounting on the DIN Rail (Slim Style Installation)

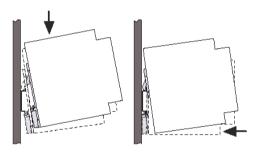

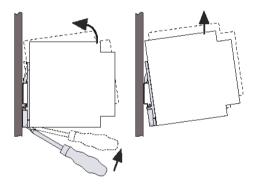


Figure 2 DIN rail mounting/removal

The power supply unit can be snapped onto all 35 mm (1.378 in.) DIN rails according to EN 60715. The device should be mounted horizontally (input terminal blocks facing downwards).

Mounting on the DIN Rail (Flat Mounting Position)

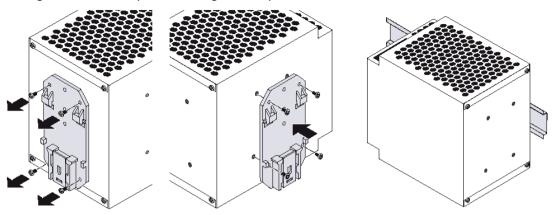


Figure 3 Flat mounting position with universal DIN rail adapter UTA 107

The device is supplied ready for installation in a narrow position. A flat mounting position can be achieved by mounting the module onto the DIN rail at a 90° angle.

To do this, mount the DIN rail adapter UTA 107 as shown in Figure 3 (Torx T10 mounting screws, torque 0.8 - 0.9 Nm (7 - 8 lb in)). No additional mounting material is required.

Connection/Connecting Cable

The device is equipped with plug-in spring-cage terminal blocks. This connection method enables quick device connection and visible isolation of the electrical connection, if required.



8

Connectors may only be operated when the power is switched off.

The following cable cross sections can be connected:

Solid [mm ²]	Stranded [mm ²]	AWG	Stripping Length L [mm]
0.2 - 2.5	0.2 - 2.5	25 - 14	10 mm (0.39 in.)

To maintain UL approvals, use copper cables, which are designed for operating temperatures > +75°C (+167°F).

For reliable and safe-to-touch connections, strip the cable ends according to Figure 4.




Figure 4 Stripping length

Block Diagram

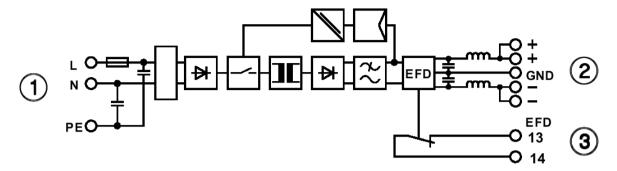


Figure 5 Block diagram

- 1 AC input: Input voltage 85 264 V AC, frequency 45 65 Hz
- 2 DC output: Output voltage 30 V DC
- 3 Floating EFD output

Input

The 100 - 240 V AC connection is made using connections L, N, and ⊕ (see Figure 1, point 1).

The device can be connected to single-phase AC networks or to two external conductors for three-phase networks

 (TN, TT or IT network according to VDE 0100-300/IEC 60364-3) with nominal voltages of 100 - 240 V AC (see Figure 6).




Figure 6 Network types

00

An **internal fuse** is present for device protection. Additional device protection is not required. The recommended backup fuses are 6 A, 10 A or 16 A circuit breakers, Characteristic B (or equivalent).



QUINT

A suitable fuse should be provided for DC applications.

00

QUINT



An all-pole disconnecting device must be provided for two-phase operation using two external conductors for a three-phase network.



10

If the internal fuse is blown, this is most probably due to a device fault. In this case, the device should be checked in the factory.

Output

The 30 V DC connection is made using the "+" and "-" connections (see Figure 1, point 2). GND must always be connected to the machine ground. The EFD output (see Figure 1, point 3) is connected via connections "13" and "14".

The device is electronically short-circuit-proof and idling-proof. In the event of an error, the output voltage is limited to a maximum of 35 V DC.

Output Characteristic Curve

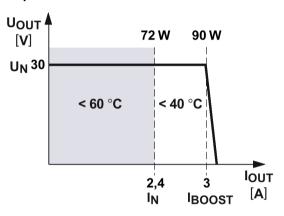


Figure 7 Output characteristic curve

The device operates according to the U/I characteristic curve. With a load, the working point demonstrates this curve. On an overload or short circuit, the output current is limited to I_{BOOST}. The secondary voltage is reduced until the overload or the short circuit on the secondary side is removed.

Temperature Response

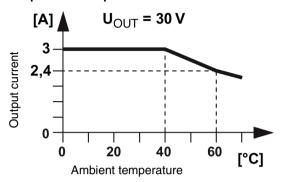


Figure 8 Temperature response

The output power must be decreased by 2.5% per Kelvin temperature increase for ambient temperatures above +60°C (+140°F).

At ambient temperatures above +70°C (+158°F) or in the event of a thermal overload, the device does not switch off. The output power is decreased to such an extent that device protection is provided.

Signaling

Preventive DC OK Function Monitoring

The DC OK LED (see Figure 1, point 4) provides function monitoring.

Green "DC OK" LED	Flashing	ON	OFF
Description	Output voltage > 27 V	Output voltage < 27 V	No voltage at the output
Meaning	Output voltage and current OK	QUINT POWER operating, but: - Error at the load	QUINT POWER not operating, because: - No mains voltage present
		Current consumption greater than I _{BOOST} Output short circuit	 Primary side fuse is blown Device is faulty

EFD Ground Fault Monitoring

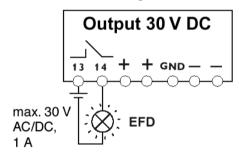


Figure 9 EFD ground fault monitoring

An EFD LED (see Figure 1, point 5) and a floating switching output are used to evaluate a ground fault detected in the AS-i system.

When a ground fault is detected, the LED lights up, the floating EFD output is opened, and in switch position "EFD internal" (see Figure 1, point 7), the device switches off. To restart, press the reset button (see Figure 1, point 6) for > 2 seconds. In switch position "EFD external", the device continues to detect ground faults.

Briefly activating the reset button (< 1 second) simulates a ground fault.

12



Make sure you always use the latest documentation. It can be downloaded from www.download.phoenixcontact.com.

PHOENIX CONTACT GmbH & Co. KG Flachsmarktstr. 8 32825 Blomberg Germany



+49 - 52 35 - 30 0



+49 - 52 35 - 34 12 00



www.phoenixcontact.com

Worldwide Locations:

www.phoenixcontact.com/salesnetwork



Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;
- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком);
- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«**FORSTAR**» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели, кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный)

Факс: 8 (812) 320-03-32

Электронная почта: ocean@oceanchips.ru

Web: http://oceanchips.ru/

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А