


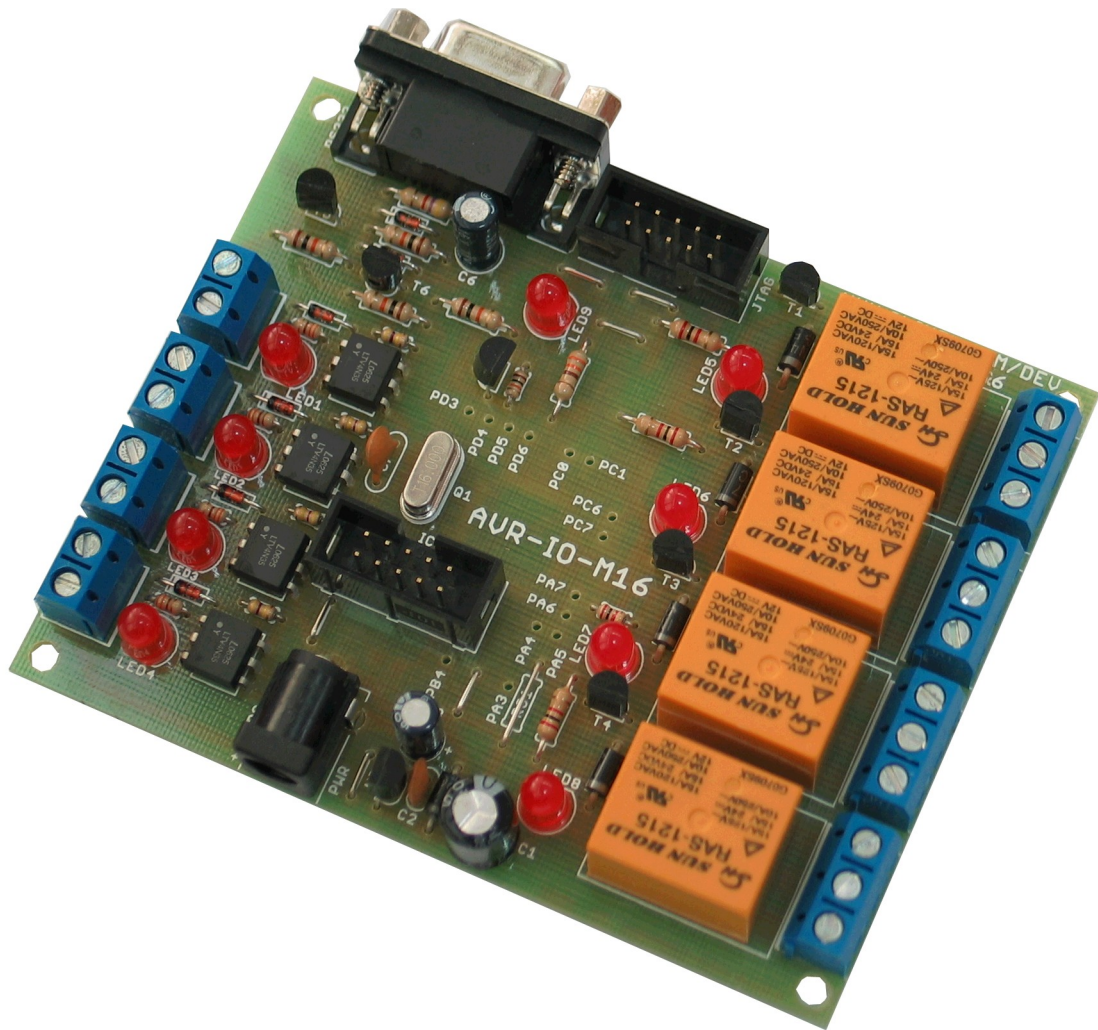

AVR-IO-M16 development board

Users Manual

Rev.A, July 2008

Copyright(c) 2008, OLIMEX Ltd, All rights reserved

INTRODUCTION:

AVR-IO-M16 is small but powerful board, perfect for small automation projects.

The board has four Relays with 10A/250VAC current switching capabilities, four opto-isolated digital inputs and RS232 port. One of our demo software shows how easy it is to control the inputs and output by PC computer through the RS232 port.

BOARD FEATURES:

- ATmega16-16AI AVR microcontroller
- ICSP 5x2 pin connector for In-Circuit Programming with AVR-PG1, AVR-PG2, AVR-ISP500, AVR-ISP500-TINY, AVR-ISP500-ISO or other compatible to 10 pin ICSP layout
- JTAG 5x2 pin connector for in-circuit programming with AVR-JTAG, AVR-JTAG-USB or other compatible to 10 pin JTAG layout
- Status LED
- Reset IC ZM33064
- Quartz crystal oscillator circuit 16MHz
- Voltage regulator +5V, 7805 and filtering capacitors
- Power plug-in jack
- RS232 DB9 female connector , RS232 and interface circuit with Tx, Rx signals
- 4 optocoupler isolated inputs with screw terminals
- Input status LEDs
- 4 relay outputs with 5A/250VAC contacts with screw terminals
- Output status LEDs
- One user status LED
- Four mounting holes 3.3 mm (0.13")
- FR-4, 1.5 mm (0.062"), green soldermask, white silkscreen component print
- Dimensions 80x100 mm (3.9 x 3.15")

ELECTROSTATIC WARNING:

The AVR-IO-M16 board must not be subject to high electrostatic potentials. General practice for working with static sensitive devices should be applied when working with this board.

BOARD USE REQUIREMENTS:

- Cables:** RS232 straight male-to-female DB9 cable (Note: this is not a null modem cable)
- Hardware:** Programmer: AVR-PG1, AVR-PG2, AVR-ISP500, AVR-ISP500-TINY, AVR-ISP500-ISO or other compatible tool;
Debugger: AVR-JTAG, AVR-JTAG-USB or other compatible tool;
- Software:** AVR Studio + WinAVR – free C compiler and debugger can be downloaded at avrfreaks.org web site


PROCESSOR FEATURES:

AVR-IO-M16 uses ATMega16 MCU from Atmel with the following features:

- High-performance, Low-power AVR® 8-bit Microcontroller
- Advanced RISC Architecture
- 131 Powerful Instructions – Most Single-clock Cycle Execution
- 32 x 8 General Purpose Working Registers
- Fully Static Operation
- Up to 16 MIPS Throughput at 16 MHz
- On-chip 2-cycle Multiplier
- High Endurance Nonvolatile Memory Segments
- 16K Bytes of In-System Self-Programmable Flash, Endurance: 10,000 Write/Erase Cycles
- Optional Boot Code Section with Independent Lock Bits
- In-System Programming by On-chip Boot Program
- True Read-While-Write Operation
- 1024 Bytes EEPROM, Endurance: 100,000 Write/Erase Cycles
- 2K Byte Internal SRAM
- Programming Lock for Software Security
- JTAG (IEEE std. 1149.1 Compliant) Interface
- Two 8-bit Timer/Counters with Separate Prescalers and Compare Modes
- One 16-bit Timer/Counter with Separate Prescaler, Compare Mode, and Capture Mode
- Real Time Counter with Separate Oscillator
- Four PWM Channels
- 8-channel, 10-bit ADC
- Byte-oriented Two-wire Serial Interface
- Programmable Serial USART
- Master/Slave SPI Serial Interface
- Programmable Watchdog Timer with Separate On-chip Oscillator
- On-chip Analog Comparator
- Power-on Reset and Programmable Brown-out Detection
- Internal Calibrated RC Oscillator
- External and Internal Interrupt Sources
- Six Sleep Modes: Idle, ADC Noise Reduction, Power-save, Power-down, Standby and Extended Standby
- Operating Voltages 4.5 - 5.5V


BLOCK DIAGRAM:

Figure 2. Block Diagram

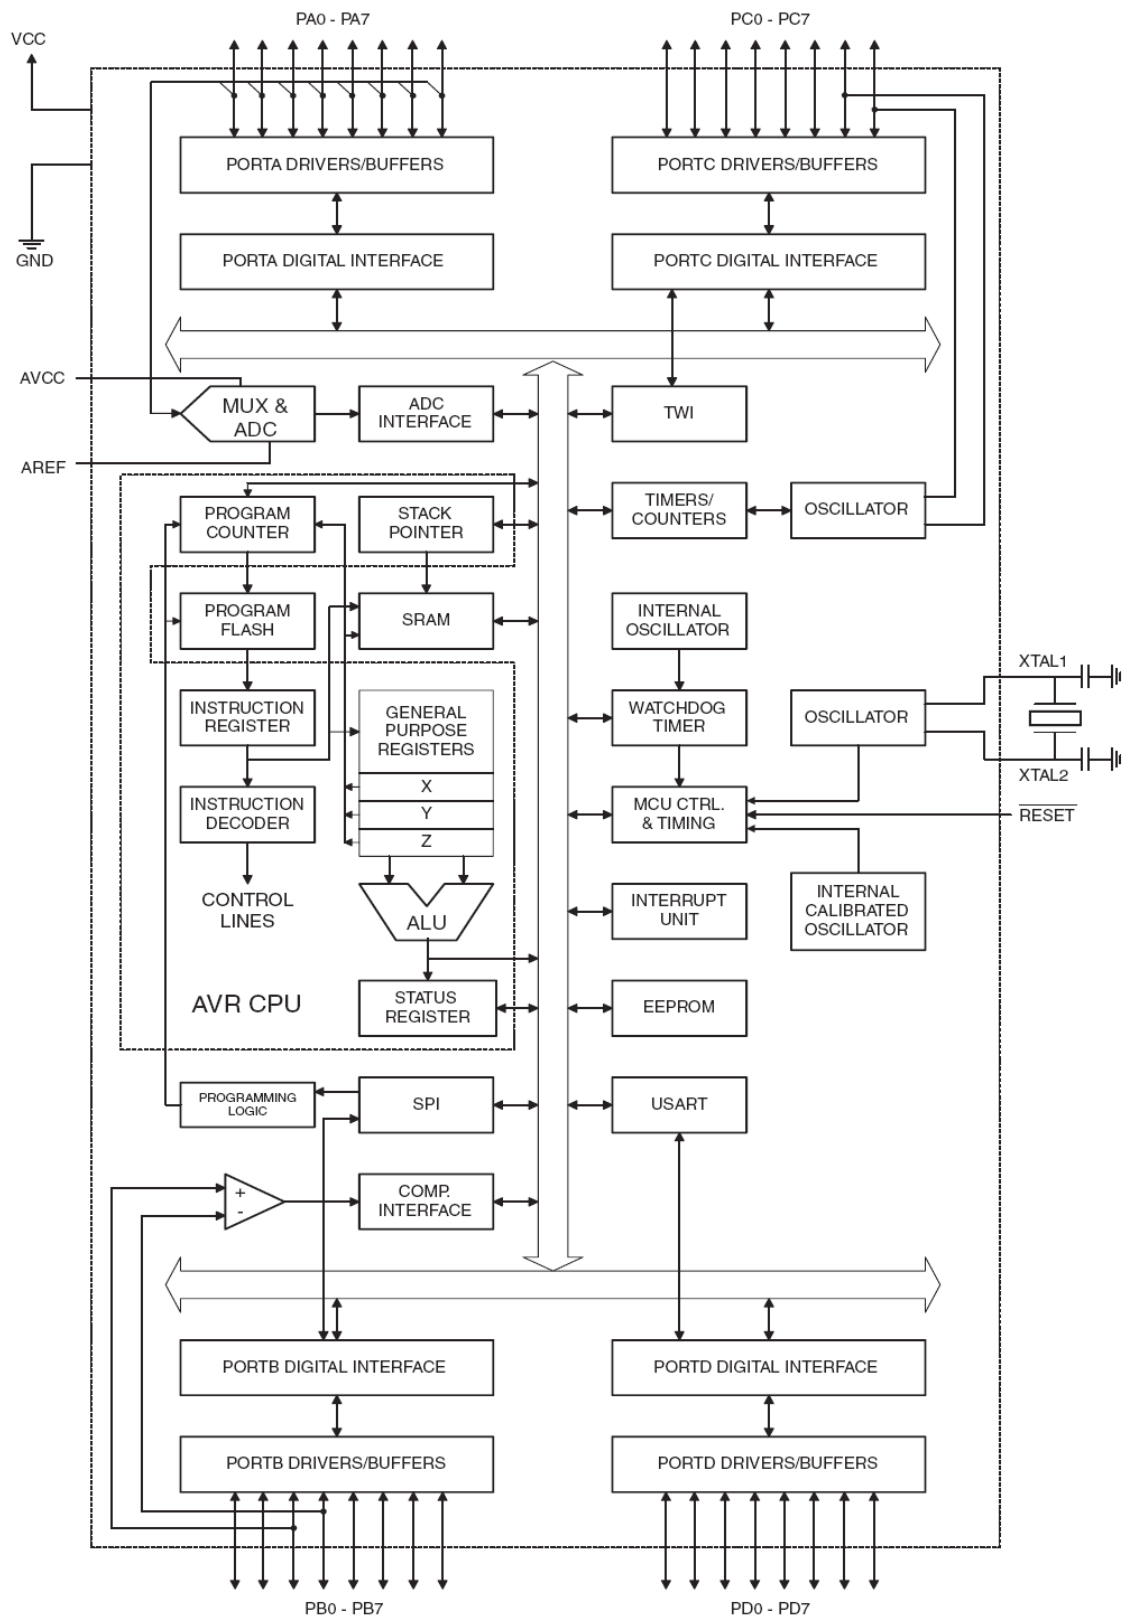



MEMORY MAP:

Program Memory Map

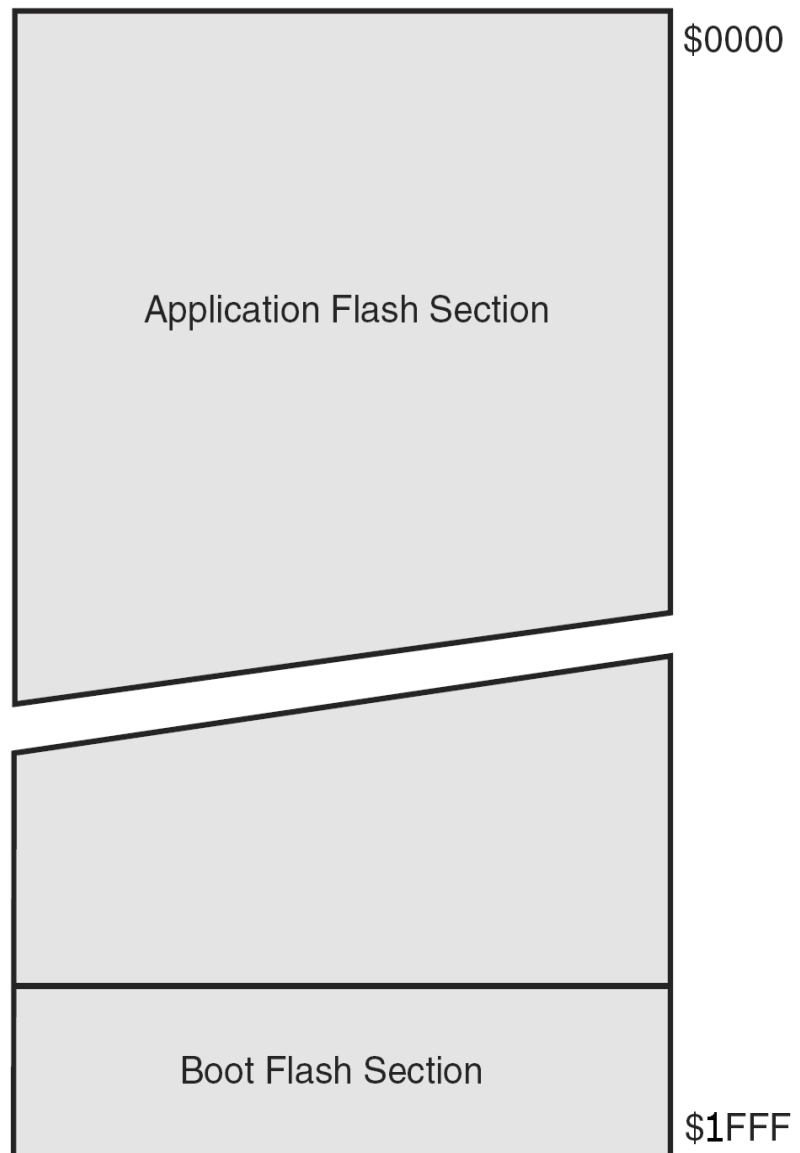


Data Memory Map

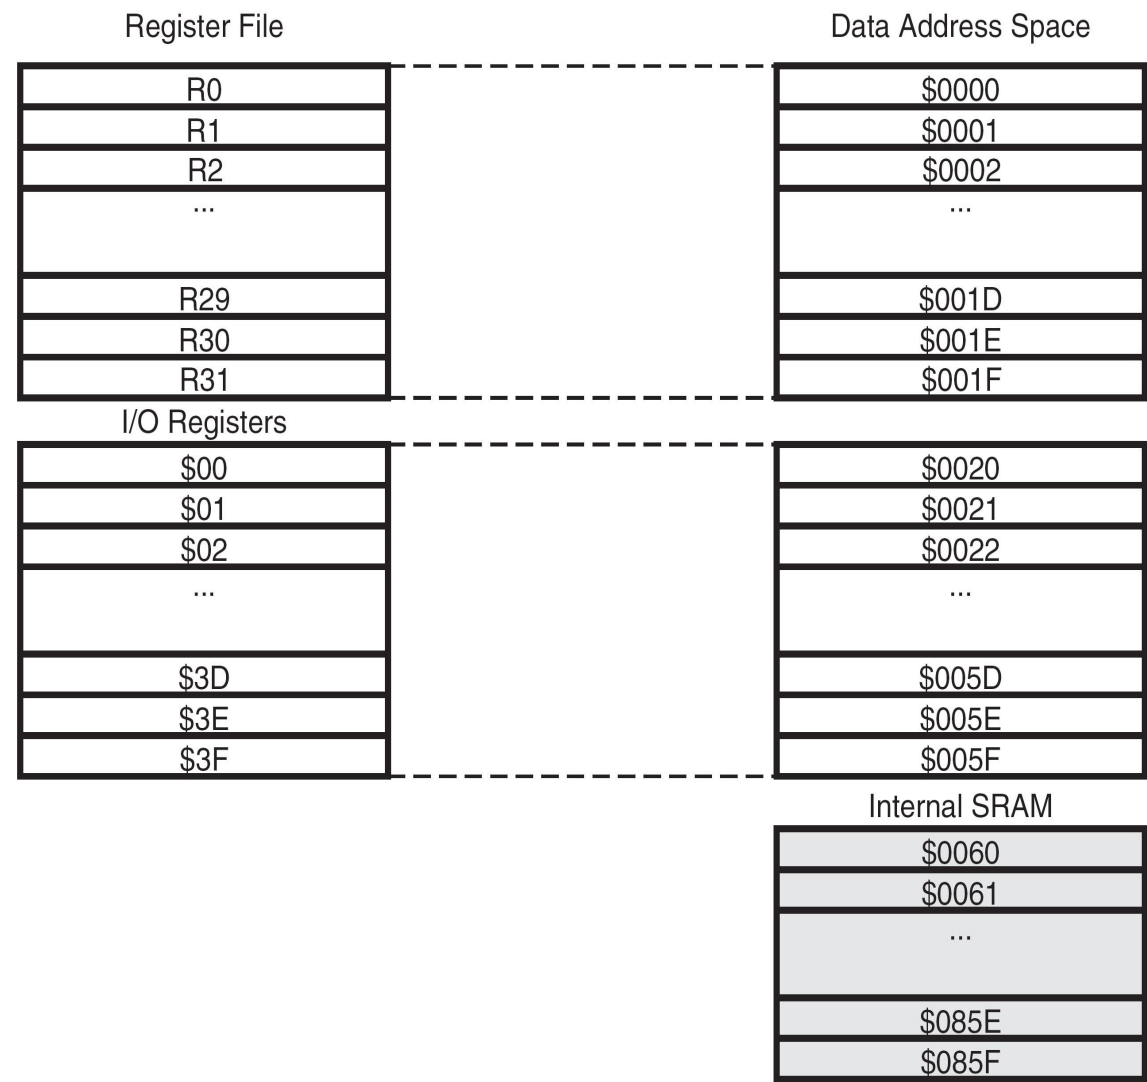

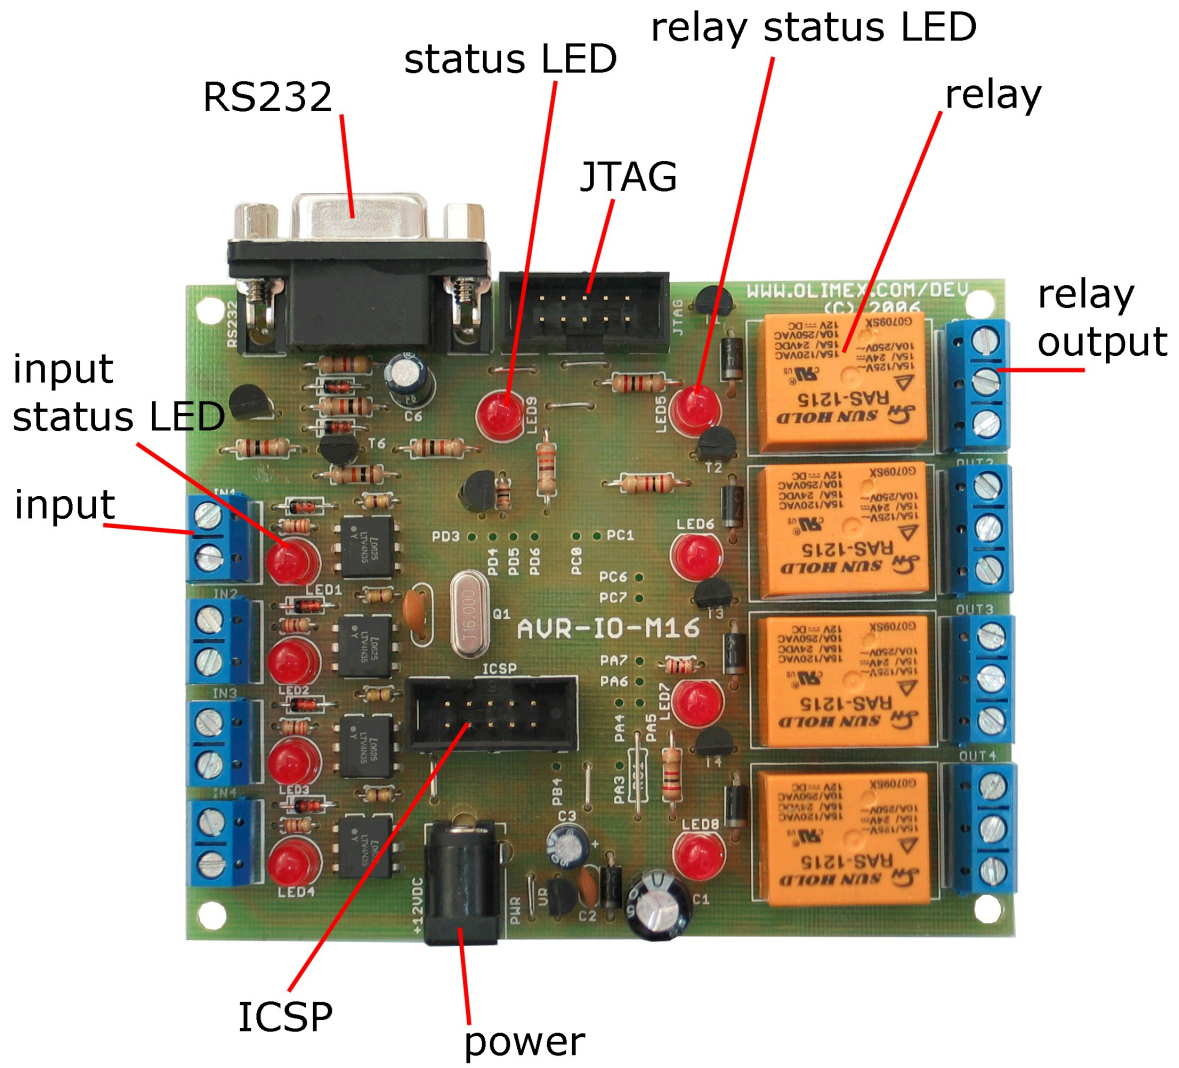

SCHEMATIC:

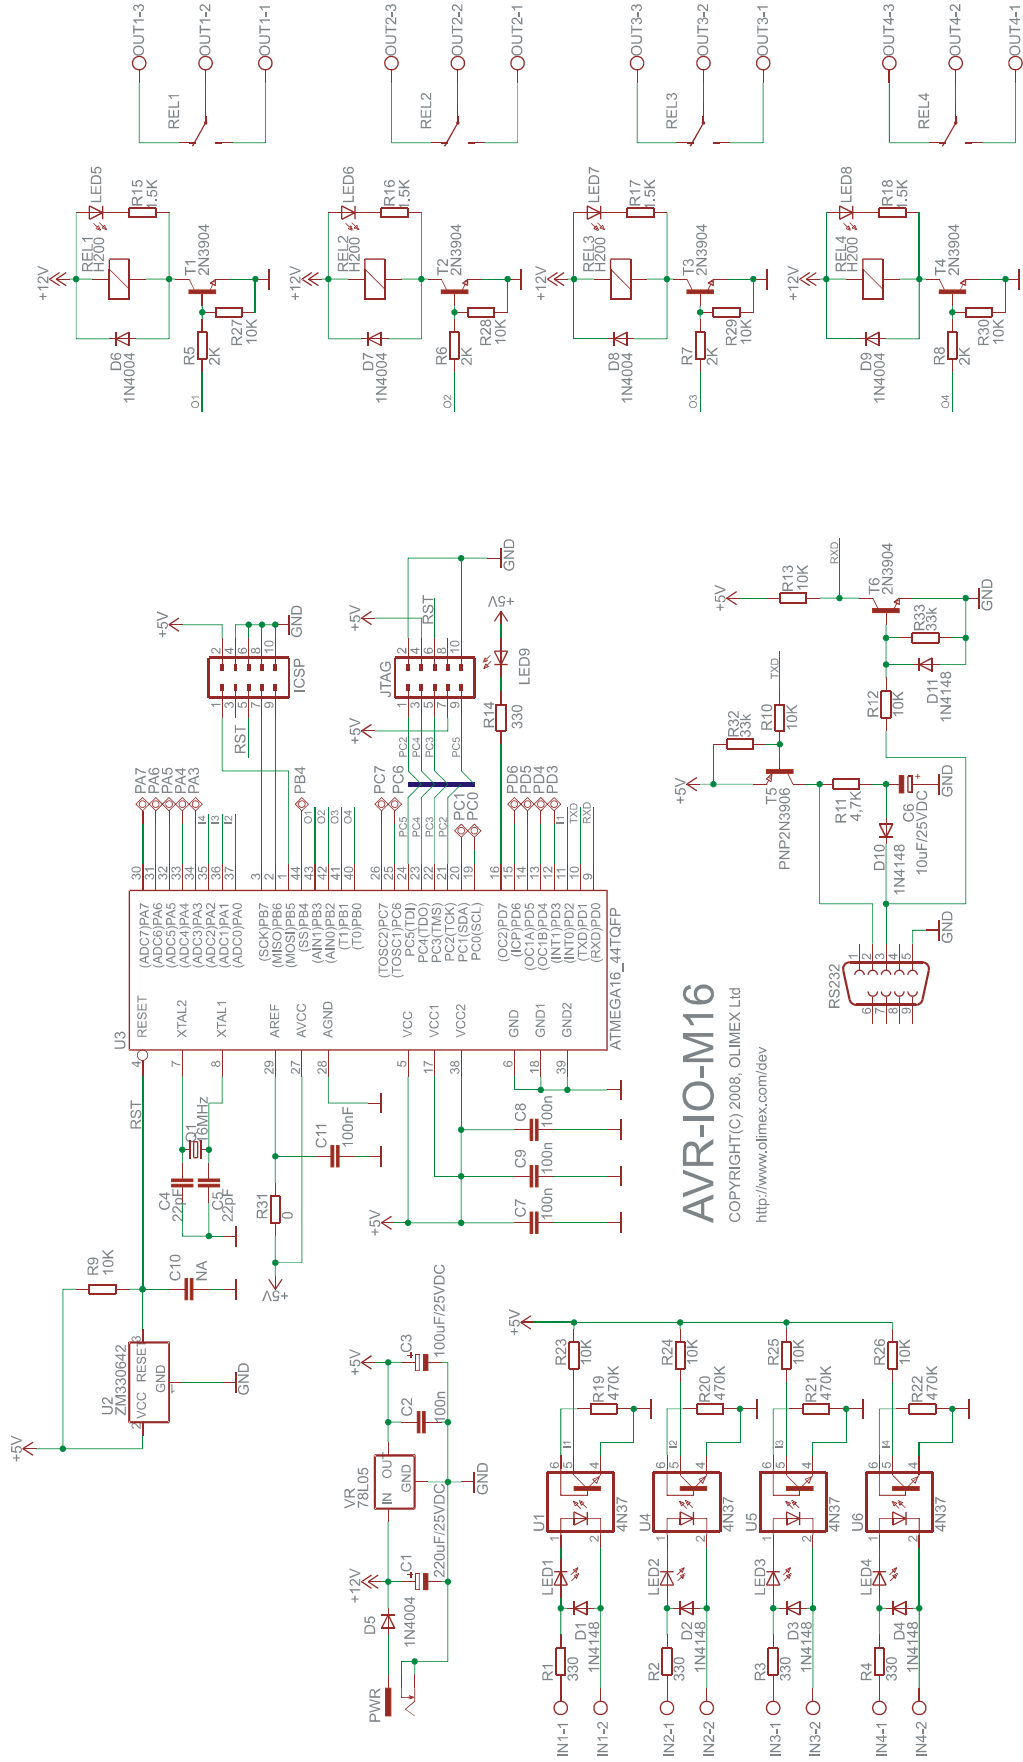

POWER SUPPLY CIRCUIT:

The power supply of AVR-IO-M16 is taken from Power jack connector. The center pin is positive. The voltage range is +12-14VDC. The consumption is 20 mA with no relays switched on

RESET CIRCUIT:

AVR-IO-M16 reset circuit is made with ZM33064 with typical threshold 4.5V. When the voltage falls below that minimum, the MSU resets.

CLOCK CIRCUIT:

Quartz crystal 16MHz for maximum performance is connected to ATmega16 pin 7 (XTAL2) and pin 8 (XTAL1).

INPUT/OUTPUT:

Four **optoisolated digital inputs IN1-IN4**.

Four **red status LEDs** for the digital inputs – **from LED1 to LED4**.

Four **relays** – **from REL1 to REL2**.


Four **red status LEDs** for the relays – **from LED5 to LED8**.

One **red user status LED** with name **LED9**, connected to ATmega16 pin 16 (OC2/PD7).

CONNECTOR DESCRIPTIONS:

JTAG:

Pin #	Signal Name
1	PC2(TCK)
2	GND
3	PC4(TDO)
4	+5V
5	PC3(TMS)
6	RST
7	+5V
8	NC
9	PC5(TDI)
10	GND

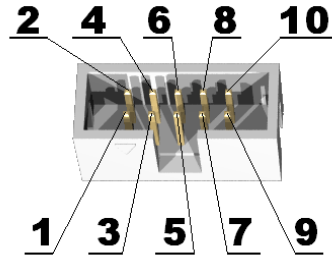

This connector allows programming and debugging via AVR-JTAG or other compatible tools.

TDI Input **Test Data In.** This is the serial data input for the shift register.


TDO Output **Test Data Out.** This is the serial data output for the shift register. Data is shifted out of the device on the negative edge of the TCK signal.

TMS Input **Test Mode Select.** The TMS pin selects the next state in the TAP state machine.

TCK Input **Test Clock.** This allows shifting of the data in, on the TMS and TDI pins. It is a positive edge triggered clock with the TMS and TCK signals that define the internal state of the device.

ICSP:

Pin #	Signal Name
1	MOSI
2	+5V
3	NC
4	GND
5	RST
6	GND
7	SCK
8	GND
9	MISO

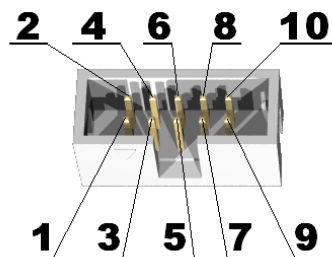

10	GND
----	-----

This connector allows programming via AVR-PG1, AVR-PG2 or other compatible tool.


MOSI I/O **Master Out Slave In.** SPI data transfer signal. It is either input or output depending on whether the MCU is master or slave.

MISO I/O **Master In Slave Out.** SPI data transfer signal. It is either input or output depending on whether the MCU is master or slave.

SCK I/O **Serial (Synchronization) Clock.** This is the synchronization signal. It could be either input(MCU – slave) or output (MCU – master).

RS232:

Pin #	Signal Name
1	NC
2	TXD
3	RXD
4	NC
5	GND
6	NC
7	NC
8	NC
9	NC

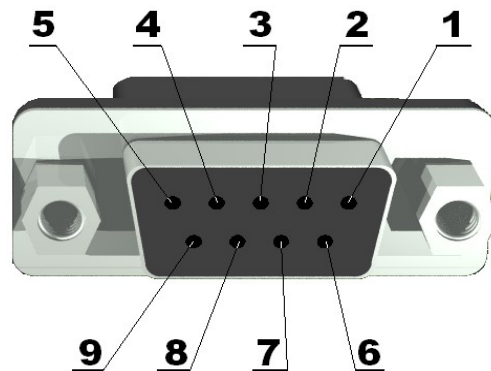


The RS232 level shifter is made with tricky schematic and doesn't allow more than 9600 bps connection, also the other RS232 party should supply correct RS232 levels

TXD Output **Transmit Data.** This is the asynchronous serial data output for the RS232 interface.

RXD Input **Receive Data.** This is the asynchronous serial data input for the RS232 interface.

PWR:


Pin #	Signal Name
1	PWR
2	GND

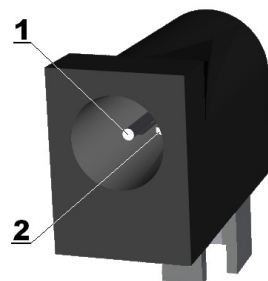

You should apply +(12-14)VDC on pin

1.

MECHANICAL DIMENSIONS:

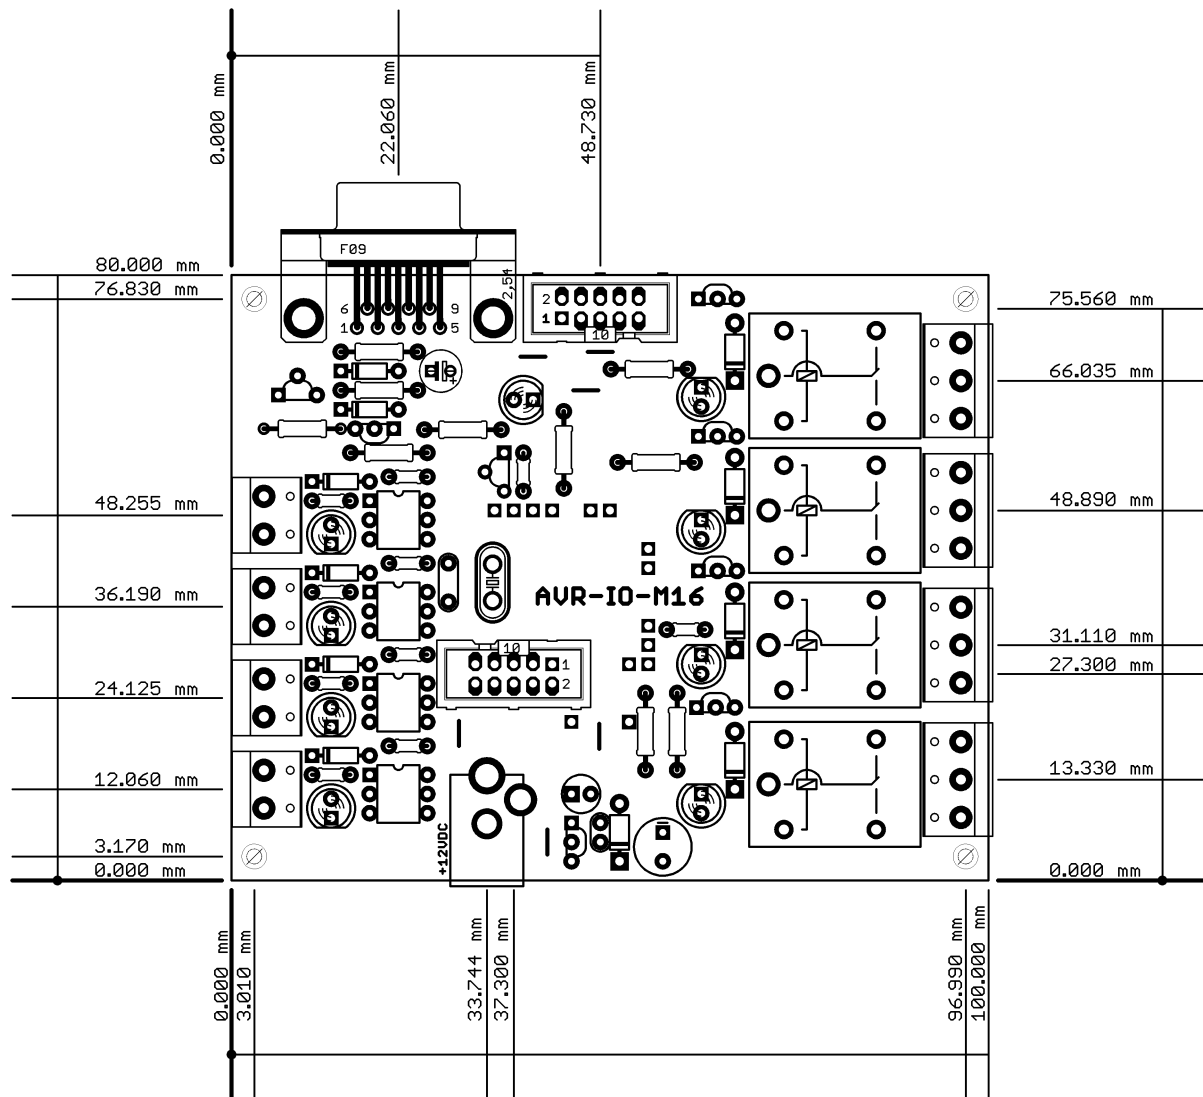

AVAILABLE DEMO SOFTWARE:

Check for available demo software for **AVR-IO-M16** on our website:
www.olimex.com/dev.

ORDER CODE:

AVR-IO-M16 - assembled and tested (no kit, no soldering required)

How to order?

You can order to us directly or by any of our distributors.

Check our web www.olimex.com/dev for more info.



All boards produced by Olimex are ROHS compliant

Revision history:

REV.A - created July 2008

Disclaimer:

© 2008 Olimex Ltd. All rights reserved. Olimex®, logo and combinations thereof, are registered trademarks of Olimex Ltd. Other terms and product names may be trademarks of others.

The information in this document is provided in connection with Olimex products. No license, express or implied or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Olimex products.

Neither the whole nor any part of the information contained in or the product described in this document may be adapted or reproduced in any material form except with the prior written permission of the copyright holder.

The product described in this document is subject to continuous development and improvements. All particulars of the product and its use contained in this document are given by OLIMEX in good faith. However all warranties implied or expressed including but not limited to implied warranties of merchantability or fitness for purpose are excluded.

This document is intended only to assist the reader in the use of the product. OLIMEX Ltd. shall not be liable for any loss or damage arising from the use of any information in this document or any error or omission in such information or any incorrect use of the product.

Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;
- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком);
- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



JONHON

«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«FORSTAR» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели,
кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный)

Факс: 8 (812) 320-03-32

Электронная почта: ocean@oceanchips.ru

Web: <http://oceanchips.ru/>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А