

## ■ Single-phase Models

### EUN Series

AC Power Controllers with Phase-control System Allow Precise Temperature Control Models with Base-up and Soft-start Functions



### EH Series

Phase Control System Makes It Possible to Detect Single Heater Open Circuit (EH Series) and Multiple Heater Open Circuits (EHN Series)



### EC Series

Optimum Devices for Controlling Input Power for Pure Metal Heater, and Incorporating Overcurrent Detecting and Single Heater Open Circuit Detecting Functions

- OMRON's unique design and carefully-selected materials made it possible to produce a compact and lightweight Power Controller.
- Replaceable, easy-to-install Power Device Cartridge assures ease of maintenance.
- Detecting component failures and operating errors.
- Certified by UL and CSA.



Refer to *Safety Precautions for All Power Controllers*.

## Model Number Structure

### ■ Model Number Legend

G3PX-□□□□-□  
1 2 3 4 5 6

#### 1. Basic Model Name

G3PX: Power Controller

#### 2. Rated Load Power Supply Voltage

2: 100/110 VAC and 200/230 VAC

#### 3. Rated Load Current

20: 20 A

40: 40 A

60: 60 A

#### 4. Number of Phases

E: Single

#### 5. Functions

UN: Simple models

H: Single heater open circuit detection function

HN: Multiple heater open circuit detection function

C: Constant-current function

#### 6. CT Unit Type

**Note:** Refer to *CT Unit* on page 4.

## G3PX Cartridge

**G32X-**   

1      2 3

### 1. Basic Model Type

G32X:    Accessory for G3PX

### 2. Basic Model Name

A:        Power Device Cartridge

### 3. Rated Load Current

20:       20 A

40:       40 A

60:       60 A

## CT Unit

**G32X-**    

1      2 3 4

### 1. Basic Model Type

G32X:    Accessory for G3PX

### 2. Basic Model Name

CT:       CT Unit

### 3. Length of Lead Wires

03:       30 cm

10:       100 cm

### 4. Series

Blank:    Series for single heater open circuit detection

HN:       Series for multiple heater open circuit detection

C:        Series for constant current

## Variable Resistor

**G32X-** 

1      2

### 1. Basic Model Type

G32X:    Accessory for G3PX

### 2. Basic Model Name

V3K:      3-k $\Omega$  Variable Resistor

V2K:      2-k $\Omega$  Variable Resistor

# Ordering Information

## List of Models

### EUN Series

| Phase  | Applicable load                                                                      | Level indicator | Base-up function<br>(See note.) | Soft-start time     | Carry current | Rated voltage | Model       |
|--------|--------------------------------------------------------------------------------------|-----------------|---------------------------------|---------------------|---------------|---------------|-------------|
| Single | Resistive load<br>Heater<br>(e.g., alloy heater<br>or halogen lamp)<br>(See note 2.) | Yes             | Yes                             | Approx. 0.5 to 10 s | 20 A          | 100/110 VAC   | G3PX-220EUN |
|        |                                                                                      |                 |                                 |                     | 40 A          | 200/220 VAC   | G3PX-240EUN |
|        |                                                                                      |                 |                                 |                     | 60 A          |               | G3PX-260EUN |

- Note:** 1. The base-up output with a 0-mA temperature controller output (i.e. the temperature controller is OFF) differs from that with a 4-mA temperature controller output. Refer the *Base-up Characteristics* on page 7.  
2. Contact your OMRON representative for applications to transformer loads.

### EH Series

| Phase  | Applicable load                                                                      | Level indicator | Single heater<br>open circuit<br>detection | Multiple heater<br>open circuit<br>detection | Carry current | Rated voltage | Model<br>(See note 1.) |
|--------|--------------------------------------------------------------------------------------|-----------------|--------------------------------------------|----------------------------------------------|---------------|---------------|------------------------|
| Single | Resistive load<br>Heater<br>(e.g., alloy heater<br>or halogen lamp)<br>(See note 3.) | Yes             | Yes                                        | No                                           | 20 A          | 100/110 VAC   | G3PX-220EH-CT03        |
|        |                                                                                      |                 |                                            |                                              |               | 200/220 VAC   | G3PX-220EH-CT10        |
|        |                                                                                      |                 |                                            |                                              | 40 A          |               | G3PX-240EH-CT03        |
|        |                                                                                      |                 |                                            |                                              |               |               | G3PX-240EH-CT10        |
|        |                                                                                      |                 |                                            |                                              | 60 A          |               | G3PX-260EH-CT03        |
|        |                                                                                      |                 |                                            |                                              |               |               | G3PX-260EH-CT10        |
|        |                                                                                      |                 | Yes (See note 2.)                          | Yes                                          | 20 A          |               | G3PX-220EHN-CT03       |
|        |                                                                                      |                 |                                            |                                              |               |               | G3PX-220EHN-CT10       |
|        |                                                                                      |                 |                                            |                                              | 40 A          |               | G3PX-240EHN-CT03       |
|        |                                                                                      |                 |                                            |                                              |               |               | G3PX-240EHN-CT10       |
|        |                                                                                      |                 |                                            |                                              | 60 A          |               | G3PX-260EHN-CT03       |
|        |                                                                                      |                 |                                            |                                              |               |               | G3PX-260EHN-CT10       |

- Note:** 1. EH- and EHN-series models are provided with a CT incorporating 30- or 100-cm-long lead wires and Power Device Cartridge. When ordering, specify the length of the lead wires by adding a code to the model number as shown below.  
G3PX-2□0EH-CT03: CT with 30-cm-long lead wires  
G3PX-2□0EH-CT10: CT with 100-cm-long lead wires  
2. Adjusts the multiple heater open circuit detection sensitivity of EHN-series models. Enables single heater open circuit detection in control of a maximum of five heaters.  
3. Contact your OMRON representative for applications to transformer loads.

### EC Series

| Phase  | Applicable load                                                                                          | Level indicator | Constant-current<br>function | Single heater<br>open circuit<br>detection | Carry current | Rated voltage | Model<br>(See note.) |
|--------|----------------------------------------------------------------------------------------------------------|-----------------|------------------------------|--------------------------------------------|---------------|---------------|----------------------|
| Single | Resistive load<br>Heater<br>(e.g., alloy heater, pure metal<br>heater, or halogen lamp)<br>(See note 3.) | Yes             | Yes                          | Yes                                        | 20 A          | 100/110 VAC   | G3PX-220EC-CT03      |
|        |                                                                                                          |                 |                              |                                            |               | 200/220 VAC   | G3PX-220EC-CT10      |
|        |                                                                                                          |                 |                              |                                            | 40 A          |               | G3PX-240EC-CT03      |
|        |                                                                                                          |                 |                              |                                            |               |               | G3PX-240EC-CT10      |
|        |                                                                                                          |                 |                              |                                            | 60 A          |               | G3PX-260EC-CT03      |
|        |                                                                                                          |                 |                              |                                            |               |               | G3PX-260EC-CT10      |

- Note:** 1. EC-series models are provided with a CT Unit with lead wires (30- or 100- cm in length). When ordering, specify the length of the lead wires by adding a code to the model number as shown below.  
G3PX-2□0EC-CT03: CT with 30-cm-long lead wires  
G3PX-2□0EC-CT10: CT with 100-cm-long lead wires  
2. A CT Unit and Power Device Cartridge are provided with the Power Controller.  
3. Contact your OMRON representative for applications to transformer loads.

## ■ Accessories (Order Separately)

### CT Unit

| Name    | Length of lead wires | Solderless terminals | Applicable models | Model       |
|---------|----------------------|----------------------|-------------------|-------------|
| CT Unit | 30 cm                | Yes                  | G3PX-2□□EH        | G32X-CT03   |
|         | 100 cm               |                      |                   | G32X-CT10   |
|         | 30 cm                |                      | G3PX-2□□EHN       | G32X-CT03HN |
|         | 100 cm               |                      |                   | G32X-CT10HN |
|         | 30 cm                |                      | G3PX-2□□EC        | G32X-CT03C  |
|         | 100 cm               |                      |                   | G32X-CT10C  |

### Power Device Cartridge

| Name                   | Carry current | Applicable models | Model    |
|------------------------|---------------|-------------------|----------|
| Power Device Cartridge | 20 A          | G3PX-220E□□       | G32X-A20 |
|                        | 40 A          | G3PX-240E□□       | G32X-A40 |
|                        | 60 A          | G3PX-260E□□       | G32X-A60 |

**Note:** The G32X-A is a dedicated Power Device Cartridge for the G3PX.  
Refer to *Replacement Parts* on page 15.

## Specifications

### ■ Ratings (at an Ambient Temperature of 25°C)

#### Control

| Item                     |                                     | G3PX-220EUN/<br>240EUN/<br>260EUN                                | G3PX-220EH/<br>240EH/<br>260EH | G3PX-220EHN/<br>240EHN/<br>260EHN | G3PX-220EC/<br>240EC/<br>260EC |
|--------------------------|-------------------------------------|------------------------------------------------------------------|--------------------------------|-----------------------------------|--------------------------------|
| Rated voltage            |                                     | 100/110, 200/230 VAC                                             |                                |                                   |                                |
| Frequency                |                                     | 50/60 Hz (See note 1.)                                           |                                |                                   |                                |
| Input signal for control | External main setting (See note 2.) | 2 kΩ (type B, 2 W min.)                                          | 3 kΩ (type B, 2 W min.)        | 2 kΩ (type B, 2 W min.)           |                                |
|                          | Current input                       | 4 to 20 mA (at 1 to 5 VDC) (Input impedance: 250Ω) (See note 3.) |                                |                                   |                                |
|                          | Voltage ON/OFF input                | 5 to 24 VDC (Input impedance: approx. 20 kΩ)                     |                                |                                   |                                |
|                          | External duty setting               | 3 kΩ (type B)                                                    |                                |                                   |                                |
| Relay output for alarm   |                                     | ---                                                              | SPDT: 8 A at 250 VAC/30 VDC    |                                   |                                |

- Note:** 1. 50/60 Hz (no selector required) (EUN Series)  
Terminals 18 and 19 of EHN/EC-series models must be open when the supply frequency is 50 Hz. These terminals must be short-circuited when the supply frequency is 60 Hz.
2. Use the G32X-V2K 2-k $\Omega$  Variable Resistor for external main setting on EUN, EC, and EHN (G32X-V3K 3-k $\Omega$  for EN-series models).
3. Input 4 to 20 mA or 1 to 5 VDC linear input to the 4 to 20 mA current input terminal.

#### Output

| Model                     | Applicable load                 |                                    |                        |                  |
|---------------------------|---------------------------------|------------------------------------|------------------------|------------------|
|                           | Rated load voltage              | Load current                       | Inrush current         | Number of phases |
| G3PX-220E□<br>G3PX-220E□N | 100/110, 200/220 VAC (50/60 Hz) | 1 to 20 A (at 40°C)<br>(See note.) | 220 A (60 Hz, 1 cycle) | Single           |
| G3PX-240E□<br>G3PX-240E□N |                                 | 1 to 40 A (at 40°C)<br>(See note.) | 440 A (60 Hz, 1 cycle) |                  |
| G3PX-260E□<br>G3PX-260E□N |                                 | 1 to 60 A (at 40°C)<br>(See note.) | 440 A (60 Hz, 1 cycle) |                  |

**Note:** The G3PX-2□□EHN (model with multiple heater open circuit detecting function) and G3PX-2□□EC (constant-current model) require 20% min. of the rated current to detect a short mode failure. EC-series models detect an open mode failure if the load current has dropped to 80% of the rated value. A short mode failure will be detected if the current has risen to 20% of the rated value.

## ■ Characteristics

### EU/EH Series

| Item                                     | G3PX-220EUN/<br>240EUN/260EUN                                                                                      | G3PX-220EH/240EH/260EH                                                                 | G3PX-220EHN/<br>240EHN/260EHN                                                             |
|------------------------------------------|--------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|
| Operating voltage range                  | ±10%                                                                                                               |                                                                                        |                                                                                           |
| Operating frequency range                | ±1 Hz                                                                                                              |                                                                                        |                                                                                           |
| Output voltage adjustable range          | 0% to 95%                                                                                                          |                                                                                        |                                                                                           |
| Internal duty setting range              | 0% to 100%                                                                                                         | 10% to 100% (See note 1.)                                                              | 0% to 100%                                                                                |
| External duty setting range              | 0% to 100%                                                                                                         | 10% to 100% (See note 1.)                                                              | 0% to 100%                                                                                |
| Start-up time (See note 2.)              | Approx. 0.5 to 10 s (See note 3.)                                                                                  | Approx. 0.1 to 1 s (See note 3.)                                                       | Approx. 0.5 to 10 s (See note 3.)                                                         |
| Base-up range                            | 0% to 90%                                                                                                          | ---                                                                                    |                                                                                           |
| Multiple heater open circuit detection   | ---                                                                                                                |                                                                                        | 20% max. (See note 4.)                                                                    |
| Min. phase detection                     | ---                                                                                                                | Approx. $1/6 \pi$                                                                      |                                                                                           |
| Min. phase setting                       | ---                                                                                                                | ---                                                                                    | Approx. $1/6 \pi$                                                                         |
| Min. load current for ON error detecting | ---                                                                                                                | 1 A                                                                                    | 30% max. of rated current (See note 5.)                                                   |
| Abnormality detection time               | ---                                                                                                                | 0.1 s max.                                                                             | 1 s max.                                                                                  |
| Voltage drop with output ON              | 1.6 V max. (RMS)                                                                                                   |                                                                                        |                                                                                           |
| Leakage current                          | 10 mA max. at 100/110 VAC, 20 mA max. at 200/220 VAC                                                               |                                                                                        |                                                                                           |
| Insulation resistance                    | 100 MΩ min. (at 500 VDC)                                                                                           |                                                                                        |                                                                                           |
| Dielectric strength                      | 2,000 VAC, 50/60 Hz for 1 min.                                                                                     |                                                                                        |                                                                                           |
| Vibration resistance                     | Malfunction: 10 to 55 to 10 Hz, 100 m/s <sup>2</sup>                                                               |                                                                                        |                                                                                           |
| Shock resistance                         | Malfunction: 300 m/s <sup>2</sup>                                                                                  |                                                                                        |                                                                                           |
| Ambient temperature                      | Operating: -25°C to 65°C (with no icing or condensation)<br>Storage: -10°C to 55°C (with no icing or condensation) |                                                                                        |                                                                                           |
| Ambient humidity                         | Operating: 45% to 85%                                                                                              |                                                                                        |                                                                                           |
| Weight                                   | G3PX-220EUN: approx. 1.1 kg<br>G3PX-240EUN: approx. 1.4 kg<br>G3PX-260EUN: approx. 1.7 kg                          | G3PX-220EH: approx. 1.1 kg<br>G3PX-240EH: approx. 1.4 kg<br>G3PX-260EH: approx. 1.7 kg | G3PX-220EHN: approx. 1.2 kg<br>G3PX-240EHN: approx. 1.5 kg<br>G3PX-260EHN: approx. 1.8 kg |

**Note:** 1. Duty setting does not complete to the OFF state (i.e. 10% remains).

2. The start-up time is factory-set to 1 s on the EH Series, approx. 0.5 s on the EHN and EC Series.

3. This is the initial start-up time with a 100% duty setting.

4. Detection is effective when the set current is reduced by 20% or more.

5. The minimum set value in the G3PX-220EHN is 6 A. If a lower value is required, increase the number of wiring turns around the CT.

## EC Series


| Item                                     | G3PX-220EC                                                                                                         | G3PX-240EC                           | G3PX-260EC                           |
|------------------------------------------|--------------------------------------------------------------------------------------------------------------------|--------------------------------------|--------------------------------------|
| Operating voltage range                  | ±10%                                                                                                               |                                      |                                      |
| Operating frequency range                | ±1 Hz                                                                                                              |                                      |                                      |
| Output voltage adjustable range          | 0% to 95%                                                                                                          |                                      |                                      |
| Internal duty setting range              | 0% to 100%                                                                                                         |                                      |                                      |
| External duty setting range              | 0% to 100%                                                                                                         |                                      |                                      |
| Start-up time                            | Approx. 0.5 to 10 s                                                                                                |                                      |                                      |
| Min. load current for ON error detecting | 20% max. of rated current                                                                                          |                                      |                                      |
| Current limit range                      | 0% to 100%                                                                                                         |                                      |                                      |
| Excess current detection                 | Peak current of 110 A within 1 cycle                                                                               | Peak current of 220 A within 1 cycle | Peak current of 330 A within 1 cycle |
| Constant current                         | ±3% max. with 10-time increment of load value<br>±3% max. with ±10% change of voltage                              |                                      |                                      |
| Abnormality detection time               | 1 s max.                                                                                                           |                                      |                                      |
| Voltage drop with output ON              | 1.6 V max. (RMS)                                                                                                   |                                      |                                      |
| Leakage current                          | 10 mA max. at 100/110 VAC, 20 mA max. at 200/220 VAC                                                               |                                      |                                      |
| Insulation resistance                    | 100 MΩ min. (at 500 VDC)                                                                                           |                                      |                                      |
| Dielectric strength                      | 2,000 VAC, 50/60 Hz for 1 min.                                                                                     |                                      |                                      |
| Vibration resistance                     | Malfunction: 10 to 55 to 10 Hz, 100 m/s <sup>2</sup>                                                               |                                      |                                      |
| Shock resistance                         | Malfunction: 300 m/s <sup>2</sup>                                                                                  |                                      |                                      |
| Ambient temperature                      | Operating: -25°C to 65°C (with no icing or condensation)<br>Storage: -10°C to 55°C (with no icing or condensation) |                                      |                                      |
| Ambient humidity                         | Operating: 45% to 85%                                                                                              |                                      |                                      |
| Weight                                   | G3PX-220EC: approx. 1.1 kg<br>G3PX-240EC: approx. 1.4 kg<br>G3PX-260EC: approx. 1.7 kg                             |                                      |                                      |

# Engineering Data


The following data is for an ambient temperature of 25°C.

## Output Characteristics

G3PX-EUN/EH/EHN Models

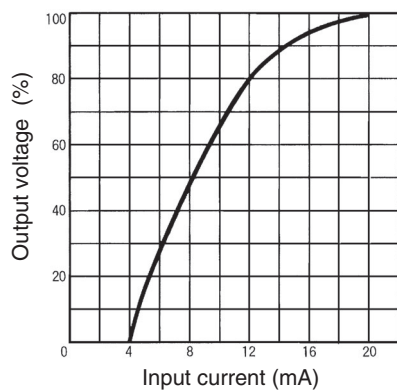


G3PX-EC Models

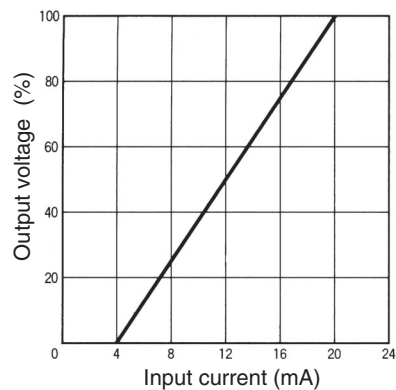


## Duty Setting

G3PX-EUN/EH/EHN Models

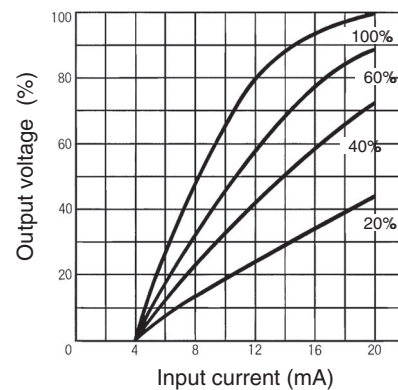


## Base-up Characteristics

G3PX-2□0EUN Models

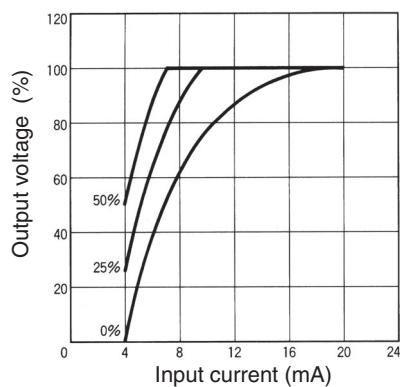


## Load Current vs. Ambient Temperature



G3PX-220E Models

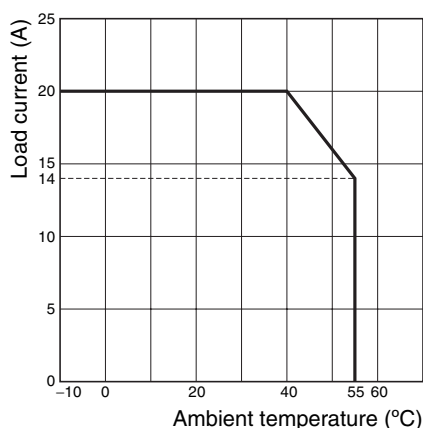


G3PX-240E Models

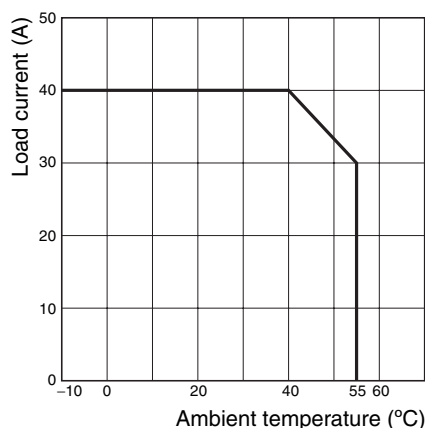


G3PX-260E Models

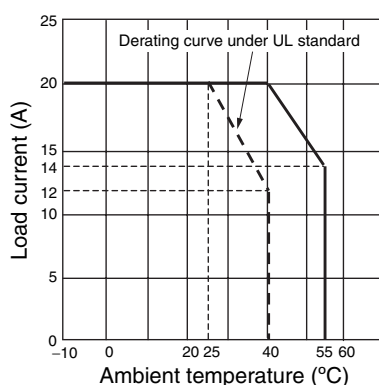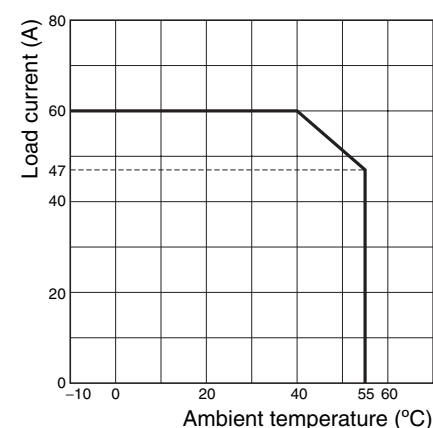

**Note:** Please use proper ventilation and cooling.

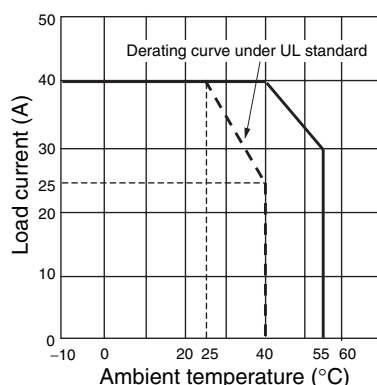


**Note:** Please use proper ventilation and cooling.

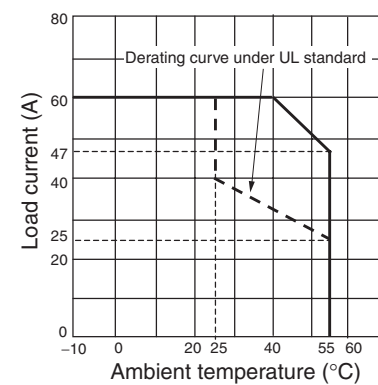


**Note:** 1. Please use proper ventilation and cooling.  
2. Please note that derating curve above 40 A is applicable under the UL standard only with forced air cooling by fan.

## One Cycle Surge Current: Non-repetitive


G3PX-220E Models

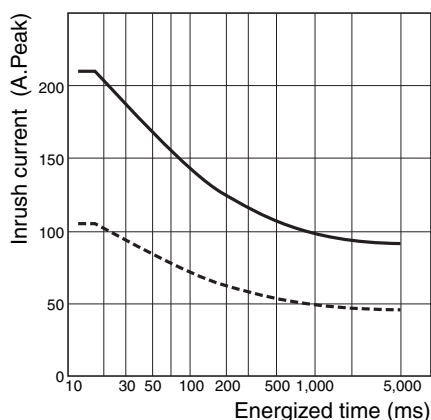

G3PX-240E Models

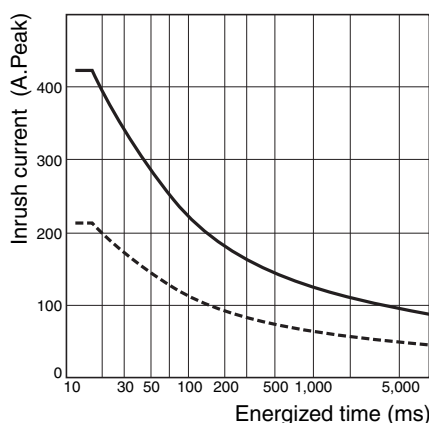

G3PX-260E Models

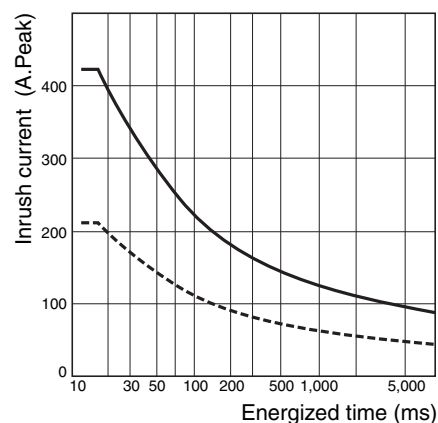


**Note:** The above are possible on condition that the G3PX is in non-repetitive operation. If the G3PX is in repetitive operation, reduce the applied current to half.




# Nomenclature


## Single-function Model (EUN-series Model) G3PX-2□0EUN

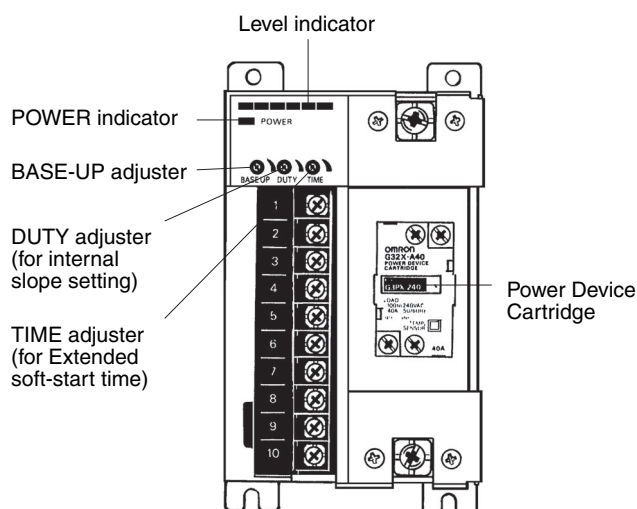


## Multiple Heater Open Circuit Detection (EHN-series Model) G3PX-2□0EHN-CT□□

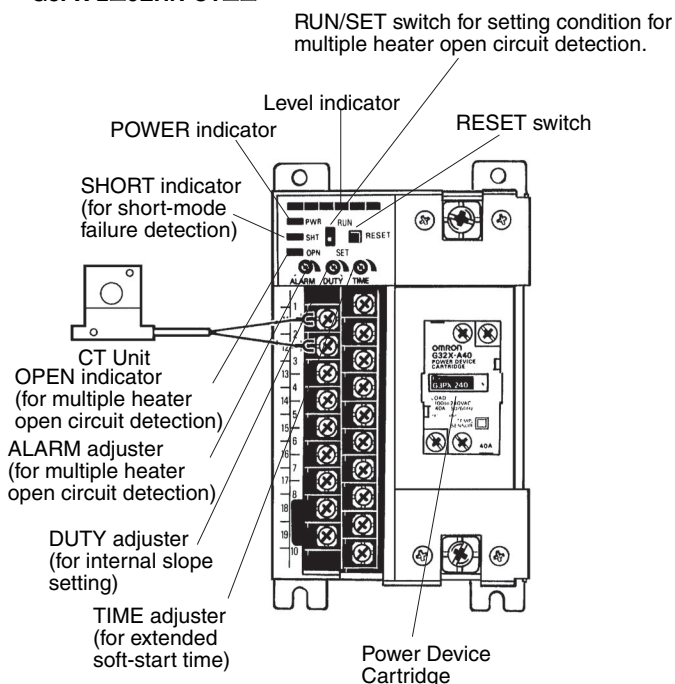

## Single Heater Open Circuit Detection (EH-series Model) G3PX-2□0EH-CT□□

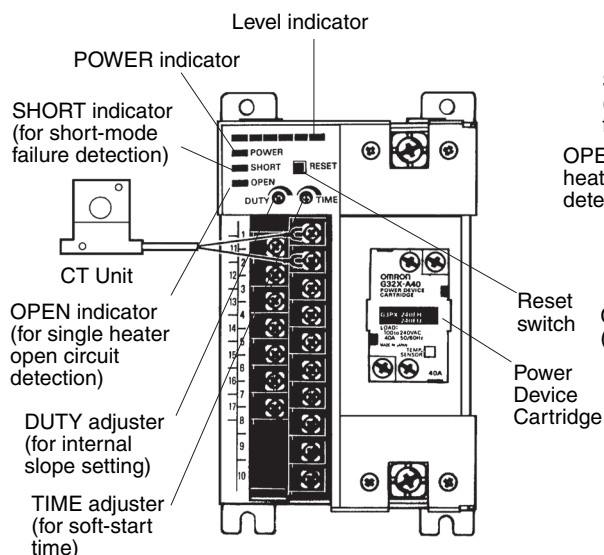

## Constant-current Model (EC-series Model) G3PX-2□0EC-CT□□

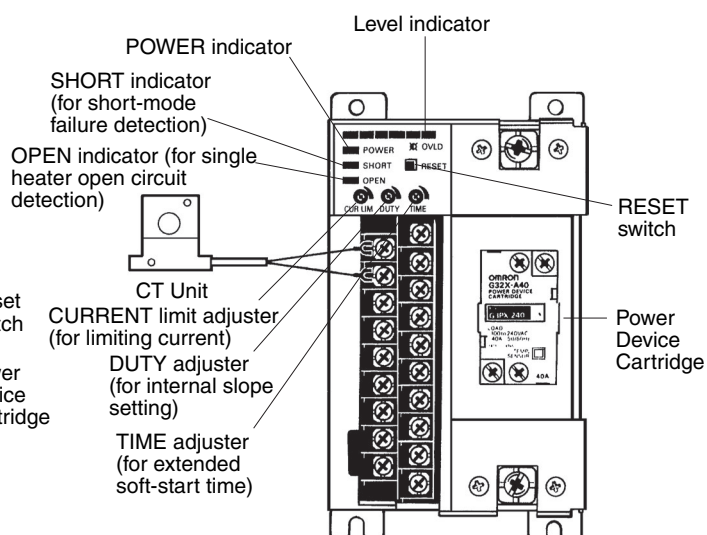


# Operation

## Error Detecting Function

### Wiring

#### Single-phase Models

All G3PX-2□0EH/EHN/EC-series models incorporate terminals 11 and 12 for the CT Unit, 13 and 14 for the external reset switch, and 16 and 17 for relay output as well as power/input terminals 1 through 10.

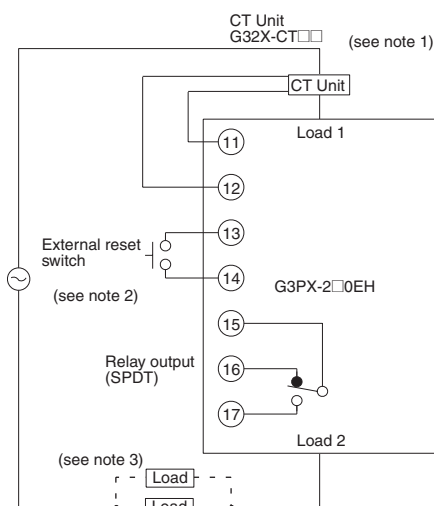

- Note:**
1. Connect either the black or white lead wire of the CT Unit to terminal 11 and the other lead wire to terminal 12. The G3PX will malfunction if you do not connect the CT Unit to the G3PX.
  2. The rated current and voltage of G3PX models when reset are as follows:  
EH-series models: 12 mA at 12 VDC  
EHN- and EC-series models: 1 mA at 12 VDC
  3. For more than one heater.


### Output

#### Single-phase Models

The following illustrations show the condition of the G3PX LED indicators when the G3PX detects heater open circuit, a short-mode failure (ON failure of components), or overcurrent (EC-series constant-current models only). The indicator and relay output signals are reset with the internal or external reset switch provided that the error condition has been remedied.


1. When EH/EHN/EC-series models detect single or multiple heater open circuit, the OPEN indicator is lit and the SPDT relay output is ON.

**Note:** When the G3PX detects heater open circuit, the Level indicator will be OFF regardless of the G3PX input condition. The red OPEN indicator will be lit. EHN-series models, however, will continue operating with level indication.

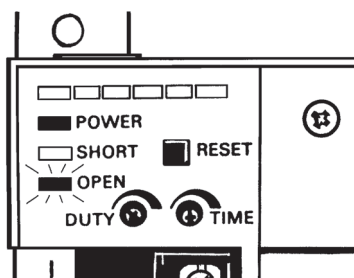


2. When EH/EHN/EC-series models detect a short-mode failure, the SHORT indicator is lit and the SPDT relay output is ON.

With continuous load current.

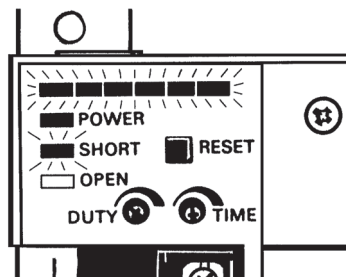


With load current shut off.

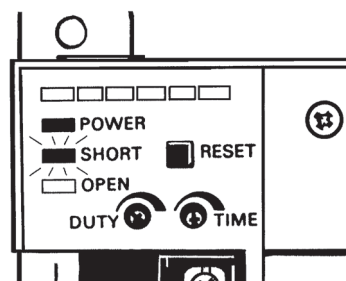

**Note:** When the G3PX detects a short-mode failure, all LEDs of the Level indicator and red SHORT indicator are lit. When you use a breaker to disconnect the load with the relay output, all LEDs of the Level indicator will be OFF regardless of the input to the G3PX.

3. When EC-series models detect an overcurrent, the Level indicator will flash and the SPDT relay output is ON. The input signal will be shut off.

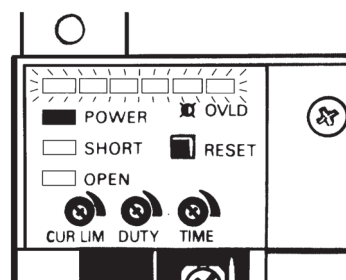


**Note:** When resetting, leave power supply terminals 10 to 9 or 8 ON.

## ■ Wiring

### Main Circuit

#### Single-phase Models

The following illustrations show connection examples:

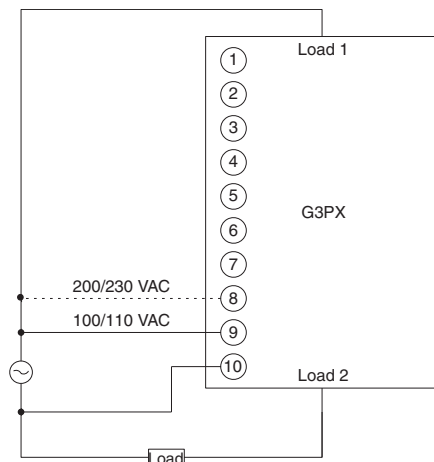


**Note:** Use a single power supply for the G3PX and the load.

### Setting Circuit

#### Analog Control


##### Single-phase Models

1. A Temperature Controller with an output of 4 to 20 mA is used to control the G3PX.

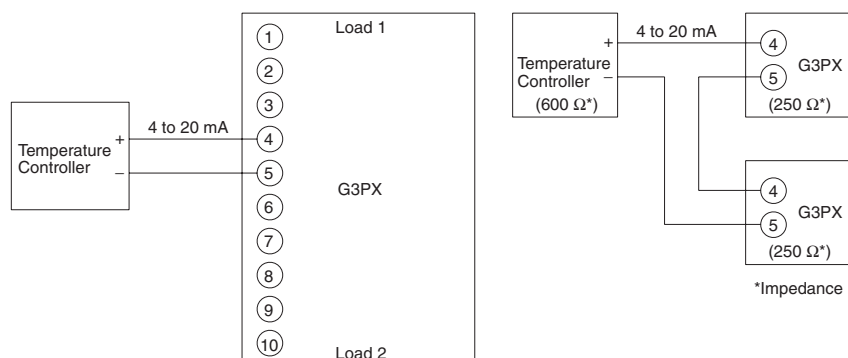

**Note:** Two G3PX models can be connected in series to OMRON's single Temperature Controller (with an internal impedance of 600 Ω) with a current output.

2. A Temperature Controller with an output of 4 to 20 mA is used with the G3PX to change the duty.

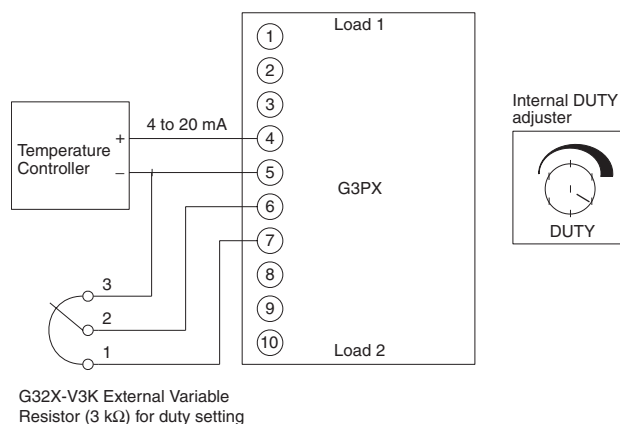


**Note:** You can change the duty with the external or internal ramp adjuster.

## ON/OFF Control

### Single-phase Models

1. A Temperature Controller is used to change the duty of G3PX.

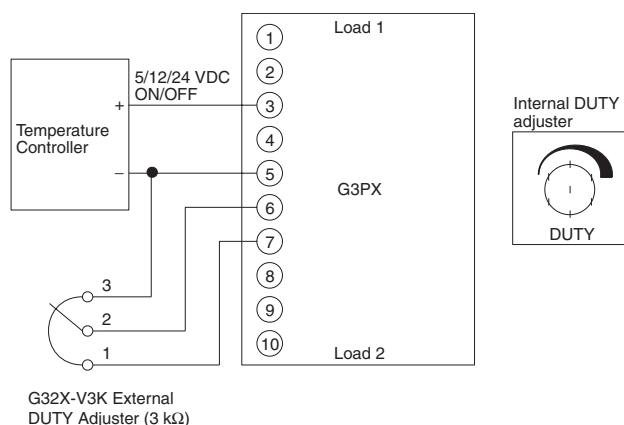


**Note:** You can change the duty with the external or internal variable resistor.


2. A Temperature Controller (with a voltage output) is used to control several G3PXs.

| Temperature Controller specifications | No. of G3PX |
|---------------------------------------|-------------|
| E5□K: 40 mA at 12 V                   | 20 sets     |
| E5□N: 20 mA at 12 V                   | 20 sets     |
| 20 mA at 5 V                          | 20 sets     |
| 10 mA at 5 V                          | 20 sets     |

### Connection Example

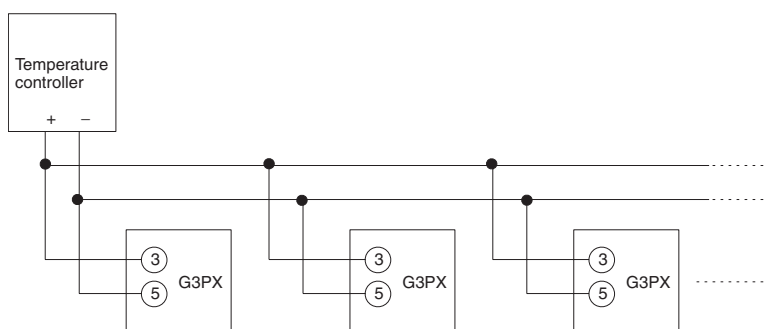


3. A Temperature Controller (with a relay output) is used to vary the duty of G3PX.

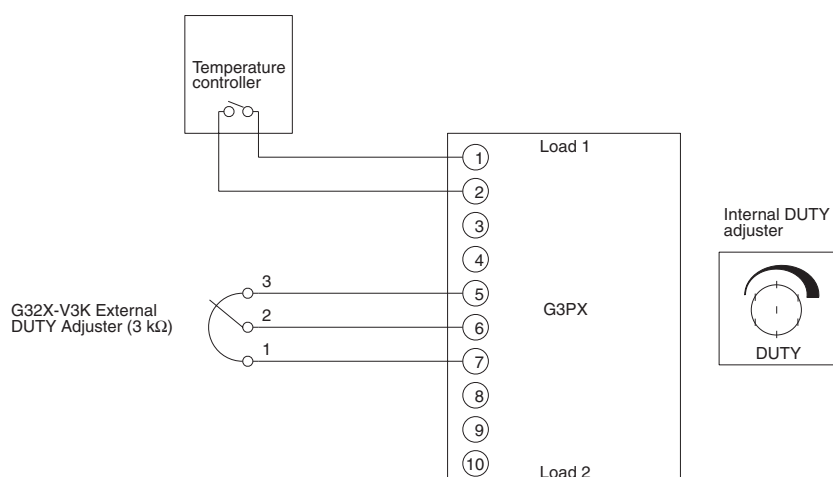

## Manual Control


### Single-phase Models

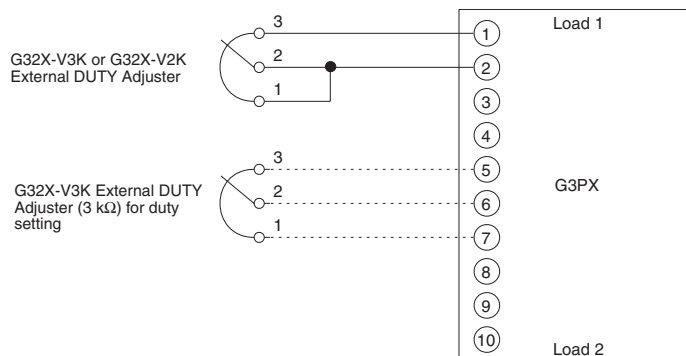

**Note:** Delicate duty adjustment is possible with the external or internal resistor. Use a right DUTY adjuster (2- or 3-k $\Omega$  type) according to the G3PX model as follows:  
 G32K-V3K (3 k $\Omega$ ) for EH-series models  
 G32X-V2K (2 k $\Omega$ ) for EUN-, EHN-, and EC-series models

## Two-position Control

### Single-phase Models

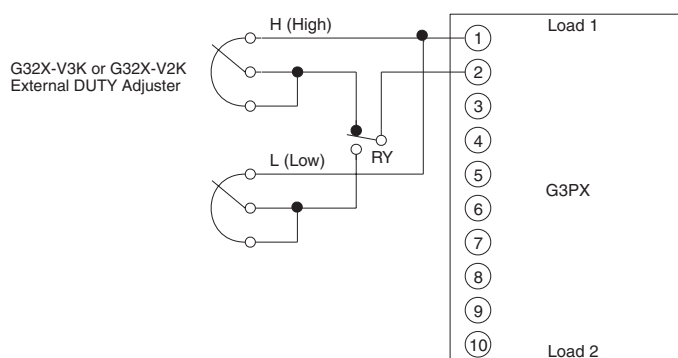

- Note:**
1. A temperature controller with relay output or a single relay can be used with the G3PX in two-position (high-and low-position) control, in which case the relay contact current is 30 mA at 12 VDC with the External DUTY Adjuster set to 0  $\Omega$ .
  2. Use a right DUTY adjuster (2- or 3-k $\Omega$  type) according to the G3PX model as follows:  
 G32X-V3K (3 kW) for EH-series models  
 G32X-V21K (2 kW) for EUN-, EHN-, and EC-series models.



## Setting of Base-up Output (G3PX-2□0EUN Series)

The base-up output can be adjusted with the base-up adjuster knob. It is also possible to control the base-up output for the full scale of 4 to 20-mA input current by adjusting the duty adjuster. Refer to *Engineering Data* on page 7 for the base-up characteristics.


## G3PX-2□0EHN Series (Multiple Heater Open Circuit Detection Model)

### Setting

1. Use the G32X-CT□□HN CT Unit and make sure that the G3PX is wired correctly.
2. The G3PX initially set is shown in the following illustration. Make sure that the RUN/SET switch has been set to SET. Make sure that the DUTY adjuster has been turned clockwise to the maximum.
3. Adjust the sensitivity. Turn the ALARM adjuster and set to the position where the OPEN indicator is lit. Stop turning the ALARM adjuster as soon as the indicator is lit to complete the setting.

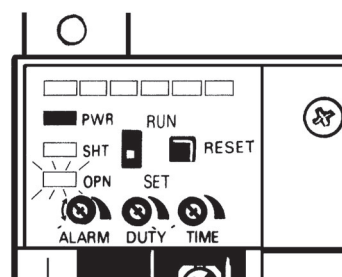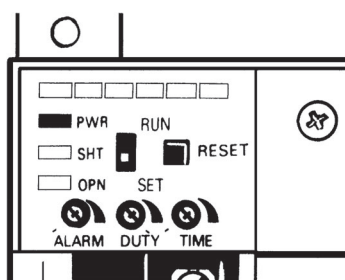

4. Set the RUN/SET switch to RUN.  
When all settings have been finished, the OPEN indicator is OFF.

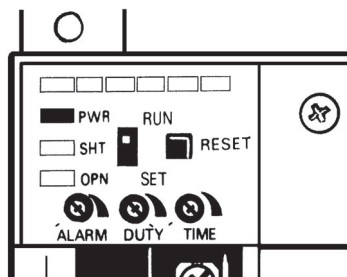

- Note:**
1. The G3PX can control any part of the phase as long as the controlled phase is approximately  $1/6\pi$  or more in width.
  2. Be sure to prepare terminals 18 and 19 corresponding to the supply frequency of 50 Hz or 60 Hz. Otherwise, a setting error will result in a malfunction regardless of the RUN/SET switch setting.  
When the error has occurred, turn the ALARM adjuster counterclockwise to the minimum setting, reset the G3PX, and readjust.

## ■ Replacement Parts

### G32X-A Power Device Cartridge

The temperature indicator will be lit in red if the power element is damaged. If the power element is damaged due to overcurrent or other reasons, the power element and its peripheral parts can be replaced.


The power element and its peripheral parts can be replaced without disconnecting the wires of the G3PX.

Improve the heat radiation of the G3PX before replacing the Cartridge.


The temperature indicator will not be lit in red if the G3PX has overcurrent due to load short-circuiting or other reasons over a short time.

### Appearance


G32X-A20



G32X-A40

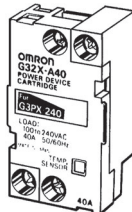

G32X-A60

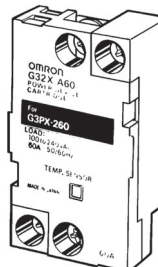


### Replacement of G32X-A20 Power Device Cartridge

Use the special tool (provided) to extract the Cartridge for replacement with a new one.

#### Extraction

Follow the procedures below to dismount the Power Device Cartridge from the G3PX.

1. Switch off the power.
2. Remove the terminal cover.
3. Hook the tool on the indented portions of the Power Device Cartridge as shown in the illustration below and pull up the Power Device Cartridge vertically.

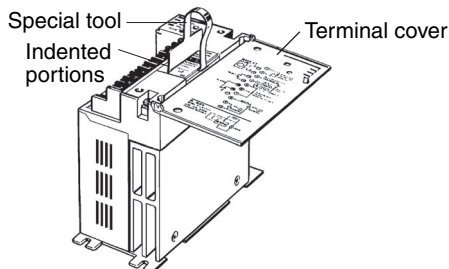


#### Mounting

The procedures for mounting the Power Device Cartridge are as follows:

1. Apply silicone grease (provided with the G32X-A) to the entire surface of the heat sink.
2. Make sure there is no dust or pieces of wire on the heat sinks of the G32X-A or the G3PX.

3. Insert the Cartridge into the opening of the G3PX so that the letters on the Cartridge and those on the G3PX are in the same direction and sides A and B are even.

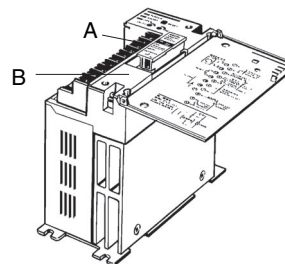

4. Attach the terminal cover.
5. Switch on the power and check the G3PX to be sure it works properly.


### G32X-A40/60

The G32X-A40 and G32X-A60 are secured with screws.


#### Extraction

The procedures for dismounting the Power Device Cartridge are as follows:

1. Switch off the G3PX.
2. Remove the terminal cover.
3. Be sure to turn off the G3PX and loosen the screws located in the upper center and lower center. These screws are connected to terminals 1 and 2.

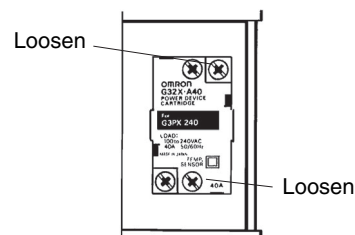

- Loosen the screws on both corners.

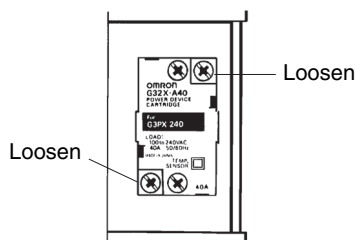


- Hold the indented part of both corners to dismount the Cartridge.

## Mounting

- Apply silicone grease (provided with the G32X-A) to the entire surface of the heat sink.
- Make sure there is no dust or pieces of wire on the heat sinks of the G32X-A or the G3PX.

- Insert the Cartridge into the opening of the G3PX so that the letters on the Cartridge and those on the G3PX are in the same direction and sides A and B are even.

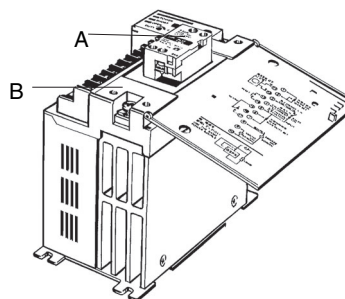


- Tighten the screws on both corners with a tightening torque of 0.59 to 0.78 N-m.
- Tighten the center screws of the G3PX with a tightening torque of 0.59 to 0.78 N-m.
- Attach the terminal cover.
- Switch on the power and check the G3PX to be sure it works properly.

## External Variable Resistor


The G32X-V3K and G32X-V2K are provided with a set consisting of adjuster, knob, and nameplate.

| Resistive value<br>(See note 1.) | Model                  |
|----------------------------------|------------------------|
| 3 kΩ                             | G32X-V3K (See note 2.) |
| 2 kΩ                             | G32X-V2K               |


- Note:** 1. The G32X-V3K is equivalent to the conventional G32X-VR.  
2. Resistive Value

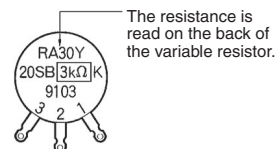


### External DUTY Adjuster

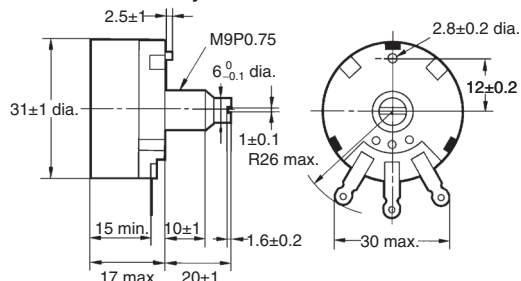


### Knob

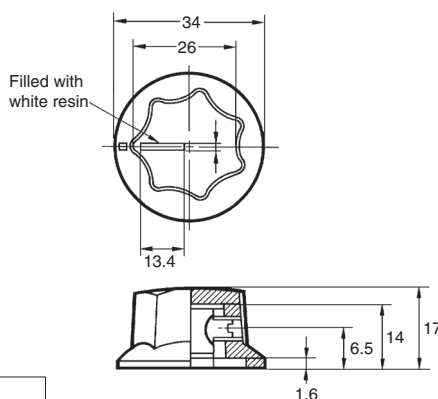

### Mounting Holes

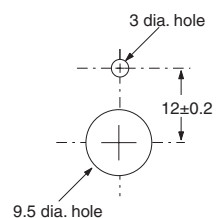

### Nameplate

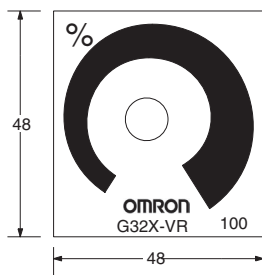




# Dimensions


**Note:** All units are in millimeters unless otherwise indicated.

## Single-phase Models







### G3PX-220E Series

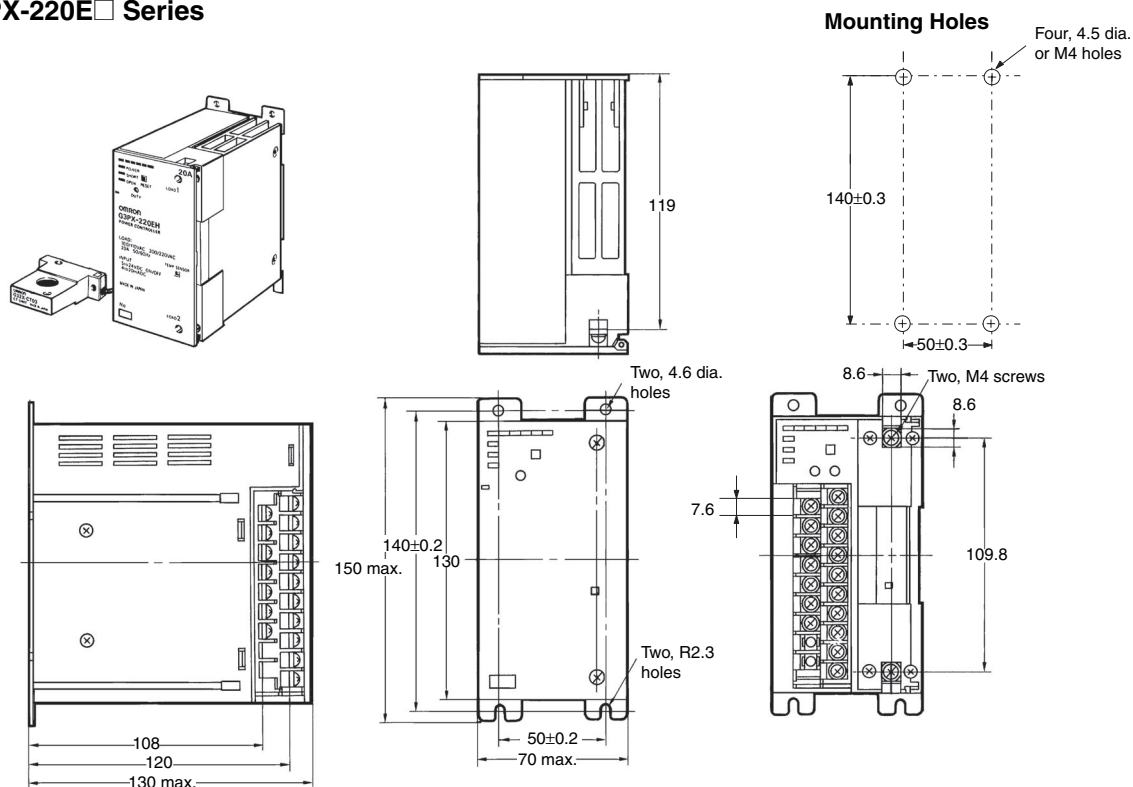




### G3PX-240E Series

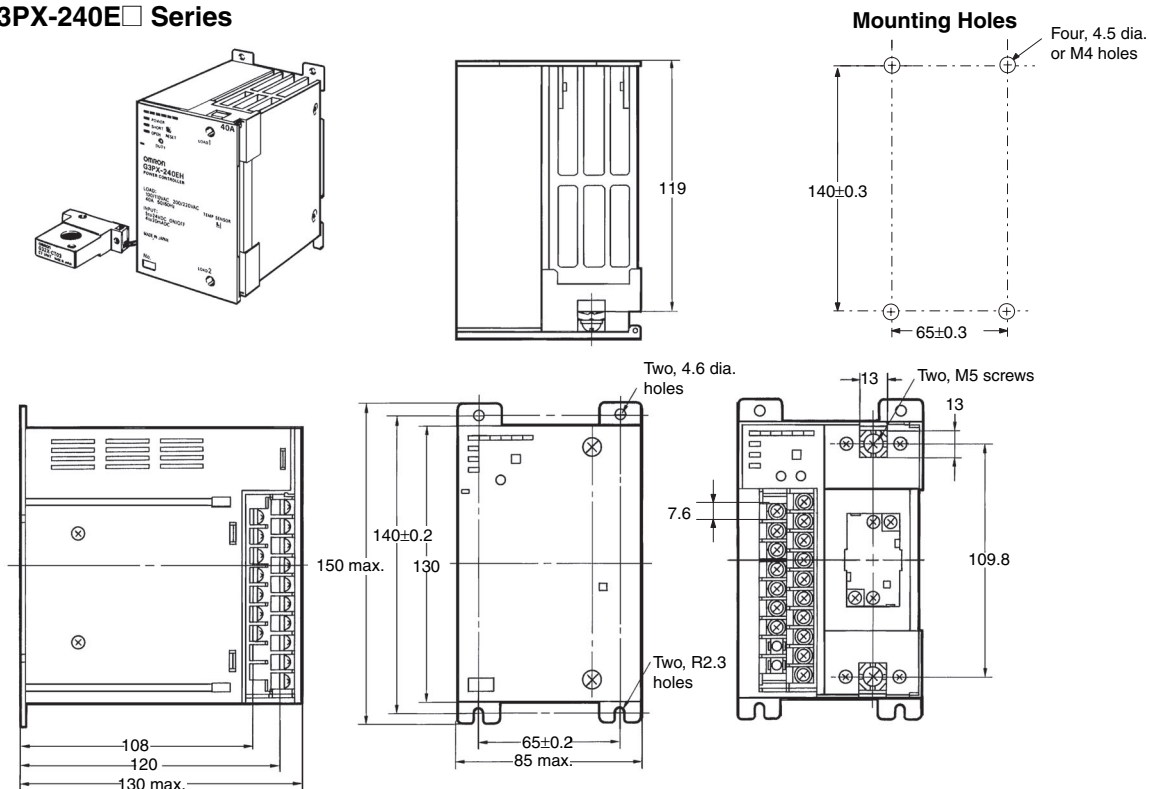

## G3PX-260E□ Series

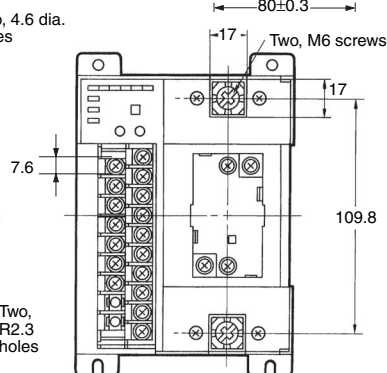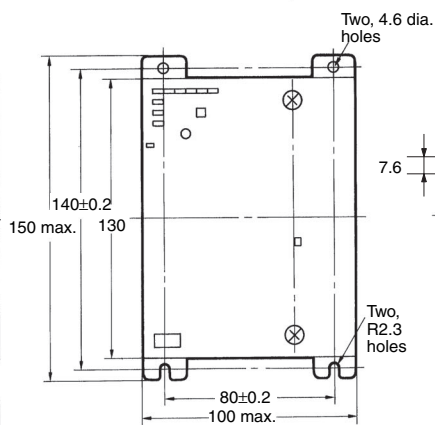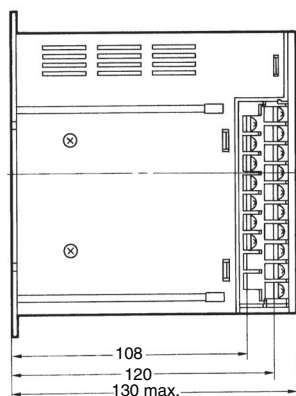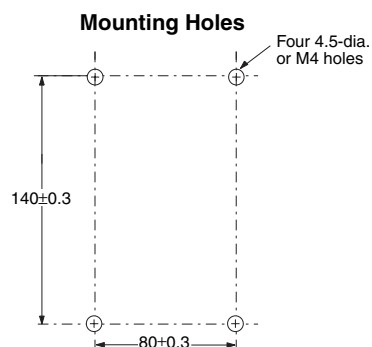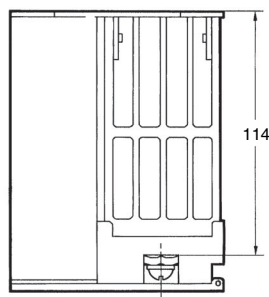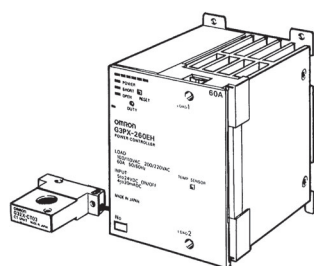

## G32X-CT03□ Series G32X-CT10□ Series

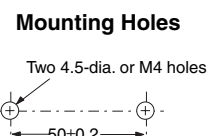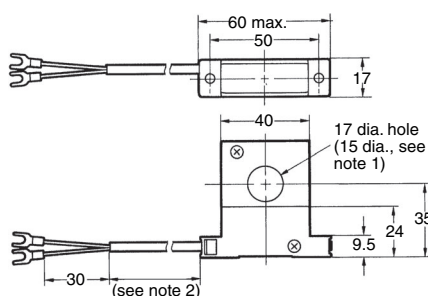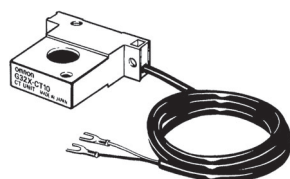


- Note:**
1. Color of the hole  
EH Series: Black  
EHN Series: White  
EC Series: Light gray  
The size of the hole of CT Units for EC- and EHN-series models is 15 dia.
  2. The G32X-CT03□ incorporates 30-cm solderless terminals and the G32X-CT10□ incorporates 100-cm solderless terminals.

# Installation


## Terminal Arrangement

### Single-phase Models


G3PX-220EUN  
G3PX-240EUN  
G3PX-260EUN

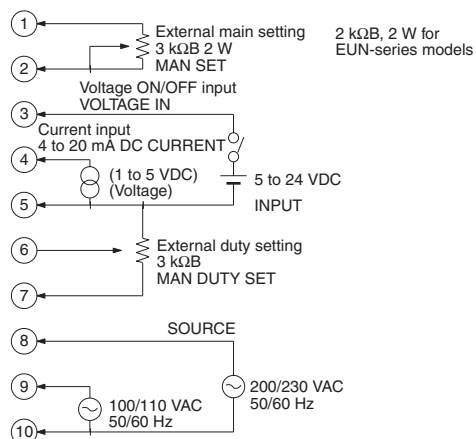

G3PX-220EHN/220EC  
G3PX-240EHN/240EC  
G3PX-260EHN/260EC

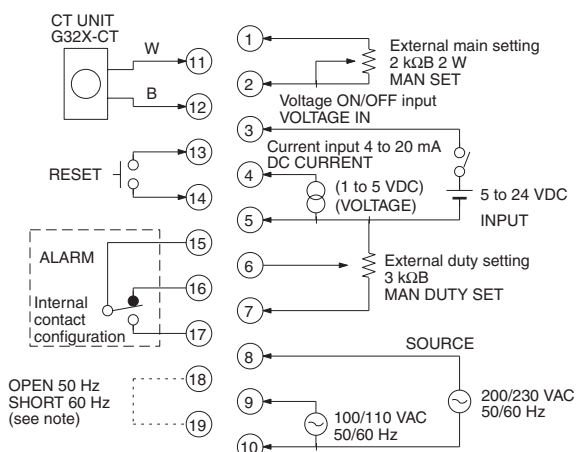

G3PX-220EH  
G3PX-240EH  
G3PX-260EH

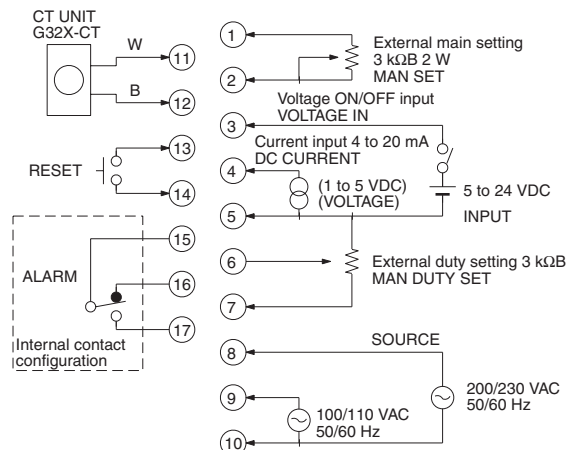

**Note:** Open the terminals for 50 Hz or short-circuit the terminals for 60 Hz. When the product is shipped, the terminals are short-circuited using a short-circuiting bar to set to 60 Hz. When using at 50 Hz, remove the short-circuiting bar.

# Safety Precautions

## ■ Precautions for Correct Use

Please observe the following precautions to prevent failure to operate, malfunction, or undesirable effect on product performance.


### Load

Only resistive loads can be connected to the G3PX. Contact your OMRON representatives if it is necessary to connect inductive or transformer loads.


### Mounting

Pay utmost attention when mounting the G3PX so that the G3PX will not fall thus resulting in injury.

#### Vertical Mounting

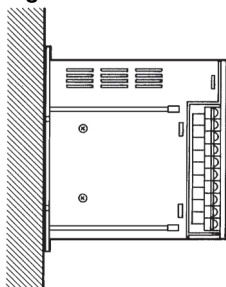


#### Horizontal Mounting

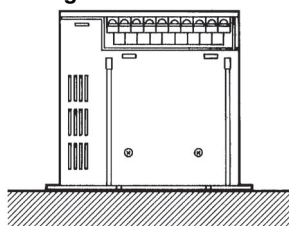

**Note:** In the case of flat mounting, the 30% derating of the load current is required.

#### Close Mounting Example (Single-phase Models)

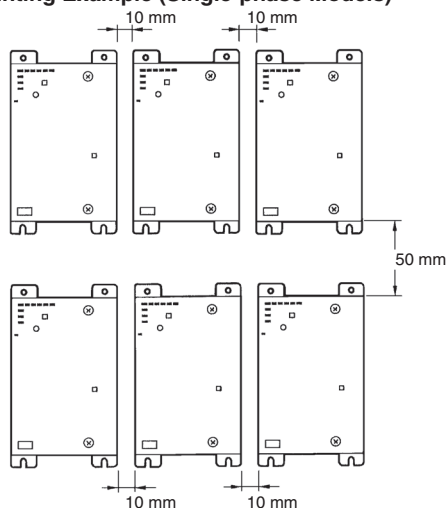

**Note:** Make sure that there is a space of at least 50 mm vertically and at least 10 mm horizontally between adjacent single-phase models.

## Wiring

Make sure that the lead wires are thick enough according to the current.

Be sure to turn off power to the G3PX when wiring. The G3PX has current leakage although the G3PX is turned off if the power supply is connected to the G3PX, which may give an electric shock.

Do not wire power lines or high-tension lines along with the lines of the G3PX in the same conduit, otherwise the G3PX may be damaged or malfunction due to induction. Be sure to wire the lines of the G3PX separated from power lines or high-tension lines or laid in an exclusive, shielded conduit.

## Tightening Torque

Apply the following tightening torque.

Output terminal:

20-A model: 1.47 N·m

40-A model: 2.45 N·m

60-A model: 4.12 N·m

Terminal block:

Single-phase model: 0.98 N·m

Be sure to protect the terminals with the protective cover after wiring.

## Wiring for Error Detection

If a contactor is employed and operated with the relay output signal of the G3PX for error detection, make sure that the G3PX is closer to the power supply than the contactor.

## Instruments

| Instrument                                      | Remarks                            |
|-------------------------------------------------|------------------------------------|
| Thermal type                                    | Available                          |
| Digital type displaying root-mean-square values |                                    |
| Moving-iron type                                |                                    |
| Rectifier type                                  | Not available (not precise enough) |
| Multimeter                                      |                                    |
| Digital multimeter                              |                                    |


The instruments are used for displaying root-mean-square voltage and current values of the AC circuitry.

## Operation Monitoring

The level indicator just indicates the phase of the load and it is not highly precise.

## Ramp Setting

There is a decrease in ramp if the internal DUTY adjuster is turned counterclockwise.

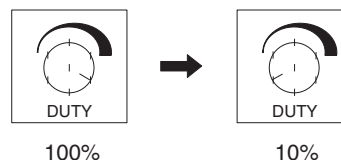

If the External DUTY Adjuster is used, set the Internal DUTY Adjuster to 100%.

## CT Unit

The CT Unit varies with the G3PX-series model. Use the following CT Units in combination with the G3PX models.

G3PX-2□0EH Series: G32X-CT□□  
 G3PX-2□0EHN Series: G32X-CT□□HN  
 G3PX-2□0EC Series: G32X-CT□□C

If any of the following models is used and the actual load current is 50% of the maximum rated load current or lower, increase the number of turns of the wire around the CT Unit.

G3PX-20EHN Series (multi-heater open circuit detective models)  
 G3PX-20EC Series (constant current)

For example, make two turns if the actual load current is 50% of the maximum rated load current and four turns if the actual load current is 25% of the maximum rated load current.

If the G3PX is a constant current model, do not increase the number of turns of the wire around the CT Unit excessively, otherwise the overcurrent detection function may operate by mistake.

## External DUTY Adjuster

Use the External DUTY Adjuster with a resistance of 2 k $\Omega$  or that with a resistance of 3 k $\Omega$  according to the G3PX-series model in use. Refer to the following combinations.

G3PX-2□0EH Series: G32X-V3K (3 k $\Omega$ )  
 G3PX-2□0EUN Series  
 G3PX-2□0EC Series

## Base-up Function

If the model in use has the model number suffix "EUN," the base-up function is available.

The base-up output of the G3PX with a temperature controller output of 0 mA (i.e., the temperature controller is turned off) and that of the G3PX with a temperature controller output of 4 mA are different from each other.


## Power Device Cartridge

Do not apply power to the G3PX with the Power Device Cartridge dismounted.

## Heater Open Circuit Detection

### EH and EHN Models

The heater open circuit detective function is not available for detecting the phase less than the following.

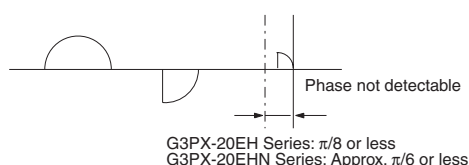

## Power Supply

### Single-phase Models Only

Do not apply 200 V to the 100-V terminals, otherwise the thermal fuse of the built-in transformer will be blown and the G3PX will not operate.

### Others

It is not possible to use three single-phase models for three-phase load control.

If three-phase power supply is used for single-phase models operating in parallel, make sure that the two phases supplied to all the single-phase models are the same.

## Troubleshooting

Check the following if the G3PX does not operate or has difficulty in temperature control.

- The load does not turn on with 100% input.  
Check the default internal ramp setting.




Make sure that the adjuster is set to the farthest clockwise position.

Also check the current limit adjuster if the G3PX is a constant DC model.




- The G3PX does not operate or is in abnormal operation.  
 Make sure that all input terminals are connected properly with no mistakes in polarity.  
 Make sure that the internal DUTY adjuster is not set to the farthest clockwise position.  
 Make sure that the frequency used by the G3PX (i.e., 50 or 60 Hz) is set properly. (This applies to the EC, and EHN models.)
- The G3PX malfunctions if the external adjusters are turned.  
 Make sure that the numbers on the external adjusters coincide with the corresponding terminal numbers on the G3PX.  
 Make sure that the 2-k $\Omega$  and 3-k $\Omega$  DUTY adjusters are connected correctly.

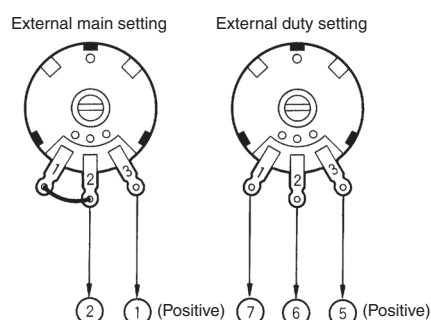

**Note:** 1, 2, 3, 5, 6, and 7 are terminal numbers of the G3PX.

- Temperature control with a Voltage-output Temperature Controller is not smooth.  
 Make sure that the controlled soft-start up/down time has been adjusted properly. If not, turn the TIME adjuster counterclockwise to the minimum setting to reduce the controlled start-up/down time.

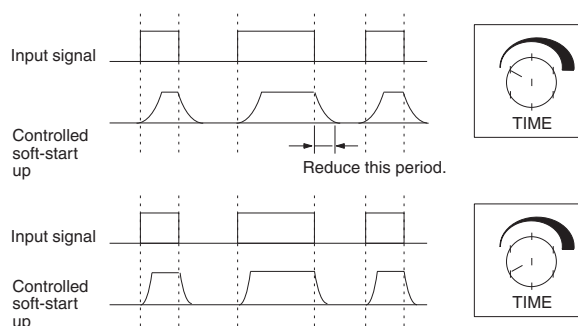

- The Level indicator is not OFF with a 0% input signal (G3PX-2□0EUN Series).

Make sure that the BASE UP adjuster has been turned counter-clockwise to the minimum setting.



Make sure that the adjuster is turned counterclockwise to the minimum setting.

- The OPEN indicator of a multiple heater open circuit detection model is lit at the initial stage (G3PX-2□0EHN Series).

Make sure that the initial settings are OK. If not, readjust the G3PX.


Make sure that terminals 18 and 19 are open if the supply frequency is 50 Hz. These terminals must be short-circuited if the supply frequency is 60 Hz.

Make sure that the load current is large enough.

- The Level indicator LEDs of a constant-current model are all lit and no power control operation is possible.

Make sure that the load current is large enough.

Countermeasure 1: Adjust the CUR LIM adjuster so that the LED on the farthest right of the Level indicator is OFF.

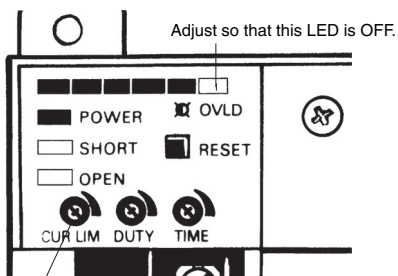


CUR LIM adjuster for limiting current

Countermeasure 2: When the supply current is less than 50%, increase the number of turns. When the supply current is 50% of the rated current, the wires must be coiled twice on the CT Unit. When the supply current is 25% of the rated current, the wires must be coiled three to four times on the CT Unit.

- No reset will be performed even if the RESET button is pressed. Check whether the RESET button is pressed while there is nothing input into to power supply terminals 8 and 10 or 9 and 10 of the G3PX.

Be sure to press the RESET button with power supplied to the G3PX.

The following wiring will be required if the breaker or contactor connected between the power supply and the G3PX is operated by the relay output of the G3PX.

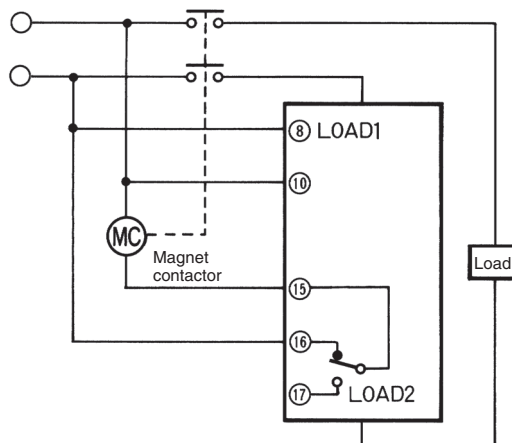

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

In the interest of product improvement, specifications are subject to change without notice.

## Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

## Warranty and Limitations of Liability

### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

## Application Considerations

### SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

### PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

## Disclaimers

### CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

### DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

### PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

### ERRORS AND OMISSIONS

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

2008.11

In the interest of product improvement, specifications are subject to change without notice.

**OMRON Corporation**  
Industrial Automation Company

<http://www.ia.omron.com/>

(c)Copyright OMRON Corporation 2008 All Right Reserved.



Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;
- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком);
- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



## JONHON

«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«FORSTAR» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели,  
кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный)

Факс: 8 (812) 320-03-32

Электронная почта: [ocean@oceanchips.ru](mailto:ocean@oceanchips.ru)

Web: <http://oceanchips.ru/>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А