### Optimized Pulse-Oximeter and Heart Rate AFE forWearable Health

#### **General Description**

The MAX30110 is a complete optical pulse oximetry and heart rate detection integrated analog front-end. The MAX30110 has a high-resolution, optical readout signalprocessing channel with built-in ambient light cancellation, as well as high-current LED driver DACs, to form a complete optical readout signal chain. With external LED(s) and photo diode(s), the MAX30110 offers the lowest power, highest performance heart rate detection solution for wrist applications.

The MAX30110 operates on a 1.8V main supply voltage, with a separate 3.1V to 5.25V LED driver power supply. The device supports a standard SPI compatible interface, as well as shutdown modes through the software with near-zero standby current, allowing the power rails to remain powered at all times.

#### **Applications**

- Wrist-Worn Wearable Devices
- In-Ear Wearable Devices
- SpO<sub>2</sub> Monitoring Devices
- Fitness Wearable Devices

#### **Benefits and Features**

- Reflective or Transmissive Heart Rate, Heart Rate Variability, or SpO<sub>2</sub> Monitoring
- Transmit Section
  - Two 8-bit LED Current DACs
  - Four Current Ranges 50mA, 100mA, 150mA, 200mA
    Low Noise Current Sources for High Peak Transmit
  - to Receive Dynamic Range
    Low 160mV Dropout to Support Direct Drive From
  - Low room Dropout to Support Direct Drive From Rechargeable Li Battery
  - High Output Impedance and High Supply Rejection to Support Unregulated Supply or Direct Drive From Boost Switcher Supply


- Receive Section
  - 19-bit Optical ADC Path to Support the Lowest Perfusions Situations
  - Low 25pA-RMS Input Referred Noise to Minimize LED Power Under Most Conditions
  - High Ambient Light Input Range of 200µA and to Support Extraction of HRM Signal in the Most Adverse Lighting Conditions
  - Built-in Front And Back-End Ambient Light Cancellation, Improving Rejection and Eliminating System Complexity of Dealing with Ambient Light
  - Short Exposure Pulse Widths of 52µs, 104µs, 206µs, 417µs for Efficient Uses of LED Light
  - Multiple Sample Rate Options from 20sps to 3.2ksps
- Ultra-Low-Power Operation for Mobile and Body-Wearable Device
  - Dynamic Power-Down Modes to 100sps for Low-Power Consumption
  - Full AFE Power Consumption of Less Than 25µA (Typ) at 25sps
  - Large 32 Sample FIFO to Support Batch Processing in the Microcontroller
  - Variety of System Monitors Mappable to Interrupts to Off-Load System Monitoring Functions From the Microcontroller
  - Low Shutdown Current = 1.4µA (typ)
- SPI Interface
- Supports a Single 1.8V Supply with Separate 3.1V to 5.25V LED Supply
- Miniature 2.8mm x 2.0mm, 6x4, 0.4mm Ball Pitch WLP Package
- -40°C to +85°C Operating Temperature Range

Ordering Information appears at end of data sheet.



### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

### Simplified Block Diagram

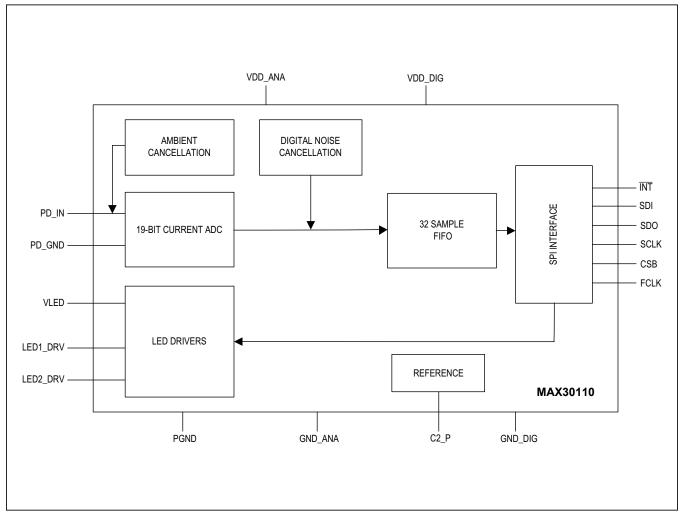

# Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

### **Absolute Maximum Ratings**

VDD_ANA to GND_ANA	0.3V to +2.2V
VDD_DIG to GND_ANA	0.3V to +2.2V
VDD_ANA to VDD_DIG	0.3V to +0.3V
PGND to GND_ANA	0.3V to +0.3V
GND_DIG to GND_ANA	0.3V to +0.3V
VLED to PGND	0.3V to +6.0V
LED1_DRV to PGND	0.3V to V <sub>LED</sub> + 0.3V
LED2_DRV to PGND	0.3V to V <sub>LED</sub> + 0.3V
PD_GND to GND_ANA	Internally Shorted
SDO, SDI, CSB, SCLK to GND_ANA	-0.3V to +6.0V

All other pins to GND_ANA	0.3V to +2.2V
Output Short-Circuit Duration	Continuous
Continuous Input Current Into Any Pin	
(except LEDx_DRV Pins)	±20mA
Continuous Power Dissipation, WLP	
$(T_A = +70^{\circ}C, \text{ derate } 5.5\text{mW/}^{\circ}C \text{ above } +70^{\circ}C)$	0°C)440mW
Operating Temperature Range	40°C to +85°C
Storage Temperature Range	40°C to +105°C
Soldering Temperature (reflow)	+260°C

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

### **Package Information**

#### 24-Bump WLP

PACKAGE CODE	W241C2+1			
Outline Number	<u>21-100088</u>			
Land Pattern Number	Refer to Application Note 1891			
THERMAL RESISTANCE, FOUR-LAYER BOARD:				
Junction to Ambient $(\theta_{JA})$	49°C/W			

For the latest package outline information and land patterns (footprints), go to <u>www.maximintegrated.com/packages</u>. Note that a "+", "#", or "-" in the package code indicates RoHS status only. Package drawings may show a different suffix character, but the drawing pertains to the package regardless of RoHS status.

Package thermal resistances were obtained using the method described in JEDEC specification JESD51-7, using a four-layer board. For detailed information on package thermal considerations, refer to www.maximintegrated.com/thermal-tutorial.

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

### **Electrical Characteristics**

 $(V_{DD} = VDD_ANA = VDD_DIG = 1.8V, V_{LED} = 3.3V, C_{LOAD} = 10pF, T_A = T_{MIN}$  to  $T_{MAX}$ , unless otherwise noted. Typical values are at  $T_A = +25^{\circ}C$ .) (Note 1))

PARAMETER	SYMBOL	CON	MIN	TYP	MAX	UNITS			
POWER SUPPLY		1							
Power Supply Voltage	V <sub>DD</sub>	Guaranteed by V <sub>DD</sub>	DC PSR	1.7	1.8	2.0	V		
LED Supply Voltage	V <sub>LED</sub>	Guaranteed by VLED	DC PSR	3.1	3.3	5.25	V		
V <sub>DD</sub> Supply Current	Low Power = Off, LED1 or LED2 (FD1 = 0x01 or FD1 = 0x02, PPG_TINT = 0x0, LP_MODE = 0x0), Note 2	Sample Rate = 100sps, single pulse (PPG_SR = 0x4)	241 308					308	
	חסן		Sample Rate = 100sps, single pulse (PPG_SR = 0x4)		72		μΑ		
		Low Power = On, LED1 or LED2 (FD1 = 0x01 or FD1 = 0x02, PPG_TINT = 0x0, LP_MODE = 0x1), Note 2	Sample Rate = 50sps, single pulse (PPG_SR = 0x2)		40				
			Sample Rate = 25sps, single pulse (PPG_SR = 0x1)		24	45			
			Sample Rate = 50sps, dual pulse (PPG_SR = 0xD)		94				
		Sample Rate = 25sps, dual pulse (PPG_SR = 0xC)		51		μA			

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

### **Electrical Characteristics (continued)**

 $(V_{DD} = VDD_ANA = VDD_DIG = 1.8V, V_{LED} = 3.3V, C_{LOAD} = 10pF, T_A = T_{MIN}$  to  $T_{MAX}$ , unless otherwise noted. Typical values are at  $T_A = +25^{\circ}C$ .) (Note 1))

PARAMETER	SYMBOL	CON	DITIONS	MIN	TYP	MAX	UNITS	
		Low Power = On, LED1 or LED2, LED driver 0mA (FD1 = 0x01 or FD1 = 0x02, PPG_TINT = 0x0, LP_MODE = 0x1, LEDx_DRV = 0x00)	Sample Rate = 100sps, single pulse (PPG_SR = 0x4)		0.1	±1		
		Low Power = On, LED1 or LED2, LED	Sample Rate = 100sps, single pulse (PPG_SR = 0x4)		308		μΑ	
V <sub>LED</sub> Supply Current	I <sub>LED</sub>	driver full scale (FD1 = 0x01 or FD1 = 0x02, PPG_TINT = 0x0, LP_MODE =	Sample Rete = 50sps, single pulse (PPG_SR = 0x2)		155			
		0x0, LP_MODE = 0x1, LEDx_DRV = 0xFF)	Sample Rate = 25sps, single pulse (PPG_SR = 0x1)		74	110		
		Low Power = On, LED1 and LED2, LED driver full scale (FD1 = 0x1, FD2 = 0x2, FD3 = 0x0 , PPG_TINT = 0x0, LP_MODE = 0x1, LEDx_DRV = 0xFF)	Sample Rate = 100sps, single pulse (PPG_SR = 0x4)		616		μA	
			Sample Rate = 50sps, single pulse (PPG_SR = 0x2)		304			
			Sample Rate = 25sps, single pulse (PPG_SR = 0x1)		149			
V <sub>DD</sub> Current in Shutdown		T <sub>A</sub> = +25°C, Note 2			1.6	5	μA	
V <sub>LED</sub> Current in Shutdown		T <sub>A</sub> = +25°C				1	μA	
V <sub>DD</sub> Undervoltage Interrupt Threshold		T <sub>A</sub> = +25°C			1.64		V	
V <sub>DD</sub> Overvoltage Interrupt Threshold		T <sub>A</sub> = +25°C			2.0		V	
OPTICAL RECEIVE CHANNE	Ĺ		·					
ADC Resolution					19		bits	
ADC Full-Scale Input Current		PPG_ADC_RGE = 0x0			6.0		μA	
ADC Full-Scale Input		PPG_ADC_RGE = 02		12.0				
Current (Including DC Offset		PPG_ADC_RGE = 02	x2		24.0		μA	
DAC)		PPG_ADC_RGE = 02	x3		48.0			
			PPG_TINT = 0x0		52			
ADC Integration Time	tana	LED_SETLNG =	PPG_TINT = 0x1		104		μs	
ADC Integration Time	<sup>t</sup> PPG_TINT	0x3	PPG_TINT = 0x2		208			
			PPG_TINT = 0x3		417			

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

### **Electrical Characteristics (continued)**

 $(V_{DD} = VDD_ANA = VDD_DIG = 1.8V, V_{LED} = 3.3V, C_{LOAD} = 10pF, T_A = T_{MIN}$  to  $T_{MAX}$ , unless otherwise noted. Typical values are at  $T_A = +25^{\circ}C.$  (Note 1))

PARAMETER	SYMBOL	CONDITIONS		MIN	TYP	MAX	UNITS
Minimum PPG Sample Rate		PPG_SR = 0x0			20		sps
Maximum PPG Sample Rate		PPG_SR = 0xA			3200		sps
Sample Rate Error		From nominal as indi- table	cated in the PPG_SR	-2		+2	%
DC Ambient Light Input Range	ALR	T <sub>A</sub> = +25°C			200		μA
			PPG_TINT = 0x0		71		
Total Integrated Input		PPG_ADC_RGE =	PPG_TINT = 0x1		50		pArms
Referred Noise Current		0x0, T <sub>A</sub> = +25°C	PPG_TINT = 0x2		35		
			PPG_TINT = 0x3		25		pArms
Maximum Photodiode Input Capacitance					1000		pF
		Loopback test.	PPG_ADC_RGE = 0x0		2420		
Transmit and Receive Chan-		exposure current = $1.6\mu$ A nominal, PPG_TINT = 0x3, V <sub>LED</sub> = 3.3V, V <sub>DD</sub> = 1.7V to 2.0V	PPG_ADC_RGE = 0x1		2010		
nel V <sub>DD</sub> DC PSR			PPG_ADC_RGE = 0x2		1790		- LSB/V
			PPG_ADC_RGE = 0x3		1664		
LED TRANSMIT DRIVER			J J				_1
LED Current Resolution					8		Bits
Driver DNL					1		LSB
Driver INL					1		LSB
			LEDx_RGE = 0x0	45	50	55	
	L ==	LEDx_PA = 0xFF	LEDx_RGE = 0x1		100		mA
Full-Scale LED Current	I <sub>LED</sub>		LEDx_RGE = 0x2		150		– mA
		LEDx_PA = 0xF2, LE	Dx_RGE = 0x3		190		
	I <sub>LED</sub>	LEDx_PA = 0xFF, LE	Dx_RGE = 0x3 (Note 3)		200		mA
Minimum Output Voltage		LEDx_PA = 0xFF,	LEDx_RGE = 0x0		0.16	0.25	
		$V_{DD} = 1.8V, V_{LED}$	LEDx_RGE = 0x1		0.32		V
		= 3.3V, 95% of the desired LED current	LEDx_RGE = 0x2		0.49		
			Dx_PA = 0xF2, V <sub>DD</sub> = 5% of the desired LED		0.64		

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

### **Electrical Characteristics (continued)**

 $(V_{DD} = VDD_ANA = VDD_DIG = 1.8V, V_{LED} = 3.3V, C_{LOAD} = 10pF, T_A = T_{MIN}$  to  $T_{MAX}$ , unless otherwise noted. Typical values are at  $T_A = +25^{\circ}C.$  (Note 1))

PARAMETER	SYMBOL	CONI	DITIONS	MIN	TYP	MAX	UNITS
		LEDx_PA = 0xFF,	LEDx_RGE = 0x0	-0.9	-0.04	+0.9	
		$V_{DD}$ = 1.8V, $V_{LEDx}$	LEDx_RGE = 0x1		-0.06		
Transmit Driver V <sub>LED</sub>		DRV = 0.9V, V <sub>LED</sub> = 3.1V to 5.25V	LEDx_RGE = 0x2		-0.02		mA/V
DC PSR		LEDx_PA = 0xF2, V <sub>DD</sub> = 1.8V, V <sub>LEDx_</sub> DRV = 0.9V, V <sub>LED</sub> = 3.1V to 5.25V	LEDx_RGE = 0x3		-0.025		III <i>ro</i> v
		LEDx_PA = 0xFF,	LEDx_RGE = 0x0	-4	±0.08	+4	m / / /
		$V_{\text{LED}} = 3.3 \text{V},$	LEDx_RGE = 0x1		0.14		mA/V
Transmit Driver V <sub>DD</sub>		$V_{LEDx_DRV} = 0.9V,$ $V_{DD} = 1.7V$ to 2.0V	LEDx_RGE = 0x2		0.16		mA/V
DC PSR		LEDx_PA = 0xF2, V <sub>LED</sub> = 3.3V, V <sub>LEDx_DRV</sub> = 0.9V, V <sub>DD</sub> = 1.7V to 2.0V	LEDx_RGE = 0x3		0.02		mA/V
LED Driver Compliance Interrupt	LED <sub>COMP</sub>	LEDx_RGE = 0x0, LE	ED1_DRV only		170		mV
DIGITAL/I/O CHARACTERIST	ics	1		1			
Output High Voltage	V <sub>OH</sub>	SDO, INT, ISOURCE	= 2mA	V <sub>DD</sub> - 0.4			V
Output Low Voltage	V <sub>OL</sub>	SDO, ĪNT, I <sub>SINK</sub> = 2n	nA			0.4	V
Input Voltage Low	VILI	SDI, SCLK, CSB, FC	LK			0.3 x V <sub>DD</sub>	V
Input Voltage High	VIH	SDI, SCLK, CSB, FC	LK	0.7 x V <sub>DD</sub>			V
Input Hysteresis	V <sub>HYS</sub>	SDI, SCLK, CSB, FC	LK		200		mV
Pin Capacitance	C <sub>PIN</sub>	SDI, SCLK, CSB, INT	(when inactive)		10		pF
Pin Leakage Current	I <sub>PIN</sub>	SDA, SCLK, CSB, ĪN T <sub>A</sub> = +25°C	$\overline{T}$ (when inactive),		0.01	1	μA
DIGITAL/SPI TIMING CHARAG	CTERISTICS	•					
SCLK Frequency	fSCLK					4	MHz
SCLK Period	t <sub>CP</sub>			250			ns
SCLK Pulse Width High	t <sub>CH</sub>			75			ns
SCLK Pulse Width Low	t <sub>CL</sub>			75			ns
CSB Fall to SCLK Rise Setup Time	t <sub>CSS0</sub>	to 1st SCLK rising ed	ge	20			ns
CSB Fall to SCLK Rise Hold Time	t <sub>CSH0</sub>	Applies to inactive ris rising edge	ing edge preceding 1st	0			ns
CSB Rise to SCLK Rise Hold Time	t <sub>CSH1</sub>	Applies to 24th rising edge		500			ns
SCLK Rise to CSB Fall	t <sub>CSF</sub>	Applies to 24th rising	500			ns	
CSB Pulse Width High	t <sub>CSPW</sub>			250			ns

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

### **Electrical Characteristics (continued)**

 $(V_{DD} = VDD_ANA = VDD_DIG = 1.8V, V_{LED} = 3.3V, C_{LOAD} = 10pF, T_A = T_{MIN}$  to  $T_{MAX}$ , unless otherwise noted. Typical values are at  $T_A = +25^{\circ}C$ .) (Note 1))

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
SDI to SCLK Rise Setup Time	t <sub>DS</sub>		10			ns
SDI to SCLK Rise Hold Time	t <sub>DH</sub>		10			ns
SCLK Fall to SDO Transition	t <sub>DOT</sub>	C <sub>LOAD</sub> = 20pF			20	ns
SCLK Fall to SDO Fall	t <sub>DOH</sub>	C <sub>LOAD</sub> = 0pF	2			ns
CSB Rise to SDO Hi-Z	t <sub>DOZ</sub>	Disable Time			20	ns
CSB Fall to SDO Fall	t <sub>DOE</sub>	Enable time	20			ns
FCLK External Sample Input	<b>f</b> FCLK	External Sample Reference Clock		32.768		kHz
FCLK Pulse Width High	<b>f</b> FCLKH	~50% duty cycle assumed		15.26		μs
FCLK Pulse Width Low	f <sub>FCLKL</sub>	~50% duty cycle assumed		15.26		μs


**Note 1:** Limits are 100% tested at T<sub>A</sub> = +25°C. Limits over the operating temperature range and relevant supply voltage range are guaranteed by design and characterization.

Note 2: Limit assumes that all user-programmable memory is programmed. If user programmable memory is left unprogrammed, currents can exceed the limit shown.

# Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health


### **Typical Operating Characteristics**

VDD\_ANA = VDD\_DIG = 1.8V, VLED = 3.3V, GND\_ANA = GND\_DIG = PGND = 0V,  $T_A = +25^{\circ}C$ , min/max are from  $T_A = -40^{\circ}C$  to +85°C, unless otherwise noted. (Note 2)

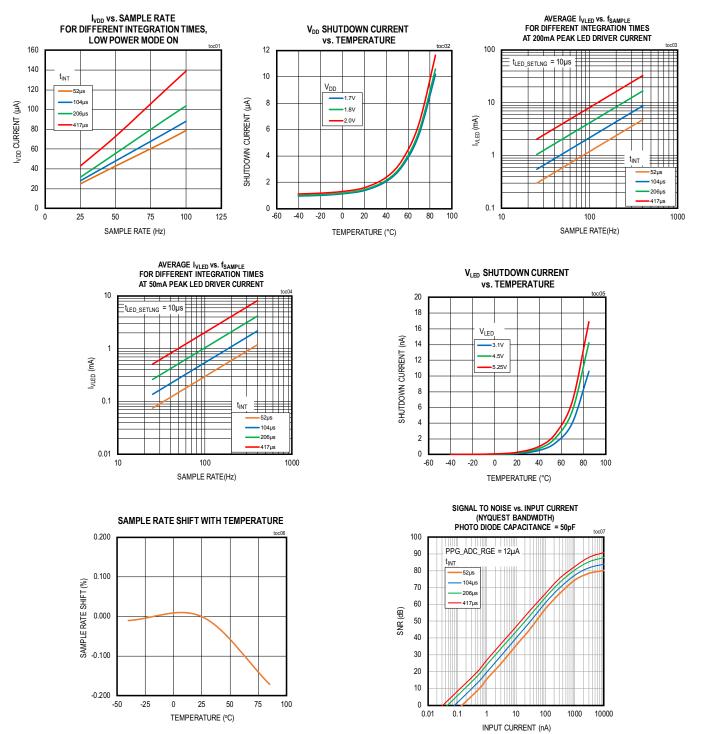

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

### **Bump Configurations**

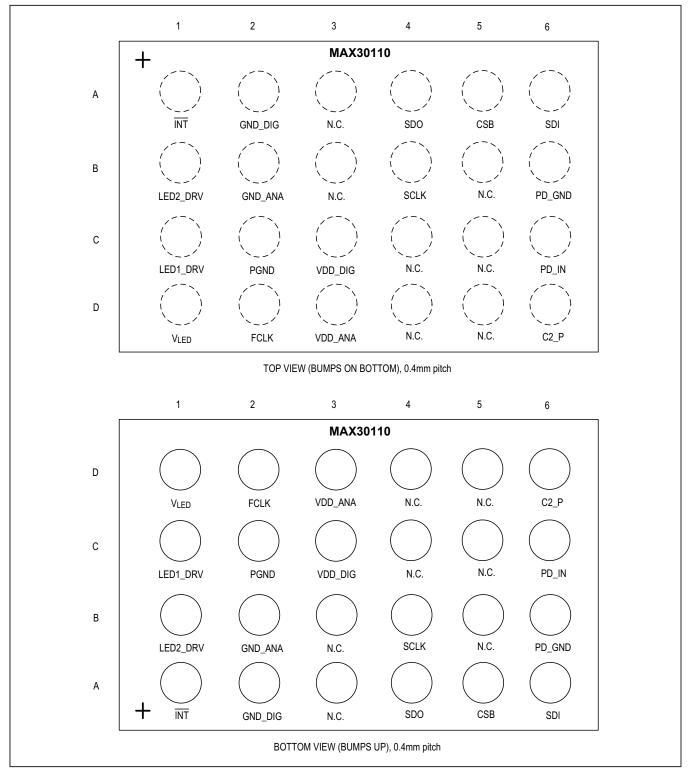

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

### **Bump Description**

PIN	NAME	FUNCTION
POWER		·
C3	VDD_DIG	Digital Logic Supply. Connect to externally-regulated supply. Suggest to connect to VDD_ANA.
A2	GND_DIG	Digital Logic and Digital Pad Return. Suggest to connect to common PCB ground.
D3	VDD_ANA	Analog Supply. Connect to externally-regulated supply. Bypass with a $0.1\mu$ F as close as possible to bump and a $10\mu$ F capacitor to GND_ANA.
B2	GND_ANA	Analog Power Return. Suggest to connect to common PCB ground.
D1	V <sub>LED</sub>	LED Power Supply Input. Connect to external voltage supply. Bypass with a 10µF capacitor to PGND.
C2	PGND	LED Power Return
CLOCK		·
D2	FCLK	Optional External Clock Input. Leave FCLK unconnected/floating, if external clock is not used.
SPI CONTROL I	NTERFACE	
A1	ĪNT	Interrupt. Programmable open-drain interrupt output signal pin (active-low).
A4	SDO	SPI Data Output
A5	CSB	SPI Chip Select
A6	SDI	SPI Data Input
B4	SCLK	SPI Clock
OPTICAL		
C6	PD_IN	Photodiode Cathode Input. Keep traces as short as possible, shield with PD_GND.
B6	PD_GND	Photodiode Anode. Connect to PCB GND plane only at PD_GND pin. Use as shield trace for PD_IN.
C1	LED_DRV1	LED Driver Output 1. Connect the LED cathode to LED_DRV1 output and its anode to the V <sub>LED</sub> supply.
B1	LED_DRV2	LED Driver Output 2. Connect the LED cathode to LED_DRV2 output and its anode to the V <sub>LED</sub> supply.
REFERENCE		·
D6	C2_P	Internal Reference Decoupling Point. Bypass with a 10µF capacitor to GND_ANA
N.C.		
A3, B3, B5, C4, C5, D4, D5	N.C.	No Connection. Internally connected, leave N.C. unconnected.

### Detailed Description

The MAX30110 is a complete optical pulse oximetry and heart-rate-detection, integrated, analog front-end readout circuit designed for the demanding requirements of mobile and wearable devices. Minimal external hardware components are necessary for integration into a mobile device. The MAX30110 is fully adjustable through software registers, with the digital output data being stored in a 32-samples FIFO within the IC.

#### **Optical Subsystem**

The optical subsystem in MAX30110 is composed of ambient light cancellation (ALC), a continuous-time, sigma-delta ADC, and proprietary discrete time filter. ALC incorporates a proprietary scheme to cancel ambient-light-generated photo diode current up to  $200\mu$ A, allowing the sensor to work in high ambient light conditions. The ADC has programmable full-scale ranges of between  $6\mu$ A and  $48\mu$ A. The internal ADC is a continuous-time oversampling sigma-delta converter with 19-bit resolution. The ADC output data rate can be programmed from 20sps (samples per second) to 3200sps. The MAX30110 includes a proprietary discrete time filter to reject 50Hz/60Hz interference and changing residual ambient light from the sensor measurements.

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

MAX30110 supports Dynamic Power-Down mode (Low Power mode) in which the power consumption is decreased between samples. This mode is only supported for sample rates 100sps and below. For more details on the power consumption at each sample rates, please refer to the <u>Electrical Characteristics</u> table.

#### **LED Driver**

The MAX30110 integrates two precision LED-drivercurrent DACs that modulate LED pulses for both SpO<sub>2</sub> and HR measurements. The LED current DACs have 8-bits of dynamic range with four programmable full-scale ranges of 50mA, 100mA, 150mA, and 200mA. The LED drivers are low-dropout current sources, allowing for low-noise, power-supply independent LED currents to be sourced at the lowest supply voltage possible; thus minimizing LED power consumption. The LED pulse width and the LED settling time can be programmed to allow the algorithms to optimize SpO<sub>2</sub> and HR accuracy at the lowest dynamic power consumption dictated by the application.

### **SPI Timing**

#### **Detailed SPI Timing**

The detailed SPI timing is illustrated in <u>Figure 1</u>. The timings indicated are all specified in the <u>Electrical Characteristics</u> table.

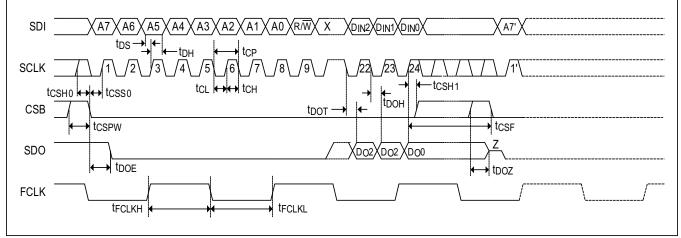


Figure 1. SPI Detailed Timing Diagram

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

## Single-Word SPI Register Read/Write Transaction

The MAX30110 interface is SPI/QSPI/Microwire/DSP compatible. The operation of the SPI interface is shown below. Data is strobed into the MAX30110 on the SCLK rising edge, while clocked-out on the SCLK falling edge. All single-word SPI read and write operations are performed in a 3-byte, 24-cycle SPI instruction framed by a CSB low interval. The content of the SPI operation consists of a one byte register address (A[7:0]), followed by a one-byte command word that defines the transaction as write or read, followed by a single-byte data word, either written to, or read from, the register location provided in the first byte.

Write mode operations will be executed on the 24th SCLK rising edge using the first three bytes of data available. In

write mode, any data supplied after the 24th SCLK rising edge will be ignored. Subsequent writes require CSB to deassert high and then assert low for the next write command. A rising CSB edge precede the 24th rising edge of SCLK by  $t_{CSA}$  (detailed SPI timing diagram), will result in the transaction being aborted.

Read mode operations will access the requested data on the 16th SCLK rising edge, and present the MSB of the requested data on the following SCLK falling edge, allowing the  $\mu$ C to latch the data MSB on the 17th SCLK rising edge. Configuration and status registers are available through normal mode readback sequences. FIFO reads must be performed with a burst mode FIFO read (see <u>SPI FIFO Burst Mode Read Transaction</u>). If more than 24 SCLK rising edges are provided in a normal read sequence, the excess edges will be ignored and the device will read back zeros.

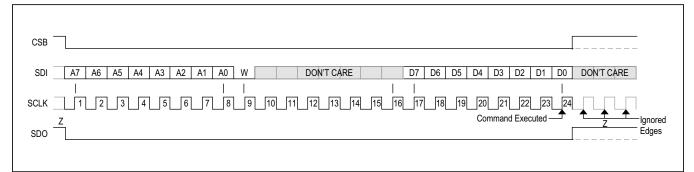


Figure 2: SPI Write Transaction Diagram

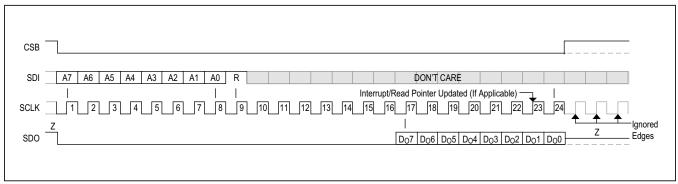


Figure 3. SPI Read Transaction Diagram

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### **SPI FIFO Burst Mode Read Transaction**

The MAX30110 provides a FIFO burst read mode to increase data transfer efficiency. The first 16 SCLK cycles operate exactly as described for the normal read mode, the first byte being the register address, the second being a read command. The subsequent SCLKs consist of FIFO data, 24 SCLKs per sample. All Samples in the FIFO should be read with a single FIFO burst read command.

Each FIFO sample consists of 3 bytes per sample and thus requires 24 SCLKs per sample to readout. The first byte (SCLK 16 to 23) consists of both the sub-range DAC value (upper 5 bits, left justified) then the MSBs of the corrected exposure sample (MSB, MSB-1 and MSB-2). The next byte (SCLK 24 to 31) consists of sample bits MSB-3 to MSB-19. The final byte of each sample (SCLK 32 to 40) consists of the sample LSB bits. The number of samples in the FIFO depends on the FIFO configuration and the channels enable. See the *FIFO Configuration* section for more details on the FIFO configuration and readout.

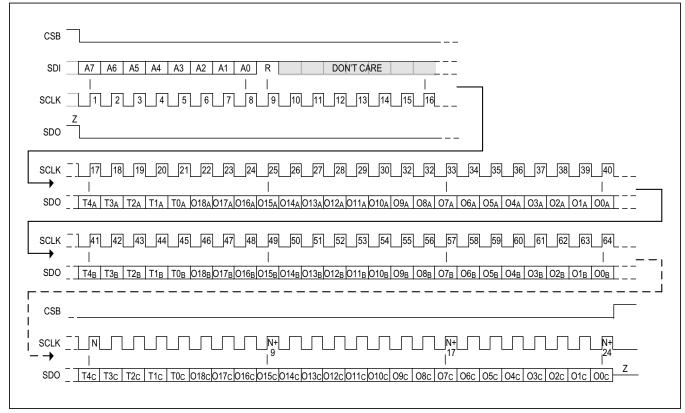


Figure 4. SPI FIFO Burst Mode Transaction Diagram

## Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### **FIFO Configuration**

The FIFO can hold up to 32 samples of data, with each sample comprised of up to 4 data Items (time slots). Each data item is 3 bytes. The content of each data item is programmed through register FD1 to FD4 (FIFO data control). These data items are ADC counts from the analog front-end of this device. The FIFO supports the following features:

- Maximum 32 samples (depth)
- Supports up to four data items in each sample
- FIFO roll-on full
- Different interrupt modes based on watermark

There are seven registers that control how the FIFO is configured and read out. These registers are described in Table 1 and Table 2.

FIFO Data Control (Address 0x09 and 0x0A)

The data format in the FIFO, as well as the sequencing of exposures, are controlled by the FIFO Data Control registers through FD1 through FD4. There are four FIFO data items available, each holding up to 32 samples. The exposure sequence cycles through the FIFO data bit fields, starting from FD1 to FD4. The first FIFO data field set to NONE (0000) ends the sequence.

#### Table 1. FIFO Information, Control and Configuration Registers

ADDRESS	REGISTER NAME	DEFAULT VALUE	B7	B6	B5	B4	B3	B2	B1	B0
0X04	FIFO Write Pointer	00	_	—	—	FIF	O_WI	R_PTR	[4:0]	
0X05	Overflow Counter	00	—	—	—	OV	F_CO	UNTEF	R[4:0]	
0X06	FIFO Read Pointer	00	_	—	—	FI	FO_RE	D_PTR	[4:0]	
0X07	FIFO Data Register	00		·	FIFO_DAT	A[7:0]				
0X08	FIFO Configuration	0F	—	FIFO_STAT_CLR	A_FULL_TYPE	FIFO_RO	FIF	O_A_I	=ULL[3	3:0]
0x09	FIFO Data Control 1	00		FD	02[3:0]			FD1	[3:0]	
0x0A	FIFO Data Control 2	00		FC	04[3:0]			FD3	[3:0]	

#### Table 2: Data Items Type for FIFO Control Registers

FDX[3:0]*	DATA TYPE	FIFO DATA CONTENT	NOTE
0000	NONE	_	_
0001	LED1	PPG_DATA[18:0]	MS bits should be masked
0010	LED2	PPG_DATA[18:0]	MS bits should be masked
0011	Reserved	_	_
0100	Reserved	_	_
0101	PILOT LED1	PPG_DATA[18:0]	MS bits should be masked
0110	Reserved	_	_
0111	Reserved	_	_
1000	Reserved	_	_
1001	Reserved	_	_
1010	Reserved	_	_
1011	Reserved	_	_
1100	DIRECT_AMBIENT	PPG_DATA[18:0]	MS bits should be masked
1101	LED1 and LED2	PPG_DATA[18:0]	MS bits should be masked
1110	Reserved	_	_
1111	Reserved	_	_

\* Note: In FDx, x is 1, 2, 3, or 4 for the corresponding FIFO bank.

#### Write Pointer (Register 0X04)

FIFO\_WR\_PTR[4:0] points to the FIFO location where the next sample will be written. This pointer advances for each sample pushed on to the FIFO by the internal conversion process. The write pointer is a 5-bit counter and will wrap around to count 0x00 on the next sample after count 0x1F.

#### Overflow Counter (Register 0X05)

OVF\_COUNTER[4:0] logs the number of samples lost if the FIFO is not read in a timely fashion. This counter holds at count value 0x1F. When a complete sample is popped from the FIFO (when the read pointer advances), and OVF\_COUNTER is reset to zero. This counter is essentially a debug tool. It should be read immediately before reading the FIFO in order to check if an overflow condition has occurred.

#### Read Pointer (Register 0X06)

FIFO\_RD\_PTR[4:0] points to the location from where the next sample from the FIFO will be read through the interface. This advances each time a sample is read from the FIFO. The read pointer can be both read and written to. This allows a sample to be reread from the FIFO if it has not already been overwritten. The read pointer is updated from a 5-bit counter and will wrap around to count 0x00 from count 0x1F.

#### FIFO Data (Register 0X07)

FIFO\_DATA[7:0] is a read-only register used to retrieve data from the FIFO. The format and data type of the data stored in the FIFO is determined by the FIFO data control register. Readout from the FIFO follows a progression defined by the FIFO data control register as well. This configuration is best illustrated by a few examples.

Assume it is desired to perform an  $SpO_2$  measurement simultaneously with monitoring the ambient level on the photodiode to adjust the IR and red LED intensity. To perform this measurement, config the following registers,

FIFO Data Control field

FD1[3:0] = 0x1	(LED1)
FD2[3:0] = 0x2	(LED2)
FD3[3:0] = 0xC	(DIRECT_AMBIENT)
FD4[3:0] = 0x0	(NONE)

#### **PPG** Configuration

PPG_ADC_RGE[1:0]	(Gain Range Control)
PPG_SR[3:0]	(Sample Rate Control)
PPG_TINT[1:0]	(Integration Time)

## Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### LED Pulse Amplitude

```
LED1_PA[7:0] (LED1 Current Pulse
Amplitude)
LED2_PA[7:0] (LED2 Current Pulse
Amplitude)
```

When done so the sample sequence and the data format in the FIFO will follow the following time/location sequence.

```
LED1 sample 1

LED2 sample 1

DIRECT_AMBIENT sample 1

LED1 sample 2

LED2 sample 2

DIRECT_AMBIENT sample 2

.

.

LED1 sample n

LED2 sample n

DIRECT AMBIENT sample n
```

where:

LED1 sample x = ambient light corrected photodiode ADC count exposure data from LED1 for the sample x

LED2 sample x = ambient light corrected photodiode ADC count exposure data from LED2 for the sample x

DIRECT\_AMBIENT sample x = direct ambient sample x

n is the number of samples in the FIFO, which can be up to 32 samples.

For a second example, assume it is desired to pulse LED1 and LED2 simultaneously while also monitoring the ambient level. In this case set the following registers,

#### FIFO Data Control field

FD1[3:0]	=	OxD	(LED1 & LED2)
FD2[3:0]	=	0xC	(DIRECT_AMBIENT)
FD3[3:0]	=	0x0	(NONE)
FD4[3:0]	=	0x0	(NONE)

#### The sequencing in the FIFO will then be,

```
LED1 and LED2 sample1
DIRECT_AMBIENT sample 1
LED1 and LED2 sample2
DIRECT_AMBIENT 2
.
.
LED1 and LED2 sample n
DIRECT AMBIENT n
```

#### where:

LED1 and LED2 sample x = ambient light corrected photodiode ADC count exposure data when both LED1 and LED2 are active simultaneuously

DIRECT\_AMBIENT sample x = direct ambient corrected sample x

The number of bytes of active data samples is given by: 3 x K x N

where:

K = the number of active sampled channels as defined in the FIFO\_Data\_Control register 0x09 and 0x0A

N = the number of active data samples in the FIFO

The number of active data samples in the FIFO is directly readable by subtracting the FIFO\_RD\_PTR[4:0] from the FIFO\_WR\_PTR[4:0], and taking wrap around of the pointers into consideration. It is typically controlled in the system by generating an interrupt on the INT line when the FIFO reaches a watermark level computed from the FIFO\_A\_FULL[3:0] field in the FIFO Configuration register (0x08). In this case, when the active data samples in the FIFO reach a level given by 32 - FIFO\_A\_FULL[3:0], an A\_FULL interrupt is generated.

## Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

To calculate the number of active samples when the  $\overline{\text{INT}}$  signal is asserted, execute the following pseudo-code:

```
read the OVF_COUNTER register
read the FIFO_WR_PTR register
if (OVF_COUNTER == 0) then //no
overflow occurred
if (FIFO_WR_PTR > FIFO_RD_PTR) then
NUM_AVAILABLE_SAMPLES = FIFO_WR_PTR
- FIFO_RD_PTR
else
NUM_AVAILABLE_SAMPLES = FIFO_WR_PTR
+ 32 - FIFO_RD_PTR
endif
```

else

```
NUM_AVAILABLE_SAMPLES = 32 // over-
flow occurred and data has been lost
```

#### endif

FIFO data format depends on the data type being stored. Optical data, whether ambient-corrected LED exposure, ambient-corrected proximity, or direct ambient-sampled data is as shown in <u>Table 3</u>. The ADC data is left-justified at FIFO\_DATA[18] and the MSBs (FIFO\_DATA[23:18]) are don't care and should be masked as shown in Table 3. In other words, the MSB bit of the ADC data is always in the bit 18 position.

The ADC resolution is set by the PPG\_LED\_PW[1:0] in the PPG Configuration 1 Register. This field generates an ADC resolution of 19, 18, 17, or 16 bits and is tied to the selected integration time of 417 $\mu$ s, 206 $\mu$ s, 104 $\mu$ s, or 52 $\mu$ s, respectively. In lower ADC resolutions, the unused LSBs should be masked.

			FIFO DATA FORMAT (FIFO_DATA[23:0])																						
Integration	ADC											A	DC	Valu	е										
Pulse Width	Res	F23	F22	F21	F20	F19	F18	F17	F16	F15	F14	F13	F12	F11	F10	F9	F8	F7	F6	F5	F4	F3	F2	F1	F0
417µs	19-bits	Х	Х	Х	Х	Х	018	017	016	015	014	013	012	011	010	09	08	07	06	05	04	03	02	01	00
206µs	18-bits	Х	Х	Х	Х	Х	018	017	016	015	014	013	012	011	010	09	08	07	06	05	04	03	02	01	X
104µs	17-bits	Х	Х	Х	X	Х	018	017	016	015	014	013	012	011	010	09	08	07	06	05	04	03	02	X	X
52µs	16-bits	Х	Х	Х	Х	Х	018	017	016	015	014	013	012	011	010	09	08	07	06	05	04	03	Х	Х	X

#### Table 3. Integration Pulse Width, Resulting ADC Resolution, and FIFO Data Format

#### FIFO Almost Full (Watermark)

The FIFO\_A\_FULL[3:0] register in the FIFO\_Configuration register (0x08) determines when the A\_FULL bit in the Interrupt\_Status 1 register (0x00) gets asserted. The FIFO is almost full when it has 32 minus FIFO\_A\_FULL[3:0] samples. Then, if A\_FULL\_EN mask bit in the Interrupt\_Enable 1 register (0x02) is set, the A\_FULL bit in the Interrupt Status 1 will be set and routed to the INT pin on the MAX30110 interface. This condition prompts the Application Processor to read samples from the FIFO before it gets filled. The A\_FULL bit is cleared and INT is deasserted when the status register is read, or when the FIFO\_DATA register (0x07) is read and FIFO\_STAT\_CLR (0x08) bit is set.

When the application processor receives an interrupt, there are at least 32 minus FIFO\_A\_FULL[3:0] samples available in the FIFO. It is not necessary to read the FIFO\_WR\_PTR and FIFO\_RD\_PTR registers. The Application Processor may read all the available samples in the FIFO, or only a portion of it. At high sample rates, it is recommended that only a portion of the available samples are read on an A\_FULL interrupt, to ensure that FIFO reading does not happen when the next sample conversion is in progress. The remaining samples will be read on the next interrupt.

If the A\_FULL interrupt is not enabled, the Application Processor has to read the FIFO in polling mode. In this mode the Application Processor has to read the FIFO\_ WR\_PTR and FIFO\_RD\_PTR registers to calculate the number of samples available in the FIFO, and then decide how many samples to read. However, polling mode is not recommended, because in this mode an interface transaction will inevitably overlap an optical sample, potentially adding noise to the optical data. Because of this concern, the interface transaction should occur during the dead time between optical samples to avoid adding additional noise.

#### FIFO\_RO (FIFO Rollover)

The FIFO\_RO bit in the FIFO\_Configuration register (0x08) determines whether samples get pushed on to the FIFO when it is full. If push is enabled when FIFO is full, old samples are lost. If FIFO\_RO is not set, the new sample is dropped and the FIFO is not updated.

#### A\_FULL\_TYPE

The A\_FULL\_TYPE bit defines the behavior of the A\_FULL interrupt. If the A\_FULL\_TYPE bit is set low, the A\_FULL interrupt gets asserted when the A\_FULL condition is detected and cleared by status register read, but reasserts for every sample if the A\_FULL condition persists.

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

If A\_FULL\_TYPE bit is set high, the A\_FULL interrupt gets asserted only when the A\_FULL condition is detected. The interrupt gets cleared on status register read, and does not re-assert for every sample until a new A\_FULL condition is detected.

#### FIFO\_STAT\_CLR

The FIFO\_STAT\_CLR bit defines whether the A-FULL interrupt should get cleared by FIFO\_DATA register read. If FIFO\_STAT\_CLR is set low, A\_FULL and DATA\_RDY interrupts do not get cleared by FIFO\_DATA register read but get cleared by status register read. If FIFO\_STAT\_CLR is set high, A\_FULL and DATA\_RDY interrupts get cleared by a FIFO\_DATA register read or a status register read.

#### **Optical Timing**

The AFE can be configured to make a variety of measurements which involves the following options:

- LED1
- LED2
- LED1 + LED2
- Direct Ambient Measurement

For more details on the available modes, please refer to *FIFO Configuration* section.

The "LED Ambient Sample" is integrated without turning on the LED, while "LED Exposure Sample" is integrated with LED illumination driven by the on-chip LED driver. Each "LED Exposure Sample" output is then compensated by the "LED Ambient Sample" at the front-end before the ADC conversion. The final FIFO exposure value for each LED mode represents an ambient corrected LED exposure signal.

The controller is also configurable to measure direct ambient level for every exposure sample. The direct ambient measurement can be used to adjust the LED drive level to compensate for increased noise levels when high interfering ambient signals are present.

The following optical timing diagrams illustrate the possible measurement configurations.

## Sequential LED1 and LED2 Pulsing with Direct Ambient Sampling

The optical timing diagram in Figure 5 illustrates the optical timing when both LED1 and LED2 are enabled to pulse sequentially followed by a direct ambient measurement. This timing mode is an example of when measuring SpO<sub>2</sub> with IR and red LEDs. The converted values of the optical measurements made by each LED followed by the converted direct ambient value will appear successively in the FIFO.

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

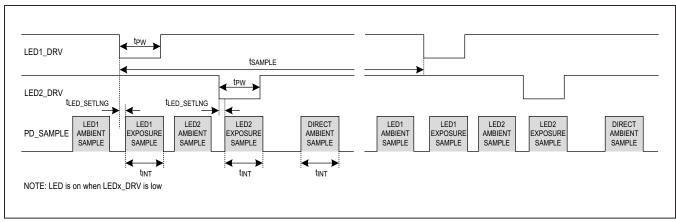


Figure 5. Timing for LED1 and LED2 Firing with Direct Ambient Sampling

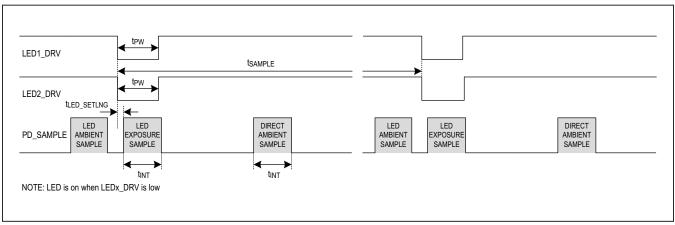


Figure 6: Timing for Dual LED Pulsing with Direct Ambient Sampling

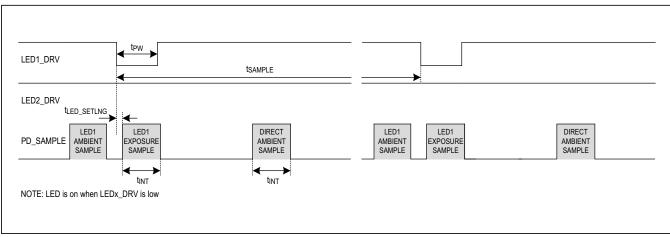


Figure 7: Timing for LED1 Pulsing with Direct Ambient Sampling

## Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### **Dual LED Pulsing with Direct Ambient Sampling**

The optical timing diagram in Figure 6 represents both LED1 and LED2 pulsing simultaneously with direct ambient sampling enabled. This timing mode would be used when heart rate is being measured with two green LEDs. In this mode, a single optical sampled value followed by the ambient sampled value will appear in successive the FIFO locations.

#### LED1 Pulsing with Direct Ambient Sampling

The optical timing diagram in Figure 7 represents only LED1 pulsing during the data sampling time with direct ambient sampling enabled. This timing mode would be used when heart rate is being measured with a single green LED. In this mode a single optical sampled value followed by the ambient sampled value will appear successively in the FIFO.

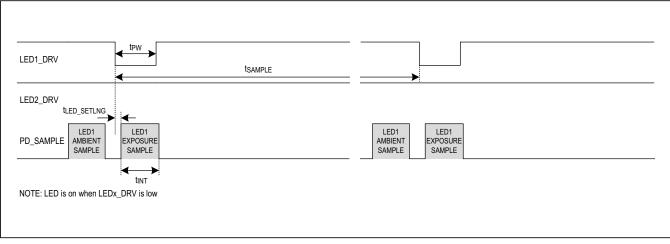


Figure 8: Timing for LED1 Pulsing with No Ambient Sampling

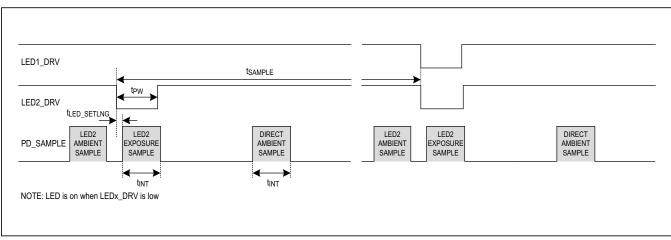


Figure 9: Timing for LED2 Pulsing with Direct Ambient Sampling

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### LED1 Pulsing with No Ambient Sampling

The optical timing diagram in Figure 8 represents only LED1 pulsing during the data sampling time with no direct ambient sampling enabled. This timing mode would be used when heart rate is being measured with a single green LED. In this mode a single optical sampled value will appear successively in the FIFO.

#### LED2 Pulsing with Direct Ambient Sampling

The optical timing diagram in Figure 9 represents only LED2 firing during the data sampling time with direct

ambient sampling enabled. This timing mode would be used when heart rate is being measured with a single green LED. In this mode a single optical sampled value followed by the ambient sampled value will appear successively in the FIFO.

#### LED2 Pulsing with No Ambient Sampling

The optical timing diagram in Figure 10 represents only LED2 firing during the data sampling time with no direct ambient sampling enabled. This timing mode would be used when heart rate being measured with a single

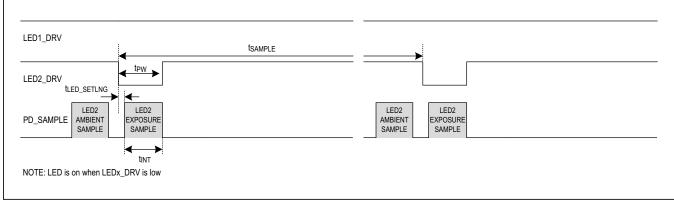


Figure 10: Timing for LED2 Pulsing with No Ambient Sampling

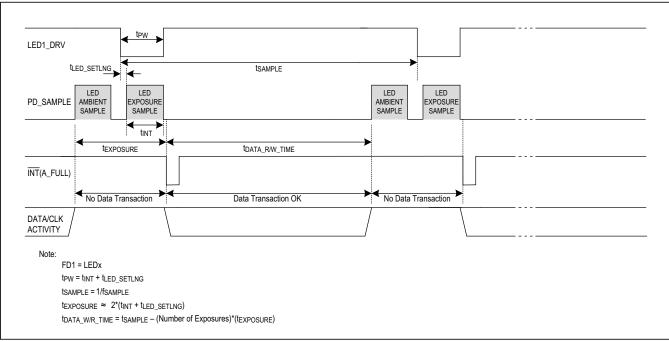


Figure 11. Readout Window for FIFO Read

Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

green LED. In this mode, a single optical sampled value will appear successively in the FIFO.

#### **FIFO Data Read Synchronization**

Activity on the interface pins can bounce the on-chip GND potential, disturbing an optical sample, resulting in higher noise. Therefore, during a FIFO read event, it is recommended to time the FIFO read to occur between optical samples. This can be accomplished by reading the FIFO when the FIFO\_A\_FULL interrupt occurs and then limit the number of samples in the FIFO to those that can be read out during the time between samples. Figure 11 illustrates how to place this read relative to the FIFO\_A\_FULL interrupt and the chosen sample rate, integration pulse width and LED settling time.

#### **Proximity Function**

The MAX30110 features proximity mode, which could significantly reduce energy consumption and extend battery life. In proximity mode, LED1 is pulsing at a lower current. When an object is present, the ADC count will exceed the preset threshold (PROX\_INT\_THRESH) and trigger the interrupt (PROX\_INT). This functionality is only available when the FD1 timing slot is assigned to LED1. To use this function, it is necessary to set four register/bit fields correctly. These variables are the normal state LED current on LED1, LED1\_PA (0x11), the proximity LED current, LED\_PILOT\_PA (0x15), the threshold code, PROX\_INT\_THRESH (0x10) and the proximity mode enable bit (Interrupt Enable1 (0x02, bit 4). Note that the threshold value is the code in register PROX\_INT\_THRESH (0x10) times 2048.

If the proximity feature is enabled, it will be switched to proximity mode when the LED1 ADC count drops below the threshold code, PROX\_INT\_THRESH(0x10). At this point, the LED1 drive current will be set from LED1\_PA(0x11) to LED\_PILOT\_PA(0x15). Note that the threshold value is the code in register PROX\_INT\_ THRESH (0x10) times 2048. This drop in LED current should generate sufficient hysteresis to guarantee that the MAX30110 does not toggle back and forth between proximity and normal mode operation.

Once in proximity mode, the MAX30110 will return to normal operating mode when the ADC count generated by the current programmed into the LED\_PILOT\_PA (0x15) register passes above the threshold in the PROX\_INT\_THRESH (0x10) register. When this occurs the LED1 current will increase to the value assigned in LED1\_PA (0x11) register, again providing sufficient hysteresis to guarantee a clean transition. Note that the threshold value is the code in register PROX\_INT\_THRESH (0x10) times 2048.

It is necessary to experiment with the specific optical geometry when configuring the proximity function. As a means of a starting point of this experimental work, it is recommended that the LED\_PILOT\_PA (0x15) register be set to about 1/10th the value of the LED1\_PA (0x11) register. It is also recommended that the PROX\_INT\_THRESH (0x10) be set to roughly mid-way between the output code produced by the values of LED1\_PA (0x11) and LED\_PILOT\_PA (0x15) when the optical device is correctly mounted to a subject.

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

### **Register Map**

### User Register Map

ADDRESS	NAME	MSB							LSB
STATUS									
0x00	Interrupt Status 1[7:0]	A_FULL	PPG_RDY	ALC_OVF	PROX_INT	LED_ COMPB	_	_	PWR_RDY
0x01	Interrupt Status 2[7:0]	VDD_OOR	-	-	-	_	_	_	_
0x02	Interrupt Enable 1[7:0]	A_FULL_ EN	PPG_ RDY_EN	ALC_OVF_ EN	PROX_ INT_EN	LED_ COMPB_ EN	-	_	-
0x03	Interrupt Enable 2[7:0]	VDD_ OOR_EN	-	-	-	-	-	_	-
FIFO									
0x04	FIFO Write Pointer[7:0]	-	-	-	FIFO_WR_PTR[4:0]				
0x05	Overflow Counter[7:0]	-	-	-	OVF_COUNTER[4:0]				
0x06	FIFO Read Pointer[7:0]	-	-	_	FIFO_RD_PTR[4:0]				
0x07	FIFO Data Register[7:0]				FIFO_D	ATA[7:0]			
0x08	FIFO Configuration[7:0]	_	FIFO_ STAT_CLR	A_FULL_ TYPE	FIFO_RO		FIFO_A_I	FULL[3:0]	

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

### **User Register Map continued**

	CONTROL								
0x09	FIFO Data Control Reg- ister 1[7:0]		FD2	2[3:0]			FD1	[3:0]	
0x0A	FIFO Data Control Reg- ister 2[7:0]		FD4[3:0] FD3[3:0]						
SYSTEM C	SYSTEM CONTROL								
0x0D	System Control[7:0]	_	_	_	FCLK_ CTRL	LP_ MODE	FIFO_EN	SHDN	RESET
PPG CONF	PPG CONFIGURATION								
0x0E	PPG Configuration 1[7:0]	PPG_ADC_ PPG_SR[3:0] PPG_TINT[1:0]				INT[1:0]			
0x0F	PPG Configuration 2[7:0]	_	-	– – LED_SETLNG[1:0] SMP_AVE				MP_AVE[2:	0]
0x10	Prox Interrupt Threshold[7:0]			P	ROX_INT_	THRESH[7:	0]		
LED PULS	EAMPLITUDE								
0x11	LED1 PA[7:0]				LED1_	PA[7:0]			
0x12	LED2 PA[7:0]		LED2_PA[7:0]						
0x14	LED Range[7:0]	– – – – LED2_RGE[1:0] LED1_RGE[1:0]							
0x15	LED PILOT PA[7:0]	PILOT_PA[7:0]							
PART ID		*							
0xFF	Part ID[7:0]				PART	ID[7:0]			

#### Interrupt Status 1 (0x00)

BIT	7	6	5	4	3	2	1	0
Field	A_FULL	PPG_RDY	ALC_OVF	PROX_INT	LED_ COMPB	-	-	PWR_RDY
Reset	0x0	0x0	0x0	0x0	0x0	-	-	0x0
Access Type	Read Only	-	-	Read Only				

#### A\_FULL

VALUE	ENUMERATION	DECODE
0	OFF	Normal Operation
1	ON	Indicates that the FIFO buffer will overflow the threshold set by FIFO_A_FULL[3:0] on the next sample. This bit is cleared when the Interrupt Status 1 Register is read. It is also cleared when FIFO_DATA register is read, if A_FULL_CLR = 1

#### PPG\_RDY

VALUE	ENUMERATION	DECODE
0	OFF	Normal Operation
1	ON	In LED1 and/or LED2 modes, this interrupt triggers if PPG_RDY_EN is set to 1, when there is a new sample in the data FIFO. The interrupt is cleared by reading the Interrupt Status 1 register (0x00). It is also cleared by reading the FIFO_DATA register if A_FULL_CLR is set to 1.

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### ALC\_OVF

VALUE	ENUMERATION	DECODE
0	OFF	Normal Operation
1	ON	This interrupt triggers when the ambient light cancellation function of the PPG photodiode has reached its maximum limit due to overflow, and therefore, ambient light is affecting the output of the ADC. The interrupt is cleared by reading the Interrupt Status 1 register (0x00).

#### PROX\_INT

VALUE	ENUMERATION	DECODE
0	OFF	Normal Operation
1	ON	Indicates that the proximity threshold has been crossed when in proximity mode. If PROX_INT is masked then the prox mode is disabled and the selected PPG mode begins immediately. This bit is cleared when the Interrupt Status 1 Register is read.

#### LED\_COMPB

LED1 is not voltage compliant meaning that VLED1 < 160mV while LED1 pulses. At the end of each sample, if the LED1 Driver is not voltage compliant, LED\_COMPB interrupt is asserted if LED\_COMPB\_EN is set to 1. The interrupt is cleared when the status register is read.

VALUE	ENUMERATION DECODE					
0	COMPLIANT	LED1 driver voltage is in compliance				
1	NOT_COMPLIANT	LED1 driver voltage is not in compliance				

#### PWR\_RDY

VALUE	ENUMERATION	DECODE
0	OFF	Normal Operation
1	ON	Indicates that VDD_DIG went below the 1.55V under voltage lockout threshold. This bit is also set upon a soft reset. This bit is cleared when Interrupt Status 1 Register is read.

#### Interrupt Status 2 (0x01)

BIT	7	6	5	4	3	2	1	0
Field	VDD_OOR	-	-	-	-	-	-	-
Reset	0x0	_	-	_	_	-	-	-
Access Type	Read Only	-	-	-	-	-	-	-

#### VDD\_OOR

This is an indicator to check if the VDD\_ANA supply voltage is within supported range.

VALUE	ENUMERATION	DECODE
0	OFF	VDD_ANA within supported range.
1	ON	Indicates that VDD_ANA is greater than 2.05V or less than 1.65V. This bit is automatically cleared when the Interrupt Status 2 register is read. The detection circuitry has a 10ms delay time, and will continue to trigger as long as the VDD_ANA is out of range.

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### Interrupt Enable 1 (0x02)

BIT	7	6	5	4	3	2	1	0
Field	A_FULL_EN	PPG_RDY_ EN	ALC_OVF_ EN	PROX_INT_ EN	LED_ COMPB_EN	-	-	_
Reset	0x0	0x0	0x0	0x0	0x0	-	-	-
Access Type	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read	-	-	-

#### A\_FULL\_EN

VALUE	ENUMERATION	DECODE					
0	OFF	A_FULL interrupt is disabled					
1	ON	A_FULL interrupt in enabled					

#### PPG\_RDY\_EN

V	/ALUE	ENUMERATION	DECODE
	0	OFF	PPG_RDY interrupt is disabled
	1	ON	PPG_RDY interrupt is enabled.

#### ALC\_OVF\_EN

VALUE	ENUMERATION	DECODE
0	OFF	ALC_OVF interrupt is disabled
1	ON	ALC_OVF interrupt in enabled

#### PROX\_INT\_EN

When this is enabled, program LED1 into FD1 in FIFO Data Control register 1. LED1 must be used for proximity detection. If the ADC reading for this exposure is below 2048 times the threshold programmed in PROX\_INT\_THRESH register, the device is in proximity mode, otherwise it is in normal mode.

When the device is in proximity mode, the device starts data acquisition using only one exposure of LED1 and the LED current programmed in PILOT\_PA register.

When the device is in normal mode, the device starts data acquisition using all the exposures programmed in the FIFO Data Control registers and appropriate LED currents.

When PROX\_INT\_EN is programmed to 1, PROX\_INT interrupt is asserted when the devices enters normal mode (exit Proximity mode).

VALUE	ENUMERATION	DECODE
0	OFF	PROX_INT interrupt is disabled
1	ON	PROX_INT interrupt in enabled

#### LED\_COMPB\_EN

VALUE	ENUMERATION	DECODE
0	DISABLE	LED1 driver voltage compliance interrupt is disabled
1	ENABLE	LED1 driver voltage compliance interrupt is enabled

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### Interrupt Enable 2 (0x03)

BIT	7	6	5	4	3	2	1	0
Field	VDD_OOR_ EN	-	-	-	-	-	-	-
Reset	0x0	_	-	_	-	-	_	-
Access Type	Write, Read	_	-	_	-	_	_	-

#### VDD\_OOR\_EN

VALUE	ENUMERATION	DECODE					
0	OFF	Disables the VDD_OVR interrupt					
1	ON	Enables the VDD_OVR interrupt					

#### FIFO Write Pointer (0x04)

BIT	7	6	5	4	3	2	1	0	
Field	-	-	-	FIFO_WR_PTR[4:0]					
Reset	_	_	_	0x00					
Access Type	-	_	-	Write, Read					

#### FIFO\_WR\_PTR

This points to the location where the next sample will be written. This pointer advances for each sample pushed on to the FIFO. Refer to *FIFO Configuration* for details.

#### **Overflow Counter (0x05)**

BIT	7	6	5	4	3	2	1	0	
Field	_	_	-	OVF_COUNTER[4:0]					
Reset	-	-	-	0x00					
Access Type	_	_	_	Read Only					

#### **OVF\_COUNTER**

When FIFO is full any new samples will result in new or old samples getting lost depending on FIFO\_RO. OVF\_COUNTER counts the number of samples lost. It saturates at 0x1F. Refer to *FIFO Configuration* for details.

#### FIFO Read Pointer (0x06)

BIT	7	6	5	4	3	2	1	0	
Field	_	_	-	FIFO_RD_PTR[4:0]					
Reset	_	_	_		0x00				
Access Type	-	-	-	Write, Read					

#### FIFO\_RD\_PTR

The FIFO Read Pointer points to the location from where the processor gets the next sample from the FIFO. This advances each time a sample is popped from the FIFO. The processor can also write to this pointer after reading the samples. This allows rereading (or retrying) samples from the FIFO Refer to *FIFO Configuration* for details.

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### FIFO Data Register (0x07)

BIT	7	6	5	4	3	2	1	0	
Field		FIFO_DATA[7:0]							
Reset		0x00							
Access Type				Write,	Read				

#### FIFO\_DATA

This is a read-only register and is used to get data from the FIFO. Refer to FIFO Configuration for details.

#### FIFO Configuration (0x08)

BIT	7	6	5	4	3	2	1	0
Field	_	FIFO_ STAT_CLR	A_FULL_ TYPE	FIFO_RO		FIFO_A_I	FULL[3:0]	
Reset	-	0x0	0x0	0x0	0xF			
Access Type	-	Write, Read	Write, Read	Write, Read		Write,	Read	

#### FIFO\_STAT\_CLR

This defines whether the A\_FULL interrupt should get cleared by FIFO\_DATA register read.

VALUE	ENUMERATION	DECODE
0	RD_DATA_NOCLR	A_FULL interrupt does not get cleared by FIFO_DATA register read. It gets cleared by status register read.
1	RD_DATA_CLR	A_FULL interrupt gets cleared by FIFO_DATA register read or status register read.

#### A\_FULL\_TYPE

This defines the behavior of the A\_FULL interrupt.

VALUE	ENUMERATION	DECODE
0	AFULL_RPT	A_FULL interrupt gets asserted when the a_full condition is detected. It is cleared by status register read, but re-asserts for every sample if the a_full condition persists.
1	AFULL_ONCE	A_FULL interrupt gets asserted only when the a_full condition is detected. The interrupt gets cleared on status register read, and does not re-assert for every sample until a new a-full condition is detected.

#### FIFO\_RO

Push enable when FIFO is full:

This bit controls the behavior of the FIFO when the FIFO becomes completely filled with data.

Push to FIFO is enabled when FIFO is full if FIFO\_RO = 1. In this mode old samples are overwritten. FIFO\_WR\_PTR increments for each sample. FIFO\_RD\_PTR also increments for each sample pushed to the FIFO.

Push to FIFO is disabled when FIFO is full if FIFO\_RO = 0. In this mode old samples are not overwritten and new samples are discarded . FIFO\_WR\_PTR does not increment for each sample after the FIFO is full.

#### When the device is in proximity mode, push to FIFO is enabled independent of FIFO\_RO setting.

VALUE	ENUMERATION	DECODE			
0	OFF	The FIFO stops on full.			
1	ON	The FIFO automatically rolls over on full.			

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### FIFO\_A\_FULL

These bits indicate how many unread samples are in the FIFO when the interrupt is asserted. For example, if set to 0xF, the interrupt triggers when there are 17 data samples in the FIFO (15 empty spaces lefts).

FIFO_A_FULL[3:0]	FREE SPACES AT INTERRUPT	# OF SAMPLES IN FIFO
0000	0	32
0001	1	31
0010	2	30
0011	3	29
1110	14	18
1111	15	17

#### FIFO Data Control Register 1 (0x09)

BIT	7	6	5	4	3	2	1	0	
Field		FD2	[3:0]		FD1[3:0]				
Reset		0>	<b>(</b> 0		0x0				
Access Type		Write,	Read			Write,	Read		

#### FD2

These bits set the data type for Data Item 2 of the FIFO. See *FIFO Configuration* for mode information.

#### FD1

These bits set the data type for Data Item 1 of the FIFO. See *FIFO Configuration* for mode information.

#### FIFO Data Control Register 2 (0x0A)

BIT	7	6	5	4	3	2	1	0	
Field		FD4	[3:0]		FD3[3:0]				
Reset		0>	(0		0x0				
Access Type	Write, Read Write, Read					Read			

#### FD4

These bits set the data type for Data Item 4 of the FIFO. See *FIFO Configuration* for mode information.

#### FD3

These bits set the data type for Data Item 3 of the FIFO. See *FIFO Configuration* for mode information.

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### System Control (0x0D)

BIT	7	6	5	4	3	2	1	0
Field	-	-	-	FCLK_ CTRL	LP_MODE	FIFO_EN	SHDN	RESET
Reset	_	_	-	0x0	0x0	0x0	0x0	0x0
Access Type	-	-	-	Write, Read	Write, Read	Write, Read	Write, Read	Write, Read

#### FCLK\_CTRL

FCLK pin can be used for external 32kHz clock input when the PPG sample rate is 100sps and below. Used to synchronous multiple devices into one Clock domain.

VALUE	ENUMERATION	DECODE
0x0		FCLK pin is not used. Use internal 32KHz clock for PPG sample rates 100Hz and below.
0x1		Use external 32KHz clock at FCLK input for PPG sample rates 100Hz and below.

#### LP\_MODE

In low power mode, the sensor can be dynamically powered down between samples to conserve power. This dynamic power-down mode option only supports samples rates of 100Hz and below.

VALUE	ENUMERATION	DECODE
0	OFF	Dynamic power-down is disabled
1	ON	Dynamic power down is enabled. The device automatically enters low power mode between samples for samples rates 100Hz and below. This mode is not available for higher sample rates.

#### FIFO\_EN

VALUE	ENUMERATION	DECODE
0	OFF	Push to FIFO is disabled, but the read and write pointers and the data in the FIFO are all held at their values before FIFO_EN is set to 0. The conversion and LED drivers are active until FD1 is set to NONE
1	ON	The FIFO is enabled. When this bit is set the FIFO is flushed of all old data and the new samples start loading from pointer zero. Setting this bit starts conversions and LED drivers enable according to the FDx settings.

#### SHDN

The part can be put into a power-save mode by setting this bit to one. While in power-save mode, all registers retain their values, and write/read operations function as normal. All interrupts are cleared to zero in this mode.

VALUE	ENUMERATION	DECODE
0	OFF	The part is in normal operation. No action taken.
1	ON	The part can be put into a power-save mode by writing a '1' to this bit. While in this mode all registers remain accessible and retain their data. ADC conversion data contained in the registers are previous values. Writeable registers also remain accessible in shutdown. All interrupts are cleared. In this mode the oscillator is shutdown and the part draws minimum current. If this bit is asserted during an active conversion then the conversion completes before the part shuts down.

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### RESET

VALUE	ENUMERATION	DECODE
0	OFF	The part is in normal operation. No action taken.
1	ON	The part undergoes a forced power-on-reset sequence. All configuration, threshold and data registers are reset to their power-on-state. This bit then automatically becomes '0' after the reset sequence is completed.

#### PPG Configuration 1 (0x0E)

BIT	7	6	5	4	3	2	1	0	
Field	PPG_ADC	PPG_ADC_RGE[1:0]		PPG_SR[3:0]			PPG_TINT[1:0]		
Reset	0x0		0x0			0>	<b>(</b> 0		
Access Type	Write,	Read	Write, Read			Write,	Read		

#### PPG\_ADC\_RGE

These bits set the ADC range of the photodiode sensor as shown in the table below.

PPG_ADC_RGE[1:0]	LSB (pA)	FULL SCALE (µA)
00	11.4	6
01	22.9	12
10	45.8	24
11	91.6	48

#### PPG\_SR

These bits set the effective sampling rate of the PPG sensor as shown in the table below.

In Dual Pulse mode there are two pulses per sample, and the pulses are spaced to produce an additional 20dB of ambient rejection for indoor lighting cases (100Hz or 120Hz rejection).

If the sample rate, integration time, and number of Data Item are set to an invalid combination, the highest available sample rate will be automatically set for the integration and number of exposure setting. The user can read this register to confirm the sample rate.

PPG_SR[3:0]	f <sub>SAMPLE</sub> (SPS)	DUAL-PULSE MODE
0000	20	No
0001	25	No
0010	50	No
0011	84	No
0100	100	No
0101	200	No
0110	400	No
0111	800	No
1000	1000	No
1001	1600	No
1010	3200	No
1011	20	Yes
1100	25	Yes
1101	50	Yes
1110	84	Yes
1111	100	Yes

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

NUMBER OF DATA ITEM PER SAMPLE	PPG_TINT = 0 (50μs)	PPG_TINT = 1 (100µs)	PPG_TINT = 2 (200µs)	PPG_TINT = 3 (400µs)	
1 DATA ITEM, SINGLE PULSE MODE	3200		1600	1000	
2 DATA ITEMS, SINGLE PULSE MODE	1600		800	400	
3 DATA ITEMS, SINGLE PULSE MODE	· 1000		400	200	
4 DATA ITEMS, SINGLE PULSE MODE	1000	400 400		200	
1 DATA ITEM, DUAL PULSE MODE	100	100	100	100	
2 DATA ITEMS, DUAL PULSE MODE	100 for LP_MODE = 0, 50 for LP_MODE = 1	100 for LP_MODE = 0;         84 for LP_MODE = 0;           50 for LP_MODE = 1         50 for LP_MODE = 1		84 for LP_MODE = 0; 50 for LP_MODE = 1	
3 DATA ITEMS, DUAL PULSE MODE	50	50	50	50	
4 DATA ITEMS, DUAL PULSE MODE50 for LP_MODE = 0; 25 for LP_MODE = 1		50 for LP_MODE = 0; 25 for LP_MODE = 1	25	25	

See the following table for the maximum sample rates supported for all the integration time and number of Data Items.

#### **PPG\_TINT**

These bits set the integration time of PPG ADC as well as the pulse width of the LEDS as shown in the table below. t<sub>LED SETLNG</sub> is the delay programmed in the LED\_SETLNG[1:0] register.

PPG_TINT[1:0]	t <sub>PW</sub> , LED PULSE WIDTH (μs)	t <sub>INT</sub> , INTEGRATION TIME (μs)	RESOLUTION BITS
00	52 + t <sub>LED_SETLNG</sub>	52	16
01	104 + t <sub>LED_SETLNG</sub>	104	17
10	206 + t <sub>LED_SETLNG</sub>	206	18
11	417 + t <sub>LED_SETLNG</sub>	417	19

#### PPG Configuration 2 (0x0F)

BIT	7	6	5	4	3	2	1	0		
Field	_	_	-	LED_SETLNG[1:0]		SMP_AVE[2:0]				
Reset	-	_	_	0x3		0x3 0x0				
Access Type	_	_	-	Write, Read		Write, Read			Write, Read	

#### LED\_SETLNG

Delay from rising edge of LED to start of ADC integration. This allows for the LED current to settle before the start of ADC integration.

LED_SETLNG[1:0]	DELAY t <sub>LED_SETLNG</sub> (ms)
00	2.5
01	5.0
10	10.0
11	20.0

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### SMP\_AVE

Adjacent samples (in each individual channel) can be internally averaged to reduce the amount of data throughput.

These bits set the number of samples that are averaged on chip before being written to the FIFO. The effective output sample rate is the PPG\_SR rate divided by the SMP\_AVE value.

SMP_AVE[2:0]	SAMPLE AVERAGE
000	1 (no averaging)
001	2
010	4
011	8
100	16
101	32
110	32
111	32

#### Prox Interrupt Threshold (0x10)

BIT	7	6	5	4	3	2	1	0	
Field	PROX_INT_THRESH[7:0]								
Reset		0x00							
Access Type				Write,	Read				

#### PROX\_INT\_THRESH

This register sets the LED1 ADC count value that will trigger the transition between proximity mode to normal mode. The threshold is defined as the 8 MSB bits of the ADC count. For example, if PROX\_INT\_THRESH[7:0] = 0x01, then an ADC value of 2048 (decimal) or higher triggers the PROX interrupt. If PROX\_INT\_THRESH[7:0] = 0xFF, then only a saturated ADC triggers the interrupt.

See the Proximity Function section in the detailed description for more details on the operation of proximity mode.

#### LED1 PA (0x11)

BIT	7	6	5	4	3	2	1	0	
Field	LED1_PA[7:0]								
Reset		0x00							
Access Type		Write, Read							

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### LED1\_PA

These bits set the nominal peak current pulse amplitude of LEDx\_DRV pin as shown in the table below. Note: x denotes the respective LED channel.

LEDX_RGE[1:0]	00	01	10	11
LEDx_PA[7:0]	I <sub>LEDx_DRV</sub> (mA)	I <sub>LEDx_DRV</sub> (mA)	I <sub>LEDx_DRV</sub> (mA)	I <sub>LEDx_DRV</sub> (mA)
0x00	0	0	0	0
0x01	0.2	0.4	0.6	0.8
0x02	0.4	0.8	1.2	1.6
0x03	0.6	1.2	1.8	2.4
0xFC	49.4	98.8	148.2	197.6
0xFD	49.6	99.2	148.8	198.4
0xFE	49.8	99.6	149.4	198.2
0xFF	50	100	150	200
LSB	0.196	0.392	0.588	0.784

#### LED2 PA (0x12)

BIT	7	6	5	4	3	2	1	0	
Field	LED2_PA[7:0]								
Reset		0x00							
Access Type		Write, Read							

#### LED2\_PA

Refer to LED1\_PA[1:0] for more details.

#### LED Range (0x14)

BIT	7	6	5	4	3	2	1	0
Field	_	_	_	-	LED2_RGE[1:0]		LED1_RGE[1:0]	
Reset	_	_	-	-	0x00		0x	00
Access Type	-	-	-	-	Write, Read		Write, Read	

#### LED2\_RGE

Range selection of the LED 2 current.

Refer to LED1\_PA[1:0] for more details.

LED2_RGE[1:0]	MAX LED CURRENT RANGE (mA)
00	50
01	100
10	150
11	200

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

#### LED1\_RGE

Range selection of the LED 1 current.

Refer to LED1\_PA[1:0] for more details.

LED1_RGE[1:0]	MAX LED CURRENT RANGE (mA)
00	50
01	100
10	150
11	200

#### LED PILOT PA (0x15)

BIT	7	6	5	4	3	2	1	0	
Field	PILOT_PA[7:0]								
Reset		0x00							
Access Type		Write, Read							

#### PILOT\_PA

In proximity mode, PILOT\_PA[7:0] sets LED1 proximity mode current. These bits set the current pulse amplitude for proximity mode as shown in the table below. In proximity mode, LED1\_RGE[1:0] and PILOT\_PA[1:0] sets the LED1\_DRV current.

See *Proximity Function* for more details on the operation of proximity mode.

LED1_RGE[1:0]	00	01	10	11
PILOT_PA[7:0]	I <sub>LED1_DRV</sub> (mA)	I <sub>LED1_DRV</sub> (mA)	I <sub>LED1_DRV</sub> (mA)	I <sub>LED1_DRV</sub> (mA)
0x00	0	0	0	0
0x01	0.2	0.4	0.6	0.8
0x02	0.4	0.8	1.2	1.6
0x03	0.6	1.2	1.8	2.4
0xFC	49.4	98.8	148.2	197.6
0xFD	49.6	99.2	148.8	198.4
0xFE	49.8	99.6	149.4	199.2
0xFF	50	100	150	200
LSB	0.2	0.4	0.6	0.8

#### Part ID (0xFF)


BIT	7	6	5	4	3	2	1	0	
Field		PART_ID[7:0]							
Reset		0x20							
Access Type		Read Only							

#### PART\_ID

This register stores the part identifier for the chip.

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

### **Typical Application Circuit**

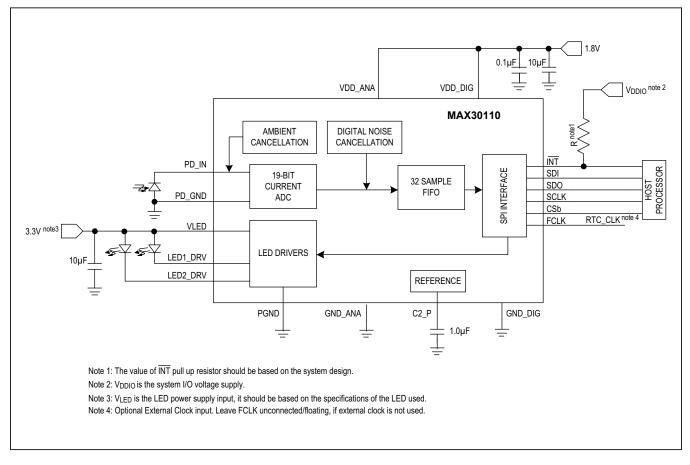

### **Ordering Information**

PART	TEMP. RANGE	BUMP-PACKAGE
MAX30110EWG+	-40°C to +85°C	24-bump, WLP 2.8mm x 2.0mm, 0.4mm Pitch

+Denotes a lead(Pb)-free/RoHS-compliant package

### Optimized Pulse-Oximeter and Heart Rate AFE for Wearable Health

### **Revision History**

REVISION	REVISION	DESCRIPTION	PAGES
NUMBER	DATE		CHANGED
0	6/17	Initial release	—

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time. The parametric values (min and max limits) shown in the Electrical Characteristics table are guaranteed. Other parametric values quoted in this data sheet are provided for guidance.



Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;

- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);

- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;

- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком):

- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«FORSTAR» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели, кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный) Факс: 8 (812) 320-03-32 Электронная почта: ocean@oceanchips.ru Web: http://oceanchips.ru/ Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А