

# **Blackfin/SHARC® USB EZ-Extender® Manual**

Revision 1.0, February 2009

Part Number  
82-000224-01

Analog Devices, Inc.  
One Technology Way  
Norwood, Mass. 02062-9106



## **Copyright Information**

© 2009 Analog Devices, Inc., ALL RIGHTS RESERVED. This document may not be reproduced in any form without prior, express written consent from Analog Devices, Inc.

Printed in the USA.

## **Disclaimer**

Analog Devices, Inc. reserves the right to change this product without prior notice. Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use; nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under the patent rights of Analog Devices, Inc.

## **Trademark and Service Mark Notice**

The Analog Devices logo, Blackfin, SHARC, VisualDSP++, and EZ-Extender are registered trademarks of Analog Devices, Inc. EZ-Board is a trademark of Analog Devices, Inc.

All other brand and product names are trademarks or service marks of their respective owners.

## Regulatory Compliance

The Blackfin/SHARC USB EZ-Extender is designed to be used solely in a laboratory environment. The board is not intended for use as a consumer end product or as a portion of a consumer end product. The board is an open system design, which does not include a shielded enclosure and therefore may cause interference to other electrical devices in close proximity. This board should not be used in or near any medical equipment or RF devices.

The Blackfin/SHARC USB EZ-Extender is currently being processed for certification that it complies with the essential requirements of the European EMC directive 89/336/EEC amended by 93/68/EEC and therefore carries the “CE” mark.



This evaluation system contains ESD (electrostatic discharge) sensitive devices. Electrostatic charges readily accumulate on the human body and equipment and can discharge without detection. Permanent damage may occur on devices subjected to high-energy discharges. Proper ESD precautions are recommended to avoid performance degradation or loss of functionality. Store unused boards in the protective shipping package.





# CONTENTS

## PREFACE

|                                     |      |
|-------------------------------------|------|
| Product Overview .....              | viii |
| Purpose of This Manual .....        | ix   |
| Intended Audience .....             | ix   |
| Manual Contents .....               | x    |
| What’s New in This Manual .....     | x    |
| Technical or Customer Support ..... | xi   |
| Supported Products .....            | xi   |
| Product Information .....           | xii  |
| Notation Conventions .....          | xiii |

## BLACKFIN/SHARC USB EZ-EXTENDER INTERFACES

|                                            |     |
|--------------------------------------------|-----|
| Blackfin/SHARC USB EZ-Extender Setup ..... | 1-2 |
| USB Software .....                         | 1-3 |
| USB 2.0 Interface .....                    | 1-3 |

## BLACKFIN/SHARC USB EZ-EXTENDER HARDWARE REFERENCE

|                           |     |
|---------------------------|-----|
| System Architecture ..... | 2-2 |
| Jumper Settings .....     | 2-3 |

**CONTENTS**

USB Chip Select Jumper (JP1) ..... 2-4

USB IRQ Jumper (JP2) ..... 2-4

USB Soft Reset Jumper (JP3) ..... 2-4

**BLACKFIN/SHARC USB EZ-EXTENDER BILL OF MATERIALS**

**BLACKFIN/SHARC USB EZ-EXTENDER SCHEMATIC**

Title Page ..... B-1

Expansion Connector ..... B-2

USB Interface ..... B-3

**INDEX**

# PREFACE

Thank you for purchasing the Blackfin/SHARC USB EZ-Extender<sup>®</sup>, Analog Devices, Inc. extender board to the EZ-Board<sup>™</sup> evaluation system for the ADSP-BF518F, ADSP-BF526 Blackfin<sup>®</sup>, and ADSP-21469 SHARC<sup>®</sup> processors.

Blackfin processors are embedded processors that support a Media Instruction Set Computing (MISC) architecture. This architecture is the natural merging of RISC, media functions, and digital signal processing characteristics towards delivering signal processing performance in a microprocessor-like environment.

SHARC processors are based on a 32-bit super Harvard architecture that includes a unique memory architecture comprised of two large on-chip, dual-ported SRAM blocks coupled with a sophisticated IO processor, which gives a SHARC processor the bandwidth for sustained high-speed computations. SHARC processors represents today's de facto standard for floating-point processing, targeted toward premium audio applications.

The EZ-Board and Blackfin/SHARC USB EZ-Extender are designed to be used in conjunction with the VisualDSP++<sup>®</sup> development environment. VisualDSP++ offers a powerful programming tool with new flexibility that significantly decreases the time required to port software code to a processor, reducing time-to-market.

To learn more about Analog Devices development software, go to <http://www.analog.com/processors/tools/>.

# Product Overview

The Blackfin/SHARC USB EZ-Extender is a separately sold extender board that plugs onto the expansion interface of the ADSP-BF518F, ADSP-BF526, and ADSP-21469 EZ-Board evaluation systems. The extender board aids the design and prototyping phases of the ADSP-BF518F, ADSP-BF526, and ADSP-21469 processor targeted applications.

The board extends the capabilities of the evaluation system by providing a connection between the asynchronous memory bus of the Blackfin/SHARC processor and a USB 2.0 device.

The following is a list of the Blackfin/SHARC USB EZ-Extender interfaces.

- USB 2.0 interface:
  - ✓ PLX Technology NET2272 device
  - ✓ USB driver and application code
- No power supply required: derives power from the EZ-Board
- CE certified

Before using any of the interfaces, follow the setup procedure in [“Blackfin/SHARC USB EZ-Extender Setup” on page 1-2](#).

Example programs are available to demonstrate capabilities of the Blackfin/SHARC USB EZ-Extender board.

## Purpose of This Manual

The *Blackfin/SHARC USB EZ-Extender Manual* provides instructions for installing the product hardware (board). The text describes operation and configuration of the board components. Finally, a schematic and a bill of materials are provided as a reference for future designs.

## Intended Audience

The primary audience for this manual is a programmer who is familiar with Analog Devices processors. This manual assumes that the audience has a working knowledge of the appropriate processor architecture and instruction set. Programmers who are unfamiliar with Analog Devices processors can use this manual, but should supplement it with other texts (such as the *Hardware Reference* and *Instruction Set Reference*) that describe your target architecture.

Programmers who are unfamiliar with VisualDSP++ or EZ-Board evaluation software should refer to the *ADSP-BF518F*, *ADSP-BF526*, or *ADSP-21469 EZ-Board Evaluation System Manual*, VisualDSP++ online Help, and user's or getting started guides. For locations of these documents, refer to [“Product Information”](#).

# Manual Contents

The manual consists of:

- Chapter 1, “[Blackfin/SHARC USB EZ-Extender Interfaces](#)” on [page 1-1](#).  
Provides basic board information.
- Chapter 2, “[Blackfin/SHARC USB EZ-Extender Hardware Reference](#)” on [page 2-1](#).  
Provides information on the hardware aspects of the board.
- Appendix A, “[Blackfin/SHARC USB EZ-Extender Bill Of Materials](#)” on [page A-1](#).  
Provides a list of components used to manufacture the EZ-Extender board.
- Appendix B, “[Blackfin/SHARC USB EZ-Extender Schematic](#)” on [page B-1](#).  
Provides the resources to allow EZ-Board board-level debugging or to use as a reference design.

## What’s New in This Manual

This is the first edition of the *Blackfin/SHARC USB EZ-Extender Manual*.

## Technical or Customer Support

You can reach Analog Devices, Inc. Customer Support in the following ways:

- Visit the Embedded Processing and DSP products Web site at <http://www.analog.com/processors/technicalSupport>
- E-mail tools questions to [processor.tools.support@analog.com](mailto:processor.tools.support@analog.com)
- E-mail processor questions to [processor.support@analog.com](mailto:processor.support@analog.com) (World wide support)  
[processor.europe@analog.com](mailto:processor.europe@analog.com) (Europe support)  
[processor.china@analog.com](mailto:processor.china@analog.com) (China support)
- Phone questions to **1-800-ANALOGD**
- Contact your Analog Devices, Inc. local sales office or authorized distributor
- Send questions by mail to:  
Analog Devices, Inc.  
One Technology Way  
P.O. Box 9106  
Norwood, MA 02062-9106  
USA

## Supported Products

The Blackfin/SHARC USB EZ-Extender is designed as an extender board to the ADSP-BF518F, ADSP-BF526, and ADSP-21469 EZ-Board evaluation systems.

# Product Information

Product information can be obtained from the Analog Devices Web site, VisualDSP++ online Help system, and a technical library CD.

- The Analog Devices Web site, [www.analog.com](http://www.analog.com), provides information about a broad range of products—analog integrated circuits, amplifiers, converters, and digital signal processors.

To access a complete technical library for each processor family, go to [http://www.analog.com/processors/technical\\_library](http://www.analog.com/processors/technical_library).

When locating your manual title, note a possible errata check mark next to the title that leads to the current correction report against the manual.

- Online documentation comprises the VisualDSP++ Help system, software tools manuals, hardware tools manuals, processor manuals, Dinkum Abridged C++ library, and FLEXnet License Tools software documentation. You can search easily across the entire VisualDSP++ documentation set for any topic of interest.
- The technical library CD contains seminar materials, product highlights, a selection guide, and documentation files of processor manuals, VisualDSP++ software manuals, and hardware tools manuals. To order the technical library CD, go to [http://www.analog.com/processors/technical\\_library](http://www.analog.com/processors/technical_library), navigate to the manuals page for your processor, click the request CD check mark, and fill out the order form.

# Notation Conventions

Text conventions used in this manual are identified and described as follows.

| Example                                                                             | Description                                                                                                                                                                                                                                                                                                                                    |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Close</b> command<br>(File menu)                                                 | Titles in reference sections indicate the location of an item within the VisualDSP++ environment's menu system (for example, the <b>Close</b> command appears on the <b>File</b> menu).                                                                                                                                                        |
| {this   that}                                                                       | Alternative required items in syntax descriptions appear within curly brackets and separated by vertical bars; read the example as <i>this</i> or <i>that</i> . One or the other is required.                                                                                                                                                  |
| [this   that]                                                                       | Optional items in syntax descriptions appear within brackets and separated by vertical bars; read the example as an optional <i>this</i> or <i>that</i> .                                                                                                                                                                                      |
| [this,...]                                                                          | Optional item lists in syntax descriptions appear within brackets delimited by commas and terminated with an ellipsis; read the example as an optional comma-separated list of <i>this</i> .                                                                                                                                                   |
| .SECTION                                                                            | Commands, directives, keywords, and feature names are in text with letter gothic font.                                                                                                                                                                                                                                                         |
| <i>filename</i>                                                                     | Non-keyword placeholders appear in text with italic style format.                                                                                                                                                                                                                                                                              |
|  | <b>Note:</b> For correct operation, ...<br>A Note provides supplementary information on a related topic. In the online version of this book, the word <b>Note</b> appears instead of this symbol.                                                                                                                                              |
|  | <b>Caution:</b> Incorrect device operation may result if ...<br><b>Caution:</b> Device damage may result if ...<br>A Caution identifies conditions or inappropriate usage of the product that could lead to undesirable results or product damage. In the online version of this book, the word <b>Caution</b> appears instead of this symbol. |
|  | <b>Warning:</b> Injury to device users may result if ...<br>A Warning identifies conditions or inappropriate usage of the product that could lead to conditions that are potentially hazardous for the devices users. In the online version of this book, the word <b>Warning</b> appears instead of this symbol.                              |

## Notation Conventions

# 1 BLACKFIN/SHARC USB EZ-EXTENDER INTERFACES

This chapter provides the setup procedures for both the Blackfin/SHARC USB EZ-Extender and EZ-Board (ADSP-BF518F, ADSP-BF526, or ADSP-21469) and describes the interfaces the extender supports.

The information is presented in the following order.

- [“Blackfin/SHARC USB EZ-Extender Setup” on page 1-2](#)
- [“USB 2.0 Interface” on page 1-3](#)

# Blackfin/SHARC USB EZ-Extender Setup

It is very important to set up all components of the system containing the Blackfin/SHARC USB EZ-Extender, then apply power to the system. The following procedure is recommended for correct setup.

Power your system after these steps are completed:

1. Read the applicable design interface section in this chapter—the text provides an overview of the interface capabilities.
2. Read [“System Architecture” on page 2-2](#) to understand physical connections of the extender board. For detailed information, refer to [“Blackfin/SHARC USB EZ-Extender Schematic” on page B-1](#).
3. Set the jumpers on the Blackfin/SHARC USB EZ-Extender board. Use the block diagram in [Figure 2-1 on page 2-2](#) in conjunction with [“Jumper Settings” on page 2-3](#).
4. Set the switches and jumpers on the EZ-Board. If not already, familiarize yourself with the EZ-Board documentation and schematic drawings (see [“Product Information”](#)).

Compare the expansion interface signals of the Blackfin/SHARC USB EZ-Extender board with the EZ-Board signals to ensure there is no contention. For example, it may be necessary to disable other devices connected to the expansion interface of the processor and disable peripherals on the EZ-Board.

5. Install the Blackfin/SHARC USB EZ-Extender on the EZ-Board via the high speed expansion interface.

## USB Software

For information about USB software, refer to the USB Software Readme.txt file located in the <install\_path>\Blackfin\Examples\USB EZ-EXTENDER or <install\_path>\214xx\Examples\USB EZ-EXTENDER VisualDSP++ directory.

## USB 2.0 Interface

The Blackfin/SHARC USB EZ-Extender enables a connection between a USB 2.0 chip and Blackfin/SHARC processor without any other programmable logic. The PLX Technology's NET2272 controller ties directly to the asynchronous memory bus of the Blackfin or SHARC processor. You can read from and write to the USB 2.0 controller by addressing the named memory bank directly.

You can reset the NET2272 controller by asserting LOW one of the four GPIO signals of the expansion interface. Refer to the appropriate EZ-Board manual to learn how the GPIO signals connect to the processor.

The USB IRQ signal of the NET2272 controller connects to one of the four GPIO signals on the expansion interface. Refer to the appropriate EZ-Board document to learn how the GPIO signals connect to the processor.

The USB CS signal of the NET2272 controller connects to one of the four AMS signals on the expansion interface. Refer to the appropriate EZ-Board manual to learn how the AMS signals connect to the processor.

The jumper settings required for each of the respective EZ-Boards are described in the USB Software Readme.txt file located in the <install\_path>\Blackfin\Examples\USB EZ-EXTENDER or

## USB 2.0 Interface

<install\_path>\214xx\Examples\USB EZ-EXTENDER VisualDSP++ directory. The readme file describes the USB software, source code, drivers, and explains how to run a USB-based application.

## 2 BLACKFIN/SHARC USB EZ-EXTENDER HARDWARE REFERENCE

This chapter describes the hardware design of the Blackfin/SHARC USB EZ-Extender.

The following topics are covered.

- [“System Architecture” on page 2-2](#)  
Describes the board configuration and explains how the board components interface with the processor and EZ-Board.
- [“Jumper Settings” on page 2-3](#)  
Describes the on-board configuration jumpers.

# System Architecture

A block diagram of the Blackfin/SHARC USB EZ-Extender is shown in [Figure 2-1](#).

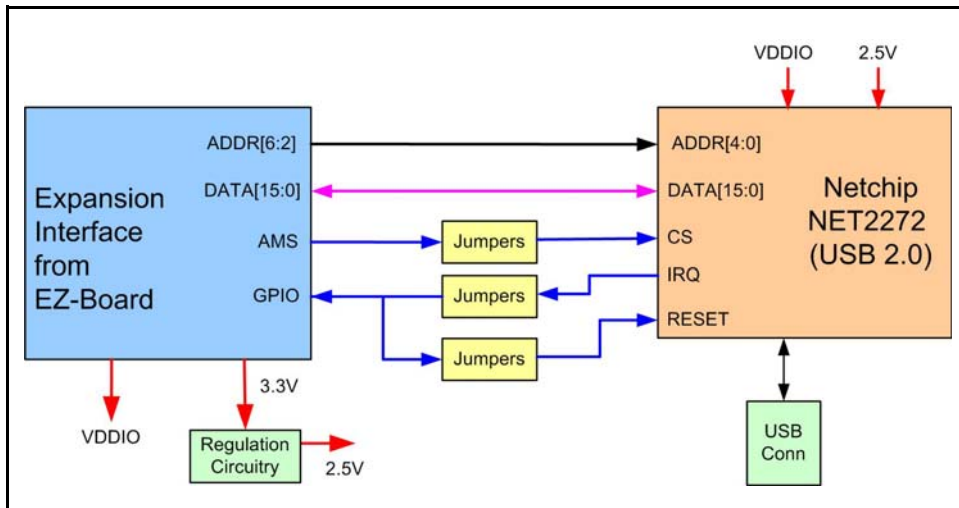


Figure 2-1. Block Diagram

# Jumper Settings

Before using the Blackfin/SHARC USB EZ-Extender, follow the setup procedure in [“Blackfin/SHARC USB EZ-Extender Setup”](#) on page 1-2.

[Figure 2-2](#) shows the locations of all jumper headers. A two-pin jumper can be placed on the respective jumper header for different functionality. The following sections describe all possible jumper settings and associated functionality.

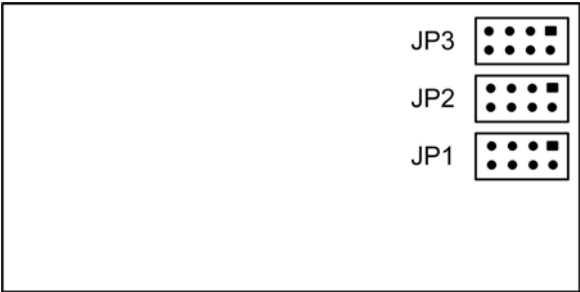


Figure 2-2. Jumper Locations

## Jumper Settings

### USB Chip Select Jumper (JP1)

The USB chip select jumper (JP1) connects an AMS signal from the EZ-Board to the chip select input on the NET2272 controller. The AMS0-3 signals are available. By default, the jumper is installed on pins 7 and 8, which connect AMS3 to the chip select signal.

### USB IRQ Jumper (JP2)

The USB IRQ jumper (JP2) connects a general-purpose IO signal from the EZ-Board to the interrupt output on the NET2272 controller. The GPIO1-4 signals are available. By default, the jumper is installed on pins 1 and 2, which connect GPIO1 to the interrupt signal.

### USB Soft Reset Jumper (JP3)

The soft reset jumper (JP3) connects a general-purpose signal from the EZ-Board to the reset input on the NET2272 controller. GPIO1-4 are available. By default, the jumper is installed on pins 7 and 8, which connect GPIO4 to the reset signal.


# A BLACKFIN/SHARC USB EZ-EXTENDER BILL OF MATERIALS

The bill of materials corresponds to “[Blackfin/SHARC USB EZ-Extender Schematic](#)” on page B-1.

| Ref. | Qty. | Description                  | Reference Designator | Manufacturer      | Part Number         |
|------|------|------------------------------|----------------------|-------------------|---------------------|
| 1    | 1    | SN74LVC1G08<br>SOT23-5       | U2                   | TI                | SN74LVC1G08DBVR     |
| 2    | 1    | NET2272 TQFP64               | U1                   | NET CHIP          | NET2272REV1A-LF     |
| 3    | 1    | 30MHZ OSC010                 | Y1                   | ECLIPTEK          | E2SAA10-30.000M     |
| 4    | 1    | ADP130AUJZ-2.5<br>TSOT5      | VR1                  | ANALOG<br>DEVICES | ADP130AUJZ-2.5-R7   |
| 5    | 3    | IDC<br>2PIN_JUMPER_SH<br>ORT | SJ1-3                | DIGI-KEY          | S9001-ND            |
| 6    | 1    | USB_MINI-B 5PIN<br>CON046    | P2                   | MOLEX             | 54819-0519          |
| 7    | 3    | IDC 4X2 IDC4X2               | JP1-3                | SULLINS           | GEC04DAAN           |
| 8    | 1    | QFS 52x2<br>QFS52x2_SMT      | P1                   | SAMTEC            | QFS-052-04.25-L-D-A |
| 9    | 2    | 1UF 16V 10% 0805             | C4-5                 | KEMET             | C0805C105K4RAC TU   |
| 10   | 1    | 47.0K 1/10W 1%<br>0805       | R2                   | VISHAY            | CRCW080547K0FKEA    |
| 11   | 1    | 42 100MHZ 4A<br>0805         | FER1                 | DIGI-KEY          | 587-1768-2-ND       |
| 12   | 3    | 10UF 6.3V 10%<br>0805        | C8,C11,C17           | AVX               | 08056D106KAT2A      |

| Ref. | Qty. | Description          | Reference Designator      | Manufacturer | Part Number       |
|------|------|----------------------|---------------------------|--------------|-------------------|
| 13   | 11   | 0.01UF 16V 10% 0402  | C2,C6-7,C9-10, C12-16,C18 | AVX          | 0402YC103KAT2A    |
| 14   | 7    | 10K 1/16W 5% 0402    | R8-14                     | VISHAY       | CRCW040210K0FKED  |
| 15   | 2    | 10PF 50V 5% 0805     | C1,C3                     | AVX          | 08055A100JAT2A    |
| 16   | 1    | 1.5K 1/10W 5% 0603   | R6                        | PANASONIC    | ERJ-3GEYJ152V     |
| 17   | 2    | 39.0 1/10W 1% 0603   | R4,R7                     | VISHAY       | CRCW-060339R0FKEA |
| 18   | 1    | 2.43K 1/10W 1% 0805  | R1                        | DIGI-KEY     | 311-2.43KCRTR-ND  |
| 19   | 1    | 330 1/10W 5% 0603    | R16                       | VISHAY       | CRCW0603330RJNEA  |
| 20   | 1    | 1M 1/10W 5% 0603     | R5                        | VISHAY       | CRCW06031M00FNEA  |
| 21   | 1    | GREEN LED001         | LED1                      | PANASONIC    | LN1361CTR         |
| 22   | 1    | 15KV PGB1010603 0603 | D1                        | LITTLEFUSE   | PGB1010603MR      |
| 23   | 2    | 1.0K 1/16W 1% 0402   | R3,R15                    | PANASONIC    | ERJ-2RKF1001X     |
| 24   | 2    | 330 100MHZ 1.5A 0805 | FER2-3                    | MURATA       | BLM21PG331SN1D    |



# BF/SHARC USB EZ-EXTENDER SCHEMATIC

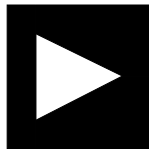

**ANALOG  
DEVICES**

20 Cotton Road  
Nashua, NH 03063  
PH: 1-800-ANALOGD

|           |                |                                   |            |            |
|-----------|----------------|-----------------------------------|------------|------------|
| Title     |                | BF/SHARC USB EZ-EXTENDER<br>TITLE |            |            |
| Size<br>C | Board No.      |                                   | A0224-2008 | Rev<br>0.1 |
| Date      | 1-7-2009_17:07 |                                   | Sheet      | 1 of 3     |

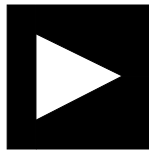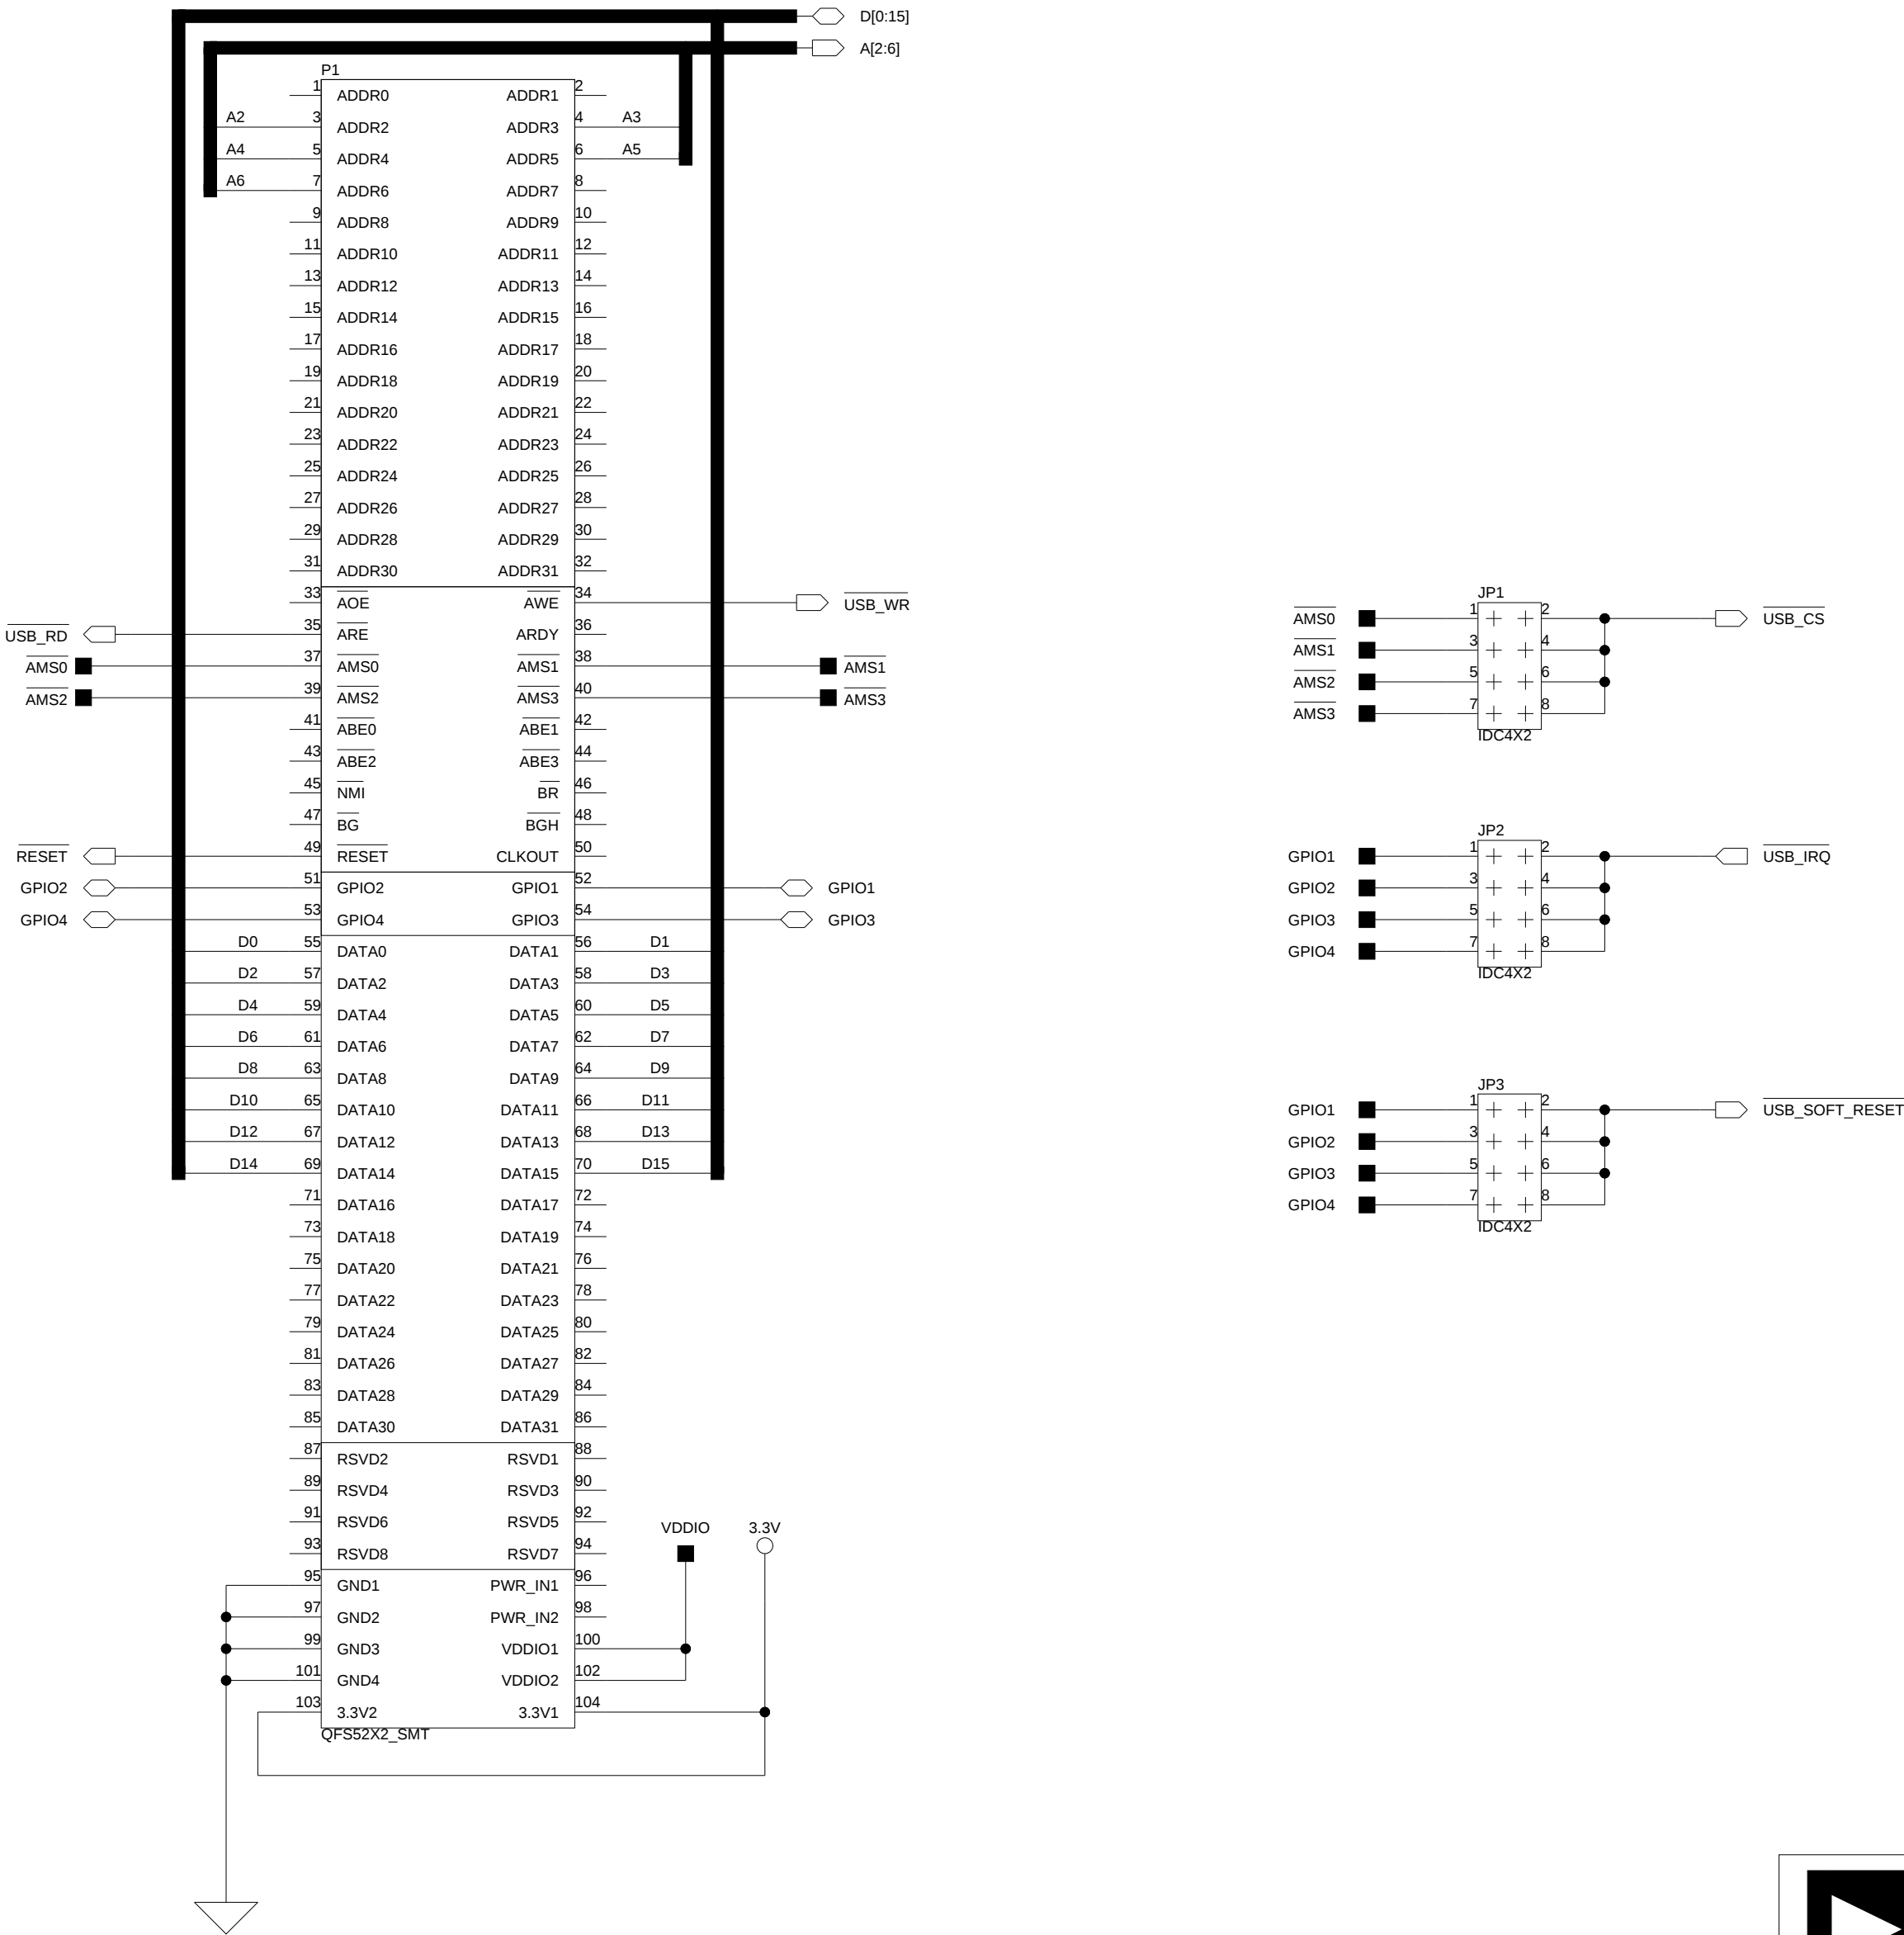

**ANALOG  
DEVICES**

20 Cotton Road  
Nashua, NH 03063  
PH: 1-800-ANALOGD

Title **BF/SHARC USB EZ-EXTENDER  
EXPANSION CONNECTOR**

Size **C** Board No. **A0224-2008**

Rev **0.1**

Date **1-7-2009\_17:07**

Sheet **2 of 3**



# I INDEX

## A

AMS0-3 signals, [2-4](#)  
architecture, of USB EZ-Extender, [2-2](#)  
asynchronous memory bank, [1-3](#)

## B

bill of materials, [A-1](#)  
block diagram, [2-2](#)  
board schematic (USB EZ-Extender), [B-1](#)

## C

configuration, of USB EZ-Extender, [1-2](#)  
CS signal, [1-3](#)  
customer support, [xi](#)

## E

expansion interface, [viii](#)

## G

GPIO1-4 signals, [2-4](#)

## I

IRQ line, [1-3](#)

## J

jumpers  
map of locations, [2-3](#)  
JP1 (USB chip select), [2-4](#)  
JP2 (USB IRQ), [2-4](#)  
JP3 (USB soft reset), [2-4](#)

## N

notation conventions, [xiii](#)

## P

product overview, [viii](#)

## R

reset USB controller, [1-3](#)

## S

schematic, of USB EZ-Extender, [B-1](#)  
setup, of USB EZ-Extender, [1-2](#)  
system architecture, [2-2](#)

## U

USB  
interface, [viii](#), [1-3](#)  
chip select jumper (JP1), [2-4](#)  
IRQ jumper (JP2), [2-4](#)  
soft reset jumper (JP3), [2-4](#)  
software documentation, [1-3](#)

Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;
- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком);
- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



## JONHON

«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«FORSTAR» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели,  
кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный)

Факс: 8 (812) 320-03-32

Электронная почта: [ocean@oceanchips.ru](mailto:ocean@oceanchips.ru)

Web: <http://oceanchips.ru/>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А