



# MAXREFDES42# IO-Link RTD Temp Sensor Quick Start Guide (IQ<sup>2</sup> IO-Link Master Version)

Rev 0; 1/15



For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at [www.maximintegrated.com](http://www.maximintegrated.com).

*Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.*

## Table of Contents


1. Required Equipment .....	3
2. Overview .....	5
3. Included Files .....	6
4. Procedure.....	8
5. Trademarks.....	19
6. Revision History.....	20

## 1. Required Equipment

- PC with Windows® 7 or Windows 8 (**Verify with IQ<sup>2</sup> Development that your version of Windows is supported before purchasing their software.**)
- MAXREFDES42# board
- IQ<sup>2</sup> Development iqlInterface® IO-Link® master with corresponding USB and power cables (This must be purchased separately.)
- IQ<sup>2</sup> Development IO-Link iqTool® (tested with version 1.1.0.4 and comes with the iqlInterface IO-Link master)
- One IO-Link cable (This must be purchased separately.)
- One A-to-B Type USB cable
- RD42\_RL78\_V01\_XX.ZIP (Maxim-MAXREFDES42-20140824-IODD1.1.html), where XX = minor version



Figure 1. MAXREFDES42# Board Connected to an IQ<sup>2</sup> Development IO-Link Master

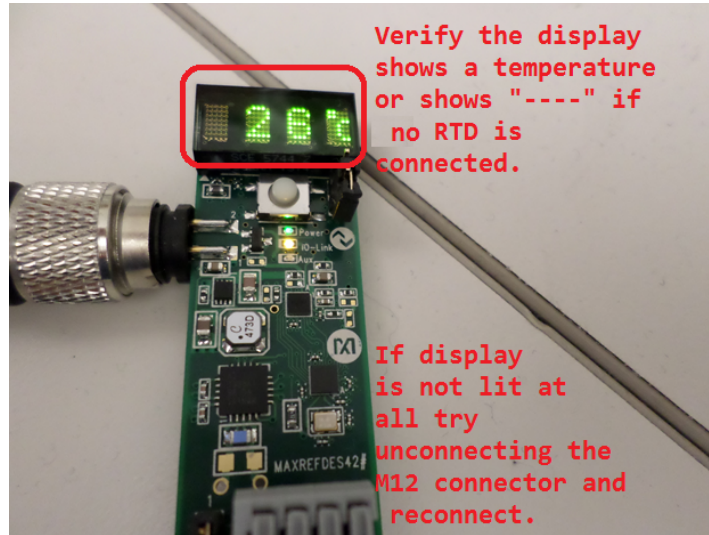

**Figure 2. Green Display is Lit**

## 2. Overview

1. Connect power and all the cables to the iqInterface IO-Link Master as shown in Figure 1.
2. Connect the MAXREFDES42# proximity sensor board to the other side of the IO-Link cable. Make sure the green display is lit as shown in Figure 2.
3. Download the latest “all design files” **RD42V01\_XX.ZIP** file located on the **Design Resources** tab at [www.maximintegrated.com/MAXREFDES42](http://www.maximintegrated.com/MAXREFDES42). Alternatively, you can download the design files from <http://www.iq2-development.com/downloads/>.
4. Install the IQ<sup>2</sup> Development IO-Link iqTool onto your Windows PC by referring to IQ<sup>2</sup> Development’s iqInterface User Manual located at <http://www.iq2-development.com/downloads/>.
5. Connect the MAXREFDES42# IO-Link RTD temperature sensor as a device in the IQ<sup>2</sup> Development IO-Link iqTool.
6. Read and write to the desired indexes by referring to IQ<sup>2</sup> Development’s .html index definition file (Maxim-MAXREFDES42-20140824-IODD1.1.html).

### 3. Included Files

The **RD42\_RL78\_V01\_XX.ZIP** contains the corresponding IO-Link Device Descriptor (IODD) files. The IODD contains information on communication properties, device parameters, identification, process, and diagnostic data. It includes an XML file, an image of the device, an icon image, and the manufacturer's logo. The IODD structure is the same for all devices of all manufacturers, and is always represented in the same way by the IODD interpreter tools. See Figures 3 to 6 for project structure and key filenames.

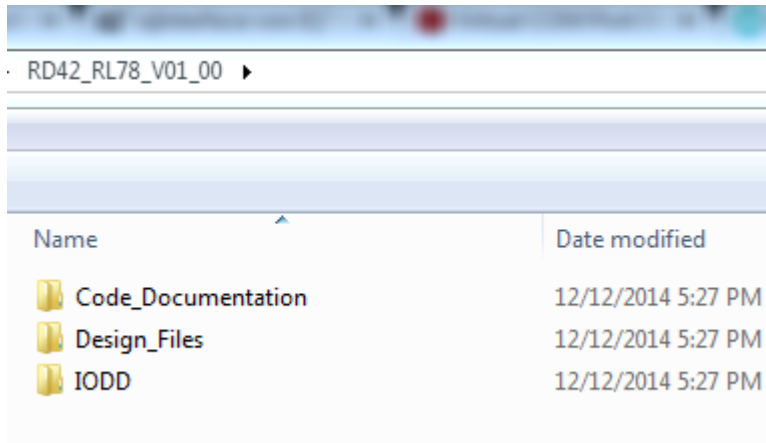


Figure 3. Directories inside RD42\_RL78\_VXX\_XX.ZIP.



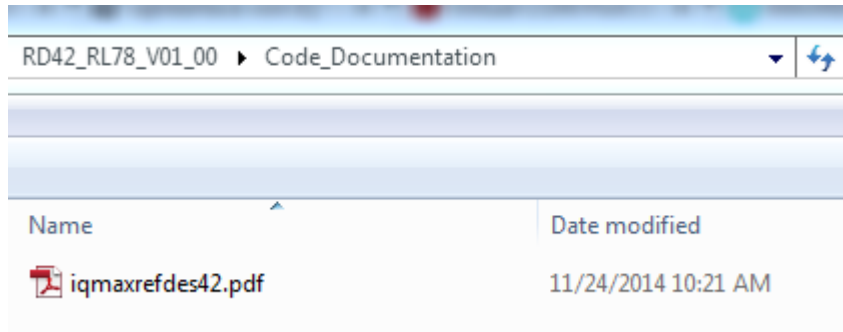


Figure 4. File inside the Code\_Documentation directory.

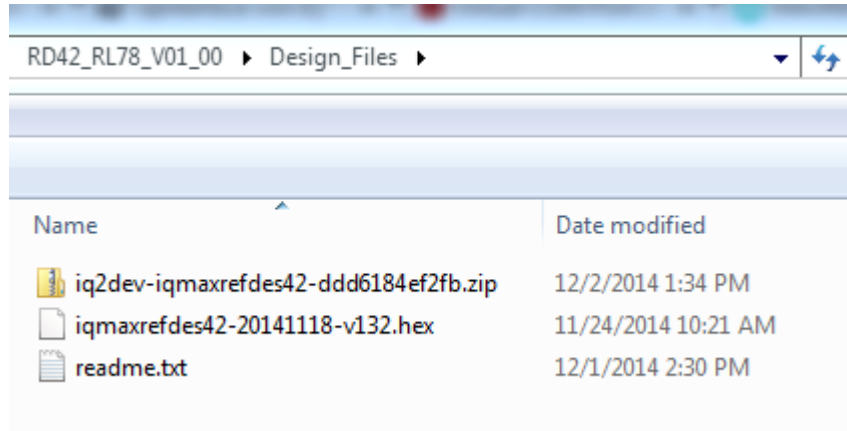

**Figure 5. Files inside the Design\_Files directory. Source files are in the zip file.**

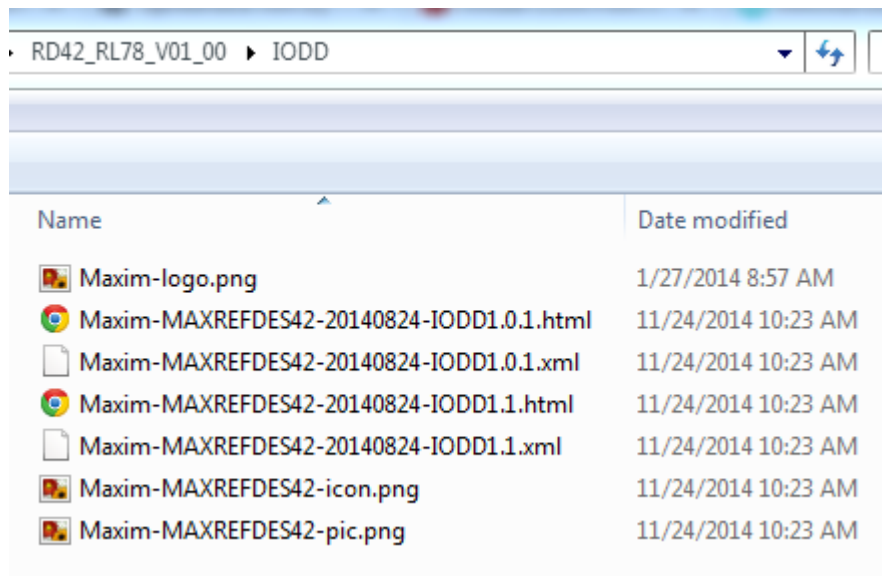

**Figure 6. Files inside the IODD directory. The .xml files are the IODD files and the .html files are the IQ<sup>2</sup> Development's .html index definition files.**

## 4. Procedure

1. Connect the A-to-B Type USB cable from the PC to the iqInterface IO-Link Master as shown in Figure 1.
2. Connect an IO-Link cable to the iqInterface IO-Link Master as shown in Figure 1.
3. Connect 24V DC and GND to the orange terminal block on the iqInterface IO-Link Master as shown in Figure 1. Pin 1 is +24V and pin 2 is GND.
4. Connect the MAXREFDES42# proximity sensor board to the other side of the IO-Link cable. Make sure the green display is lit as shown in Figure 2.
5. Download the latest “all design files” **RD42V01\_XX.ZIP** file located on the **DESIGN RESOURCES** tab at [www.maximintegrated.com/MAXREFDES42](http://www.maximintegrated.com/MAXREFDES42). Alternatively, you can download the design files from <http://www.iq2-development.com/downloads/>.
6. Extract the **RD42V01\_XX.ZIP** file to a directory on your PC.



7. Install the IQ<sup>2</sup> Development IO-Link iqTool onto your Windows PC as shown in Figure 7 by referring to IQ<sup>2</sup> Development's iqInterface User Manual located at <http://www.iq2-development.com/downloads/>.


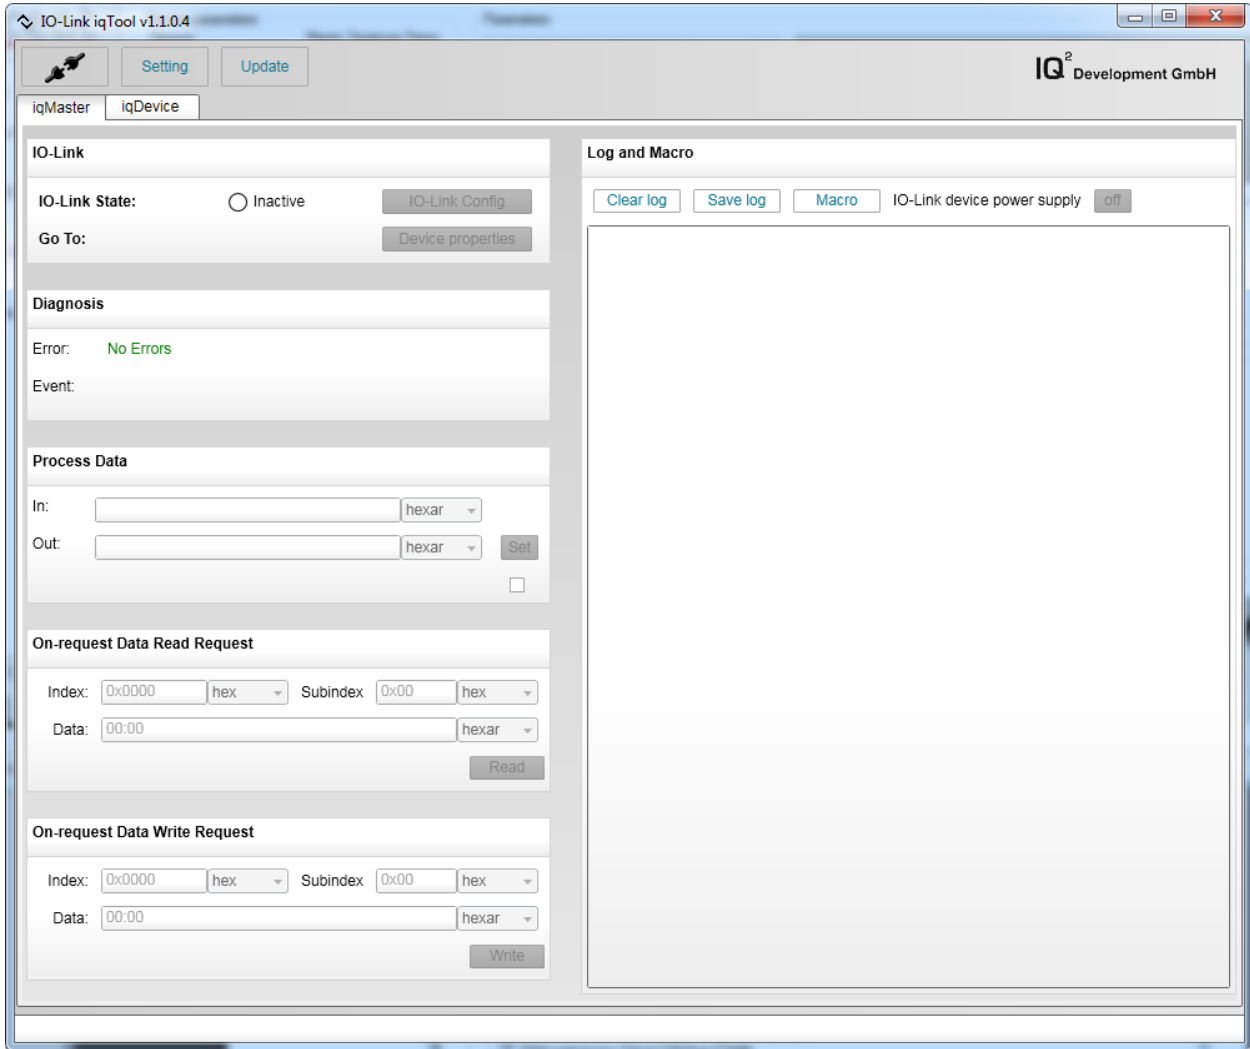



Figure 7. Newly installed IQ<sup>2</sup> Development IO-Link iqTool.

8. Make sure you are in the **iqMaster** tab, then press the **Setting** button. In the **IQ Connection Settings** window, select **auto** in the **Comport / USB** drop-down menu. Press **OK** to save setting as shown in Figure 8.

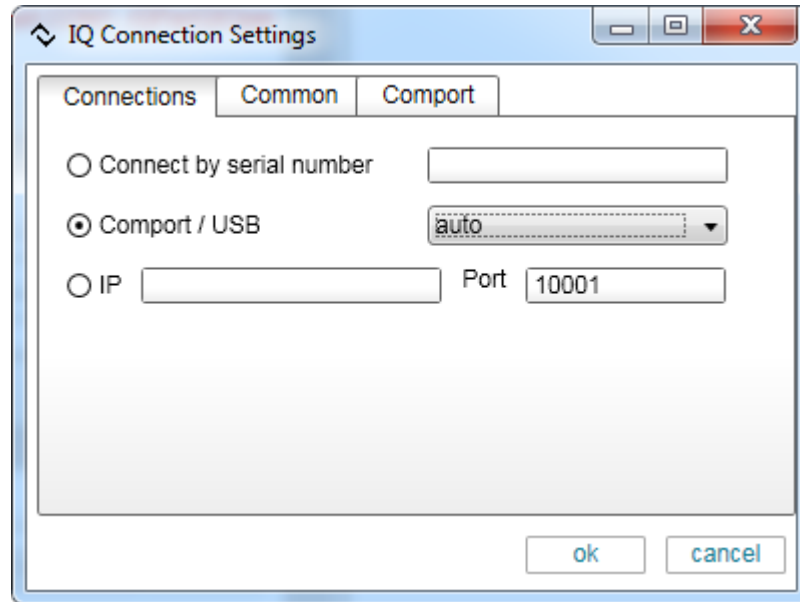


**Figure 8. IQ Connection Settings window.**

9. Next, press the **Connect** button as shown in Figure 9.

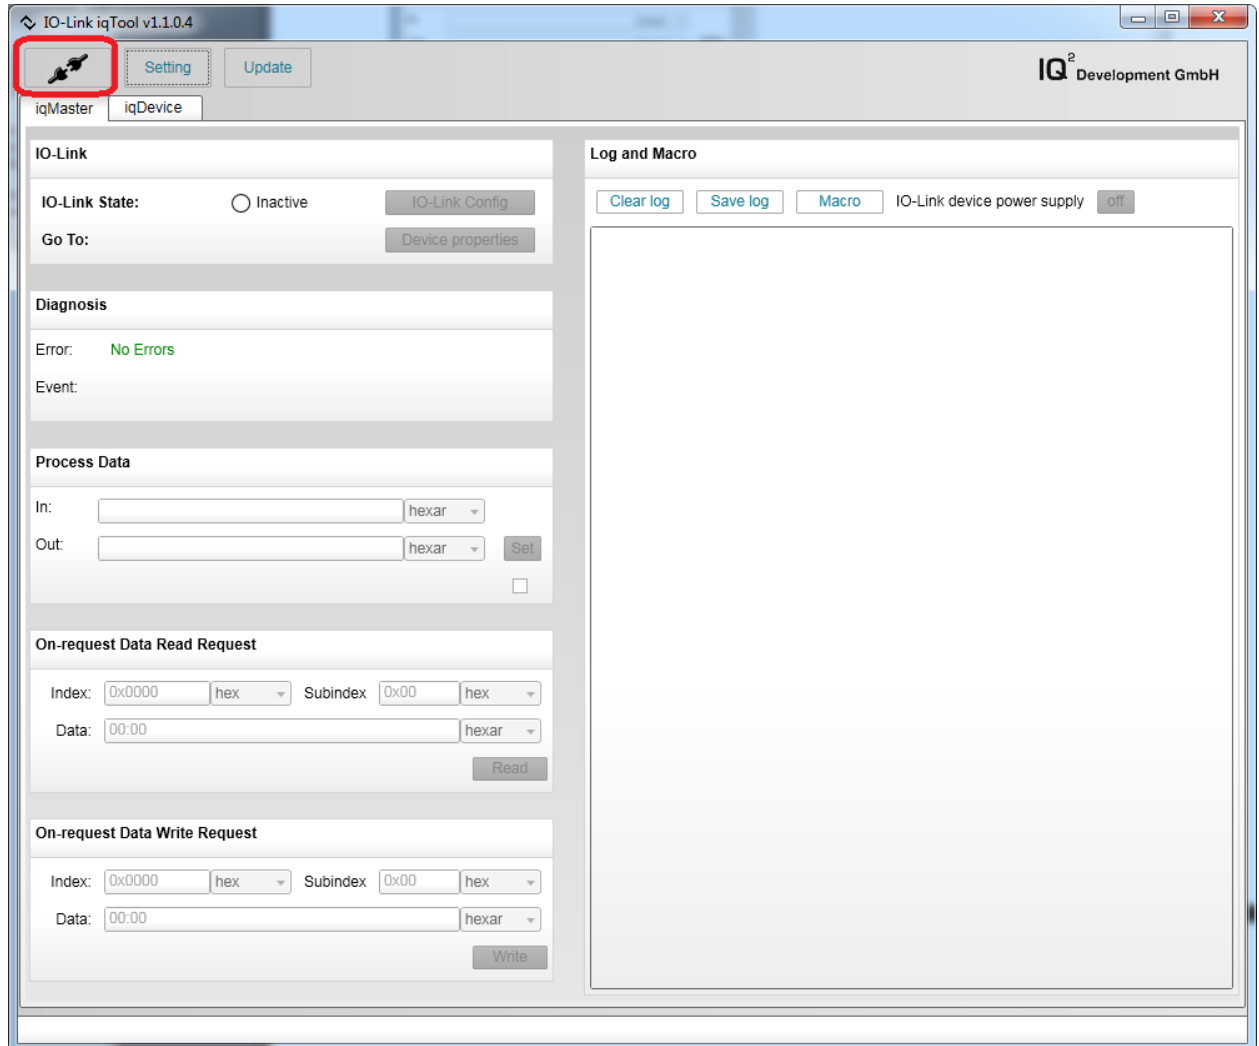

**Figure 9. Press the Connect button in the iqTool.**

10. If the COM port is not found automatically, open **Device Manager** in your Windows operating system as shown in Figure 10 to verify to which COM port the iqlInterface hardware is connected. Then manually set that COM port in the **IQ Connection Settings** window and press the **Connect** button again. If you still cannot connect after doing this step, contact IQ<sup>2</sup> Development's technical support or refer to IQ<sup>2</sup> Development iqlInterface user manual located at <http://www.iq2-development.com/downloads/>.

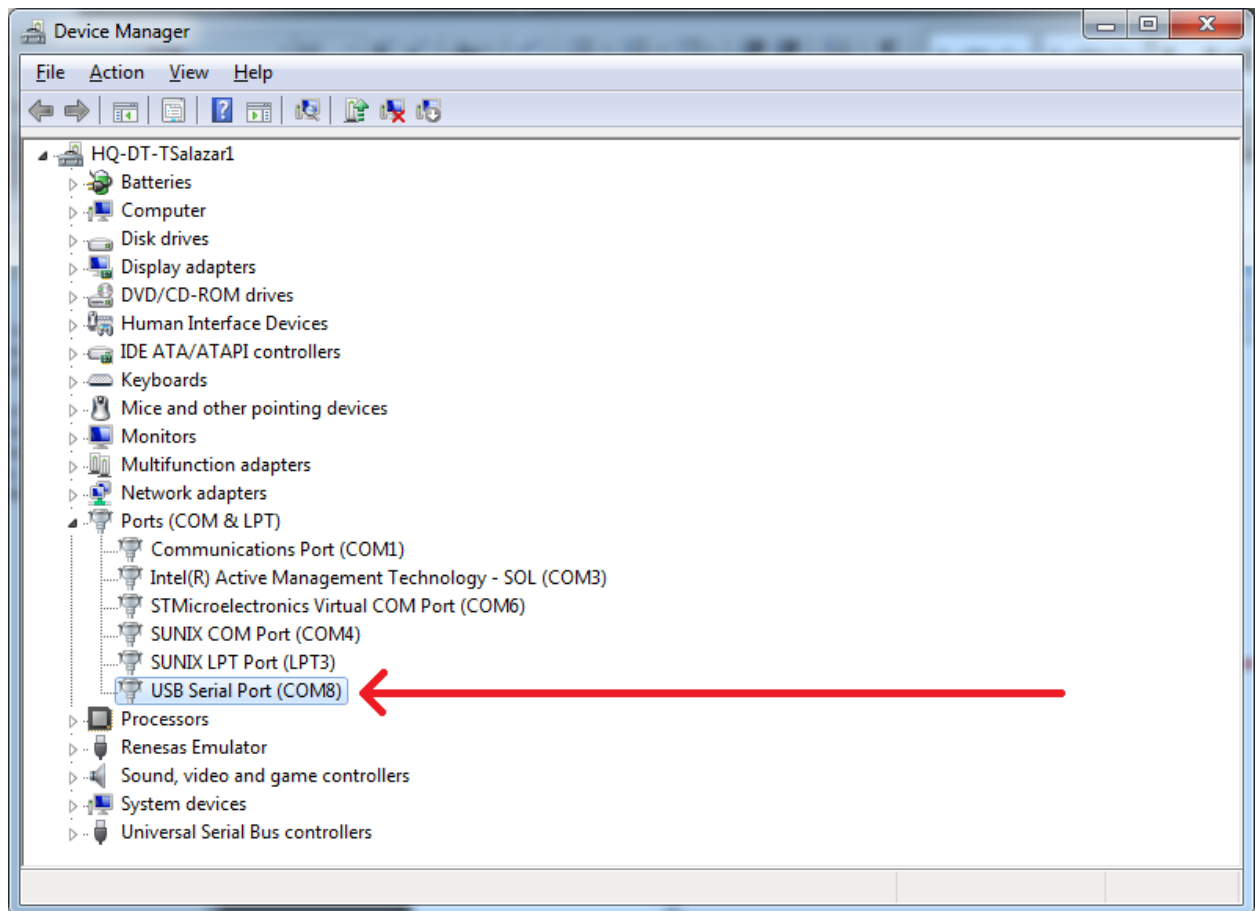

**Figure 10. Device Manager built into Windows.**

11. After the iqTool has connected to the correct COM port, press the **Auto** button as shown in Figure 11.

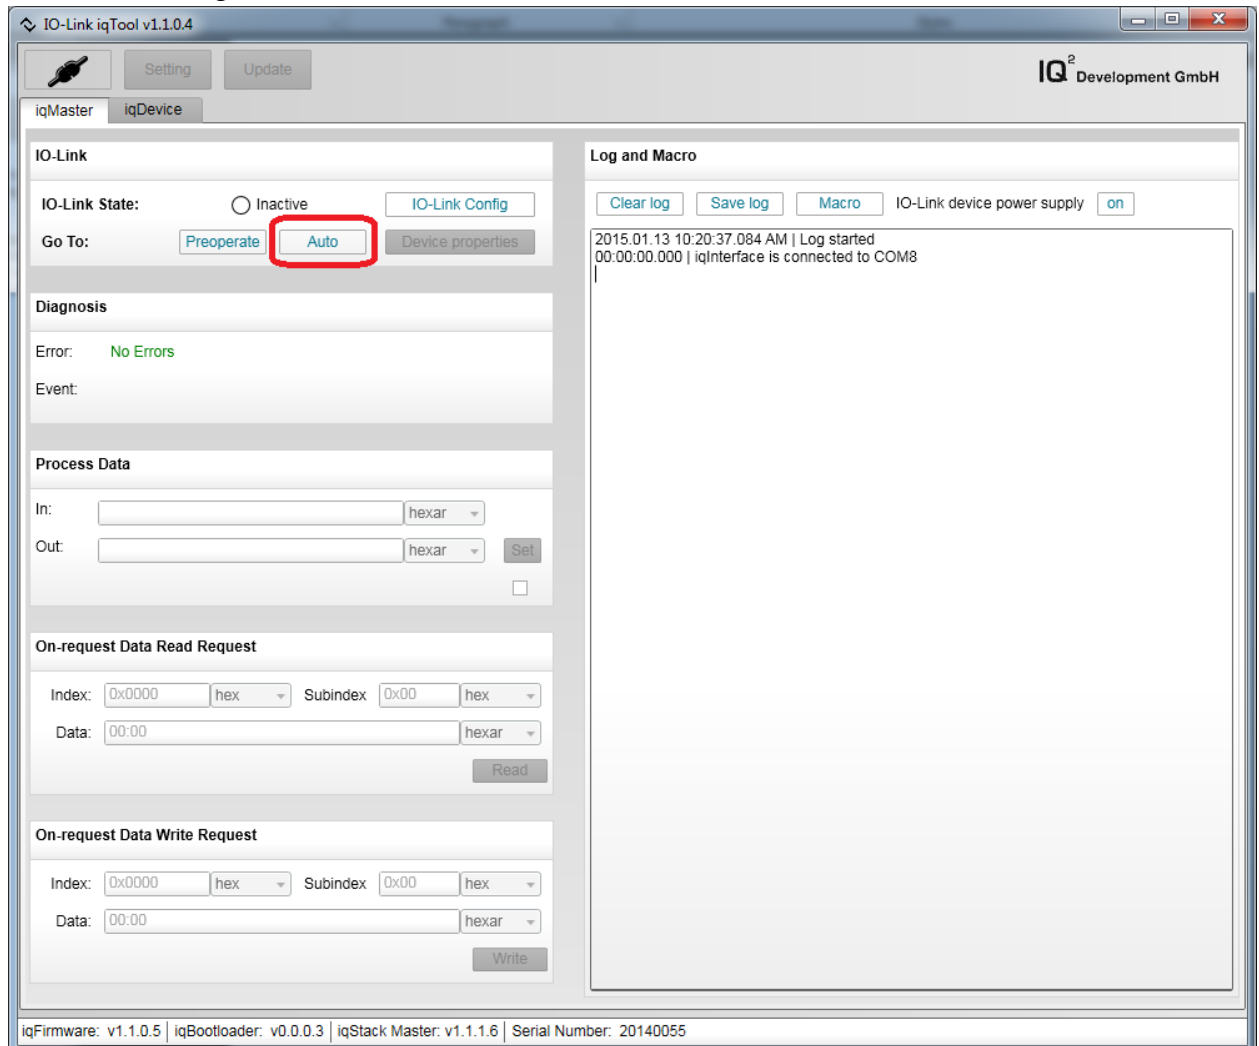


Figure 11. iqTool Auto button.

12. You should now see a flashing green **Operate** circle and the **On-request Data Read Request** group should have become active (ungrayed out) as shown in Figure 12.

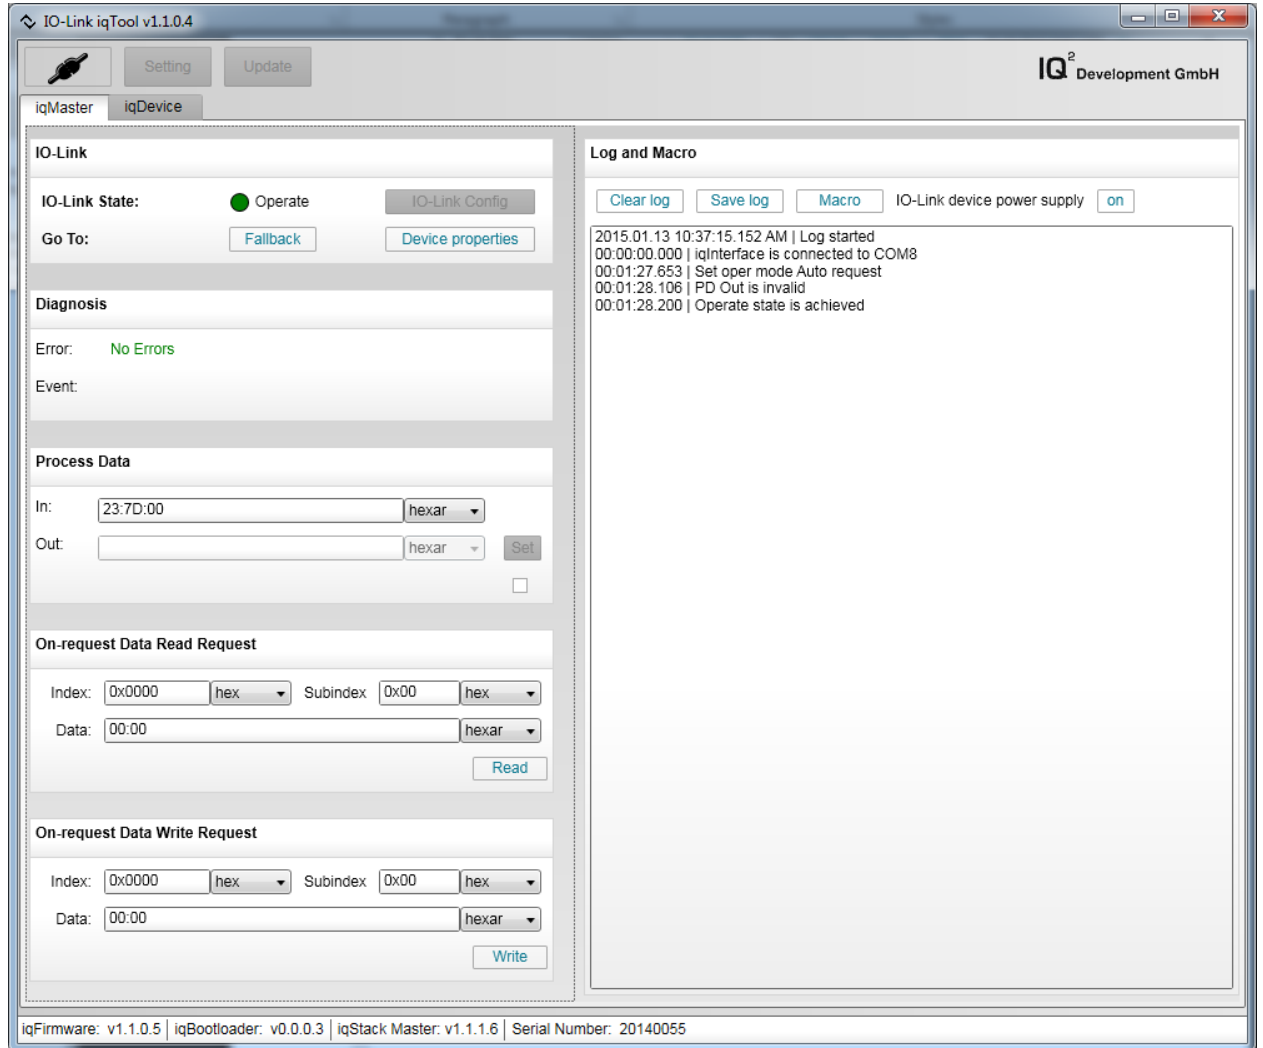


Figure 12. iqTool Operate state.

13. Open the **Maxim-MAXREFDES42-20140824-IODD1.1.html** file to view the index numbers and data formats. Go to the index 261, which is the MAX31865 RTD code register value variable as shown in Figure 13. **Note: RTD code register value is shifted by 1 bit so the value read back needs to be divided by two.**

Variable "MAX31865ATP+ RTD" index=261 id=V\_MAX31865RTD

data type: 16-bit UInteger  
default value: 0  
access rights: ro  
dynamic

octet	0	1
bit offset	15 - 8	7 - 0
element bit	15 - 8	7 - 0

Variable "MAX31865ATP+ High Fault Threshold" index=262 id=V\_MAX31865HighFaultThreshold

data type: 16-bit UInteger  
default value: 65535  
access rights: rw  
excluded from data storage

octet	0	1
bit offset	15 - 8	7 - 0
element bit	15 - 8	7 - 0

Variable "MAX31865ATP+ Low Fault Threshold" index=263 id=V\_MAX31865LowFaultThreshold

data type: 16-bit UInteger  
default value: 0  
access rights: rw  
excluded from data storage

octet	0	1
bit offset	15 - 8	7 - 0
element bit	15 - 8	7 - 0

Variable "MAX31865ATP+ Fault Status" index=264 id=V\_MAX31865FaultStatus

data type: 8-bit UInteger  
default value: 0  
access rights: ro  
dynamic

octet	0	1
bit offset	7 - 0	

Figure 13. .html index definition file – Index 261.

14. Read the RTD code by performing the operations in the **On-request Data Read Request** group below, as shown in Figure 14.

- Change **Index** type to **uint16**.
- Enter **261** in the **Index** field.
- Change the **Data** type to **uint16**.
- Press the **Read** button.

**Note: RTD code register value is shifted by 1 bit so the value read back needs to be divided by two.**

$$\text{RTD} = (\text{Code} * 400) / 2^{15} = (18174 / 2) * 400 / 2^{15} = 110.925 \text{ Ohms}$$

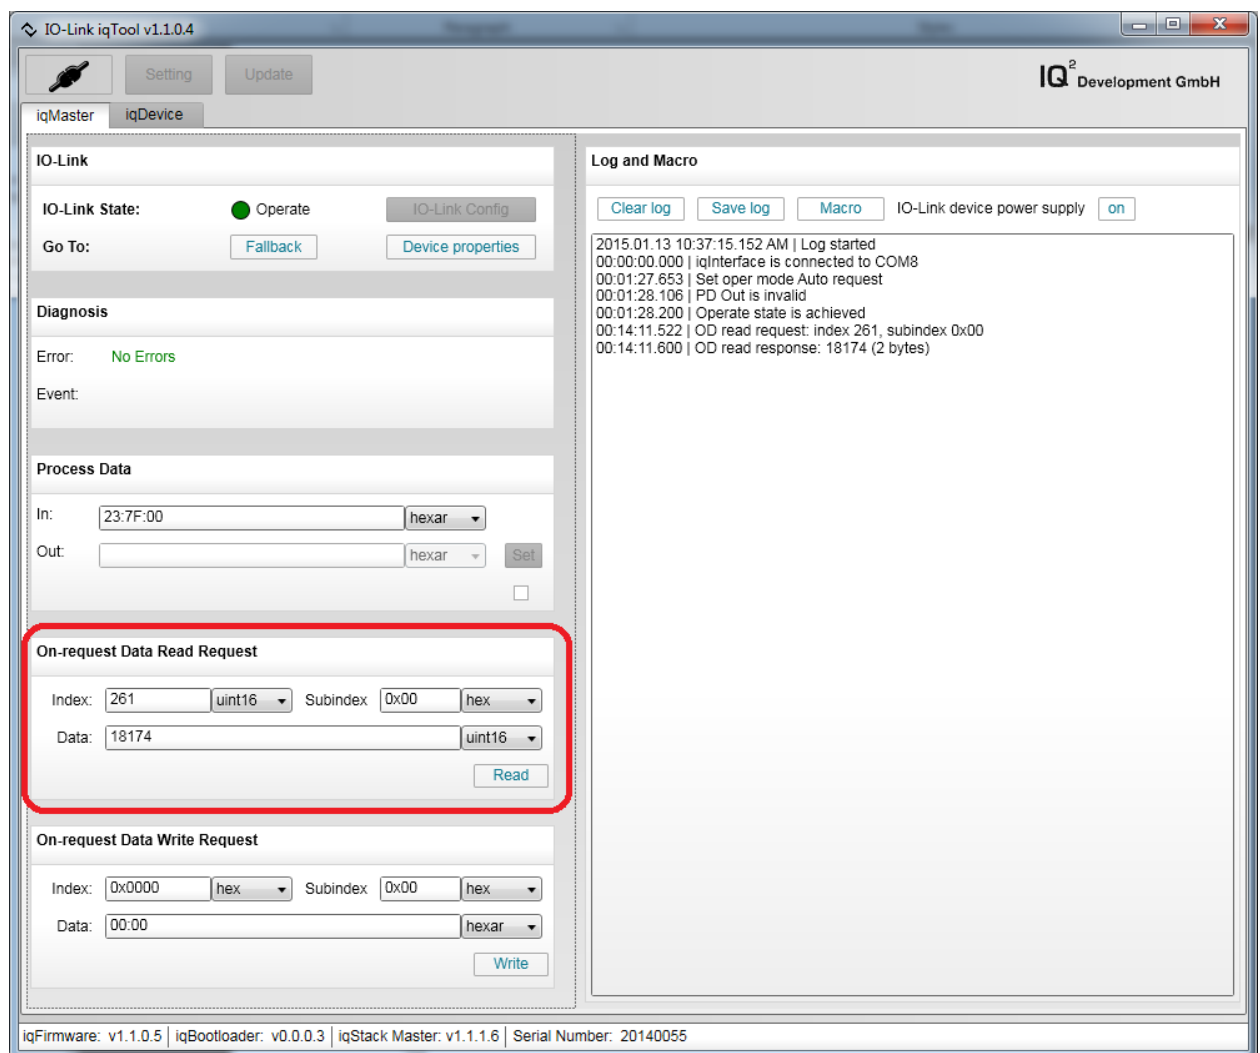


Figure 14. iqTool - On-request Data Read Request group – Index 261.



15. Next, go to index 268 in the **Maxim-MAXREFDES42-20140824-IODD1.1.html** file , which is the ambient temperature in degree C variable, as shown in Figure 15.

Variable "Ambient temperature" index=268 id=V\_Temperature\_C

data type: Float32  
default value: -246.876  
access rights: ro

octet	0	1	2	3
bit offset	31 - 24	23 - 16	15 - 8	7 - 0
element bit	31 - 24	23 - 16	15 - 8	7 - 0

Variable "Ambient temperature switch-point level" index=269 id=V\_TemperatureSPLevel\_F

data type: Float32  
default value: 86  
access rights: ro

octet	0	1	2	3
bit offset	31 - 24	23 - 16	15 - 8	7 - 0
element bit	31 - 24	23 - 16	15 - 8	7 - 0

Variable "Ambient temperature switch-point level" index=270 id=V\_TemperatureSPLevel\_C

data type: Float32  
default value: 30  
access rights: ro

octet	0	1	2	3
bit offset	31 - 24	23 - 16	15 - 8	7 - 0
element bit	31 - 24	23 - 16	15 - 8	7 - 0

Variable "Ambient temperature switch-point hysteresis" index=271 id=V\_TemperatureSPHysteresis\_F

data type: Float32  
default value: 1.8  
access rights: ro

octet	0	1	2	3
bit offset	31 - 24	23 - 16	15 - 8	7 - 0
element bit	31 - 24	23 - 16	15 - 8	7 - 0

Variable "Ambient temperature switch-point hysteresis" index=272 id=V\_TemperatureSPHysteresis\_C

Figure 15. .html index definition file – Index 268.

16. Read the ambient temperature value in degrees C by performing the operations in the **On-request Data Read Request** group below, as shown in Figure 16.

- Enter **268** in the **Index** field.
- Change the **Data** type to **hex**.
- Press the **Read** button.
- Convert read hex value to float32.

Temp = 0x41E00E8A = 28.007099 = 28.01 degrees C

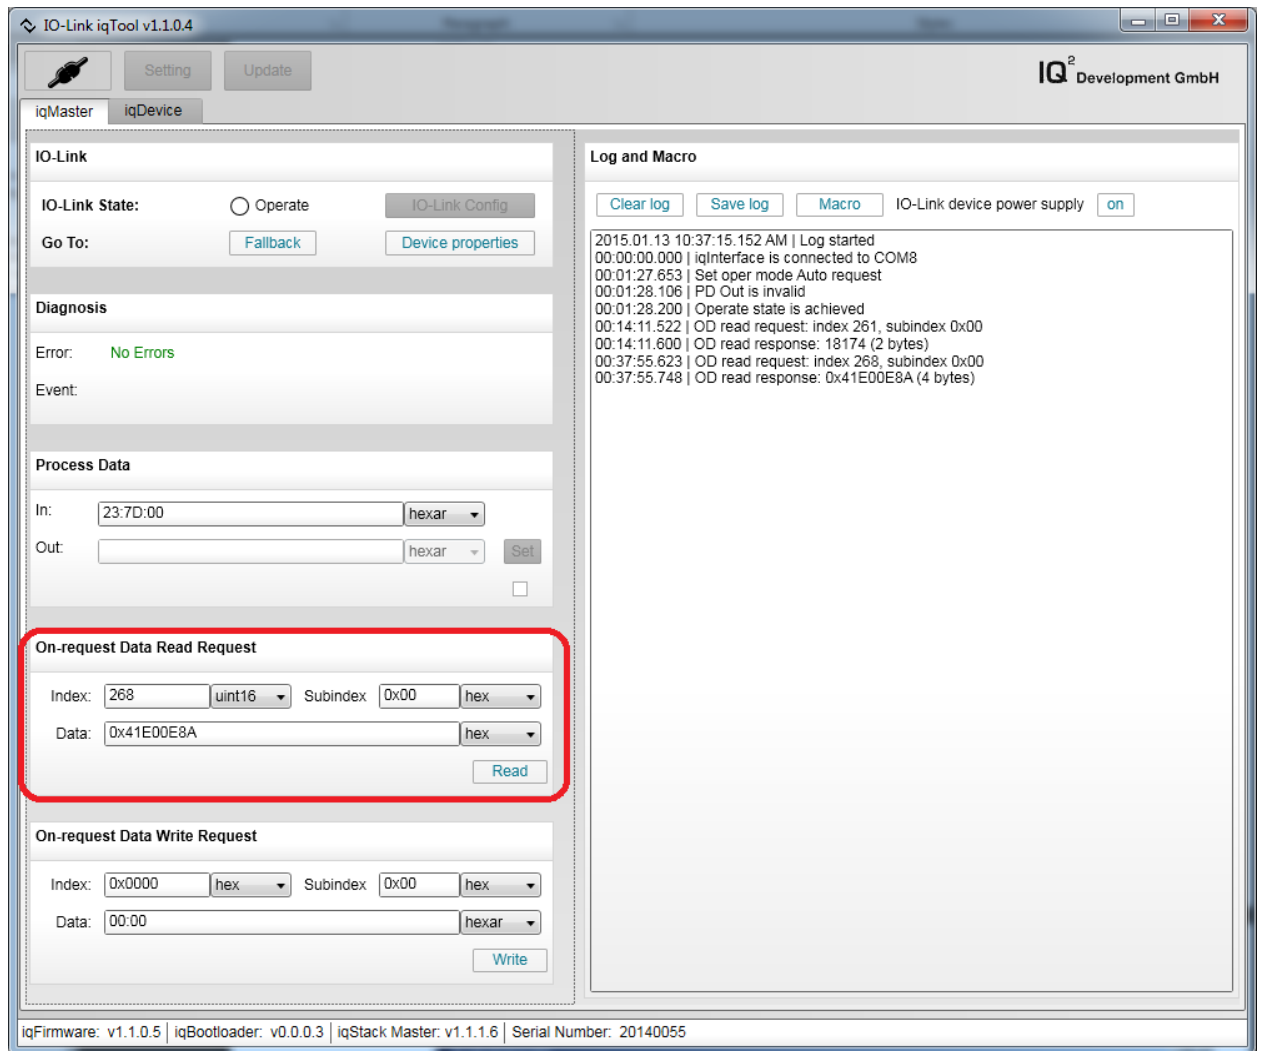


Figure 16. iqTool - On-request Data Read Request group – Index 268.

## **5. Trademarks**

IO-Link is a registered trademark of ifm electronic GmbH.

IQ<sup>2</sup> Development is a registered trademark of IQ<sup>2</sup> Development GmbH.

iqInterface is a registered trademark of IQ<sup>2</sup> Development GmbH.

iqTool is a registered trademark of IQ<sup>2</sup> Development GmbH.

Windows is a registered trademark and registered service mark of Microsoft Corp.

## 6. Revision History

<b>REVISION NUMBER</b>	<b>REVISION DATE</b>	<b>DESCRIPTION</b>	<b>PAGES CHANGED</b>
0	1/15	Initial release	—

Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;
- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком);
- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



## JONHON

«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«FORSTAR» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели, кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный)

Факс: 8 (812) 320-03-32

Электронная почта: [ocean@oceanchips.ru](mailto:ocean@oceanchips.ru)

Web: <http://oceanchips.ru/>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А