




MAXREFDES27# IO-Link Proximity Sensor Quick Start Guide

Rev 0; 4/14

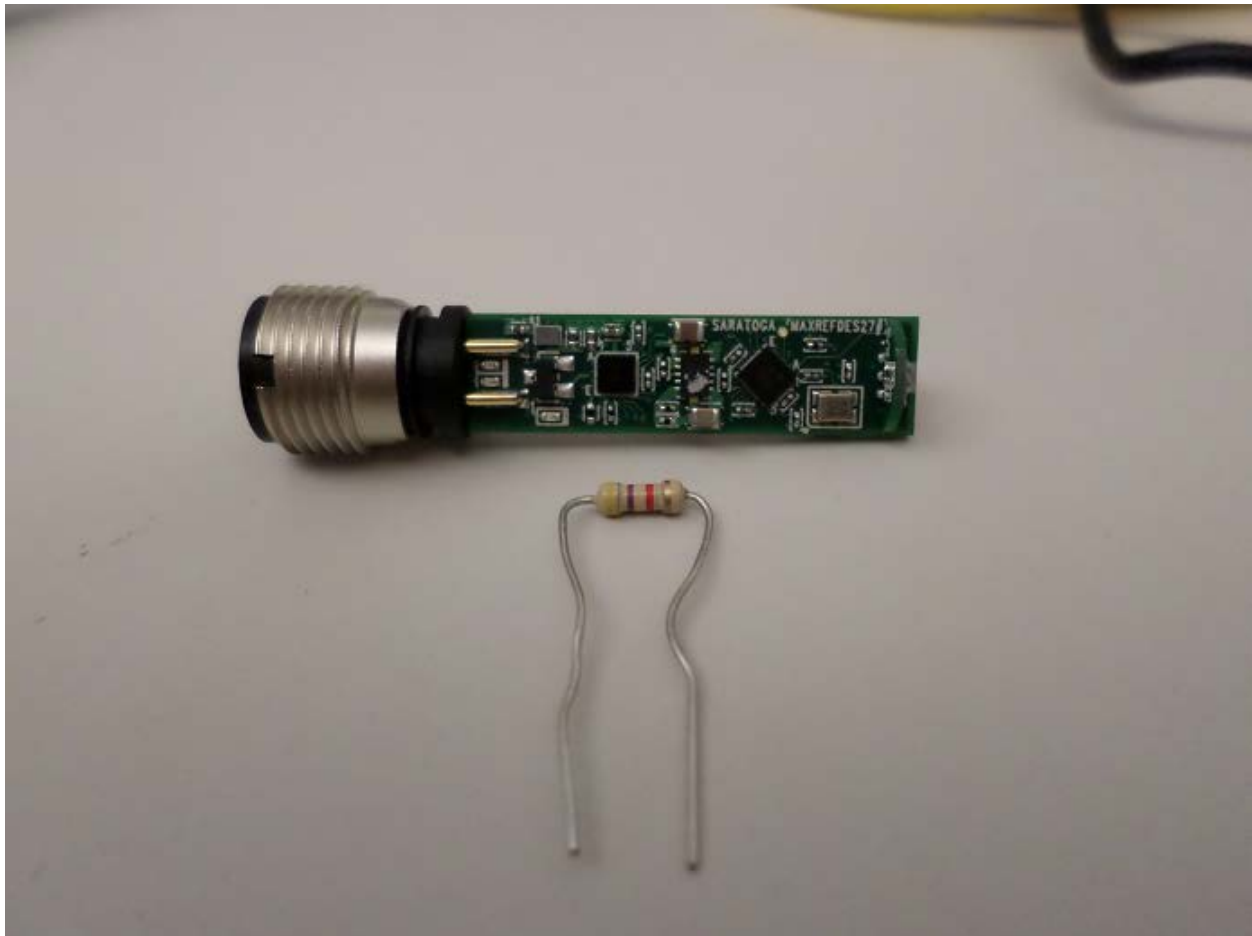

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.

Maxim Integrated 160 Rio Robles, San Jose, CA 95134 USA 1-408-601-1000

Table of Contents

1. Required Equipment.....	3
2. Overview.....	3
3. Included Files	5
4. Procedure	6
5. Appendix A: Project Structure and Key Filenames	25
6. Trademarks	25
7. Revision History.....	26

1. Required Equipment

- PC with Windows® 7 (*Verify with Balluff that your version of Windows is supported before purchasing their software.*)
- Saratoga (MAXREFDES27#) board
- One Balluff USB IO-Link® master (silver box) with corresponding USB and power cables (This must be purchased separately.)
- Balluff IO-Link Device Tool (tested with version 2.11.1 and comes with the Balluff USB IO-Link master)
- One IO-Link cable (yellow) (This must be purchased separately.)
- RD27_RL78_V01_XX.ZIP (Maxim-Saratoga-20140318-IODD1.0.1.xml), where XX = minor version

2. Overview

Below is a high-level overview of the steps required to quickly get the Saratoga design running by connecting it to the Balluff USB IO-Link master and Balluff software. Detailed instructions for each step are provided in the following pages. **The Saratoga (MAXREFDES27#) subsystem reference design will be referred to as Saratoga throughout this document.**

- 1) Connect the A-to-B Type USB cable from the PC and yellow IO-Link cable to the Balluff USB IO-Link master (silver box with part number BNI USB-901-000-A501) as shown in [Figure 1](#).
- 2) Connect the MAXREFDES27# proximity sensor board to the other side of the yellow IO-Link cable. Make sure the green LED is lit as shown in [Figure 2](#). The red and yellow LEDs do not need to be lit.
- 3) Download the latest “all design files” **RD27V01_XX.ZIP** file located at the Saratoga page.
- 4) Extract the **RD27V01_XX.ZIP** file to a directory on your PC.
- 5) Install the Balluff IO-Link Device Tool.
- 6) Add the Saratoga proximity sensor as a device into the Balluff IO-Link Device Tool.
- 7) Connect to the Saratoga by pressing the online connection button.



Figure 1. MAXREFDES27# Board Connected to a Balluff USB IO-Link Master

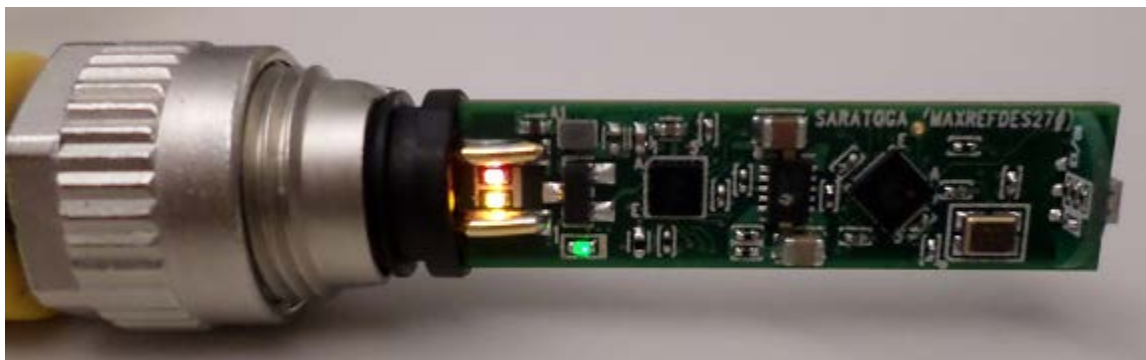


Figure 2. Green LED Is Lit

3. Included Files

The **RD27_RL78_V01_XX.ZIP** contains the corresponding IO-Link Device Descriptor (IODD) files. The IODD contains information on communication properties, device parameters, identification, process, and diagnostic data. It includes an XML file, an image of the device, an icon image, and the manufacturer's logo. The IODD structure is the same for all devices of all manufacturers, and is always represented in the same way by the IODD interpreter tools.


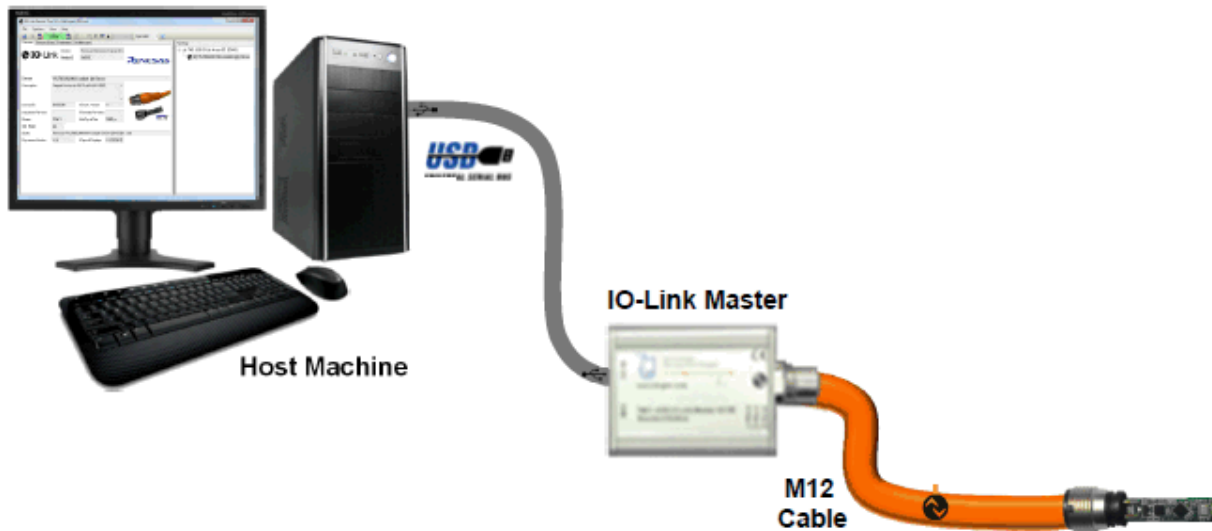


Figure 3. Block Diagram of System

4. Procedure

1. Connect the A-to-B Type USB cable from the PC and yellow IO-Link cable to the Balluff USB IO-Link master (silver box with part number BNI USB-901-000-A501) as shown in [Figure 1](#).
2. Connect the MAXREFDES27# proximity sensor board to the other side of the yellow IO-Link cable. Make sure the green LED is lit as shown in [Figure 2](#). The red and yellow LEDs do not need to be lit.
3. Download the latest “all design files” **RD27V01_XX.ZIP** file at www.maximintegrated.com/AN5868. All files available for download are available at the bottom of the page.
4. Extract the **RD27V01_XX.ZIP** file to a directory on your PC. The location is arbitrary but the maximum path length limitation in Windows (260 characters) should not be exceeded.
5. Install the Balluff IO-Link Device Tool. This tool comes with the purchase of the Balluff USB IO-Link master (silver box with part number BNI USB-901-000-A501). Run the **setup.exe** file using the **Run as administrator** mode.

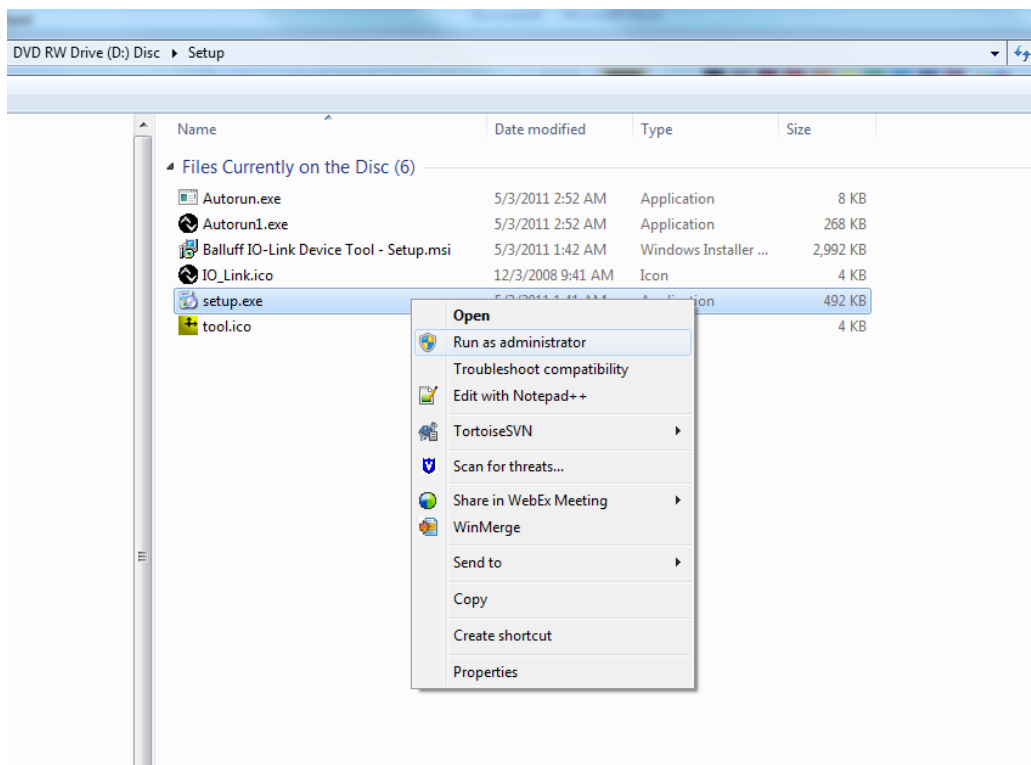


6. Choose the default installation folder and press the **Next** button.



7. Press the **Next** button.




8. Change the language to English if applicable.

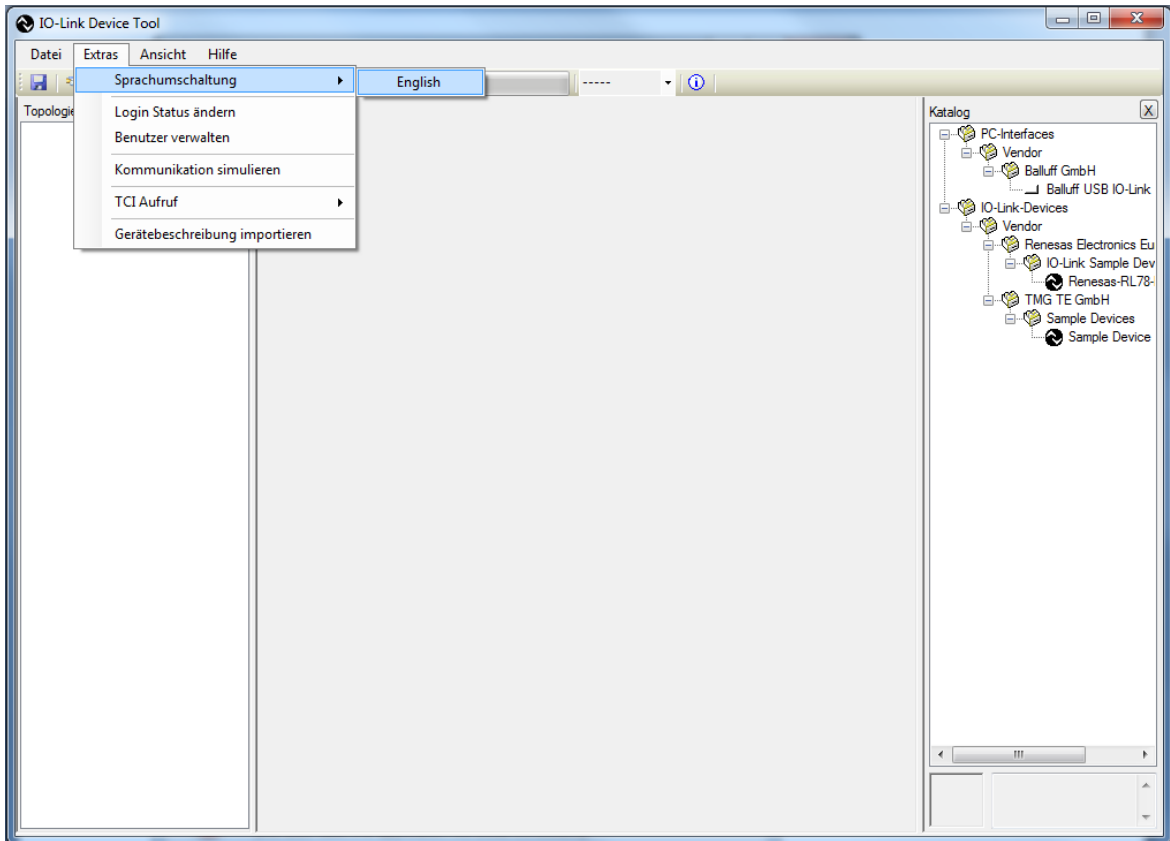

9. Close the program by clicking the **X** in the top right corner.


10. Press the **Close** button to complete the installation.

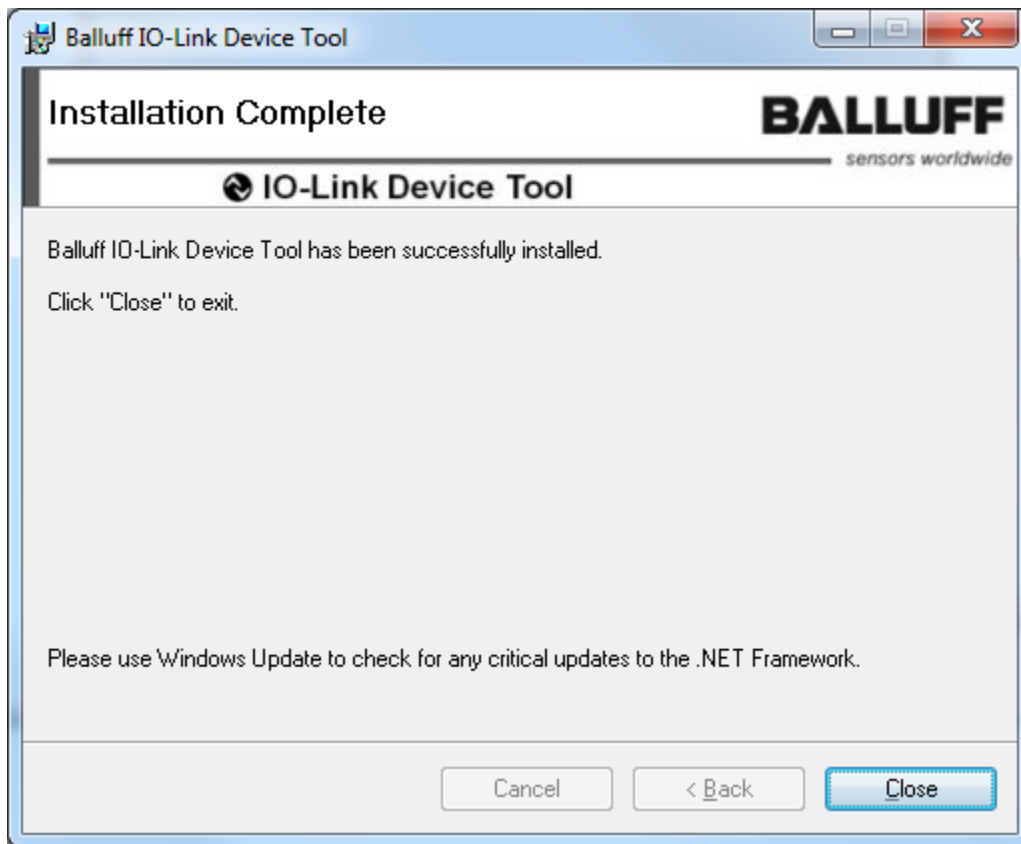


11. Verify the version of the IO-Link Device Tool. In this case, version 2.1.11 was used.




12. The **User Login** should be in **Specialist** mode. **Password** is **special**.

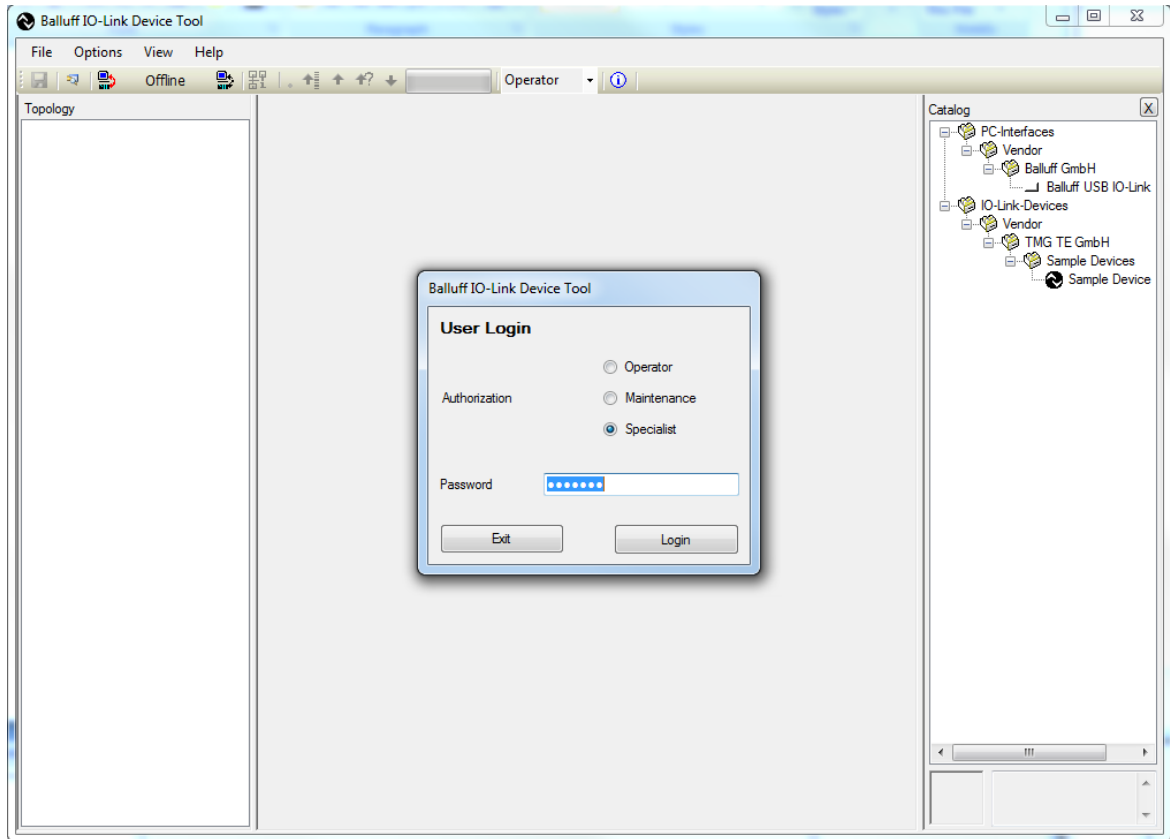


13. Import the IODD xml file for the Maxim sensor. In this case, the file is **Maxim-Saratoga-20140318-IODD1.0.1.xml** and can be located in the **RD27_RL78_V01_00.ZIP** file.

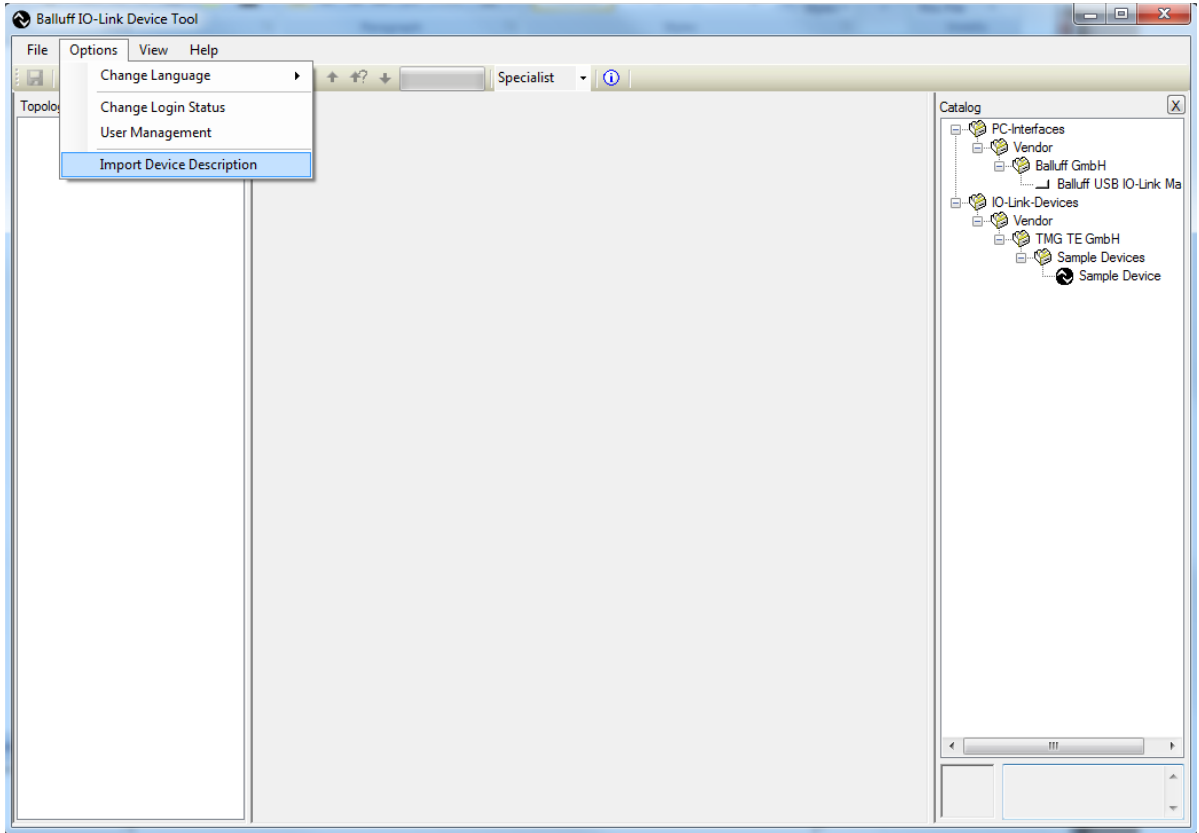


14. In this case, this is the IODD file shown below, but may be a different .xml file if a different Maxim sensor is used.

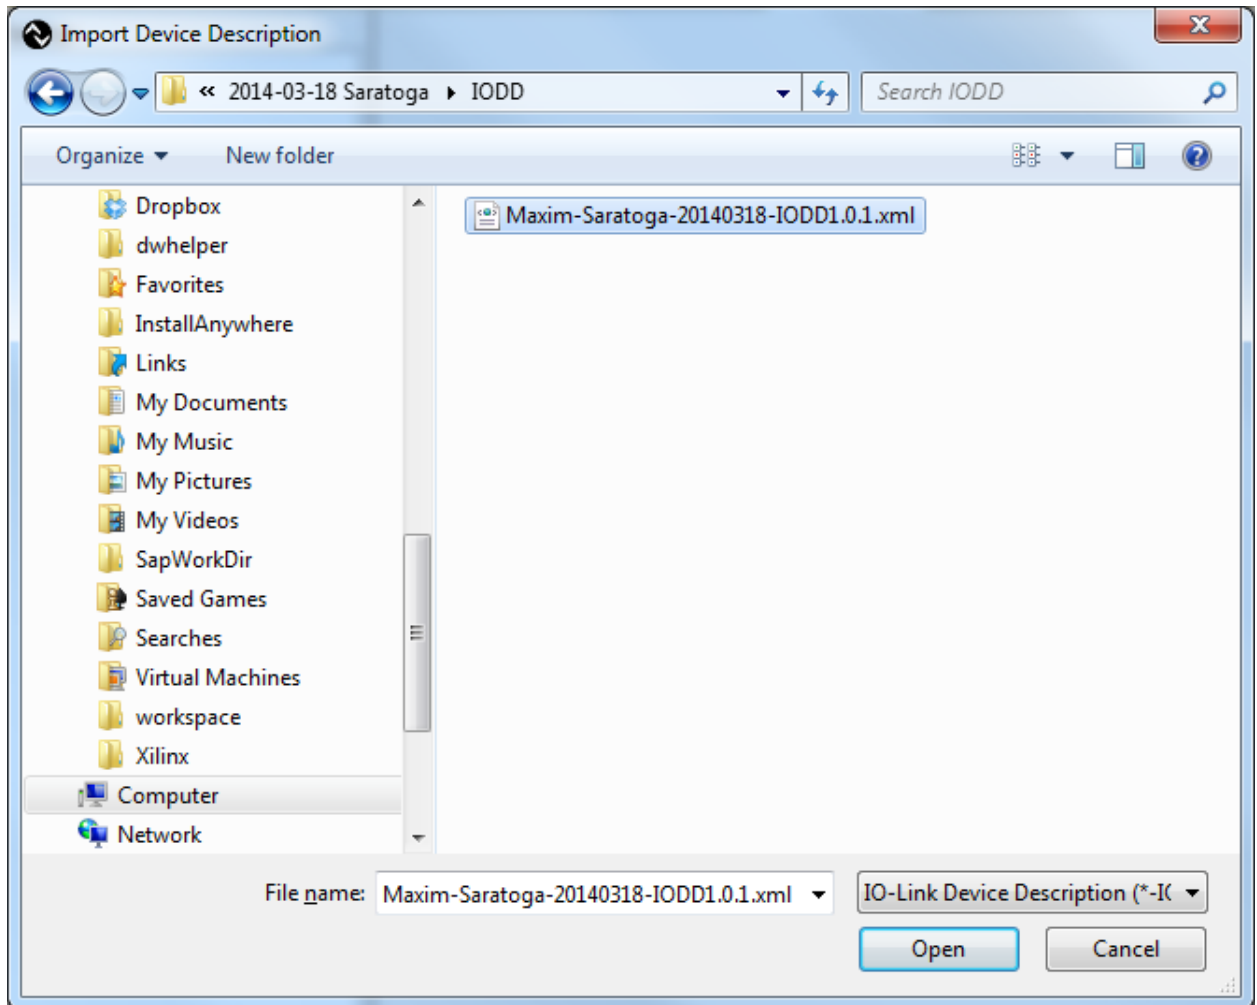


15. See the Maxim Sensor show up in the IO-Link devices in the **Catalog** window.

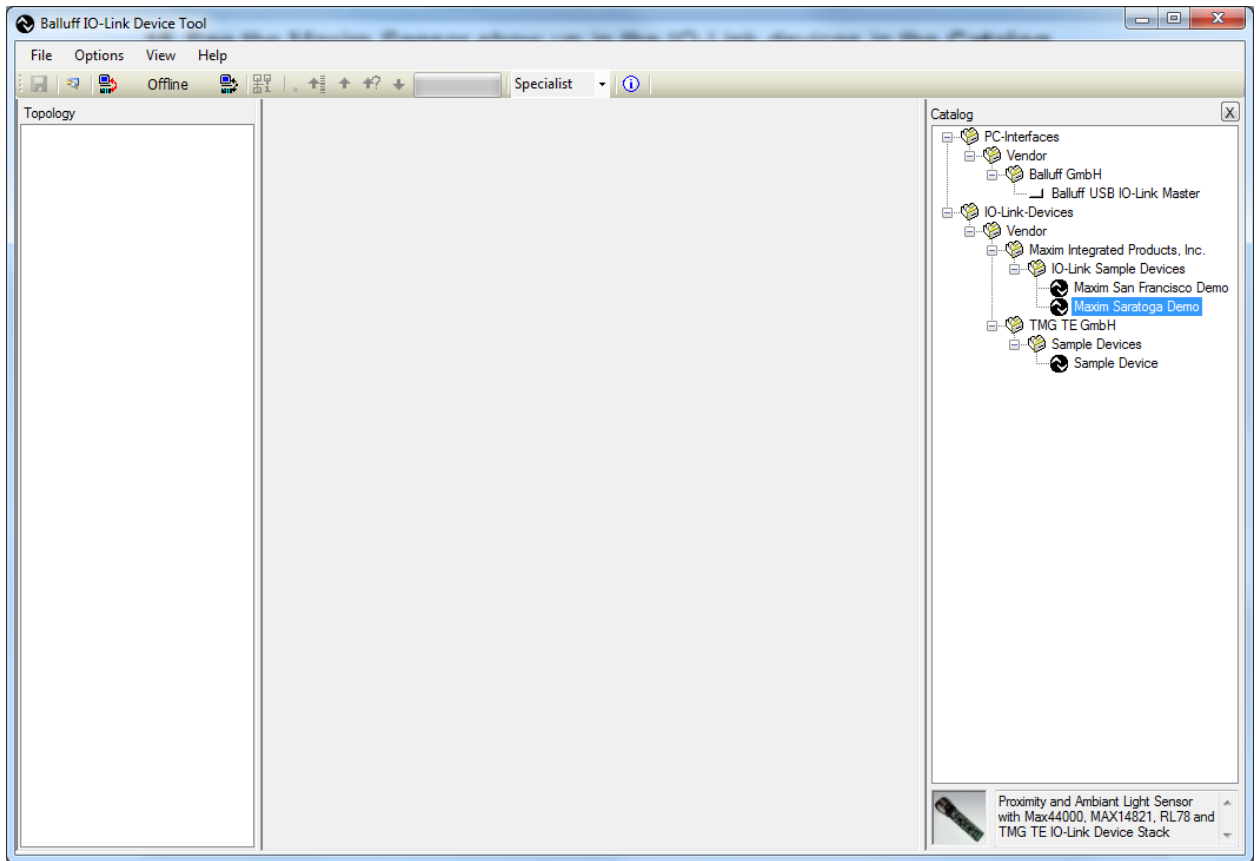

16. Select File | Properties.

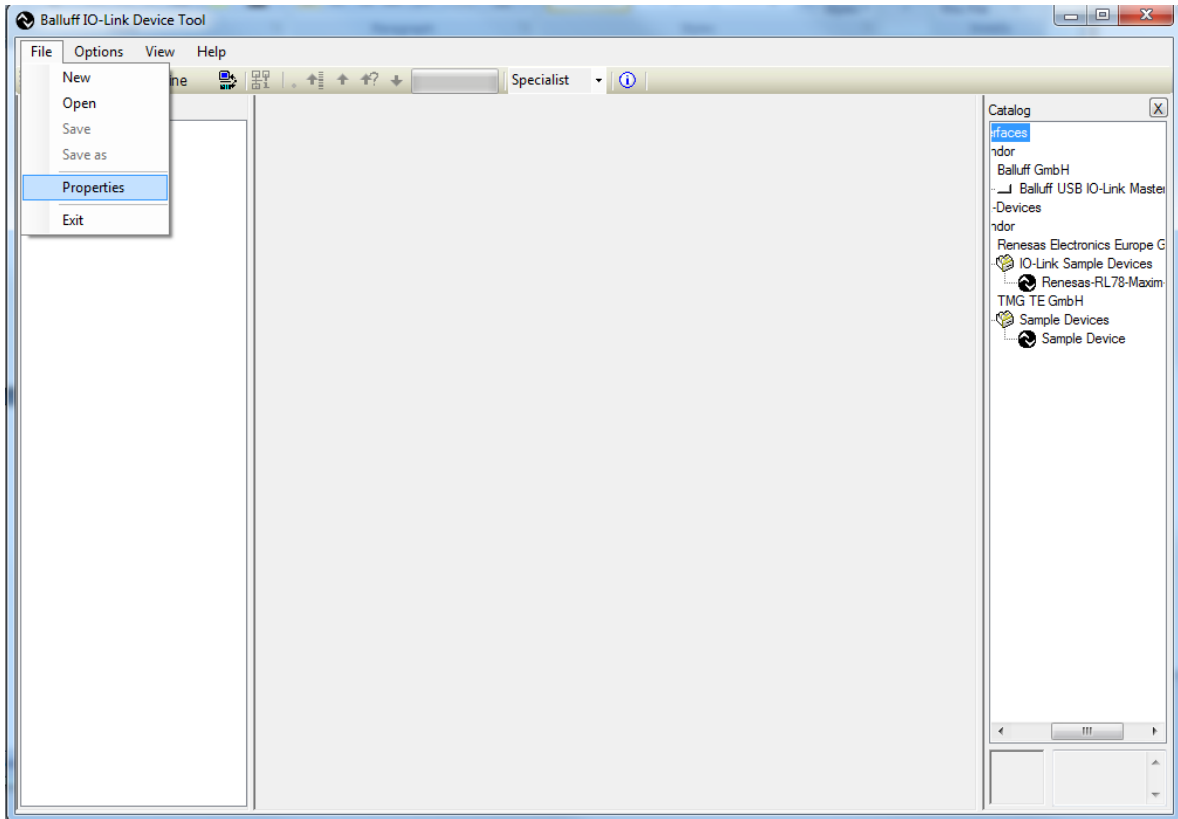


17. After **Properties** is selected, the screen looks like the below screenshot.

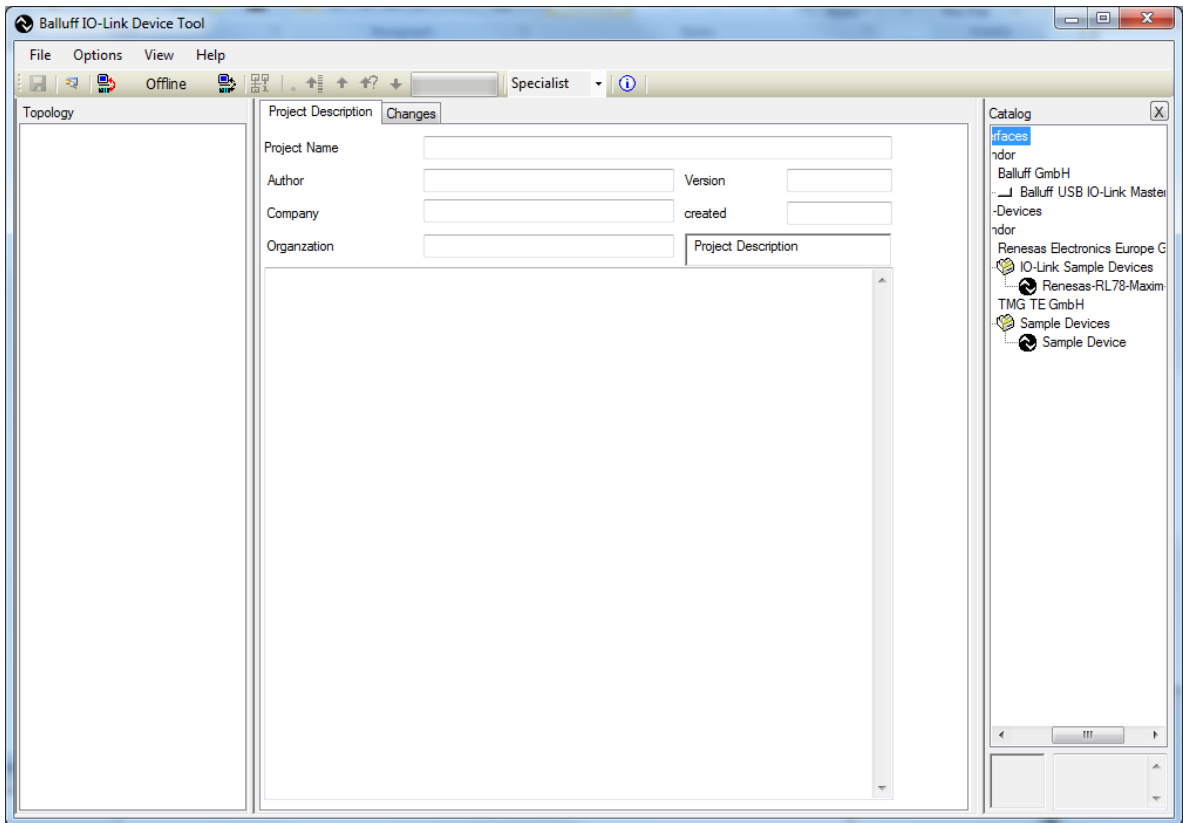


18. Verify that the USB cable is plugged into the silver USB IO-Link Master box.


19. Drag the **Balluff USB IO-Link Master** to the **Topology** window.

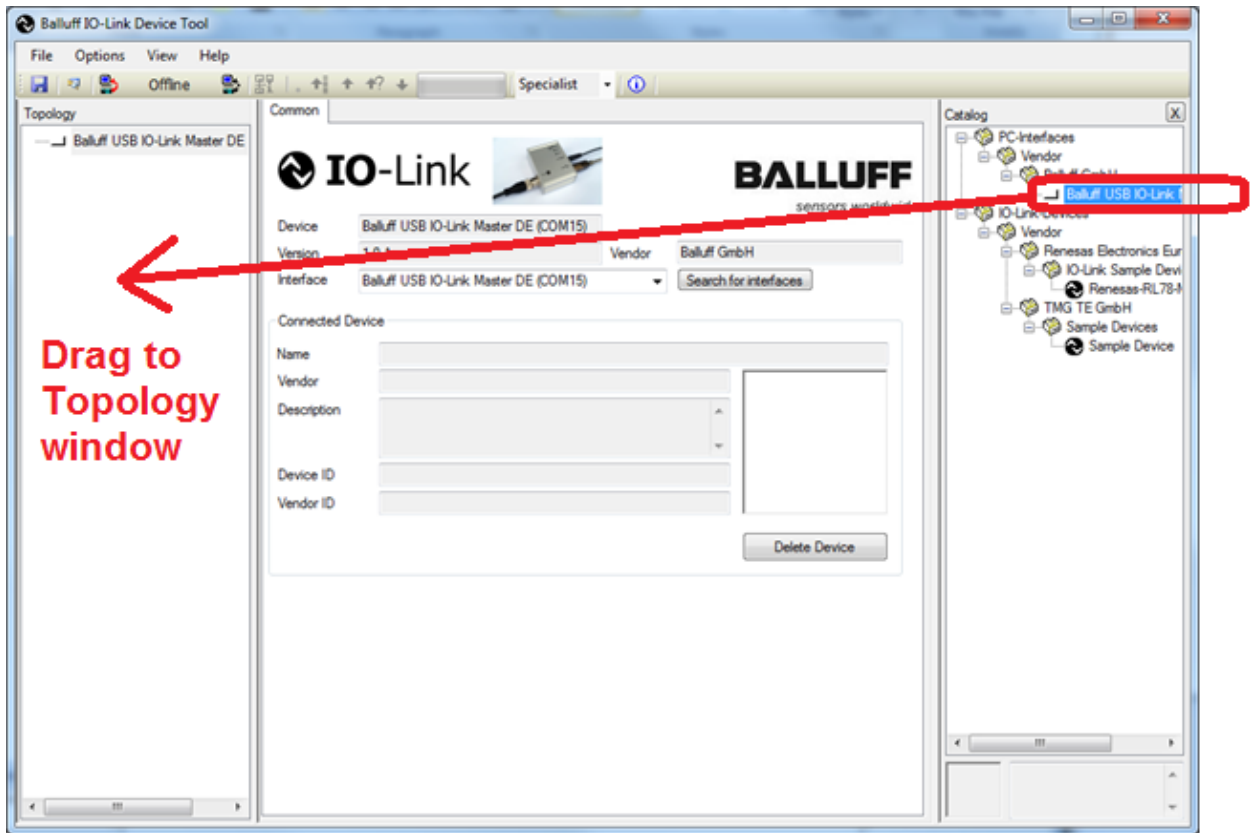


20. Drag the Maxim sensor to the **Name** field in the **Common** window.

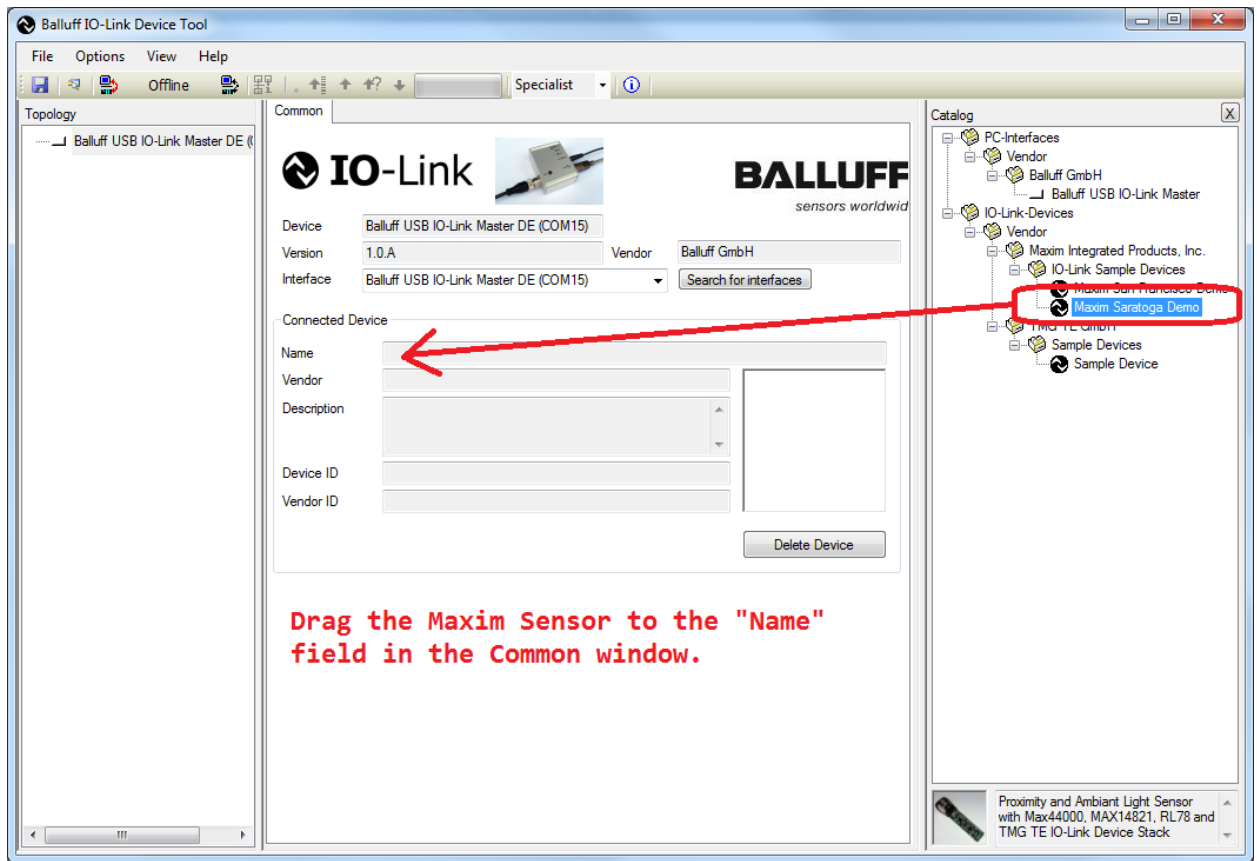


21. Verify a picture of the sensor shows up with the name **Maxim Saratoga Demo**.

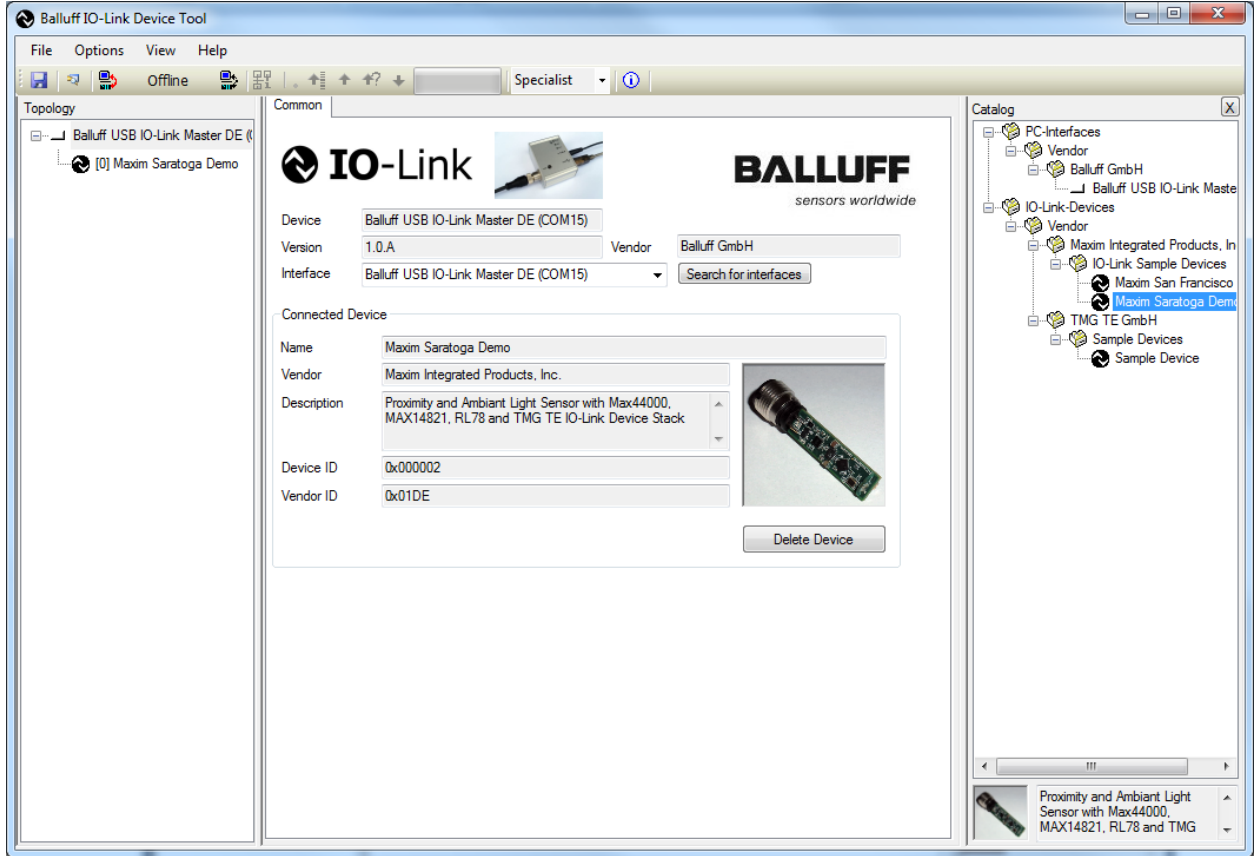

22. Press the **Connect** button on the Balluff IO-Link Device Tool software.

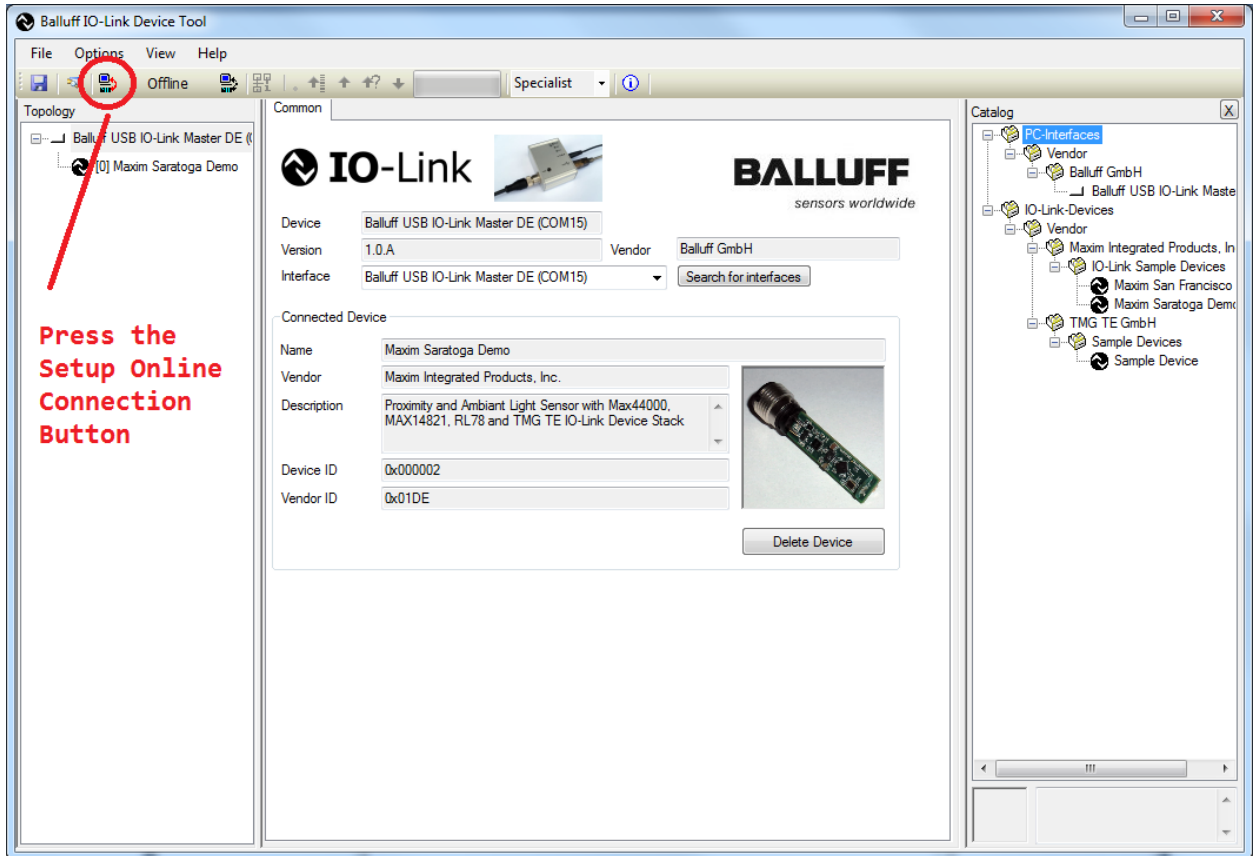

23. If your sensor has a problem or is unconnected, you will see the below figure.

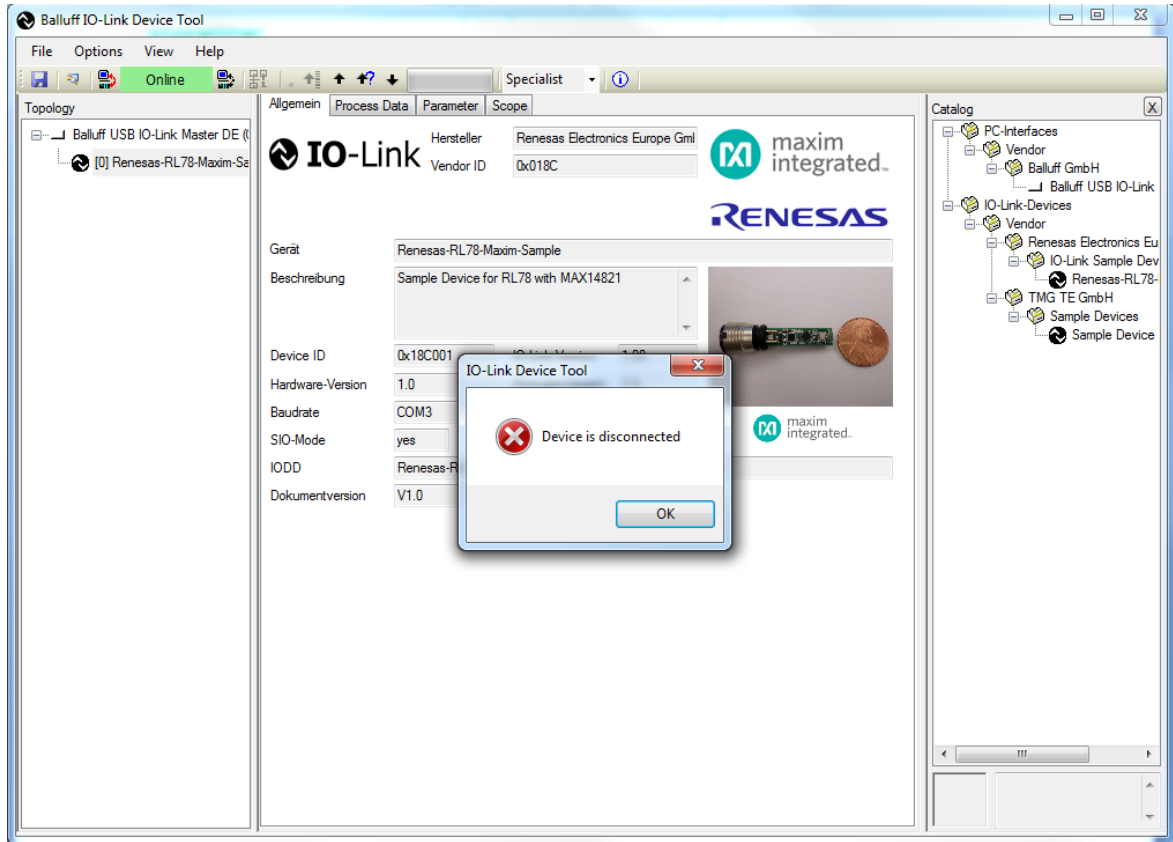

24. If you see the green **Online** indication on the software, the sensor has connected. Click on the Maxim sensor device icon to make the **Parameter** tab show up. Change the values as shown in the figure below by right-clicking with the mouse.



Click here to make the Parameters tab show up.

Then click on the Parameters tab and change the values as shown to the right.


Right Click the mouse to change the values

Name	R/W	Preadjustment	Value	Unit
[.] Identification				
Vendor Name	ro	Maxim Integrated Product...	Maxim Integrated Product...	
Vendor Text	ro	http://www.maximintegrat...	http://www.maximintegrat...	
Product Name	ro	Maxim Saratoga	Maxim Saratoga	
Hardware Revision	ro	1.0	1.0	
Firmware Revision	ro	1.0	1.0	
Application Specific Name	rw	USE IO-Link	USE IO-Link	
[.] Parameter				
Operating Mode	rw	Proximity Sensor	Proximity Sensor	
Pin2 Mode	rw	Sensor Switch	Sensor Switch	
Gain	rw	1 x	1 x	
Conversion Time	rw	100	100	
Trim Gain	rw	use factory-programmed tr...	use factory-programmed tr...	
gain trim green channel	rw	0	0	
gain trim IR channel	rw	0	0	
gain trim green channel factory setting	ro	0	0	
gain trim IR channel factory setting	ro	0	0	
LED Current	rw	disabled		
Ambient Light Teach Value	rw	500		
Proximity Value	rw	128		
System Command <Restore Factory Setting>	wo			
System Command <Teach>	wo			
[.] Observation				

25. Click on the **Process Data** tab and vary your hand approximately 20mm to 150mm from the tip of the proximity sensor to see the changing value.

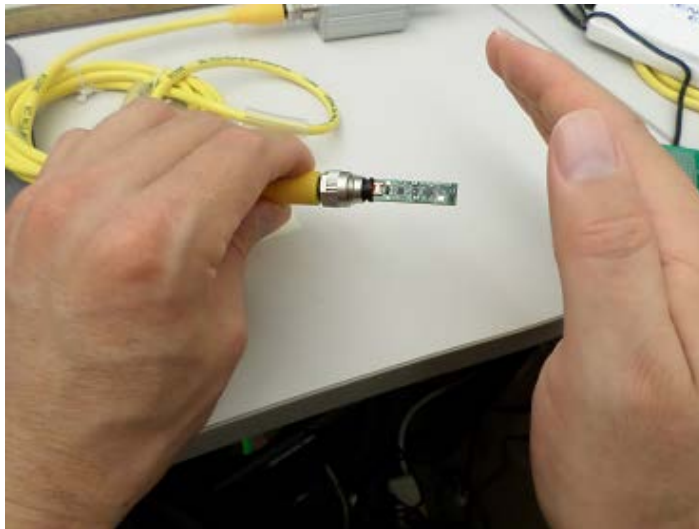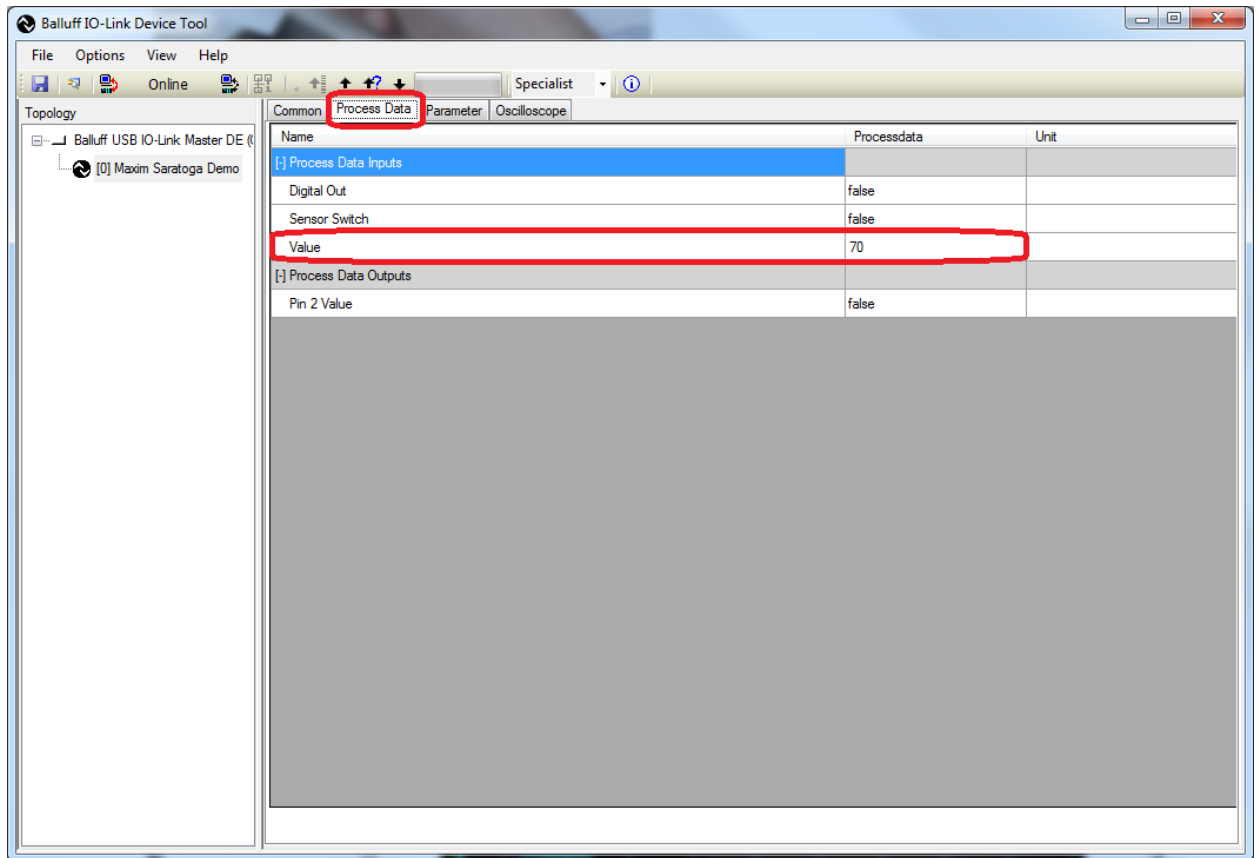


5. Appendix A: Project Structure and Key Filenames

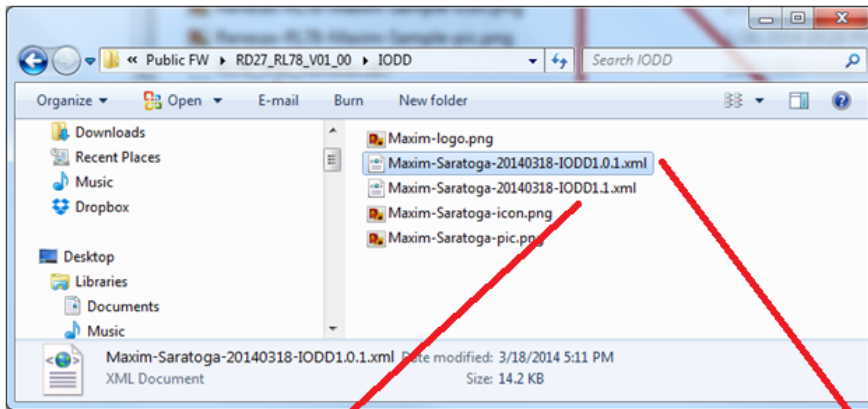

IODD IO-Link Ver 1.1 compliant

IODD IO-Link Ver 1.01 compliant

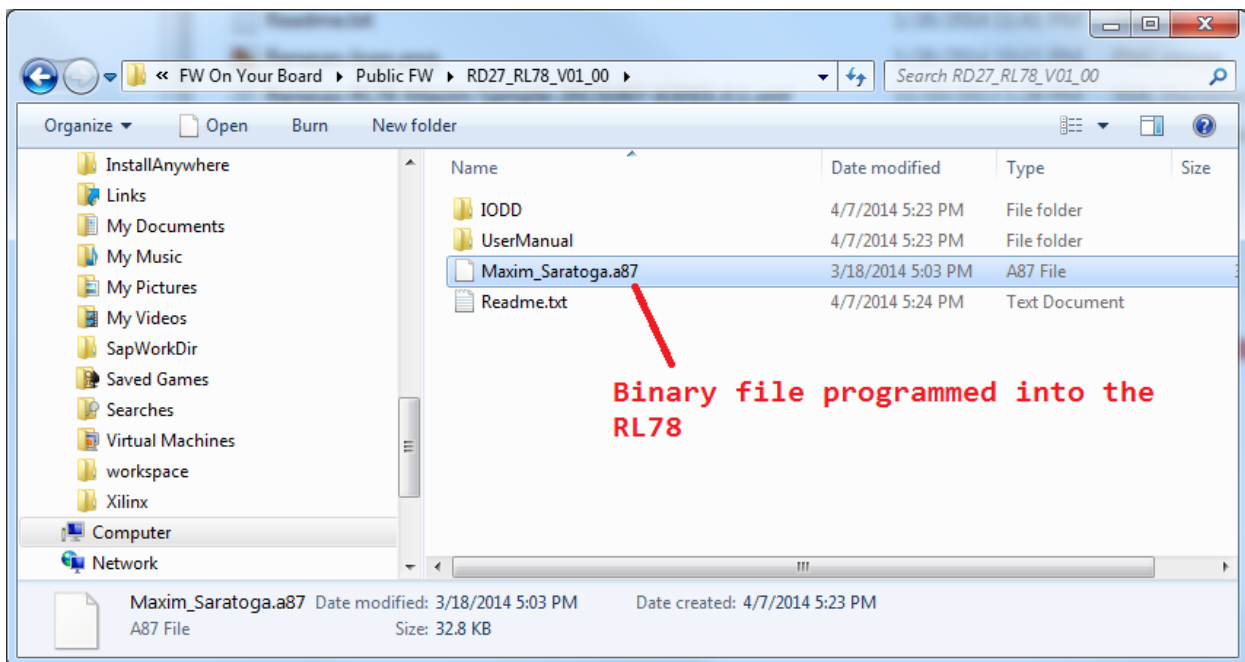

Binary file programmed into the RL78

6. Trademarks

IO-Link is a registered trademark of ifm electronic GmbH.

Windows is a registered trademark and registered service mark of Microsoft Corp.

7. Revision History

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	4/14	Initial release	—

Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;
- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком);
- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



JONHON

«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«FORSTAR» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели,
кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный)

Факс: 8 (812) 320-03-32

Электронная почта: ocean@oceanchips.ru

Web: <http://oceanchips.ru/>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А