

MEMORY HICORDER 8807-51, 8808-51

Recorders



Instantaneous Analysis and Long-term Recording of Harmonic Waves for Maintenance of Commercial Power Systems




Are the harmonics in your company's power lines in order?

The new 8807-51/8808-51 is an economical tool that will clearly identify and analyze the current harmonic state of your power system.

To the 8807-01/8808-01 MEMORY HICORDERs with their popular detachable printers, HIOKI has added the 8807-51/8808-51 MEMORY HICORDERs with harmonic analysis function. Capable of both instantaneous analysis and time series analysis of harmonics, these units can measure and analyze harmonic current flowing into and out of a commercial power system, as well as harmonic components piggybacking on power line voltage.

Instantaneous harmonic analysis

- Can measure harmonics up to 40 orders from the fundamen-tal
- Analysis display includes RMS value, content factor, phase angle, active power, and power phase angle for each order of harmonics (numeric and graphic display)
- Analysis display of total RMS value, total distortion, active/ reactive/apparent power, and power factor (numeric display)
- Bar graph and numeric data display
- Power phase angle can be displayed as a vector

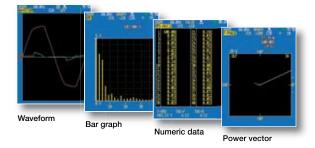

Time series recording

- Harmonic analysis of up to 20 items
- Data recorded in time series
- When analyzing four items simultaneously, data can be recorded for up to 150 days

Flexible connection options

- Supports independent channels, singlephase two-wire, single-phase three-wire, and three-phase three-wire
- · Full isolation of all analog channels



Useful measurement functions

- · Connection check
- · Level check
- · Over-range function

Direct read-out of current through general-purpose clamps

Compatible with HIOKI's 9018-10 and 9132-10 CLAMP-ON

This catalog is dedicated to featuring the harmonic wave analysis functions of Models 8807-51 and 8808-51, functions that are not included in the standard Models 8807-01 and 8808-01. As the waveform recording functions of Models 8807-51 and 8808-51 are identical to those of Models 8807-01 and 8808-01, please refer to the catalog for the latter models for detailed descriptions.








Use the 8807-51, 8808-51 to determine the current


- Harmonic Wave Functions -

Harmonic wave instantaneous analysis mode

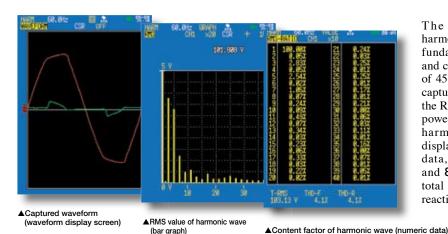

The 8807-51 and 8808-51 can analyze harmonic components (up to 40 orders from the fundamental wave) that are included in voltage and current in a power line with a base frequency of 45 to 65Hz. Based on the waveform that was captured, the 8807-51 and 8808-51 can analyze the RMS value, content factor, phase angle, active power, and power phase angle for each order of harmonics. The measurement results can be displayed and recorded as a bar graph, numeric data, or power vector diagram. The 8807-51 and 8808-51 can also display numerically the total RMS value, the total distortion, the active/reactive/apparent power, and power factor.


Time series analysis mode for continuous measurement of changes in harmonics

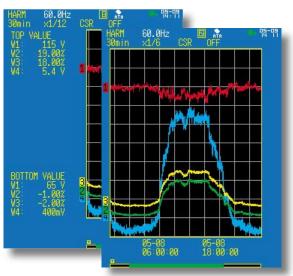

This mode is used to continuously measure changes in the RMS value, content factor, phase angle, active power, and total distortion for each order of harmonics. Measurements are made at specific intervals and are displayed and recorded as a graph. Through long-term monitoring of the correlation between the timing of harmonic waves and their relationship to phenomena, the 8807-51 and 8808-51 become useful tools for finding the causes of harmonic interference and taking appropriate action.

Time series graph display screen

In time series recording mode, the **8807-51** and **8808-51** are capable of recording up to 20 harmonic wave analysis items simultaneously. The recording time can be set over a range of 30 minutes to 150 days and the data is stored in internal memory. If "continuous" is set as the recording time, the **8807-51** and **8808-51** are able to draw a continuous graph on recording paper. Only the measurements for the last 60 divisions are stored in internal memory.

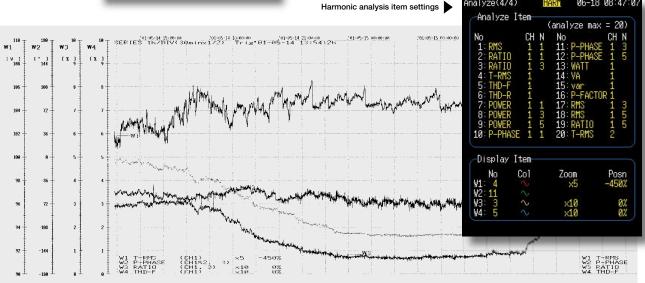

▲Time series analysis printout example

This time series graph shows four of the analysis items that were recorded.

state of harmonic waves

Harmonic wave power measurement on single-phase two-wire, single-phase three-wire*, and three-phase three-wire* lines

CH1 ×20 CSR RATIO

Time axis

Recording time

Printing types

Enlargement/

compression

5 minutes/12 hours/DIV, 7 ranges (80 samples/DIV)

Depends on time axis and number of simultaneous analyses

Dotted line graph or numerical data for each analysis value (time display)

Vertical axis: Six levels of enlargement, from ×2 to ×100; one level of compression, to 1/2; logarithmic scale


Time axis: Two levels of enlargement, ×2 or ×4; six levels

of compression, from 1/2 to 1/48

Power content factor (bar graph)

The 8807-51 and 8808-51 are both capable of measurement of single-phase two-wire lines, while the 8808-51 is also capable of measurement of single-phase threewire*, dual single-phase two-wire*, and three-phase three-wire* lines. Both units can display numeric data or a graphs for the active power, active power content factor, and power phase angle for each order of harmonics. Because all analog input channels are isolated, no problems are encountered when measuring two different single-phase twowire systems simultaneously, or if connections are made incorrectly. *8808-51 only

Determine the direction of flow of harmonic waves

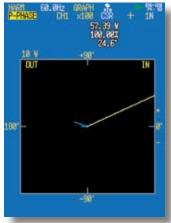

Power vector diagram

The 8807-51 and 8808-51 both allow you to input voltage on channels 1 and 3 and current on channels 2 and 4 (through the clamp-on probe) and then display a power vector diagram for each harmonic wave. This diagram can then be used to determine whether the harmonic waves are flowing from the power supply system or from the load.

- Product Specifications -

Note: The waveform recording functions of the 8807-51 and 8808-51 MEMORY HICORDERs are identical to those of the 8807-01 and 8808-01 MEMORY HICORDERs. For details on specifications other than those concerning the harmonic wave analysis functions, refer to the catalog for the 8807-01

Conoral appointions for the harmonic ways analysis as ation		Instantaneous analysis mode				
General specifications for the harmonic wave analysis section		· · · · · · · · · · · · · · · · · · ·				
Connection types	Independent channels, single-phase two-wire*1, single-phase three-wire*2, and three-phase three-wire*2 *1 8808-51 permits simultaneous analysis of two systems *2 8808-51 only	Analysis types		Numeric data + graph: harmonic wave RMS value, harmonic wave content factor, harmonic wave phase angle, harmonic wave active power** harmonic wave active power content factor**4, harmonic wave power phase angle** Numeric data only: Total RMS value, total distortion-F*5, total distortion-R*6, active power*4, apparent power*4, reactive power*4, power factor** are power*4, power factor** are only when single-phase two-wire, single-phase three-wire, or three-phase three-wire is selected. ** Ratio of all harmonic waves to total RMS value		
Input settings	Independent channels: Voltage, 9018, 9132, 3283, 3284, 3285, 9322 Other connections: Possible with even channels set to voltage and odd channels set to current. When measuring power, the following conditions must be met: (1) The input type on the channel used for measuring current must be set to 9018 or 9132. (2) The input type on the channel used for measuring current must be set to voltage with current scaling. (The clamp probe that is used must have good phase accuracy.)					
		ŭ			Six levels of enlargement, from ×2 to ×100; one level of ompression, to 1/2; logarithmic scale	
		Supplemental functions				
		Scaling		When using a HIOKI Clamp-on probe, the current value can be read directly, and can be set as desired.		
Fundamental frequency range	45Hz to 65Hz Automatic setting or manual setting (0.1Hz resolution)	Wiring and level check functions		Measurement target auto range function, checking for reversed wiring, determination of phase sequence for three-		
Number of orders for analysis	Fundamental wave to 40th order			phase, three-wire connection		
Analysis frequency band	45Hz to 2.6kHz	Over-range function		Automatically lowers the range sensitivity if the input range is exceeded while taking measurements.		
Amplitude accuracy*3 (on "x1" display)	Fundamental wave to 20th order: ±3.5° 21st order to 40th order: ±7.5° (with content factor of 10%) *3 When using a clamp-on probe, add the accuracy of the probe.	Tabulated results output		Can output a list of maximum and minimum values for the results of each analysis across all recording times. (Time series analysis mode only)		
Phase accuracy*3	Fundamental wave to 20th order: ±3.5° 21st order to 40th order: ±7.5° (with content factor of 10%) *3 When using a clamp-on probe, add the accuracy of the probe.	Miscellaneous		Cursor measurement, screen scrolling		
Sampling frequency	400kS/s fixed	Harmonic wave trigger function				
Number of FFT operations	512 points (sampled during one cycle of the fundamental wave)	Trigger mode Sources		Single, repeat Permits selection of up to four types of harmonic wave triggers; trigger conditions can be set for each type of trigger. (Harmonic wave trigger sources are ORed together, while harmonic wave triggers are ANDed with external triggers and timer triggers.) Free-run operation when all triggers are OFF.		
Waveform memory capacity	Analog 12 bits × 16 kwords/channel					
Harmonic waveform operation memory capacity	32 bits × 96 kwords					
Function	Scaling, cursor measurement, wiring and level check function			RMS value/content factor/active power value/power phase		
Time series analysis mode		Trigger types		angle/total RMS value/total distortion-R/total distortion-F of any harmonic wave		
Analysis types	For any harmonic wave order number: RMS value/content factor/ phase angle/active power*4/active power content factor*4/power phase angle*4 Total RMS value, total distortion-F*5, total distortion-R*6, active power*4, apparent power*4, reactive power*4, power factor*4 **1 Only when single-phase two-wire, single-phase three-wire, or three-phase three- wire is selected. ** Ratio of all harmonic waves to fundamental wave **6 Ratio of all harmonic waves to total RMS value	Miscellaneous		Pre-trigger: 0, 5, 10 DIV. (time series analysis mode) Trigger timing: start only		
		Harmonic wave analysis function recording time*1				
		Time axis		Storage in internal memory (Number of analysis items is reduced depending on recording length) Printing on paper without recording in memor (Final 60 DIV are recorded in internal memory.)		
		5 min./DIV	5 hours (20 items) to 1 day (4 items) 6 days + 3.5 hours (4 items)			
Number of simultaneous	Up to 20 analyses (any combination); only four can be simultaneously displayed or printed	10 min./DIV	10 hours (20 items) to 2 days (4 items) 12 days + 7 hours (4 items)			
analyses		30 min./DIV		1 day (20 items) to 6 days (4 items) 36 days + 21 hours (4 items		
T : .	5 /12 h /DIV 7 (90 1/DIV)	1.1 (5337	1 2 1	20 : (4 :)	72 1 (4 4)	

1 hour./DIV 2 days (20 items) to 12 days (4 items)

3 hour./DIV 7 days (20 items) to 37 days (4 items)

6 hour./DIV 14 days (20 items) to 75 days (4 items)

12 hour./DIV 30 days (20 items) to 150 days (4 items)

- For the paper length, it is assumed that 1770 DIV will not use more than 30cm of paper.
 Only a maximum of four items can be printed on paper.
 One year is assumed to be 365 days.
 The recording times shown in the table are simply the calculated values. If measurements are taken over several years, wear on the equipment will begin to have an effect. Therefore, operation cannot be guaranteed.

73 days + 18 hours (4 items)

221 days + 6 hours (4 items)

1 year + 77 days (4 items) *3, *4

2 years + 155 days (4 items) *3, *4

Analyzing fluctuations in values during a certain operation Cycle, such as one day, one week, or one month makes it possible to determine one of this homonic dictorion at the MEMADY UICADAED. the causes of total harmonic distortion, etc. The MEMORY HICORDER's 8807-51 and 8808-61 can continuously measure and graph up to an item is already as a continuously measure and graph up to an item is already as a continuously measure and graph up to an item is already as a continuously measure and graph up to an item is already as a continuously measure and graph up to an item is already as a continuously measure and graph up to an item is already as a continuously measure and graph up to an item is a continuously measure and graph up to an item is a continuously measure and graph up to an item is a continuously measure and graph up to an item is a continuously measure and graph up to an item is a continuously measure and graph up to an item is a continuously measure and graph up to an item is a continuously measure and graph up to an item is a continuously measure and graph up to an item is a continuously measure and graph up to an item is a continuously measure and graph up to a continuously measure and graph up t The causes of total narmonic distortion, etc. The **MENIONY NICONDERS BOOK** and was a select foother phase and paths address and total distortion for each order of homeonic and total distortion for each order of homeonic content factor, phase angle, active power, and total distortion for each order of harmonics.

Exertuations and correlations among each of the values can be seen at a class. Of course, THEFIT TRUCKING, DITAGE BRIGHE, BUTTLE PUWER, BUTTLE LINE UNITED THE BUTTLE OF COURSE THE BUTTLE BUT anuno anu uunaanuno anung saun un me vanuso uan us osem ana yanuso. U itis also possible to analyze instantaneous values during one waveform cycle.

This graph shows that harmonic waves begin to decrease at 4:00 p 6:30 a.m. the next morning.

and total distortion of voltage Each order can be graphed. ■ Harmonic wave time series recording example

The MEMORY HICORDERS 8807 and 8808-51 can also be used as general-purpose testers. Because each unit is equipped with powerful trigger functions, such as a waveform Veach unit is equipped with powerful ingger functions, such as a wavefulfill line discrimination trigger and a voltage drop trigger, they are able to capture power line abnormalities and normit on corons analysis of waveform lavels. In addition to 1000 and 2. abnormalities, and permit on-screen analysis of waveform levels. In addition to 100V and 240V conformatives, and permit on-screen analysis of wavelunt levels. In addition to how and 2400 lines, these units can also directly accept and measure input of supply voltage from a 4000 lines, these units can also directly accept and measure input of supply voltage from a 4000 lines, these units can also directly accept and measure input of supply voltage from a 4000 lines, these units can also directly accept and measure input of supply voltage from a 4000 lines, these units can also directly accept and measure input of supply voltage from a 4000 lines, these units can also directly accept and measure input of supply voltage from a 4000 lines, these units can also directly accept and measure input of supply voltage from a 4000 lines, these units can also directly accept and measure input of supply voltage from a 4000 lines, these units can also directly accept and measure input of supply voltage from a 4000 lines, these units can also directly accept and measure input of supply voltage from a 4000 lines, these units can also directly accept and measure input of supply voltage from a 4000 lines, the supply voltage from a 4000 lines, the supply voltage from a 4000 lines lines are supply voltage from a 4000 lines lines lines lines are supply voltage from a 4000 lines li nes, these units can also directly accept and measure input of supply voltage from with the line. The 8807-51 and 8808-51 can measure leak current when used in combination with the line. The 8807-51 and 8808-51 can measure leak current when used in combination with line. The 8807-51 and 8808-51 can measure leak current when used in combination with line. e. The 880/-51 and 8808-51 can measure leak current when used in combination with the CLAMP-ON LEAK HITESTER 3283, and can test 600V lines when used in combination with the DICEEDENTIAL DECREE 3223. In addition, because both units are actioned with a DICEEDENTIAL DECREE 3223. MIP-UN LEAK HITESTER 3283, and can less bury lines when used in combining with a PC the DIFFERENTIAL PROBE 9322. In addition, because both units are equipped with a PC the DIFFERENTIAL PROBE 9322. In addition, because both units and then transfer the order and transfer the decrease of the line and then transfer the line and li IFFERENTIAL PRODE \$322, in addition, decause boll units are equipped with a Paragraph of the stransfer the land stop to store measurement data in the unit and then transfer the land stop to a product of the land stop to the lan

Thirt or board 1,000

Data stored in text format in a PC card can be loaded di


■ Abnormal waveform recording example

Third-order harmonic wave content factor

This waveform was recorded in response to the voltage drop trigger. Transient drops in voltage on a power line can be monitored through the waveform.

RMS voltage

Center is 0°; within ±90° indicates harmonic waves flowing in; outside of ±90° indicates harmonic waves flowing out.

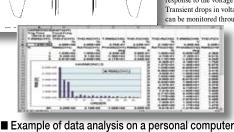

into spreadsheet software on a PC. If the data is in binary format, it must first be converted into text format.

Composition of options Note: Product names appearing herein are trademarks or registered trademarks of various companies.

CARRYING CASE 9648 Hard case type, for storing



LOGIC PROBE 9320-01 4-channel type, for voltage/ signal ON/OFF detection

(miniature terminal for use with the 8861/8860, 8855, 8807-01/8808-01, 8807-51/8808-51)

CE



CARRYING CASE 9391

Soft case type, for storing options Holds more options than the 9648 hard case



LOGIC PROBE 9321-01 4 isolated channels, ON/OFF detection of AC/DC voltage (miniature terminal for use with the 8861/8860, 8855, 8807-01/8808-01, 8807-51/8808-51)

MEMROY HICORDER 8807-50 (2ch model)

MEMROY HICORDER 8808-50 (4ch model)



CONVERSION CABLE 9323 Used for connecting the 9320/9321 at 8807 series MEMORY HiCORDERs, * This cable is not required for the small terminal types 9320-01 and 9321-01.



脚

PC Card Precaution

Use only PC Cards sold by **HIOKI**. Compatibility and performance are not guaranteed for PC cards made by other manufacturers. You may be unable to read from or save data to such cards.

PC CARD 128M 9726 (128 MB capacity) PC CARD 256M 9727

(256 MB capacity)

PC CARD 512M 9728 (512 MB capacity)

PC CARD 1G 9729 (1 GB capacity)



WAVE PROCESSOR 9335

Data conversion, print functions, waveform display, compatible with Windows 95/98/Me, Windows NT 4.0/2000/XP, and Windows Vista 32-bit type.



RS-232C CABLE 9612 Mini DIN 9-pin - Dsub 9 Cable length 1.5 m





DIFFERENTIAL PROBE 9322
For inputs up to 2 kV DC or 1 kV AC, the 9322 requires the AC ADAPTER 9418-15



CONNECTION CORD 9197 For up to 500 V, 1.5 m length

CONNECTION CORD 9198 For up to 300 V. 1.5 m length




CONNECTION CORD 9217 Insulation BNC-to-insulation BNC, use to connect to insulation-BNC

terminal on Input Module

An input cord for measurement use is not provided. Please purchase the optional CONNECTION CORD 9197 or 9198 together with the recorder.



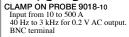



Not CE certified

CLAMP ON PROBE 9132-10 Input from 20 to 1000 A 40 Hz to 1 kHz for 0.2 V AC output. BNC terminal



OUTPUT CORD 9094

Not CE certified

Required along with the 9199 adapter to connect Model 3283 to the 8807-01 or 8808-01

CLAMP ON LEAK HITESTER 3283
For leakage current measurement, includes 10 mA to 200 A ranges, with analog output of 1 V f.s. DC, and waveform monitor output of 1 V f.s. AC at 40 Hz to 2 kHz. Requires the AC ADAPTER 9445-02/-03



PAPER WINDER 220H vidth: 70 to 220 mm, using special-purpose AC adapter

PRINTER UNIT 8992
Printing width 100 mm, use together with the 8807-51,

8808-51 main body



RECORDING PAPER 9234 18 m/ 59.06 feet length, 10 rolls/ 1 set



Voltage

LINE SPLITTER CT101A

For 100 V/ 15 A, convenient for measuring 100 VAC line current with clamp-on probe



CONVERSION ADAPTER 9199
Banana-to-BNC, use to connect to insulation-BNC terminal on Input





BATTERY PACK 9447
7.2 V, 2400 mAh
Used with the AC ADAPTER
9418-15 to charge one Model
BATTERY PACK 9447.



AC ADAPTER 9418-15 Universal 100 to 240 V 12 V DC/ 2.5 A output

An The units can be operated using the supplied LR6/AA alkaline batteries but use of the optional AC ADAPTER 9418-15 or BATTERY PACK 9447 (the AC ADAPTER 9418-15 is necessary for recharging) is recommended. Manganese batteries cannot be used. Use of commercially available rechargeable batteries instead of the original battery pack may result in damage to the unit.



HIOKI E.E. CORPORATION

HEAD OFFICE:

81 Koizumi, Ueda, Nagano, 386-1192, Japan TEL +81-268-28-0562 / FAX +81-268-28-0568 E-mail: os-com@hioki.co.jp

HIOKI USA CORPORATION:

6 Corporate Drive, Cranbury, NJ 08512 USA TEL +1-609-409-9109 / FAX +1-609-409-9108 E-mail: hioki@hiokiusa.com

HIOKI (Shanghai) Sales & Trading Co., Ltd.:
1904 Shanghai Times Square Office, 93 Huai Hai Zhong Road
Shanghai, P.R.China POSTCODE: 200021 TEL +86-21-6391-0090/0092 FAX +86-21-6391-0360 E-mail: info-sh@hioki.cn

Beijing Office:
A-2602 Freetown, 58 Dong San Huan Nan Road
Beijing, P.R.China POSTCODE: 100022
TEL +86-10-5867-4080/4081 FAX +86-10-5867-4090 E-mail: info-bj@hioki.cn

Guangzhou Office:

Room 303, Profit Plaza, No.76, West Huangpu Road Guangzhou, P.R.China POSTCODE: 510623 TEL +86-20-38392673/2676 FAX +86-20-38392679 E-mail: info-gz@hioki.cn



Компания «Океан Электроники» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Поставка оригинальных импортных электронных компонентов напрямую с производств Америки, Европы и Азии, а так же с крупнейших складов мира;
- Широкая линейка поставок активных и пассивных импортных электронных компонентов (более 30 млн. наименований);
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Помощь Конструкторского Отдела и консультации квалифицированных инженеров;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Поставка электронных компонентов под контролем ВП;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- При необходимости вся продукция военного и аэрокосмического назначения проходит испытания и сертификацию в лаборатории (по согласованию с заказчиком);
- Поставка специализированных компонентов военного и аэрокосмического уровня качества (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Actel, Aeroflex, Peregrine, VPT, Syfer, Eurofarad, Texas Instruments, MS Kennedy, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Компания «Океан Электроники» является официальным дистрибьютором и эксклюзивным представителем в России одного из крупнейших производителей разъемов военного и аэрокосмического назначения «JONHON», а так же официальным дистрибьютором и эксклюзивным представителем в России производителя высокотехнологичных и надежных решений для передачи СВЧ сигналов «FORSTAR».



«JONHON» (основан в 1970 г.)

Разъемы специального, военного и аэрокосмического назначения:

(Применяются в военной, авиационной, аэрокосмической, морской, железнодорожной, горно- и нефтедобывающей отраслях промышленности)

«**FORSTAR**» (основан в 1998 г.)

ВЧ соединители, коаксиальные кабели, кабельные сборки и микроволновые компоненты:

(Применяются в телекоммуникациях гражданского и специального назначения, в средствах связи, РЛС, а так же военной, авиационной и аэрокосмической отраслях промышленности).



Телефон: 8 (812) 309-75-97 (многоканальный)

Факс: 8 (812) 320-03-32

Электронная почта: ocean@oceanchips.ru

Web: http://oceanchips.ru/

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, д. 2, корп. 4, лит. А